

**Model #:** OSTW8001  
**Description:** Mesh Task Chair



[www.cubicles.com](http://www.cubicles.com)

**Customer Service**  
Tel: 888-442-8242

## Assembly & Operating Instructions



Please read the instruction sheet(s) completely before assembly.


*Maximum Weight Load: 275lbs*

## Assembly Notes

1. After opening the carton, please carefully check for missing parts and transportation damage and if needed, contact dealer immediately.
2. Once installed, the gas lift will be difficult to remove. It is not recommended to remove the gas lift to avoid damage to other parts of the chair.
3. Contact dealer if disassembly assistance is needed.

## Usage Notes

1. Intended for use indoors.
2. Intended for single person use.
3. Do not sit on end of chair to avoid accidental tipping and injury.
4. Do not step or stand on the chair – chair is intended for sitting only.
5. Use caution when reclining, especially as tension is reduced by user.
6. Do not lean against product – chair is intended for sitting only.
7. Avoid contact with sharp objects, heavy tools and hot surfaces.
8. As assembly may loosen overtime, for best user safety, conduct regular check of nuts and bolts to insure they are always tight and secure.
9. To clean, wipe with a soft and dry cleaning cloth. If there are stains on fabric, use a mild detergent to wipe clean.

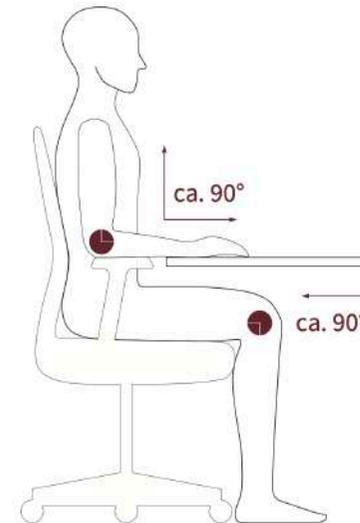

Position chair so your feet are flat on the floor, and lower legs are at a 90-degree angle (or better) relative to upper legs.

## TILT TENSION ADJUSTMENT








On the knob located underneath the seat, turn clockwise to tighten or counterclockwise to loosen the tilt tension to your preferred level of resistance.

## 360° SWIVEL






Your chair can rotate around 360°.

## Parts List

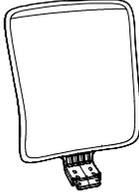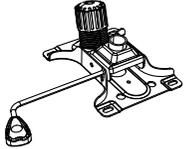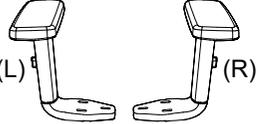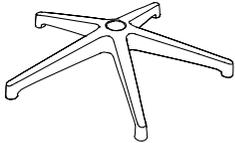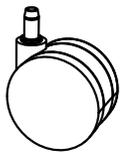
<p><b>A</b></p>  <p>Seat Cushion x1</p>	<p><b>B</b></p>  <p>Back x1</p>	<p><b>C</b></p>  <p>Mechanism x1</p>
<p><b>D</b></p>  <p>(L) (R)</p> <p>Note: Clear cover for L arm Red cover for R arm</p> <p>Armrest x1</p>	<p><b>E</b></p>  <p>Gas lift x1</p>	<p><b>F</b></p>  <p>Nylon Base x1</p>
<p><b>G</b></p>  <p>Casters x5</p>		

## Hardware List

   
<p>①</p> 	<p>1/4"*5/4"x6PCS</p>	<p>②</p> 	<p>1/4"*1"x4PCS</p>
<p>③</p> 	<p>1/4"*2"x4PCS</p>	<p>④</p> 	<p>Ø16*Ø6.5*1.5x14PCS</p>
<p>⑤</p> 	<p>M5x1PC</p>		

## Installation Steps


### STEP 1

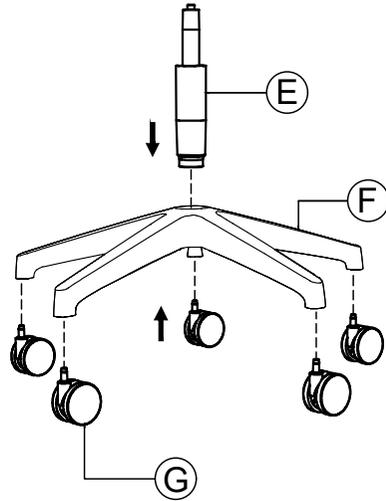

### STEP 2

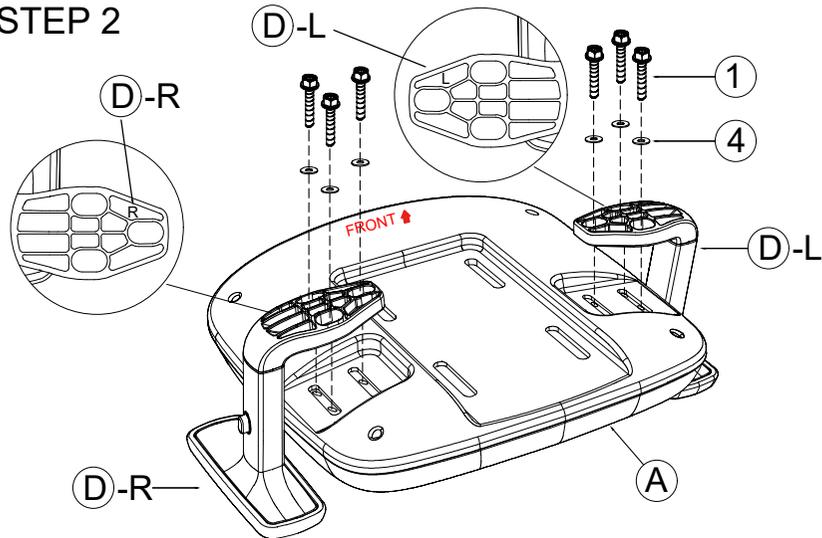

## ARM HEIGHT ADJUSTMENT

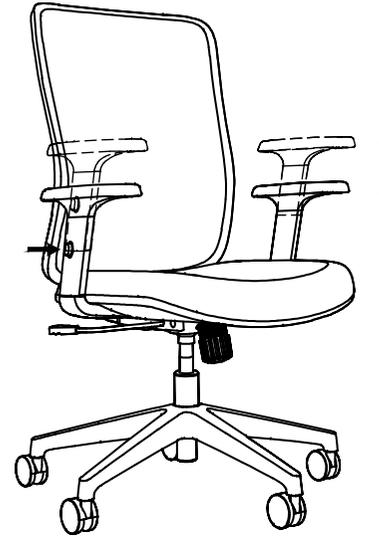


To adjust arm height, push the button on the outside of each arm and move the arm up or down. Release the button to set the height.

## TILT ANGLE ADJUSTMENT




Rotate the lumbar support to a comfortable angle.

## SEAT HEIGHT ADJUSTMENT

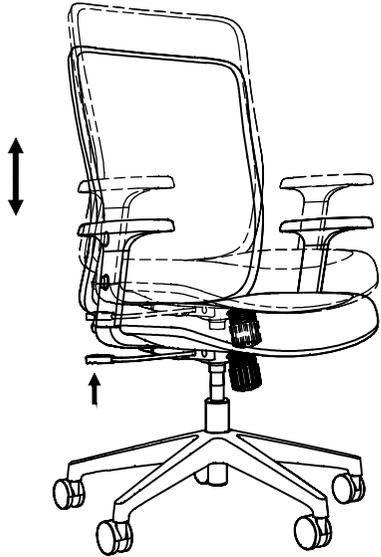

↑ While seated, pull the lever on the right side of the seat up and hold it while raising or lowering the seat to change the seat height. When the lever is released, the seat height is locked. The seat height adjustment range is approximately 3.23".


## BACK TILT ADJUSTMENT

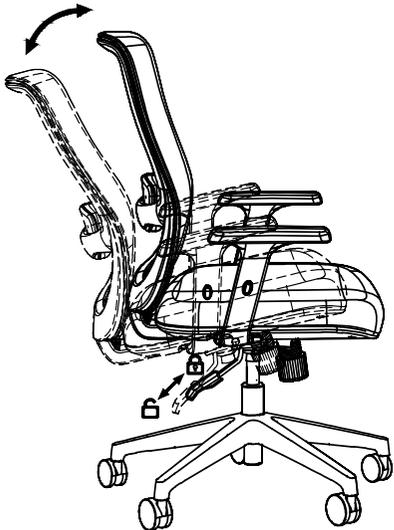


↔ While seated, pull the lever on the right side of the seat out to unlock the tilt function. Push backwards to tilt. To lock in the upright position, sit back up straight and push the lever in. The range of motion is approximately 13°.

## Installation Steps

### STEP 3

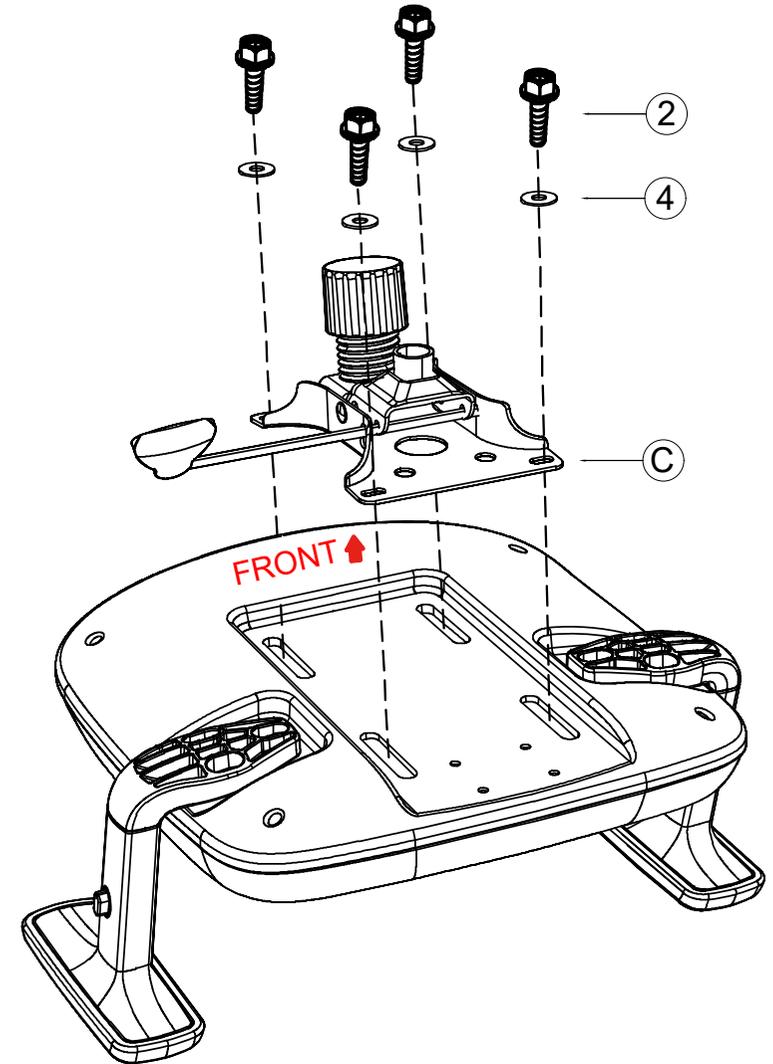

### Installation Steps

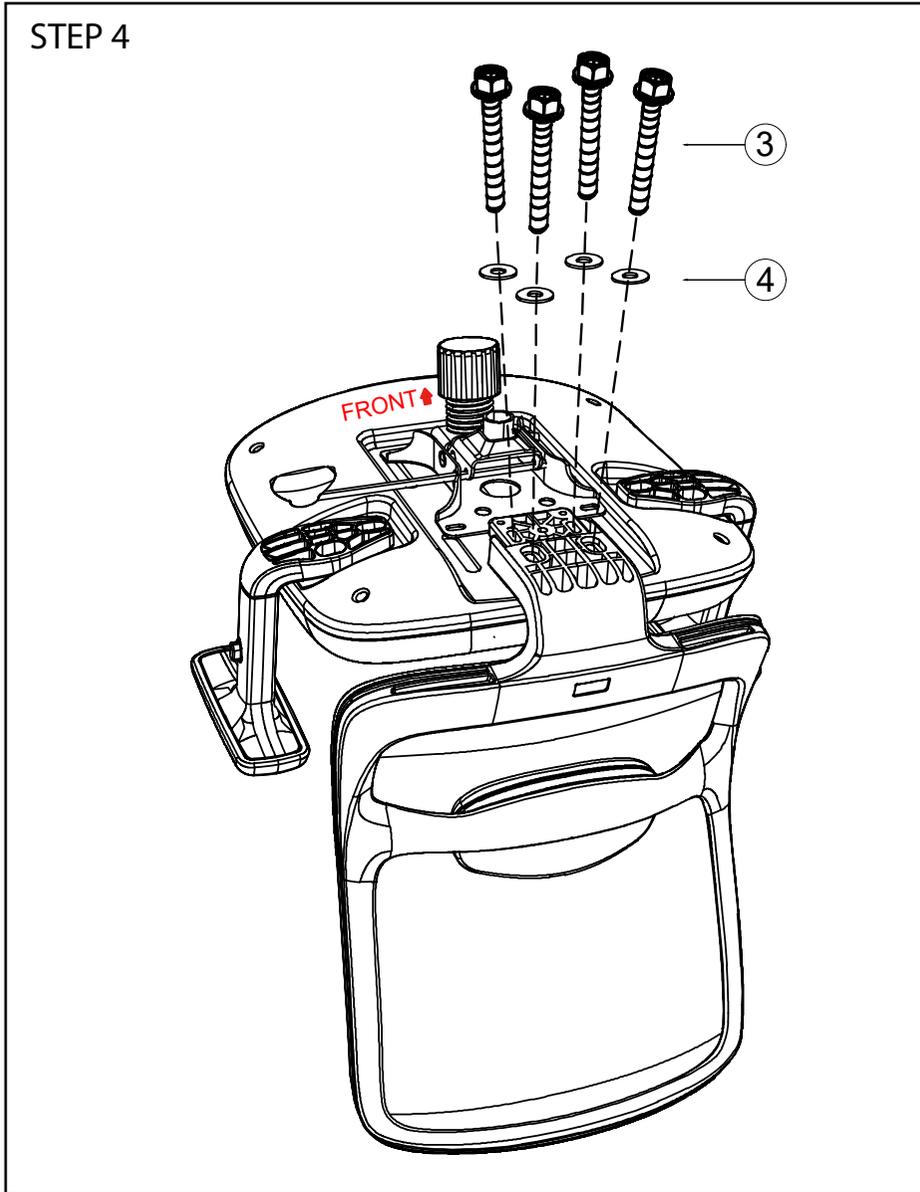

### Installation Steps

