 
 





Hardware is packed with carton EVH200DGG

1  Screw Ø6X33mm 8pcs	2  Screw Ø5X20mm 8pcs	3  Screw Ø6X15mm 2pcs	4  Allen Wrench 5mm 1pc	5  Screw Ø6X15mm 8pcs	6  Wire Management Tray 2pcs	10  H-Bracket 2pcs	13  Screw M6*10 4pcs	16  Screw Ø4X14mm 5pcs	17  L-Bracket 2pcs
--	--	--	--	--	---	---	---	---	--



Hardware is packed with carton EVH200EBK

5  Screw Ø6X15mm 8pcs	7  Control box 1 Pc	8  Controller 1 Pc	9  Screw Ø4X14mm 2pcs	11  Power cord 1pc	12  Allen Wrench 4mm-1pc	13  Screw M6*8 4Pcs	14  Z-connection 2pcs	15  Glide Box 1pc
--	---	--	--	--	---	--	---	---

 EVH200DGG

F  Top panel 1 Pc	G  Modesty panel 1 Pc	C  Top support Bracket 2Pcs
---	---	---

EVH200EBK

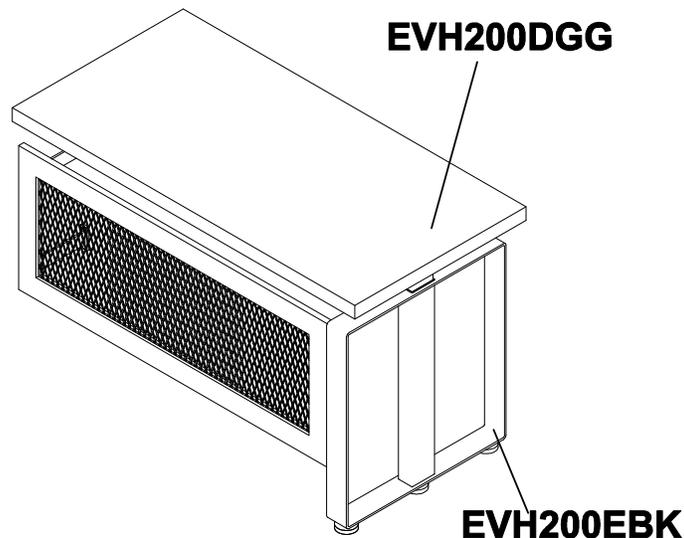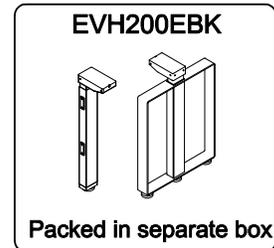


IMPORTANT NOTE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start assemble.
- Do not tighten all screws or bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

NOTE: The Return Desk can be installed as a Left Handed or Right Handed. Right Handed is shown in the instructions. If Left Hand is desired, attach Modesty Panel (G) to other side


1 Assemble Metal Base (EVH200EBK) using Screws (5)

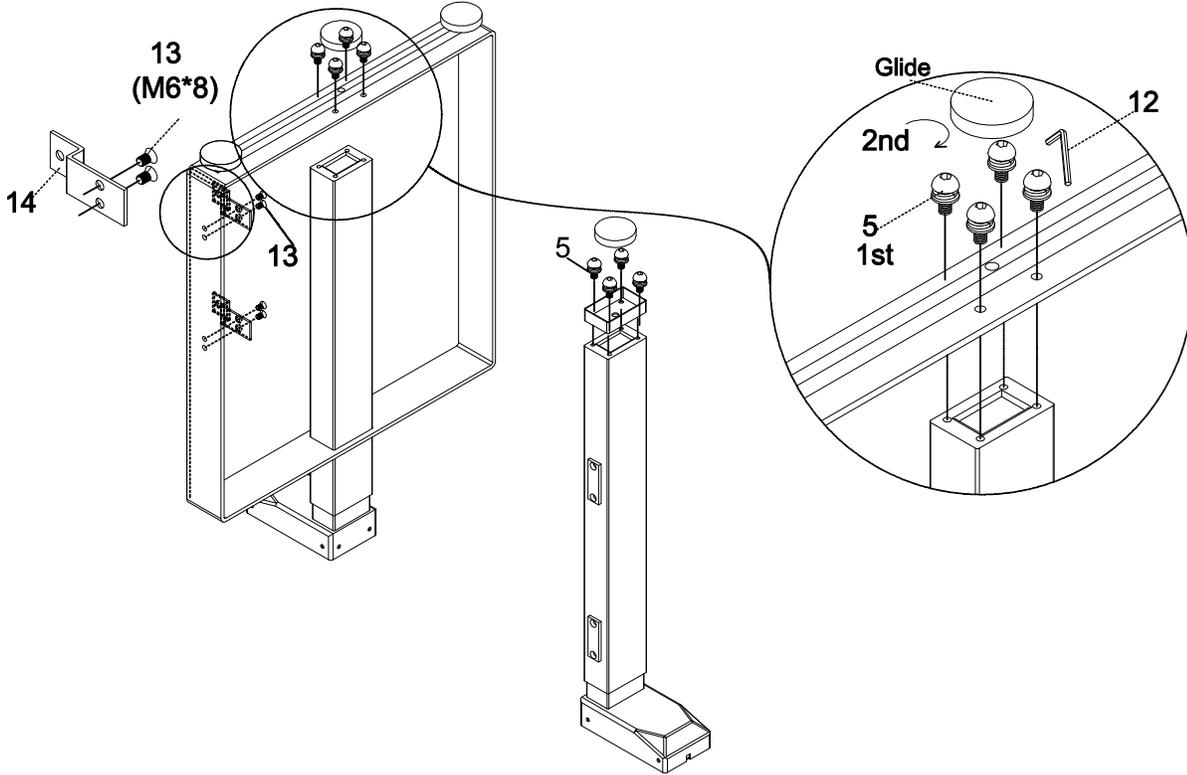


2 Assemble Metal Base (EVH200EBK) with EVH200DGG

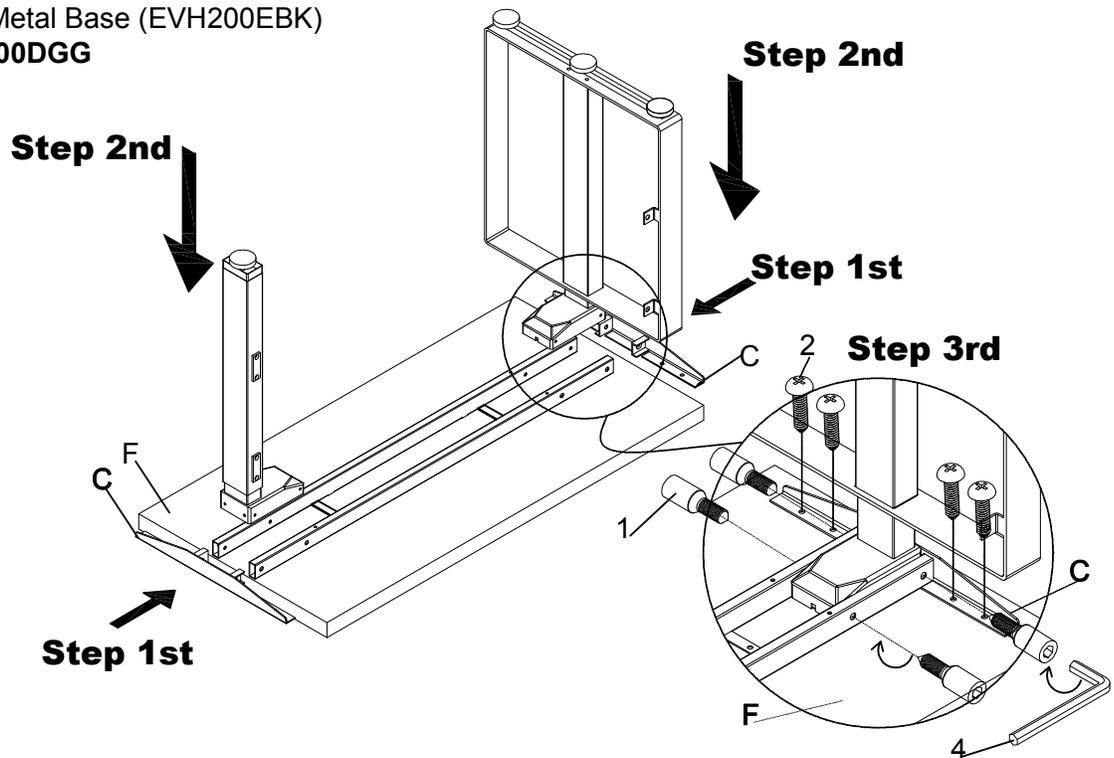


3 Assemble **Modesty Panel (G)** to Metal Base (EVH200EBK) using Screws (3)

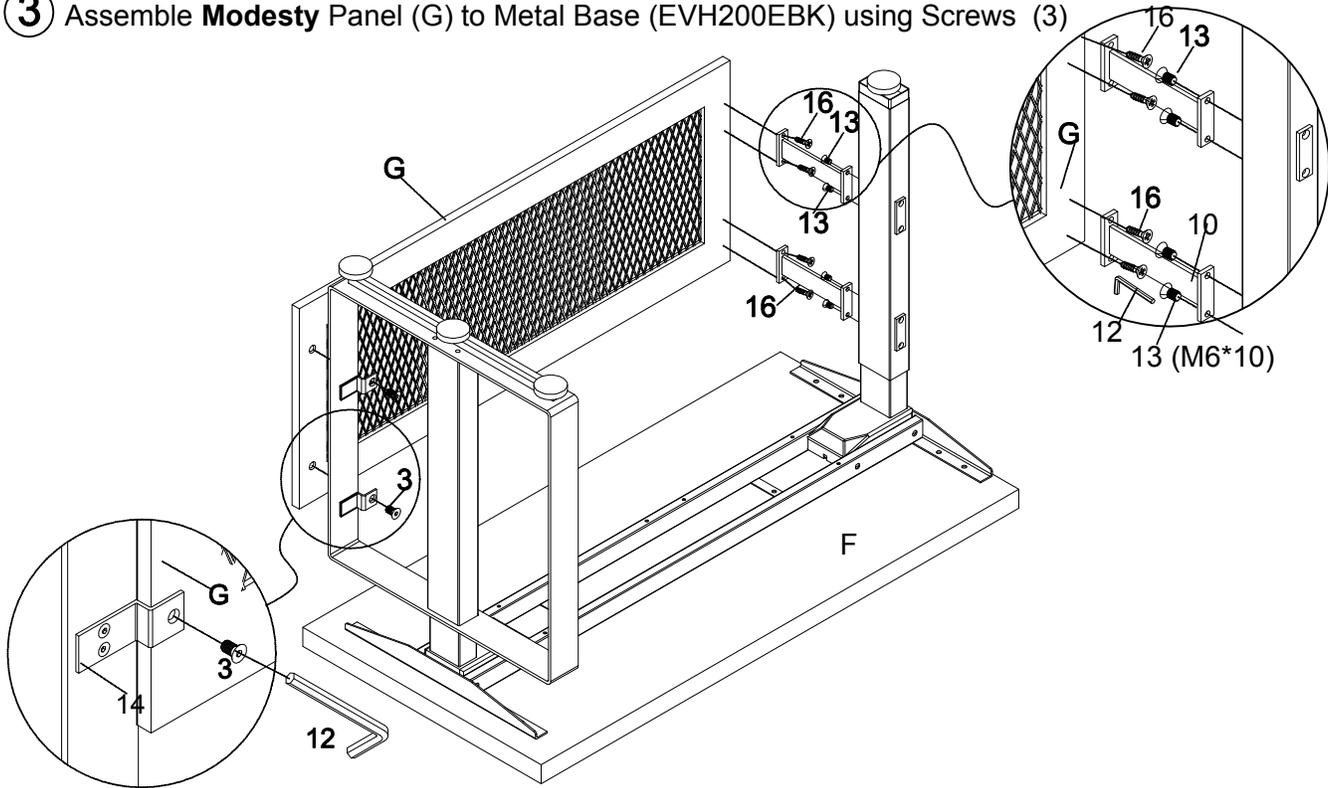

4 Assemble 48" Height Adjustable Return (EVH200EBK, EVH200EBK) with Main desk
EVD861GG EVD863GG EVD865GG

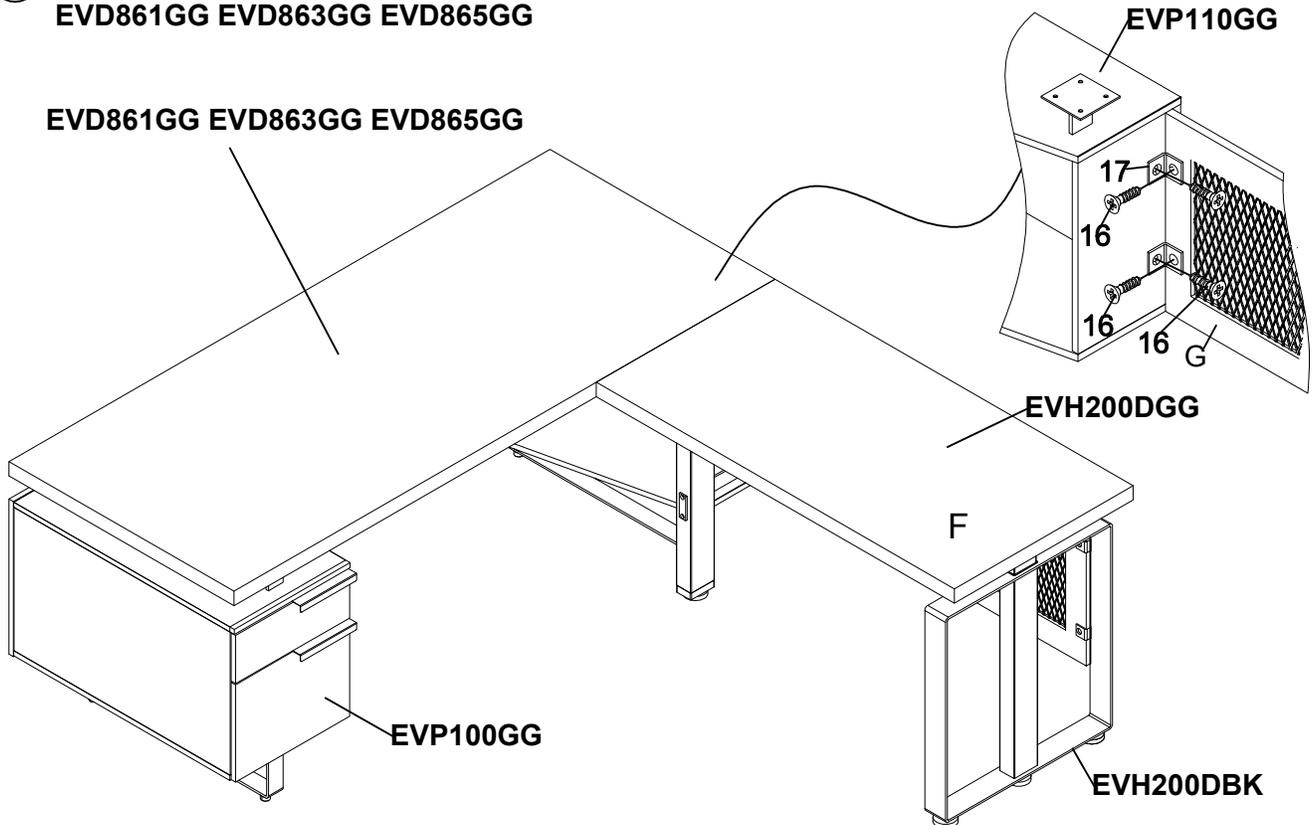


Assemble 48" Height Adjustable LEFT Return (EVH200EBK, EVH200EBK) with Main desk
EVD861GG EVD863GG EVD865GG

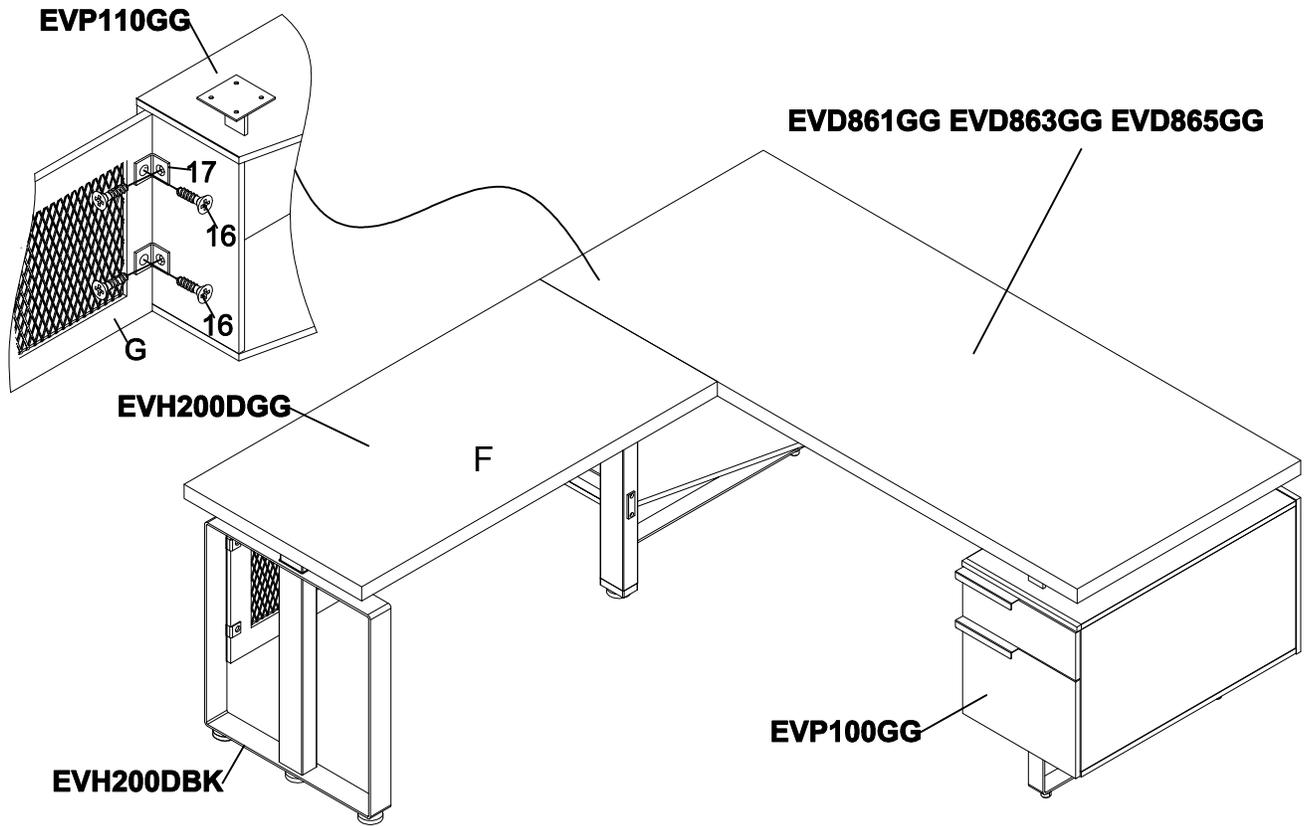

- 5 Connect power for Control Box (7) using the Power Cord (11) and connect Controller (8) into the Control Box (7); Plug Power Cord (11) into outlet and proceed with Controller Initialization. See User Manual;

Put Memory Controller (8) on desired location on front edge of top(F), and fasten with Screws (9)

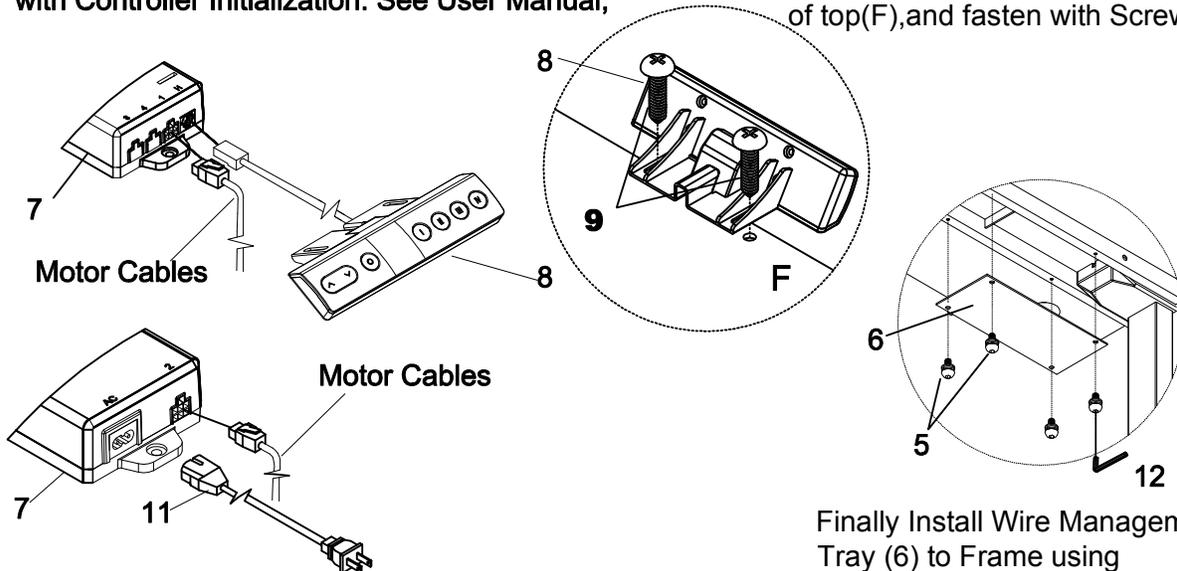


Finally Install Wire Management Tray (6) to Frame using Screws (5) and Wrench (12).

 **Make sure no obstacles are in the desk's path.** 
Make sure the desktop is not touching any walls.
Make sure all cords are appropriate length to accommodate the change in height.

IMPORTANT: You must INITIALIZE the desk prior to first use.

Controller Initialization- Press and hold the Down button on the controller until the desk reaches its lowest height, slightly raises, and stops. Release the down button, your desk is now ready for use. (Following the "USER MANUALS" to use your desk)

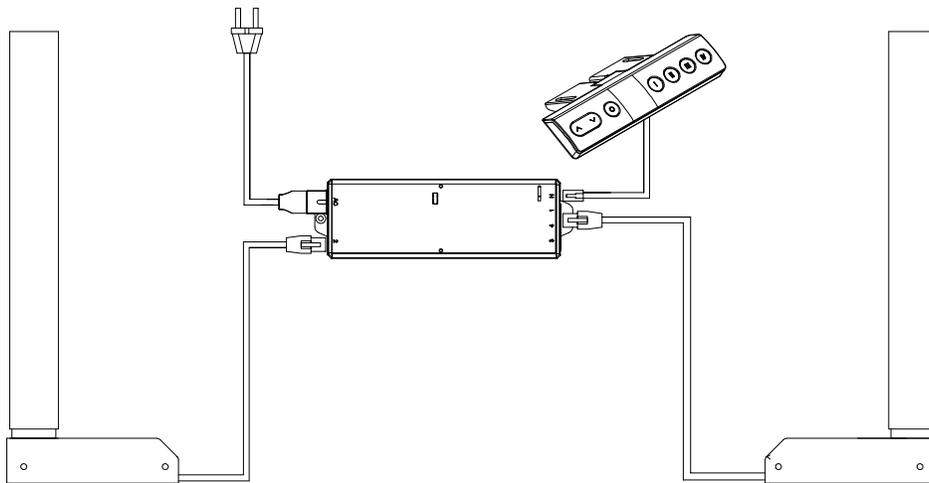

TROUBLESHOOTING

If the table is not functioning properly it may need to be reset. Unplug the power cord for 20 seconds. Plug the power cord back in and follow the RESET procedures;

If the error message persists after the reset procedure, please contact your dealer;

If the height between the legs exceeds 1.5 inches, stop the reset procedure,
please contact your dealer