
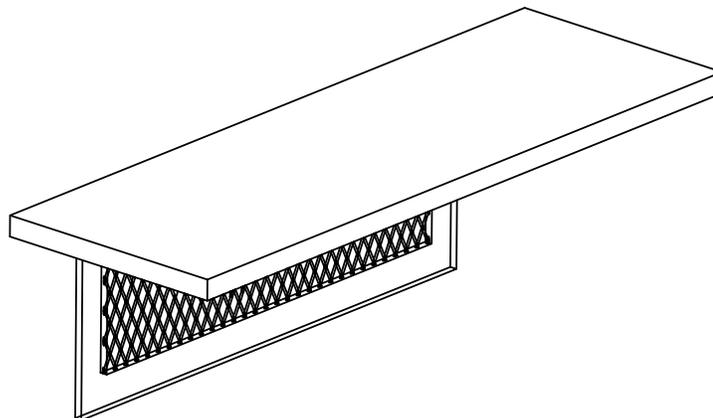



CAM INSTRUCTIONS

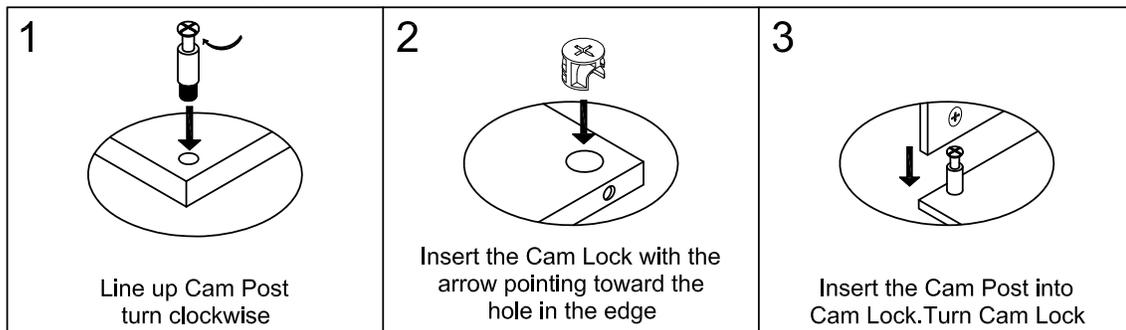


IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start assemble.
- Do not tighten all screws or bolts until all completely assembled.
- Keep all hardware parts out of reach of children.


- ① Use the Screw (7) and the Bracket (8) to connect the Pedestal (EVP200GG,EVP210GG) and the Modesty Panel (B);

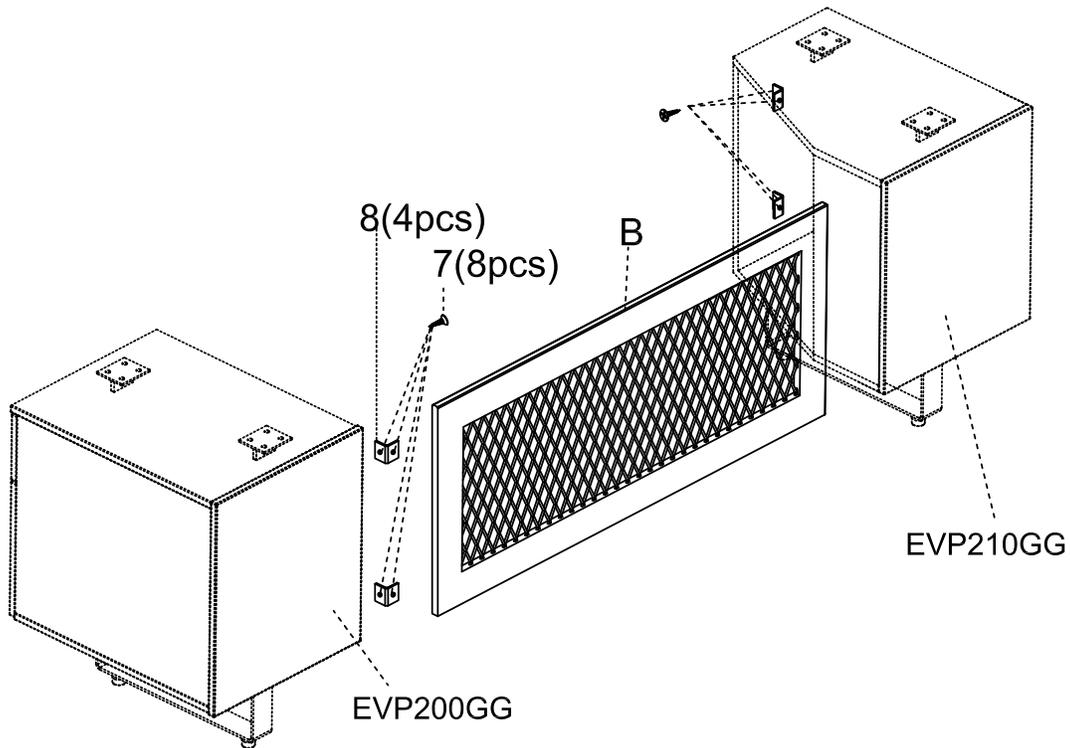


- ② Insert the Cam Post (3) to the T Rectangle Support Part (2), Use the Screw (6) to install the T Rectangle Support Part (2) to the middle edge of the Top Panel (A):

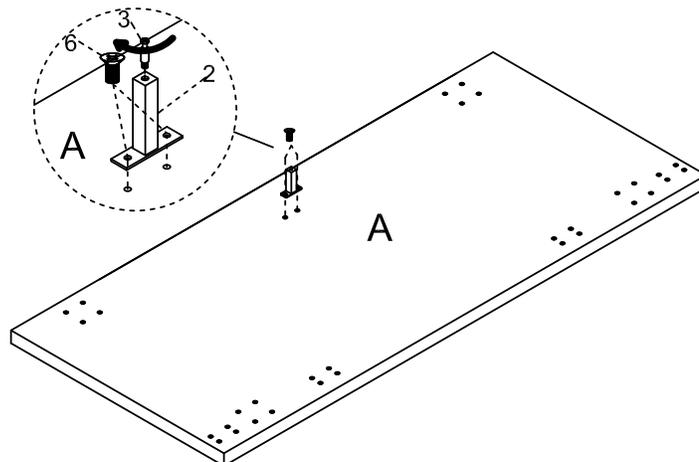

- ③ Put the Top Panel (A) on the Pedestal. Use the Screw (6) to lock the Top (A). Lock the Cam Lock (4), Attach the Cam Sticker (5) to the cams.

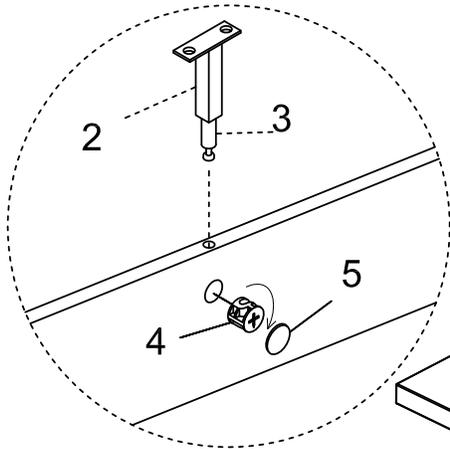

The screws packed in the carton of the Pedestal

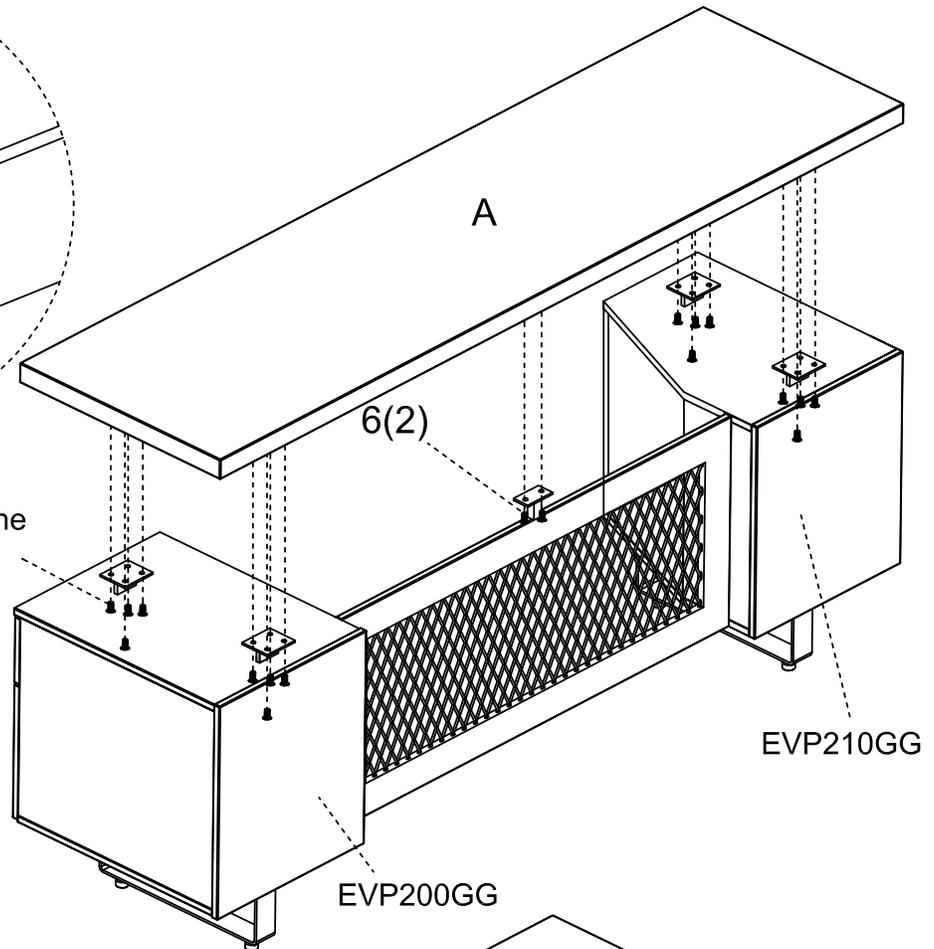

- ④ Completely assembly

