

EX2-WHT-MBSAT-FSBLK

ASSEMBLY INSTRUCTIONS
OPERATING INSTRUCTIONS




CUSTOMER SERVICE 888-442-8242
WWW.CUBICLES.COM

ASSEMBLY INSTRUCTIONS

EX2-WHT-MBSAT-FSBLK

 Remove all items from the carton. Verify all components before assembly.

| Part List | | | | |
|-----------|--|--|------|-------|
| Key | Description | Part | Qty. | Spare |
| A | Backrest |  | 1 | |
| B | Seat |  | 1 | |
| C | Armrests (1 left & 1 right armrest) |  | 2 | |
| D | Seat Post(Cylinder) |  | 1 | |
| E | Star Base |  | 1 | |
| F | Caster |  | 5 | |
| G | Armrest Screws (M8*30mm-Black) |  | 4 | |
| H | Arm Washer |  | 2 | |
| I | Back Screws (M8*25mm-Black) |  | 3 | |
| J | Spring Washer |  | 3 | |
| K | Flat Washer |  | 3 | |
| L | Allen Wrench |  | 1 | |


Please tighten your chairs hardware every six months.

ASSEMBLY INSTRUCTIONS

EX2-WHT-MBSAT-FSBLK


Remove all items from the carton. Verify all components before assembly.

STEP 1

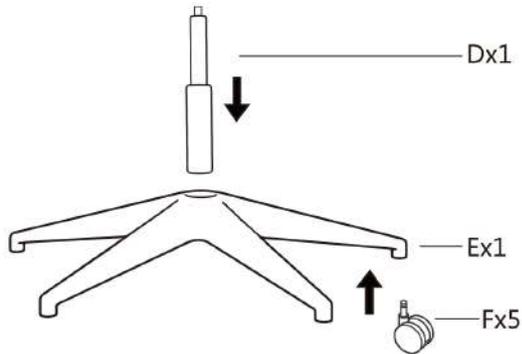


Press the Casters (F) into the holes at the end of each leg of the Base (E).
Insert Seat Post (D) into the center hole of the Base (E).

STEP 2

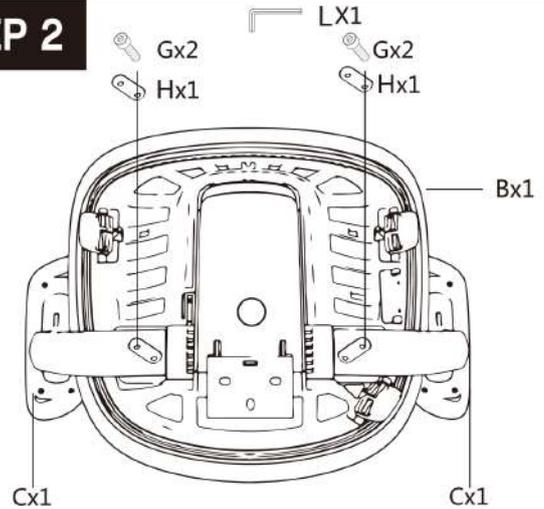


Please be careful to use the correct Arm Screws (G),
For easy assembly, place the Seat (B) face down on a flat surface. Attach Armrest (C) to the seat (B) as shown using 3 Arm Screw (G) on each arm. Tighten the bolts securely with the enclosed Allen Wrench (L).

STEP 3

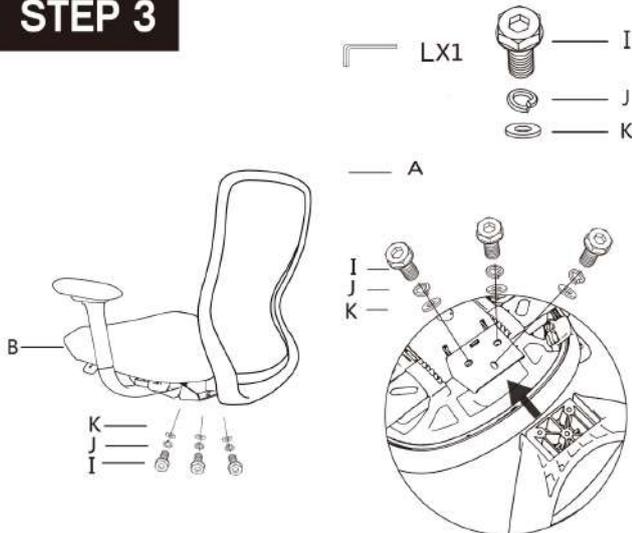

Please be careful to use the correct Back screws (I).
Slide one spring Washer (J) and then a Flat washer (K) over each Backrest Screw (I). Tighten securely using the enclosed Allen Wrench (L).

STEP 4

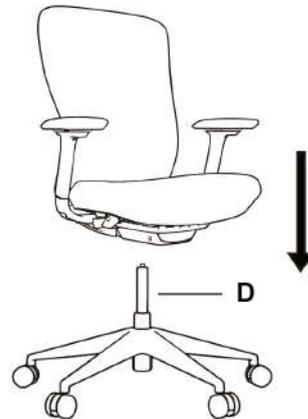

Now turn the assembled seat upright and locate the center hole of the Mechanism over the Seat Post. Push down firmly until the connection is secure.


PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHTENED.
- EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.

- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING - IT MAY CAUSE SUFFOCATION.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. NOTE: SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS

OPERATING INSTRUCTIONS

EX2-WHT-MBSAT-FSBLK

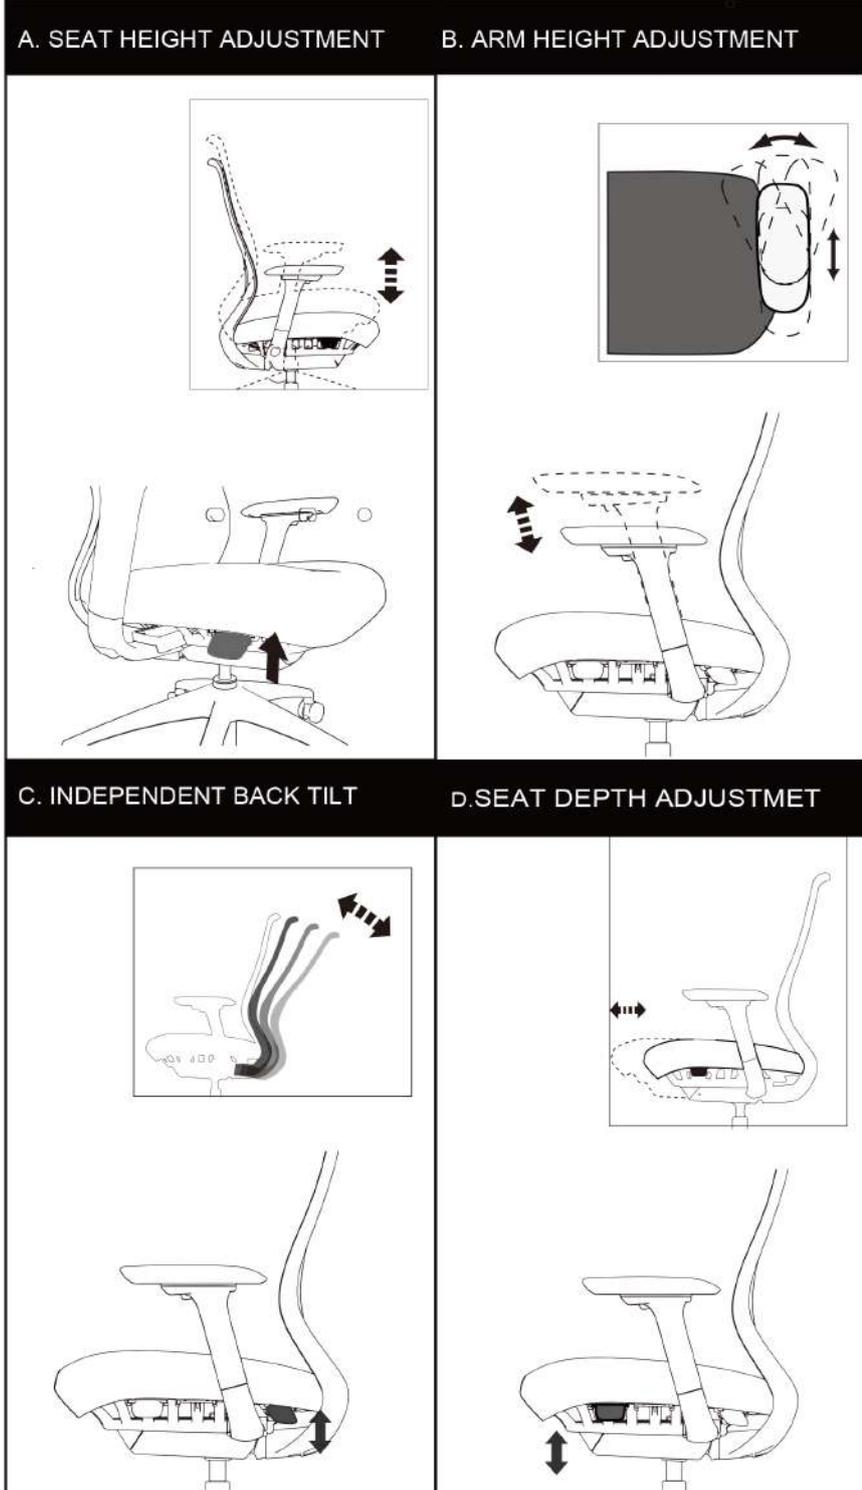

A. SEAT HEIGHT ADJUSTMENT

While seated, pull the Seat Height Adjustment Lever up and hold it while raising or lowering the seat to change the seat height. Please note, the Seat Height Adjustment Lever is on the right side of the seat. When the lever is released, the seat height is locked. The Seat Height Adjustment range of motion is approximately 3.93 " .

B. ARM HEIGHT ADJUSTMENT

While seated, locate the button under the front of the arm pad. Press the button to raise or lower the height of the arms to your desired height. The Arm Height Adjustment range is 3.14 " .

C. INDEPENDENT BACK TILT

The lever to adjust the angle of your back tilt is located under the right side of your seat. To adjust the angle of your back, while seated, pull the lever out and lean the backwards. When your desired angle is achieved, push the lever to the original positing to lock. There are 4 positions that provide 107°-126°

D. SEAT DEPTH ADJUSTMET

Roate the round knob clockwise to adjust the Tilt Tension to your preferred level of resistance. Turning clockwise will increase the resistance while turning counterclockwise will decrease the resistance.