

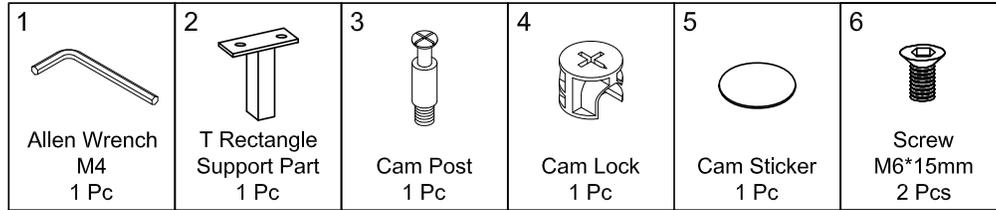


**EVD861GG EVD863GG EVD865GG**  
**60x30 72x30 66x30 Top and Modesty** P.1

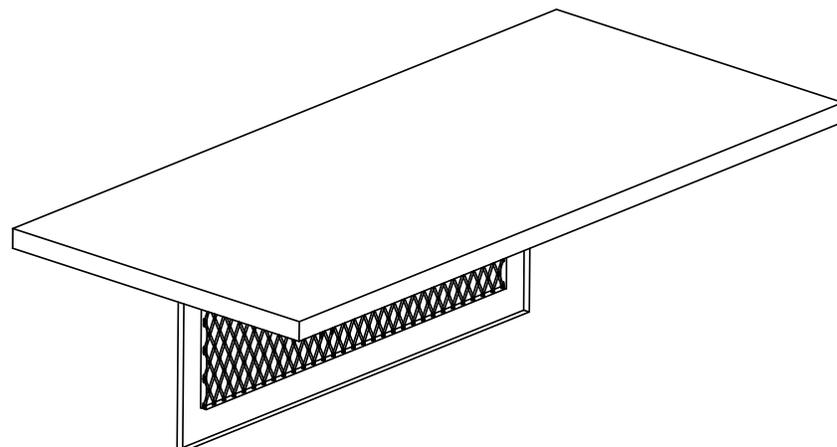


**CAM INSTRUCTIONS**

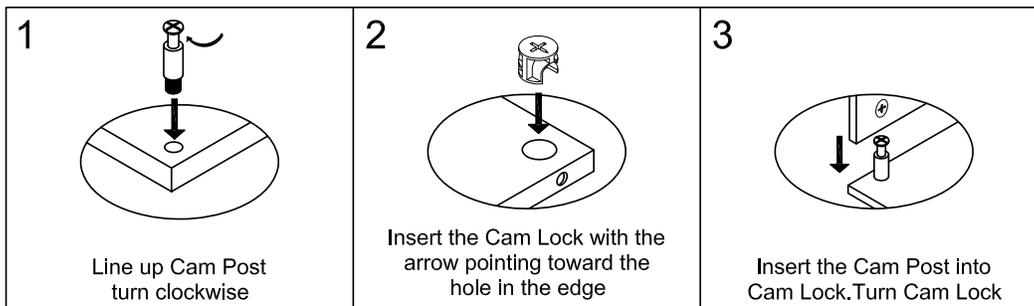


**IMPORTANT NOTE:**

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start assemble.
- Do not tighten all screws or bolts until all completely assembled.
- Keep all hardware parts out of reach of children.


- ① Use the Screw (7) and the Bracket (8) to connect the Pedestal (EVP100GG,EVP110GG) and the Modesty Panel (B).

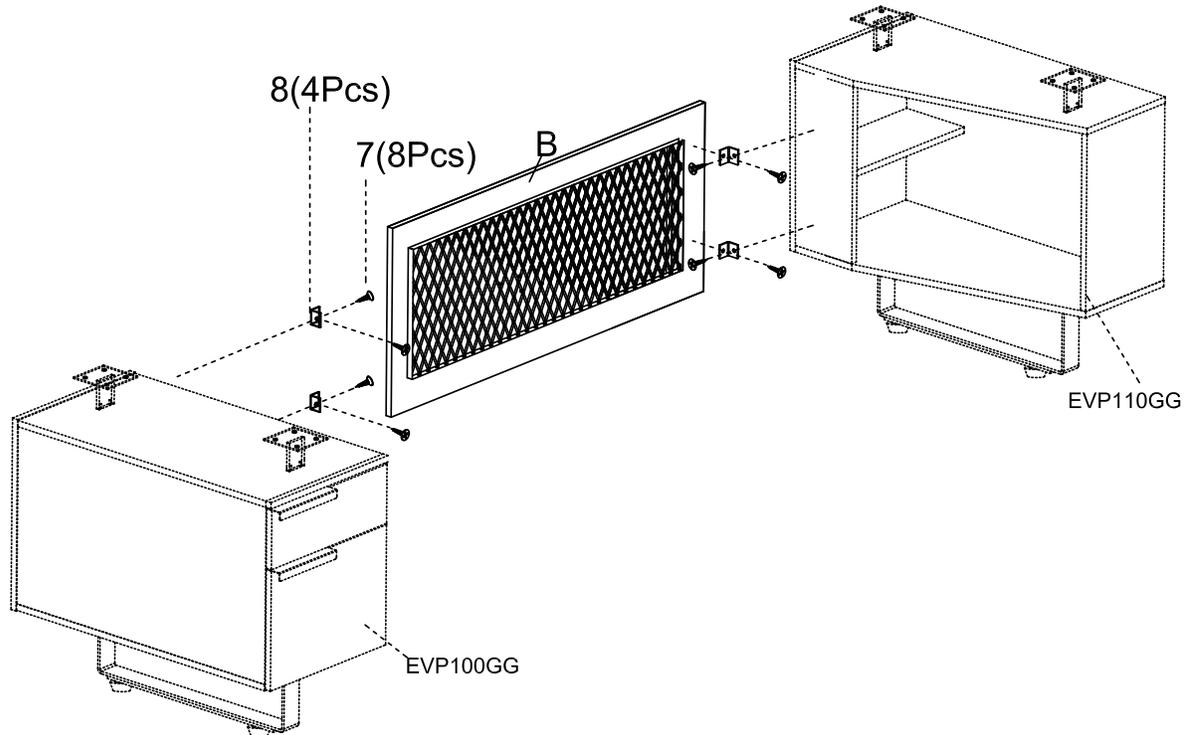


- ② Insert the Cam Post (3) to the T Rectangle Support Part (2), Use the Screw (6) to install the T Rectangle Support Part (2) to the middle edge of the Top Panel (A):

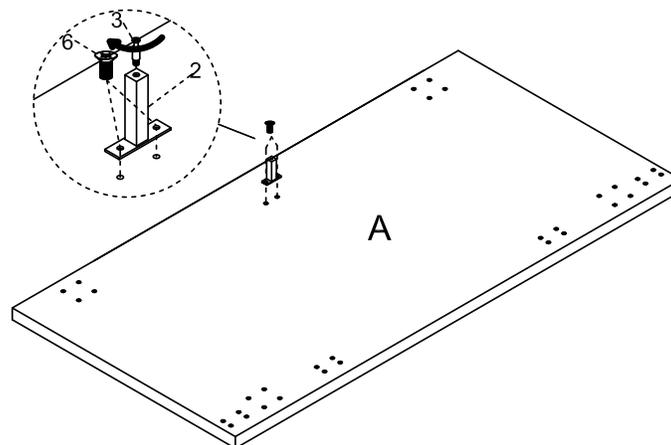

- ③ Put the Top Panel (A) on the Pedestal (EVP100GG,EVP110GG) use the Screw (6) to lock the Top (A).

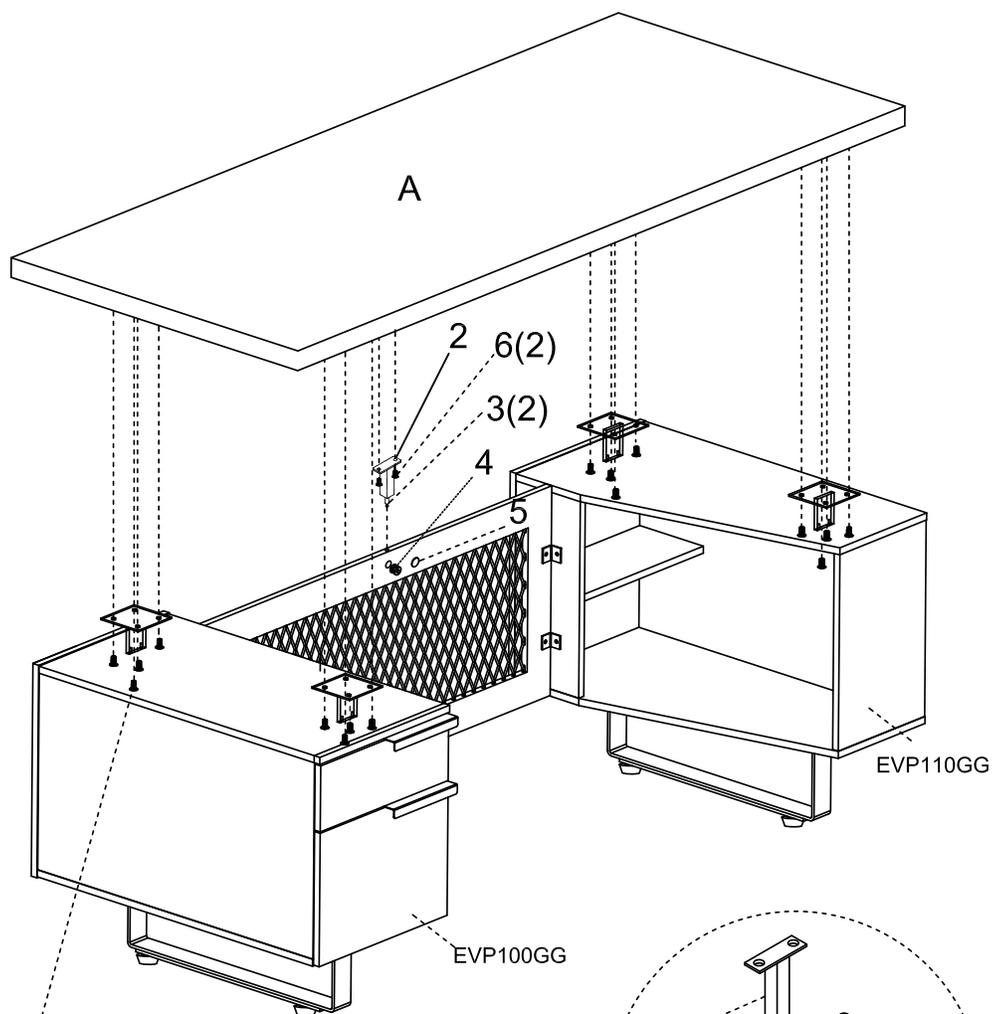

Notes: These screw are packed with the carton for the Pedestal (EVP100GG,EVP110GG)

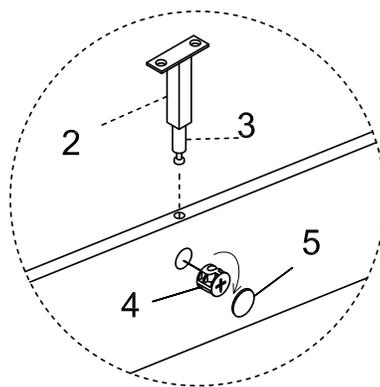

④ Completely assembly

