



EHS5499

ASSEMBLY INSTRUCTIONS

OPERATING INSTRUCTIONS











CUSTOMER SERVICE 1-888-442-8242
www.cubicles.com

ASSEMBLY INSTRUCTIONS

EHS5499

      Remove all items from the carton. Verify all pieces before assembly.

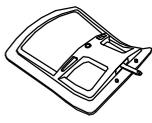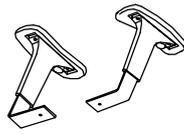
PARTS LIST			
Key	Description	Part	Qty.
A	Backrest		1
B	Seat Cushion / Mechanism		1
C	Armrests (1 left & 1 right armrest)		2
D	Arm Width Adj. Knob with 1 Flat Washer and 1 Split Lock Washer		2
E	Back Post		1
F	Short Back Post Screw 8x10mm		1
G	Back Post Cover		1
H	Back Post Cover Screw 4x20mm		2
I	Long Back Post Screw 8x20mm + 1 Flat Washer		3
J	Star Base		1
K	Foot Ring		1
L	Seat Post (Cylinder)		1
M	Casters		5
N	Glides		5
O	Allen Wrench (M5)		1

ASSEMBLY INSTRUCTIONS

EHS5499


Remove all items from the carton. Verify all pieces before assembly.

STEP 1

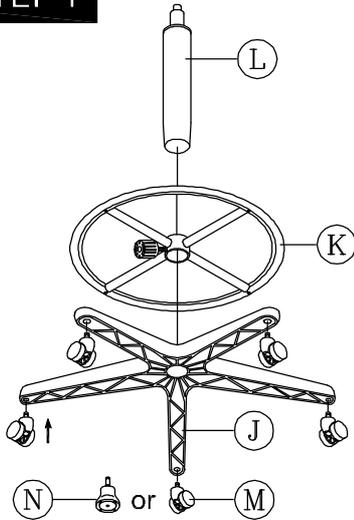


Press the Casters (M) or Glides (N) into the holes at the end of each leg of the Base (J). Loosen the Foot Ring adjustable knob. Insert the bottom end of the Seat Post (L) into the Foot Ring. Now insert the bottom of the Seat Post (L) and Foot Ring (K) into the center hole of the Base (J). Tighten the Foot Ring Adjustable Knob.

STEP 2

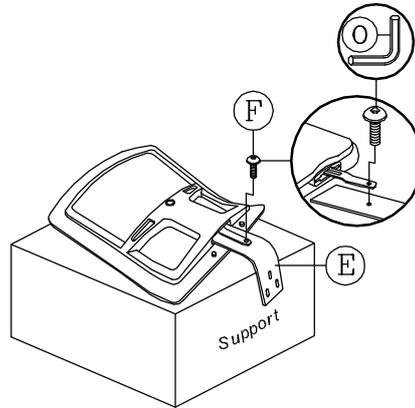

Please be careful to use the correct SHORT Back Post Screw (F). Attach Back Post (E) to Backrest (A) using one Short Back Post Screw (F). Tighten securely using the enclosed Allen Wrench (O).


STEP 3

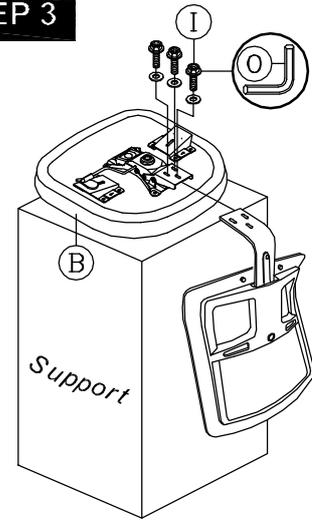

Please be careful to use the correct LONG Back Post Screw with Flat Washer .


Insert Back Post (E) into rear of mechanism and secure using 3 Long Back Post Screws with Flat Washers and . Tighten securely using the enclosed Allen Wrench (O).

STEP 4

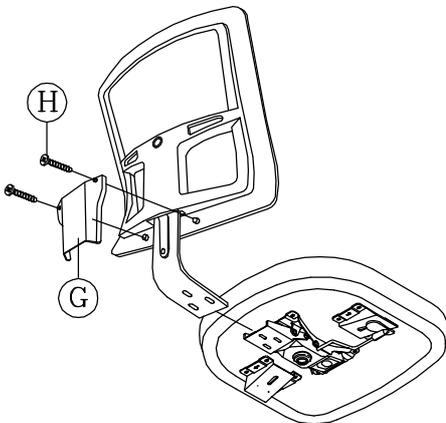

Please be careful to use the correct Back Post Cover Screws (H). Attach Back Post Cover (G) to Back Post (E) using two Back Post Cover Screws (H).

STEP 5

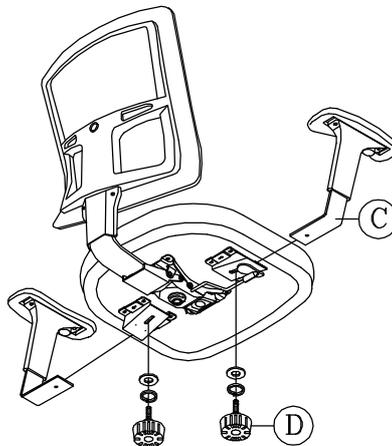

To attach your armrests, insert Left and Right Armrests (C) on the correct sides of the chair into the brackets located under each side of the Seat Cushion (B). Insert the Arm Width Adjustment Knobs (D) through the slots in the brackets into the hole in the arm. After the arms are set at your desired width, tighten securely. You may adjust the width of your armrests at any time. Please see the Arm Width Adjustment section of the enclosed Operating Instructions for directions.

STEP 6




Now turn the assembled seat upright and locate the center hole of the Mechanism over the Seat Post. Push down firmly until the connection is secure. Before using your chair, ensure that all the screws are tightened fully for safety. You can now enjoy the comfort of your new chair!
Note:
Please keep the enclosed Allen Wrenches and check all screws every six months to ensure they remain tightly fastened.

PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHTENED.
- EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING - IT MAY CAUSE SUFFOCATION.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- NOTE: SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS.

OPERATING INSTRUCTIONS

EHS5499

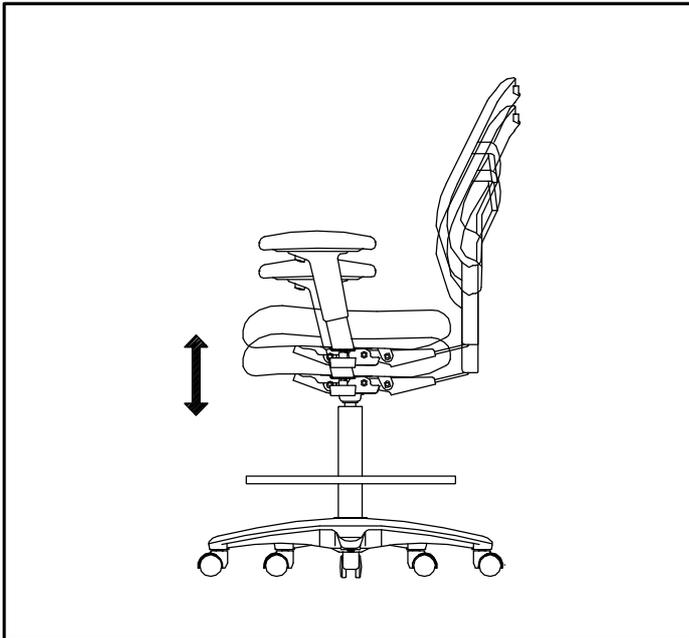


A. SEAT HEIGHT ADJUSTMENT

While seated, pull the Seat Height Adjustment Lever up and hold it while raising or lowering the seat to change the seat height.

(Please note, the Seat Height Adjustment Lever is on the right side of the seat).

When the lever is released, the seat height is locked.

The Seat Height Adjustment range of motion is approximately 9.4".

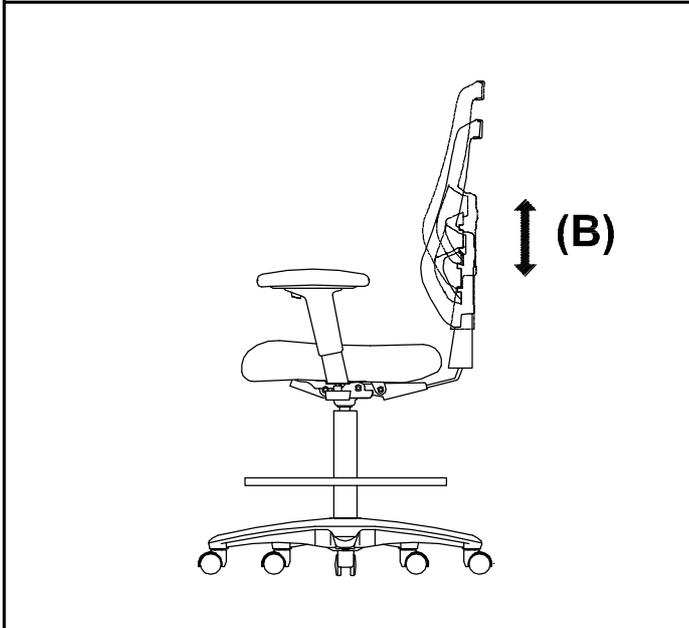


B. BACKREST HEIGHT ADJUSTMENT

To raise your backrest, slowly lift the back up until you hear a series of 4 to 5 clicks. Each click represents a position where the backrest will lock into place. To lower the backrest, raise the backrest all the way up until the tension is released.

The backrest will now return to the lowest position without stopping. Now repeat the previous steps to raise your backrest up to your desired position.

The Backrest Height Adjustment range of motion is approximately 2.8".

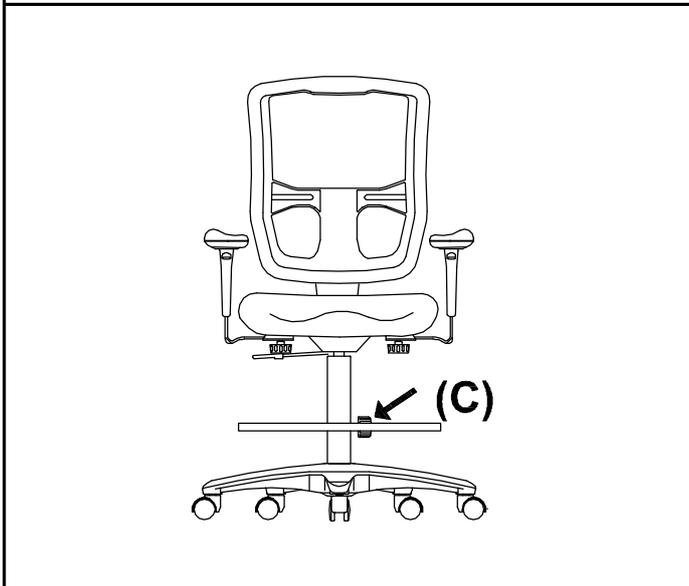


C. FOOT RING HEIGHT ADJUSTMENT

Loosen the adjustment knob on the Foot Ring.

Move the Foot Ring upward or downward to your desired height. Tighten the adjustment knob securely in your desired position.

OPERATING INSTRUCTIONS


EHS5499

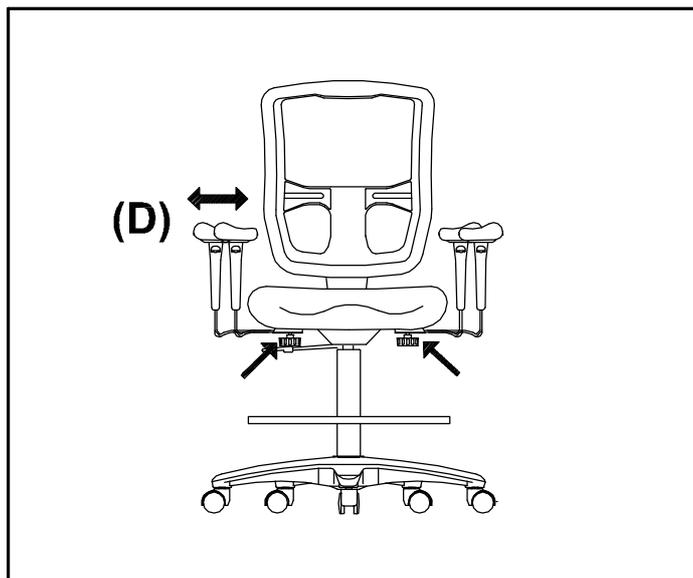

D. ARM WIDTH ADJUSTMENT

To adjust the arm width, loosen slightly the knob holding each arm in place. Move each arm in or out to your desired width. After reaching your desired width, securely tighten the knob.

The Arm Width range of motion is approximately 2".

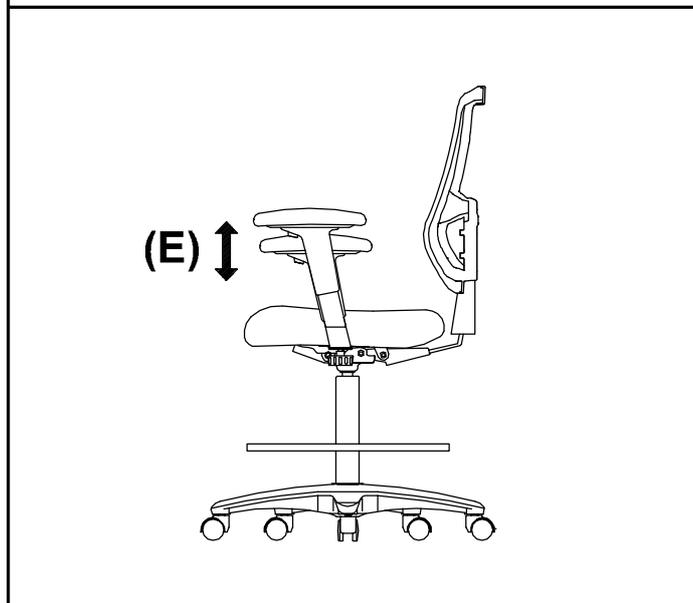

E. ARM HEIGHT ADJUSTMENT

While seated, locate the button under the front of the armrest. Press the button to raise or lower the height of the arms to your desired height.

The Arm Height range of motion is approximately 2.4".