


ADAPT-HI / ADAPT-MID

ASSEMBLY INSTRUCTIONS OPERATING INSTRUCTIONS

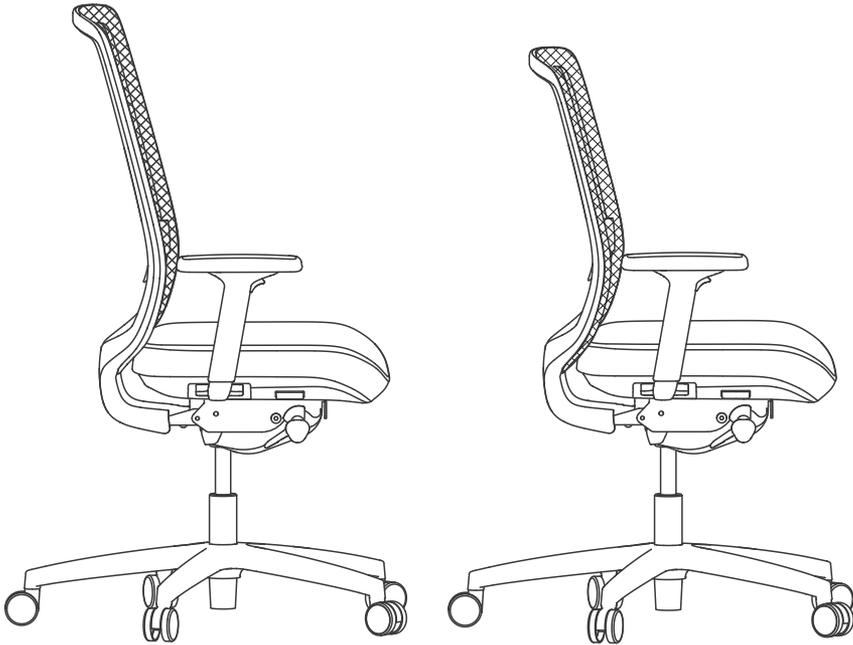

ASSEMBLY INSTRUCTIONS

ADAPT-HI / ADAPT-MID

Remove all items from the carton. Verify all pieces before assembly.

PARTS LIST

Key	Description	Part	Qty.	Spare
A	Backrest		1 pc	
B	Seat Cushion with Armrests		1 pc	
C	Gas Lift		1 pc	
D	Base with Castors		1 pc	
E	Back Screws M8*16mm, Blue		3 pcs	1pc
F	Allen Wrench		1 pc	

PREVENTIVE FACINTENANUE AND WARNING!


- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHTENED.
- EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING — IT MAY CAUSE SUFFOCATION.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- NOTE: SOME SCREWS MAY BE PREASSEMBLED. IF PREASSBABLED, IGNORE ASSEMBLY INSTRUCTIONS.

ASSEMBLY INSTRUCTIONS

ADAPT-HI / ADAPT-MID


Remove all items from the carton. Verify all pieces before assembly.

STEP 1

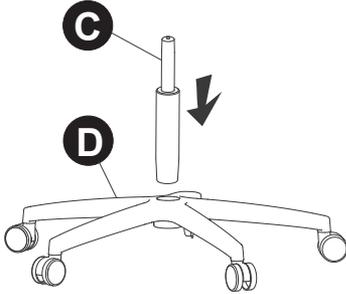


Turn the Star Base (D) upright and insert Gas Lift (C) into the center hole of Star Base (D).

STEP 2

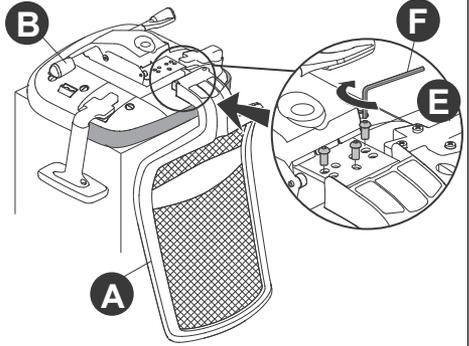

Assemble Backrest (A) to Seat Cushion (B) and secure in place using 3 Back Screws (E) as shown. Tighten the screws fully with Allen Wrench (F).

STEP 3

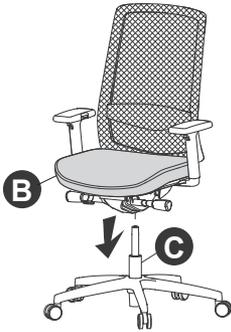

Turn assembled seat upright and locate central hole below Seat Cushion (B) over Gas Lift (C). Push down firmly until connection is secure.


PREVENTIVE FACINTENANUE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHTENED.
- EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING — IT MAY CAUSE SUFFOCATION.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- NOTE: SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS.


OPERATING INSTRUCTIONS

ADAPT-HI / ADAPT-MID


A SEAT HEIGHT ADJUSTMENT

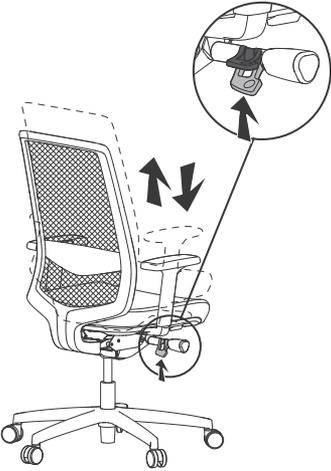


C BACK TILT LOCKOUT

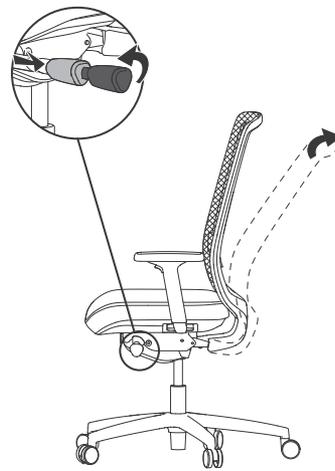

B SEAT DEPTH ADJUSTMENT

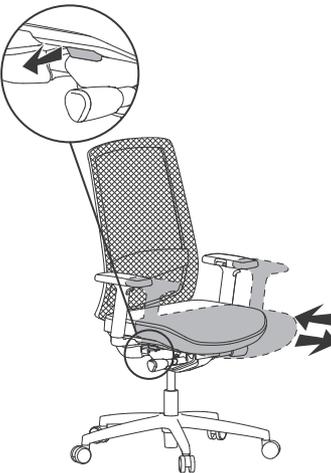

D TILT TENSION ADJUSTMENT

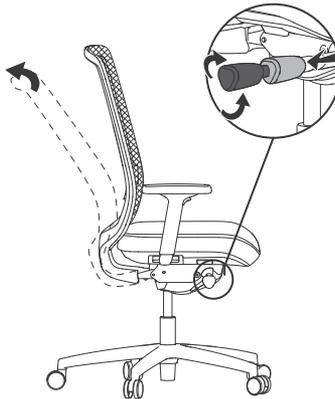

A TO ADJUST SEAT HEIGHT

While seated, lean forward, lifting your body weight from the seat. Reach underneath the right side of chair and locate the lever. Pull the lever upwards slowly to allow the chair to rise to the desired height. To lower seat height, lift the lever slowly while seated.

B TO ADJUST SEAT DEPTH

To move the seat forward or backward, pull the right front handle and position the seat.

C TO ADJUST TILT LOCKOUT

Reach the left side of chair and locate the lever. To lock the chair in a position, set the back at the desired angle and turn the lever backwards. Turn the lever forwards. When the lever is in this position, the back is free to recline backwards.

D TO ADJUST TILT TENSION

Reach the right side of chair and locate the lever. Pull the lever. To loosen the counter pressure of mechanism, turn the lever backwards. To increase the counter pressure of mechanism turn the lever forwards. Rotate the lever until desired counter pressure is reached.

OPERATING INSTRUCTIONS

ADAPT-HI / ADAPT-MID


E LUMBAR SUPPORT HEIGHT ADJUSTMENT




F 360° SWIVEL




G ARMREST HEIGHT ADJUSTMENT

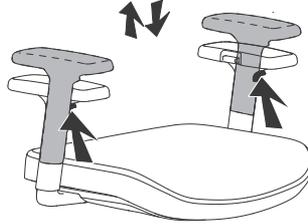

H ARM PAD DEPTH ADJUSTMENT

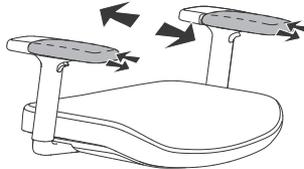

I ARM PAD WIDTH ADJUSTMENT

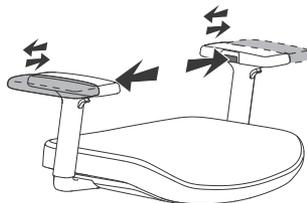

E TO ADJUST LUMBAR SUPPORT

While seated, pull upward and downward the lumbar support to a desired position.

F 360° SWIVEL

Your chair can rotate around 360°.

G TO ADJUST ARMREST HEIGHT

To adjust armrests, pull upwards/downwards while holding down the lock release button located on the front side of the armrest.

H TO ADJUST ARM-PADS DEPTH

To adjust arm-pads depth press the button located on the inner side of pads and move the pads to a desired position.

I TO ADJUST ARM-PADS WIDTH

To adjust arm-pads width press the button located on the inner side pads and move the pads to a desired position.