

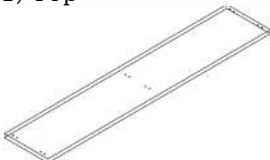
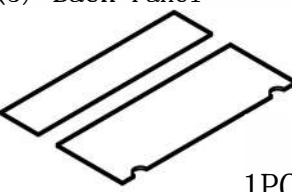




(1) Top  1PCS	(2) End Panel  1PCS	(3) End Panel  1PCS	(4) Shelf  1PCS	(5) Back Panel  1PCS	(6) Center Support  1PCS	(M) Cushion  4PCS	(M1) Cushion  4PCS
(A) Dowel  12PCS+1	(A1) Dowel  4PCS	(B) Cam Pin  12PCS+1	(C) Cam Lock  12PCS+1	(p) Cam Cover  12PCS+1	(E3) Wood Screw  20PCS+2	(E4) Wood Screw  12PCS+1	(R) Flat Bracket  2PCS


STEP 1

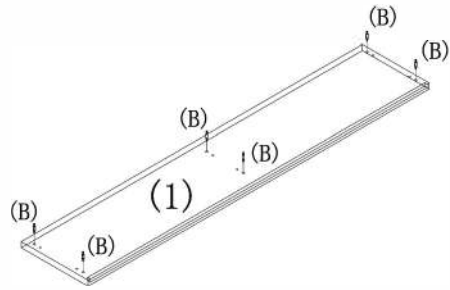


STEP 2

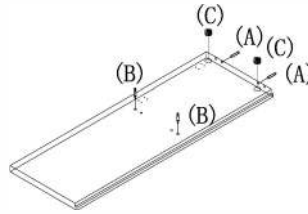


STEP 3

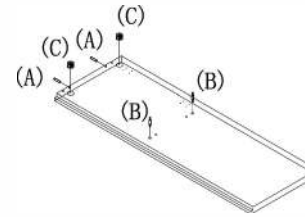


STEP 4

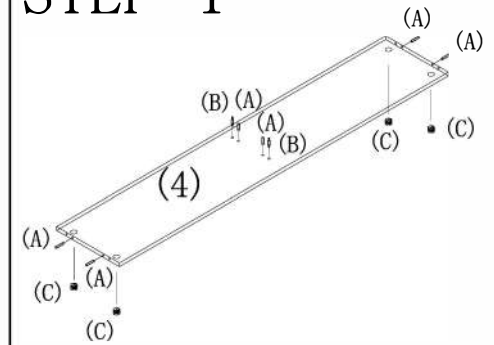


STEP 5

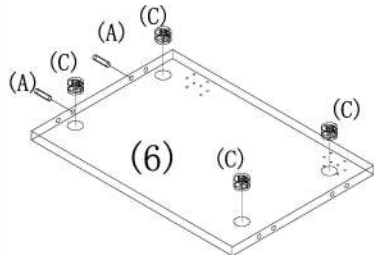

STEP 6

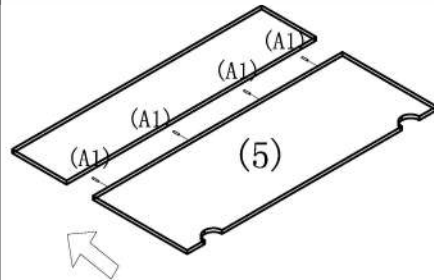

STEP 7

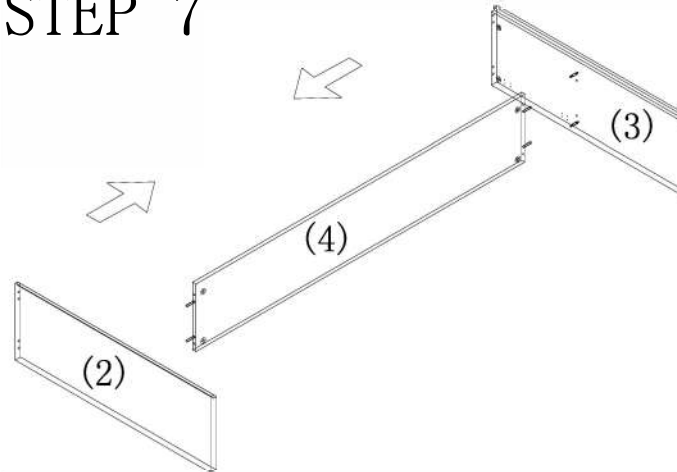


OVERHEAD STORAGE UNIT

NAP-44H
71"W*15"D*36"H




Always lay components on a clean, soft-cushioned surface during assembly.


STEP 8

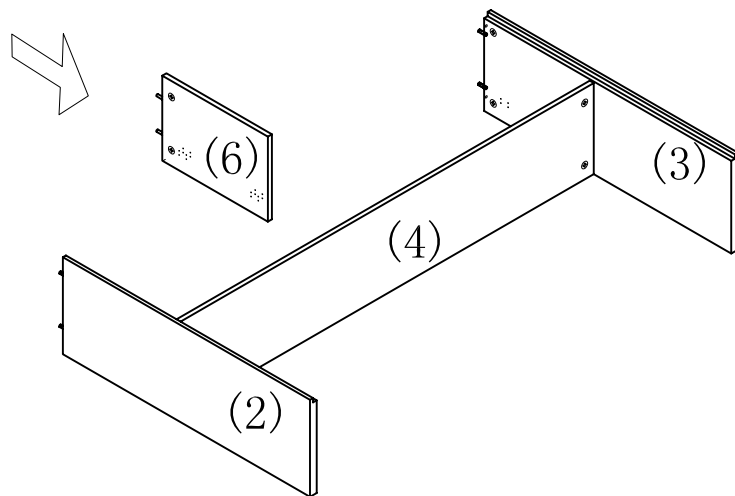


STEP 9

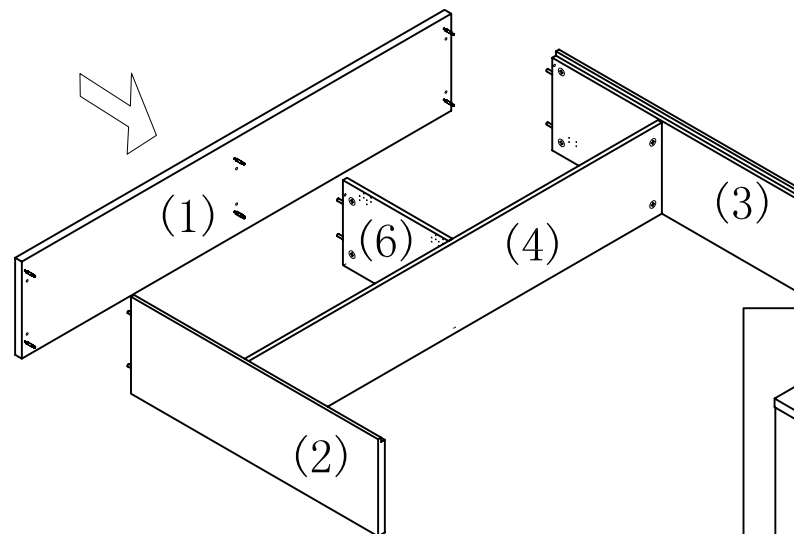


STEP 12

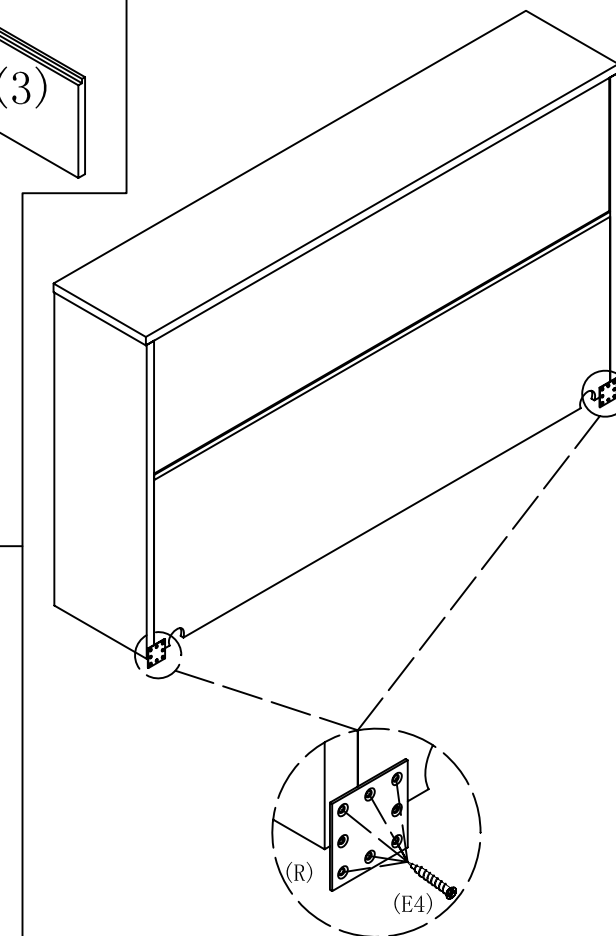

STEP 10

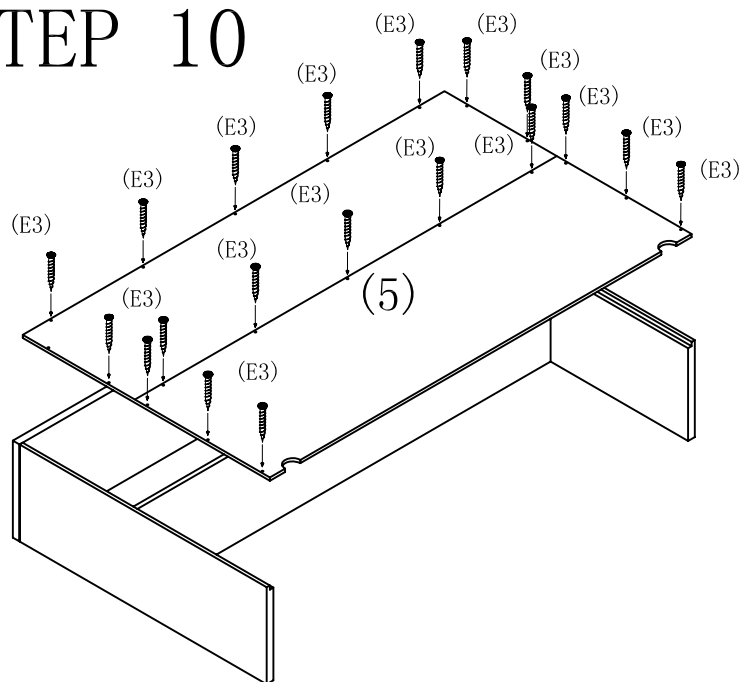

STEP 11

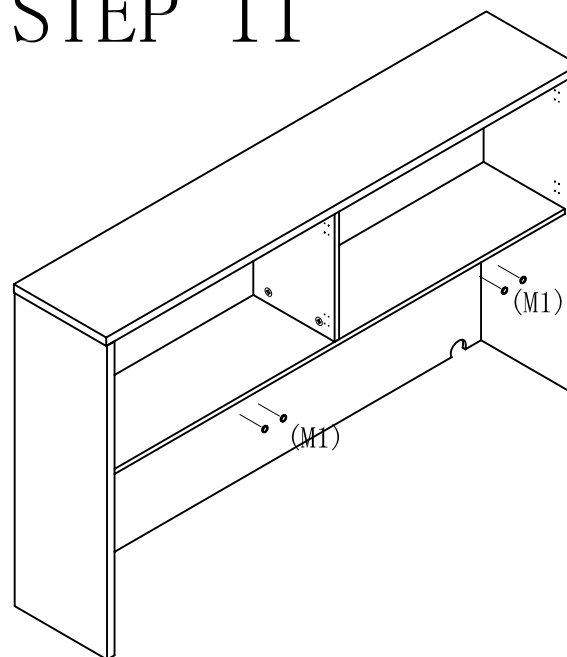

OVERHEAD STORAGE UNIT
NAP-44H
71"W*15"D*36"H

OSP
furniture
877-OSP-WORX
(677-9679)

Always lay components on A clean,
soft-cushioned surface during assembly.