




cubicles.com

2 Drawer Mobile Pedestal

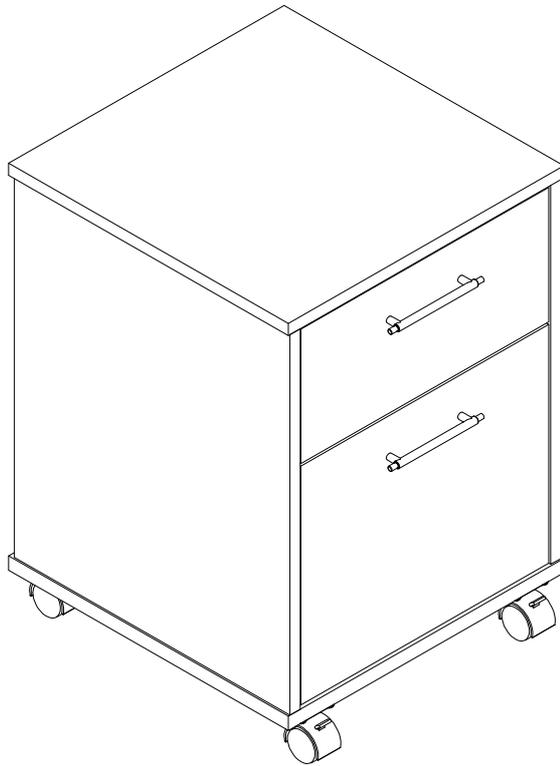

Get Ready to Assemble

For best results, keep these tips in mind:

- ① We know you want to finish this assembly as quickly as possible, but trust us: you'll have a better experience if you take it one step at a time.
- ② Give yourself some room to work near where you want the fully assembled product.
- ③ If your floor isn't carpeted, assemble this product on the empty carton to avoid scratching.
- ④ Do you have a friend who owes you a favor? Some steps may go a little easier with a second set of hands.

DOs

- ✔ Use a #2 Phillips head screwdriver (or other handheld tools as indicated)
- ✔ Wear safety glasses at all times during assembly
- ✔ Carefully follow the instructions in this guide and complete all steps in order
- ✔ Give us a call if you're having trouble with a particularly tricky step

DON'Ts

- ✘ We know power tools are quick and easy, but you shouldn't use them when assembling this product (unless otherwise specified)
- ✘ Never move your furniture with items inside or resting on the surface
- ✘ Do not attempt to use this product before all steps have been completed

IMPORTANT SAFETY INFORMATION



PLEASE READ WARNINGS

Improper use can cause safety hazards, or damage to your furniture and household items.

Warning	Do	Don't	Why it's important
Serious injury may occur.	<ul style="list-style-type: none">Assemble following all instructions using all indicated parts and hardware provided.Install every indicated nail and/or screw.Verify furniture is stable on it's own.Place heaviest items in the lower drawers.Always load the bottom drawer first.	<ul style="list-style-type: none">Do not move unit when loaded.Do not load with a television or other heavy equipment.Never exceed the maximum load limits stated in the instructions.	Improper assembly, use or loading can lead to product instability, tip-over or collapse.

Caution	Do	Don't	Why it's important
Serious injury may occur.	<ul style="list-style-type: none">Unload unit prior to moving starting with top drawer first.	<ul style="list-style-type: none">Do not move unit when loaded.	Loaded units are heavy and are not designed to be moved when loaded.

IMPORTANT SAFETY INFORMATION





PLEASE READ WARNINGS

Improper use can cause safety hazards, or damage to your furniture and household items.

Advertencia	Hacer	No	Por qué es importante
Pueden producirse lesiones graves.	<ul style="list-style-type: none">• Realice el montaje siguiendo todas las instrucciones y utilizando todas las piezas indicadas y los herrajes suministrados.• Instale todos los clavos y/o tornillos indicados.• Compruebe que el mueble sea estable por sí mismo.• Coloque los objetos más pesados en los cajones inferiores.• Cargue siempre primero el cajón inferior.	<ul style="list-style-type: none">• No mueva la unidad cuando esté cargada.• No cargue el mueble con un televisor u otro equipo pesado.• No supere los límites máximos de carga indicados en las instrucciones.	El montaje, uso o carga inadecuados pueden provocar inestabilidad, vuelco o colapso del producto.

Atención	Hacer	No	Por qué es importante
Pueden producirse lesiones graves.	<ul style="list-style-type: none">• Descargue el mueble antes de moverlo empezando por el cajón superior.	<ul style="list-style-type: none">• No mueva la unidad cuando esté cargada.	Las unidades cargadas son pesadas y no están diseñadas para ser movidas cuando están cargadas.


Get to know your Boards

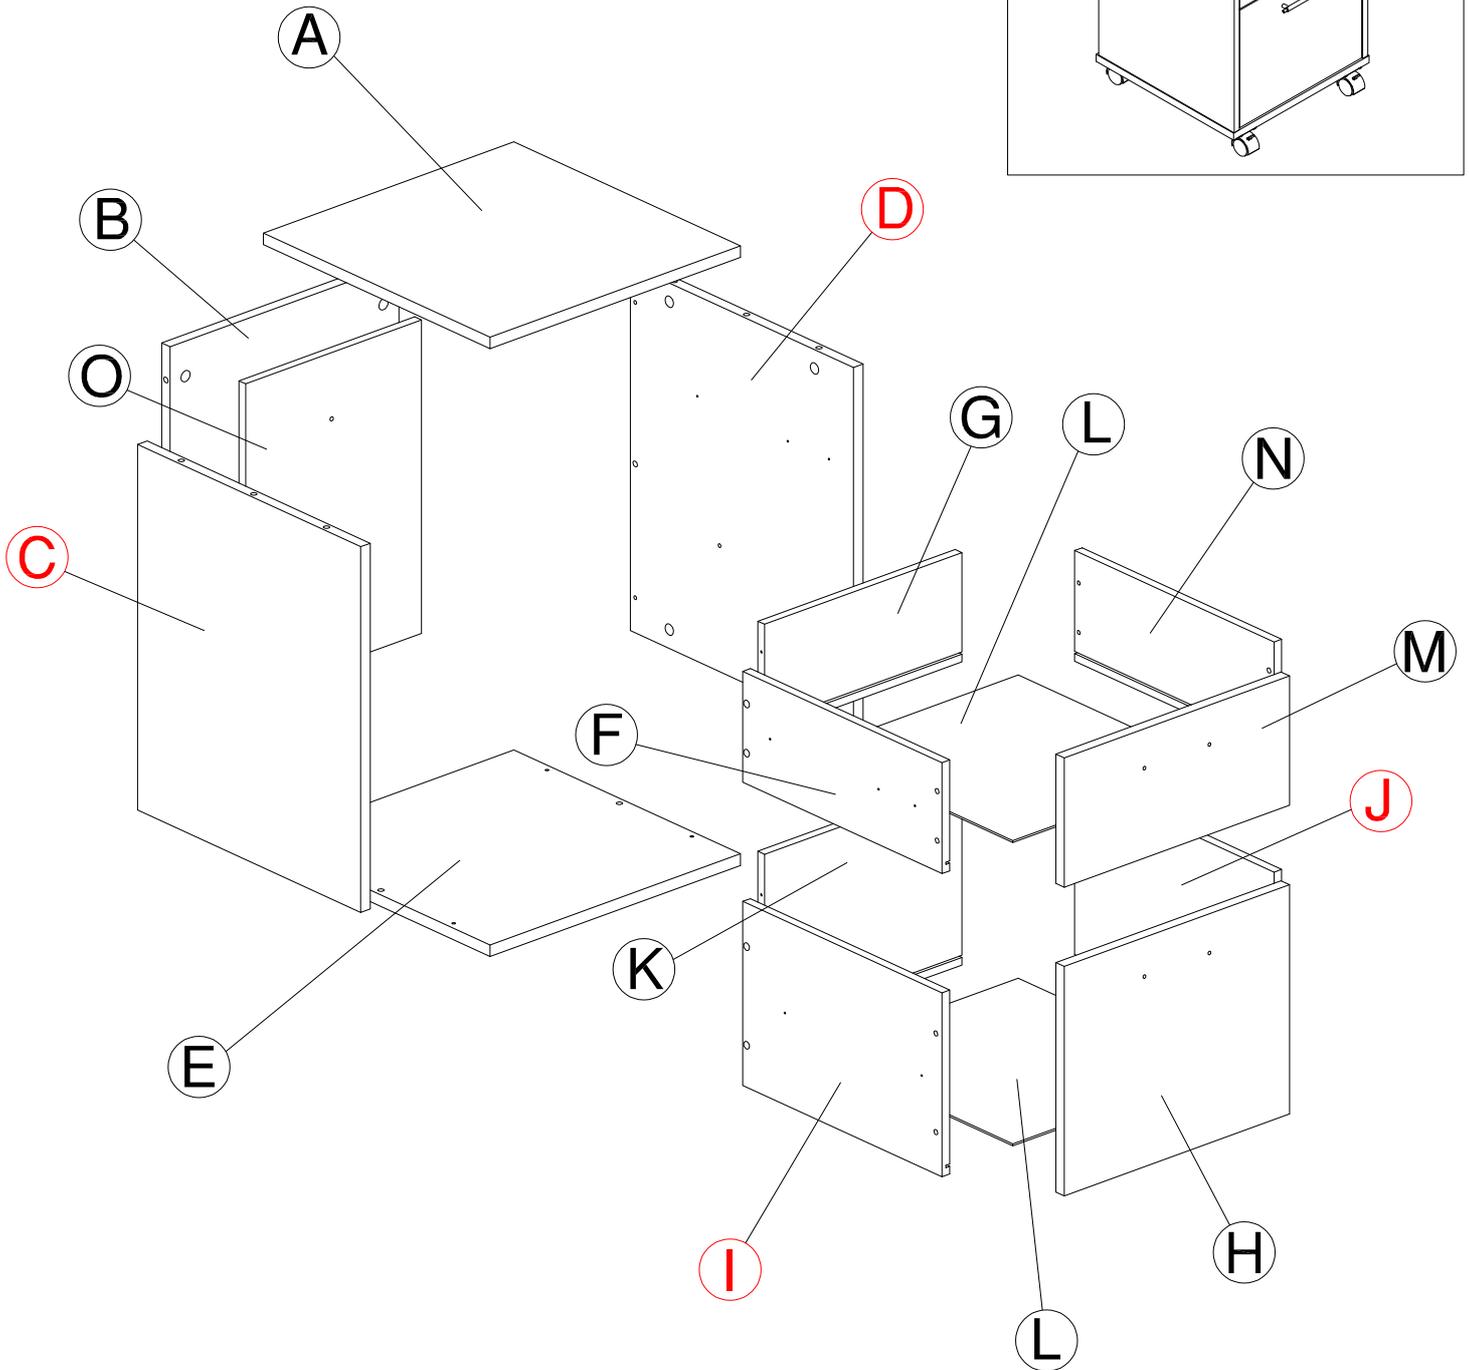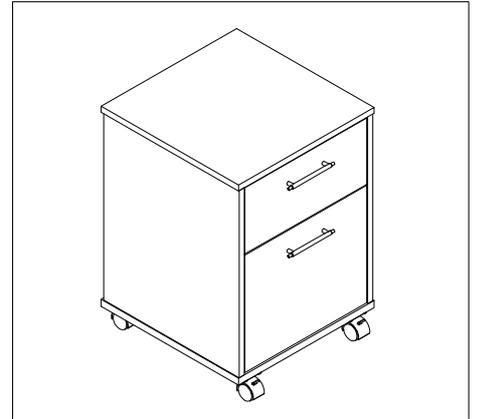

Get to know your Fasteners

Fasteners are shown actual size.


H181468

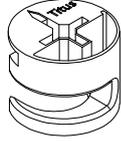

KD Cam

[12]

H72988



KD Bolt

[12]


H38169



Wood Dowel
8 x 30mm

[6]

H211930



#8 -18x 15/32"

[28]


H124395



#6 x 1/2"

[12]


H23198



#10 x 1-1/2"

[8]


H146988



#12 x 1/2"

[8]


H158933



#8 x 3/4"

[4]


H150019



#8 x 1"

[2]

H195734




6.3x13mm ZINC

[4]

Get to know your Hardware


Hardware not to scale.

Q89892

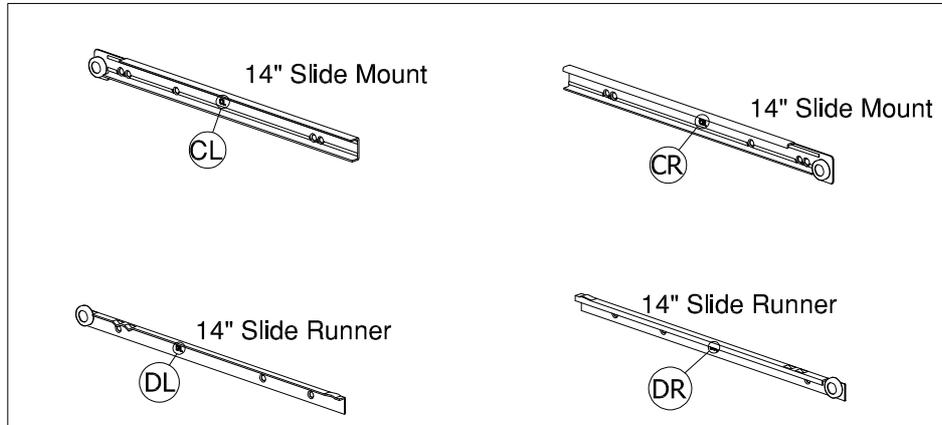


[1]

Q216340

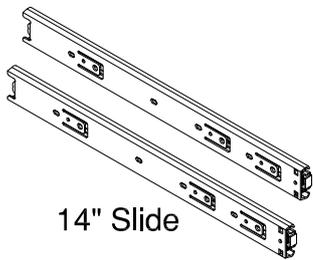


[1]

H180792

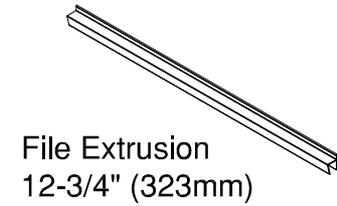


[2]

H211291

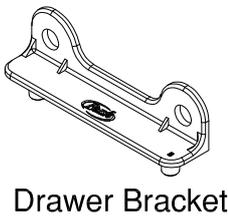

[2]

H211292

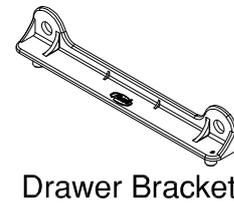


[2]

Z118863




[2]

Z118862

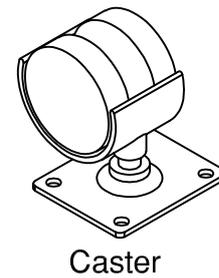

[2]

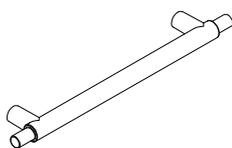


[2]

STEP 1

Prepare Panels


H211292

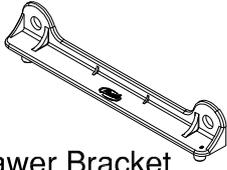

[2]

Drawer Bracket


H211291

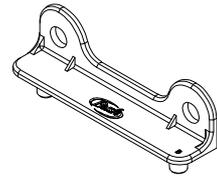

[2]




Drawer Bracket

H146988









[8]

#12 x 1/2"

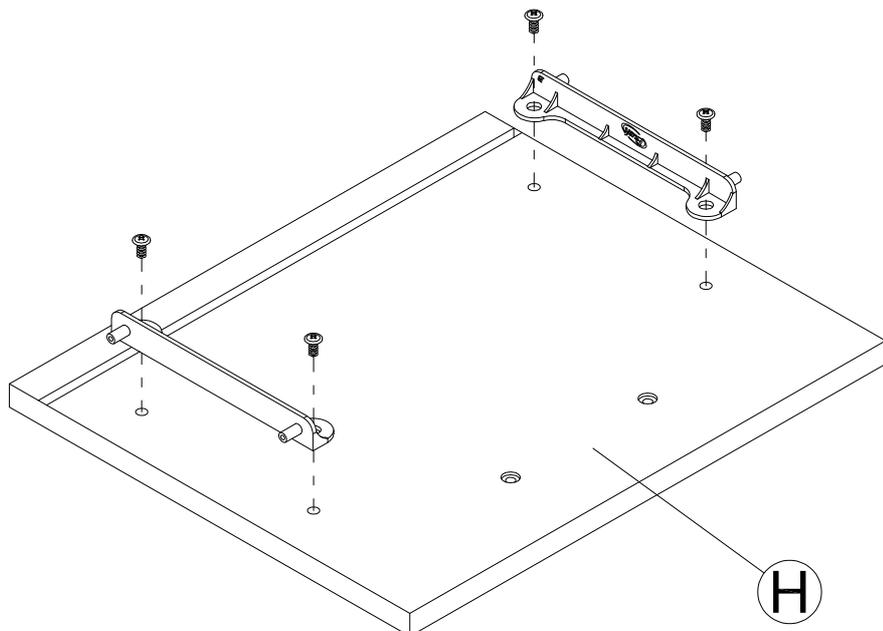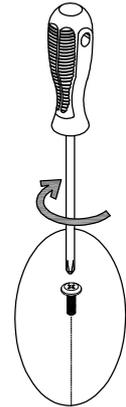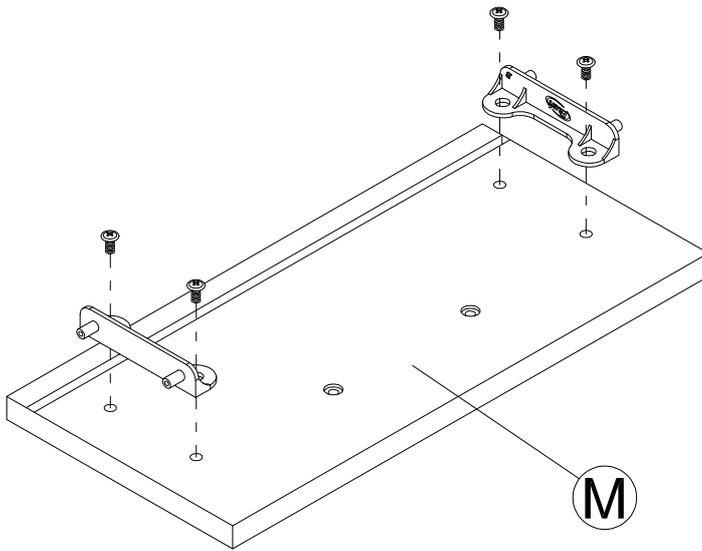

STEP 3


Install Slide Runners

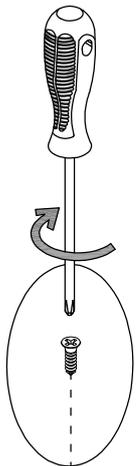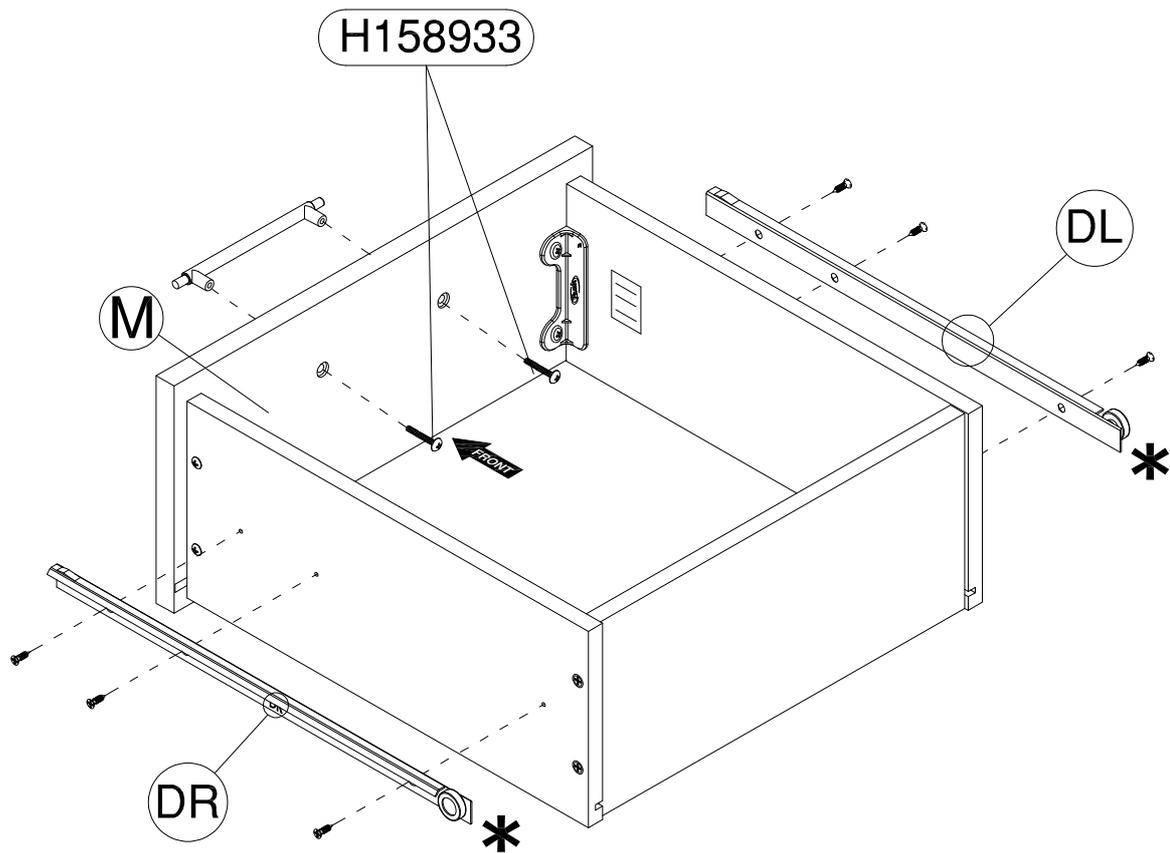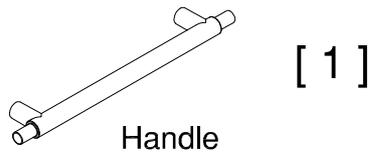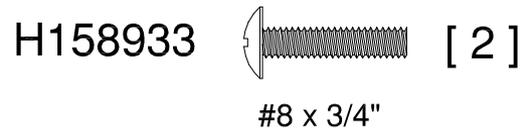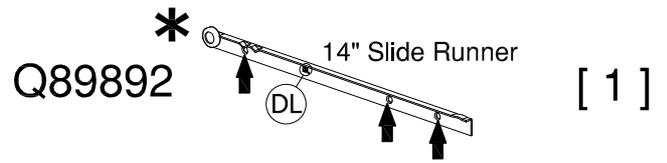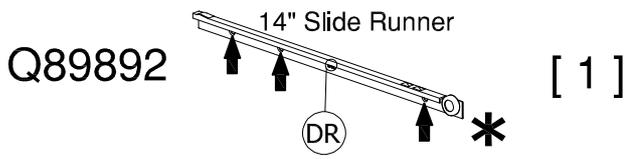

STEP 4

Assemble Panels


H23198



[4]


#10 x 1-1/2"

H211930



[4]

#8 -18x 15/32"

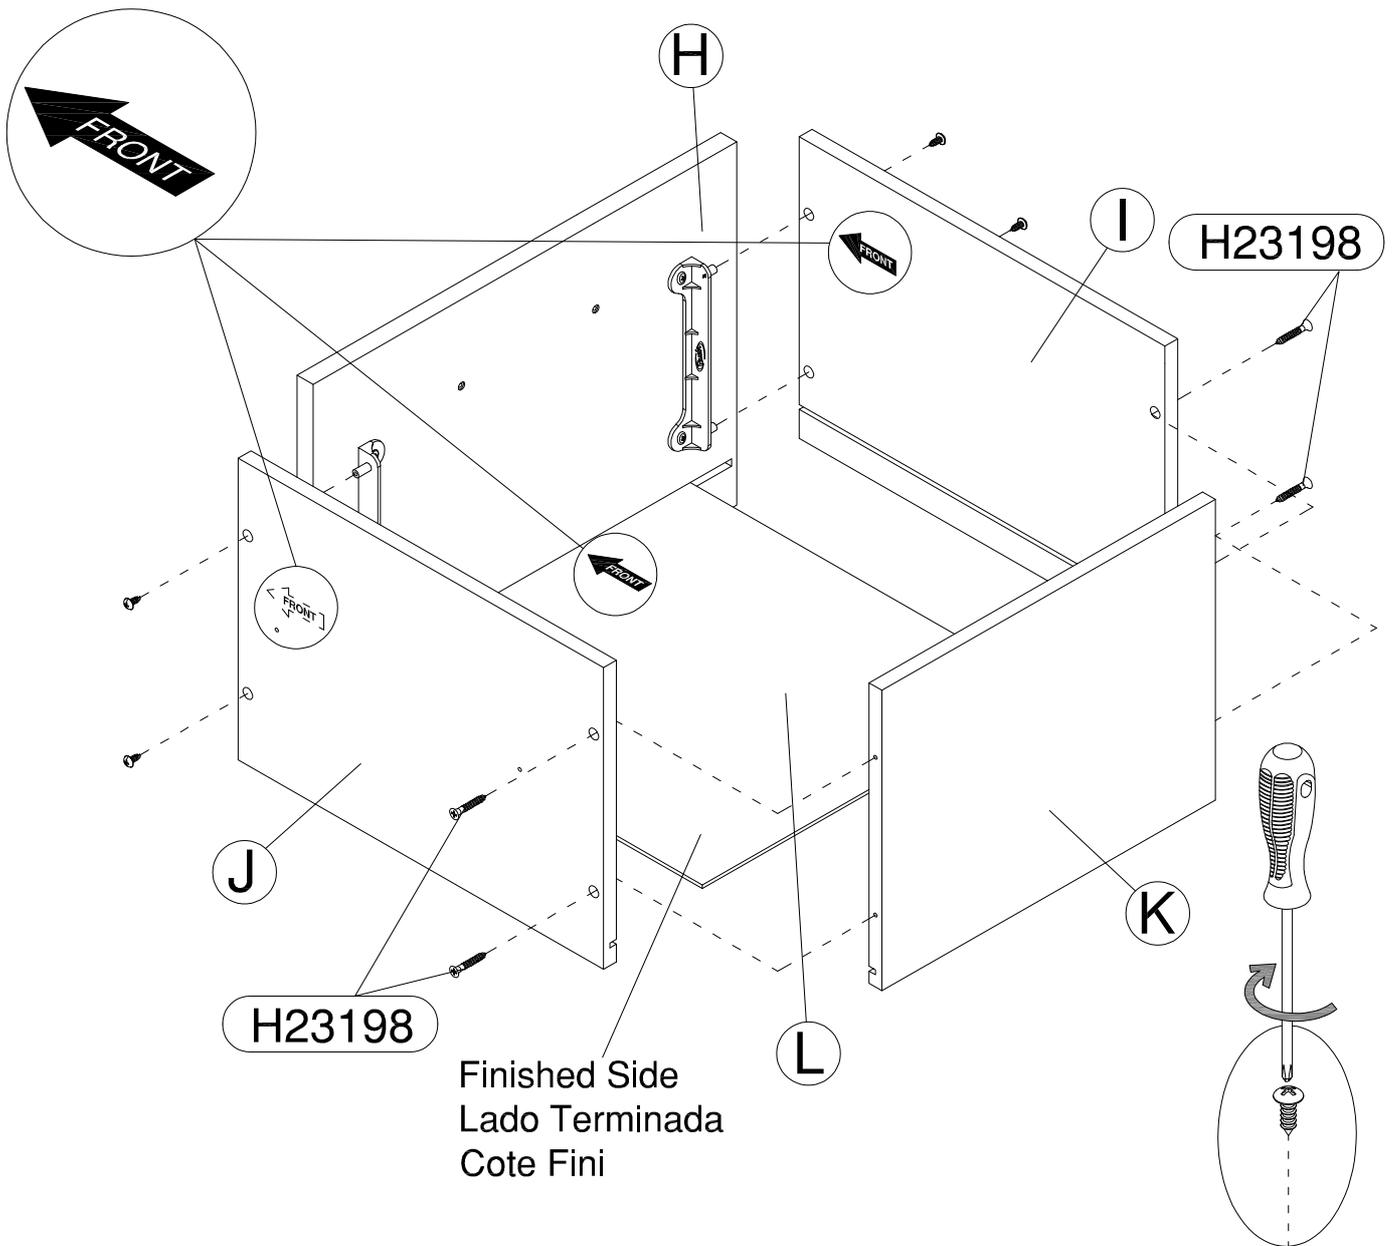


STEP 5

Separate Slides

**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**



Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

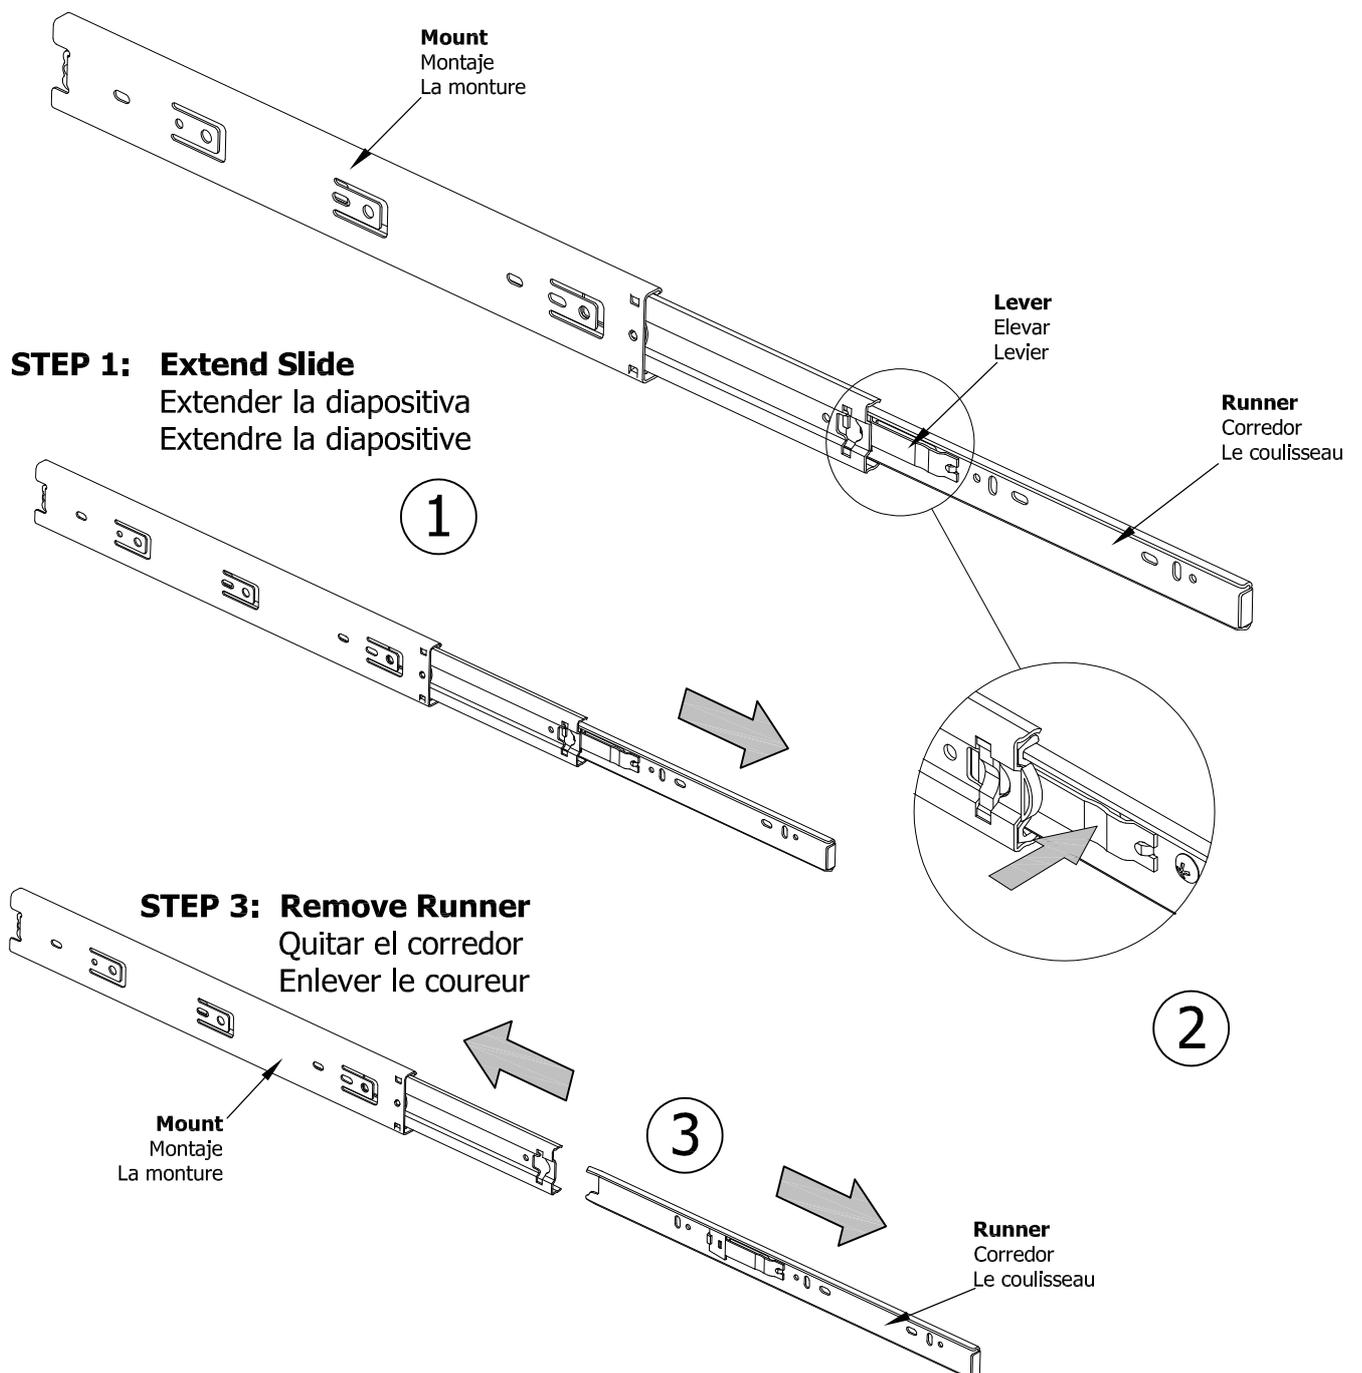

STEP 6


Install Slide Runners

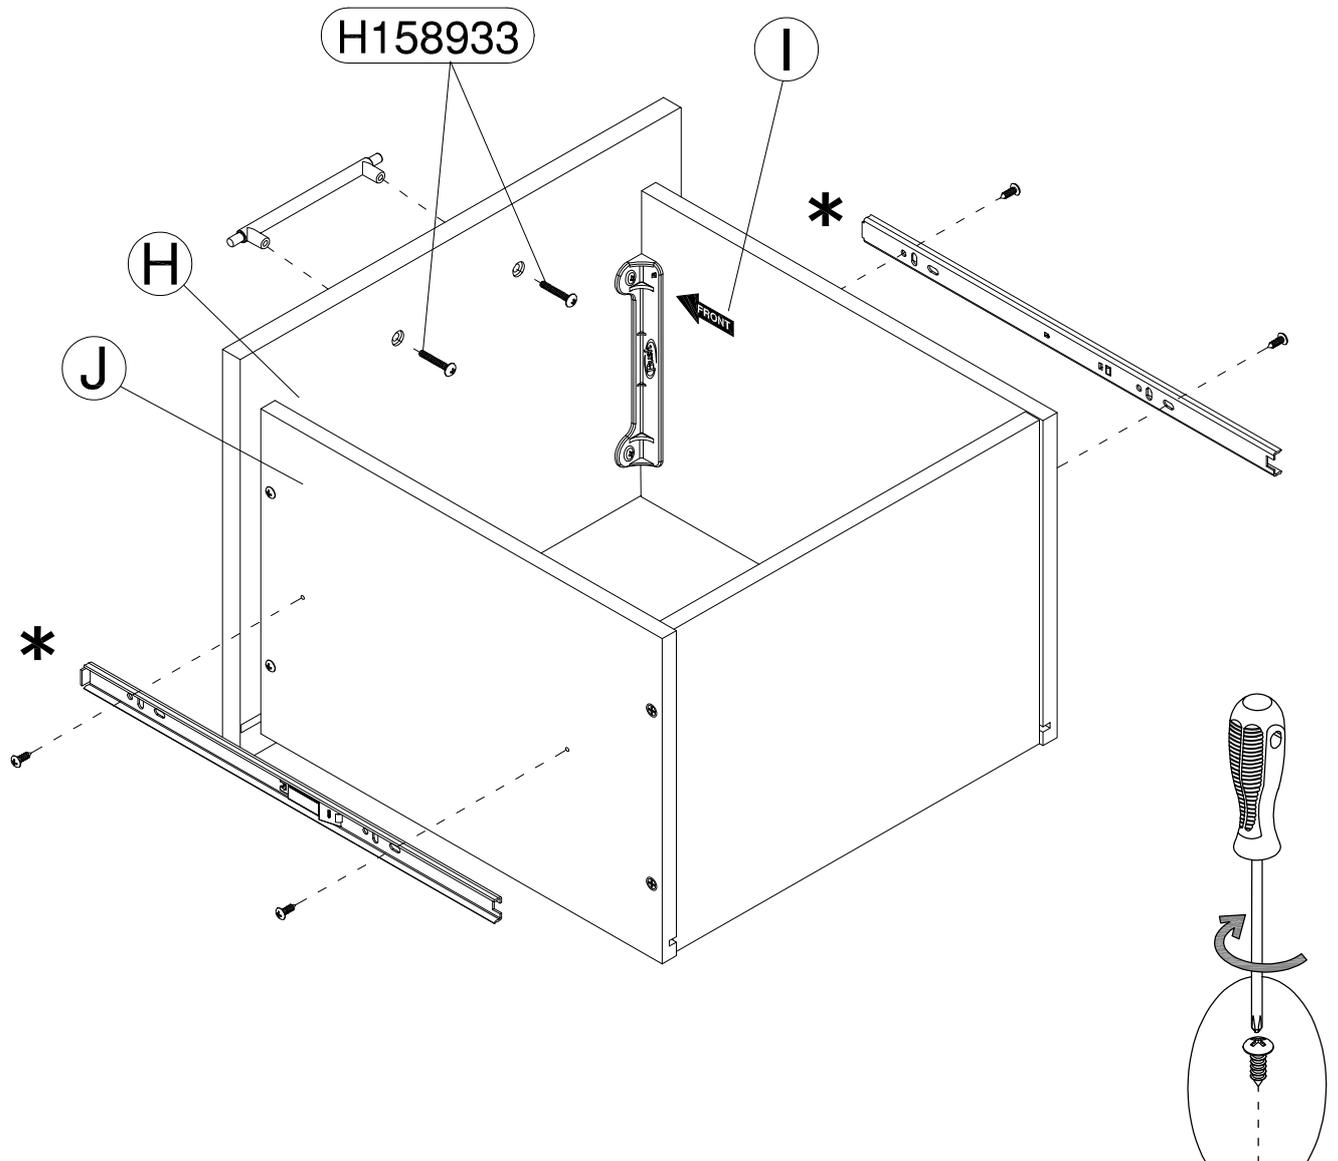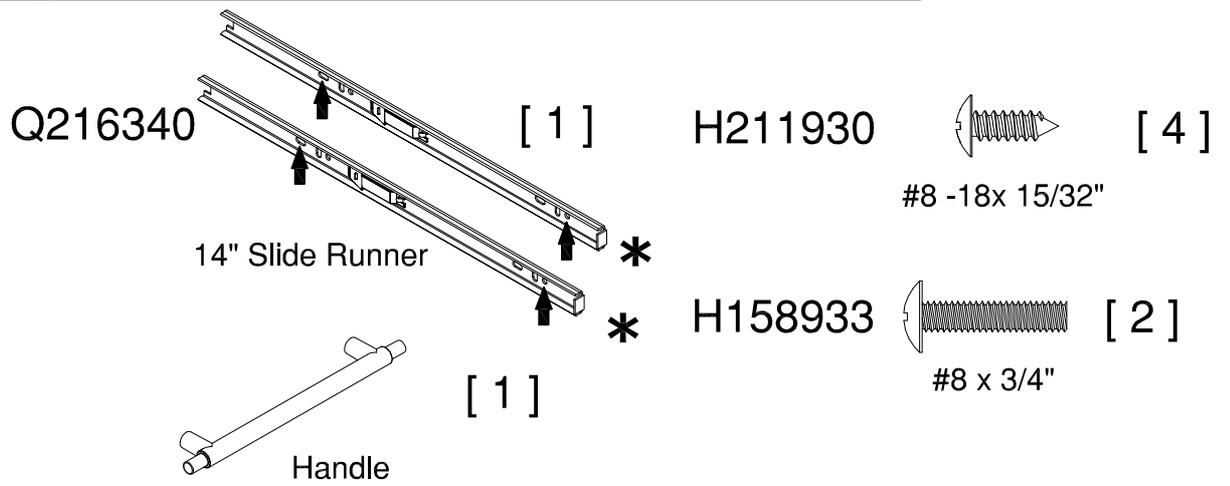

STEP 7


Install Hardware

H180792

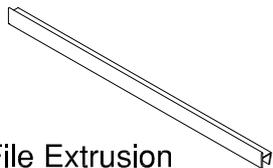

[2]

File Extrusion
12-3/4" (323mm)

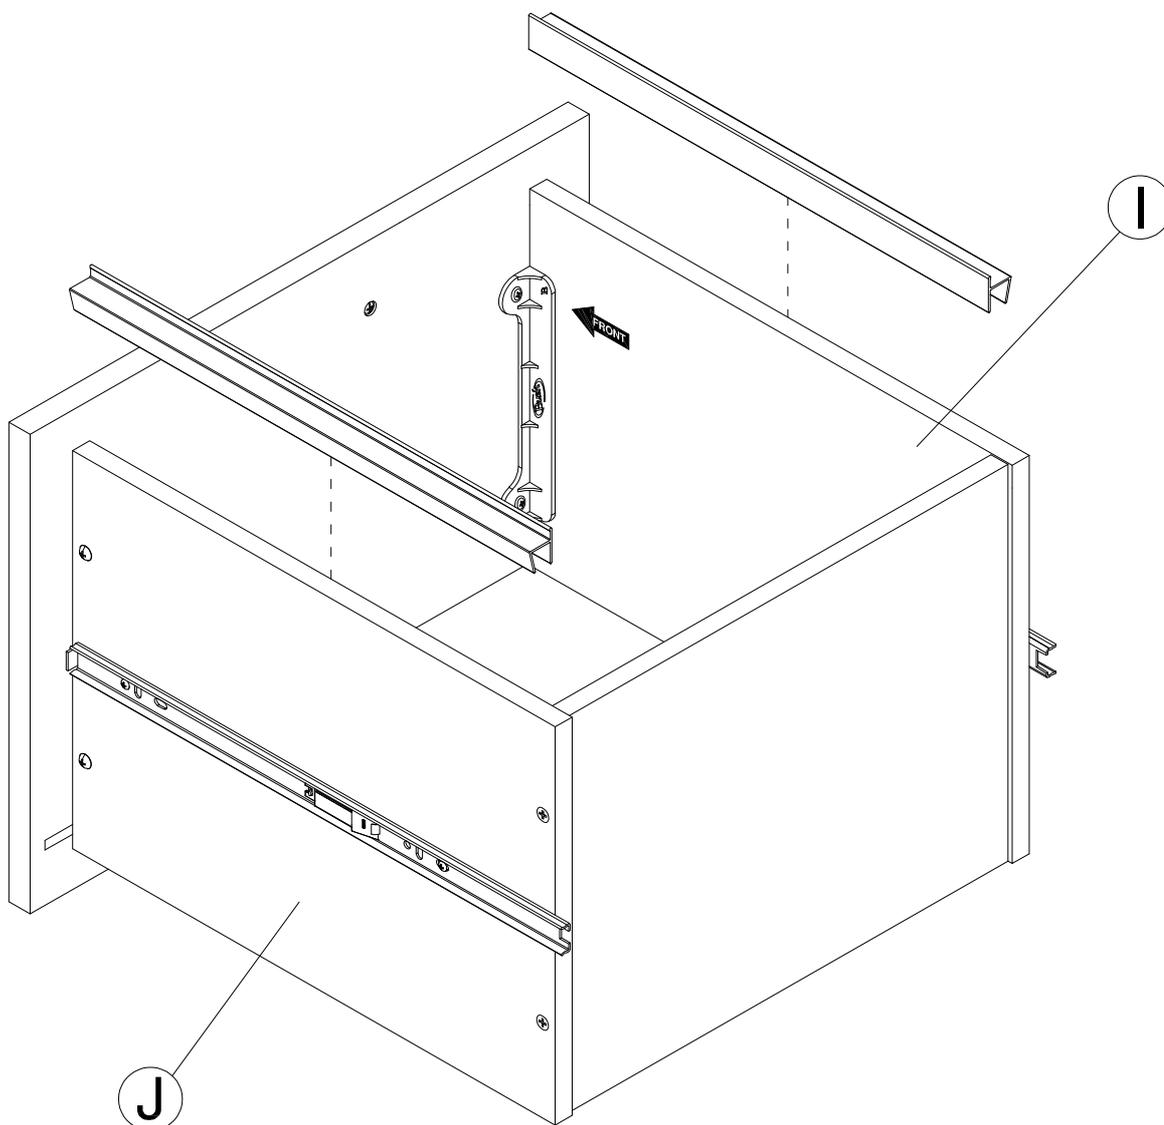

STEP 8

Prepare Panel


H38169



[2]




Wood Dowel
8 x 30mm

H72988



[2]



KD Bolt

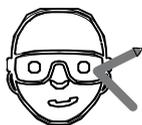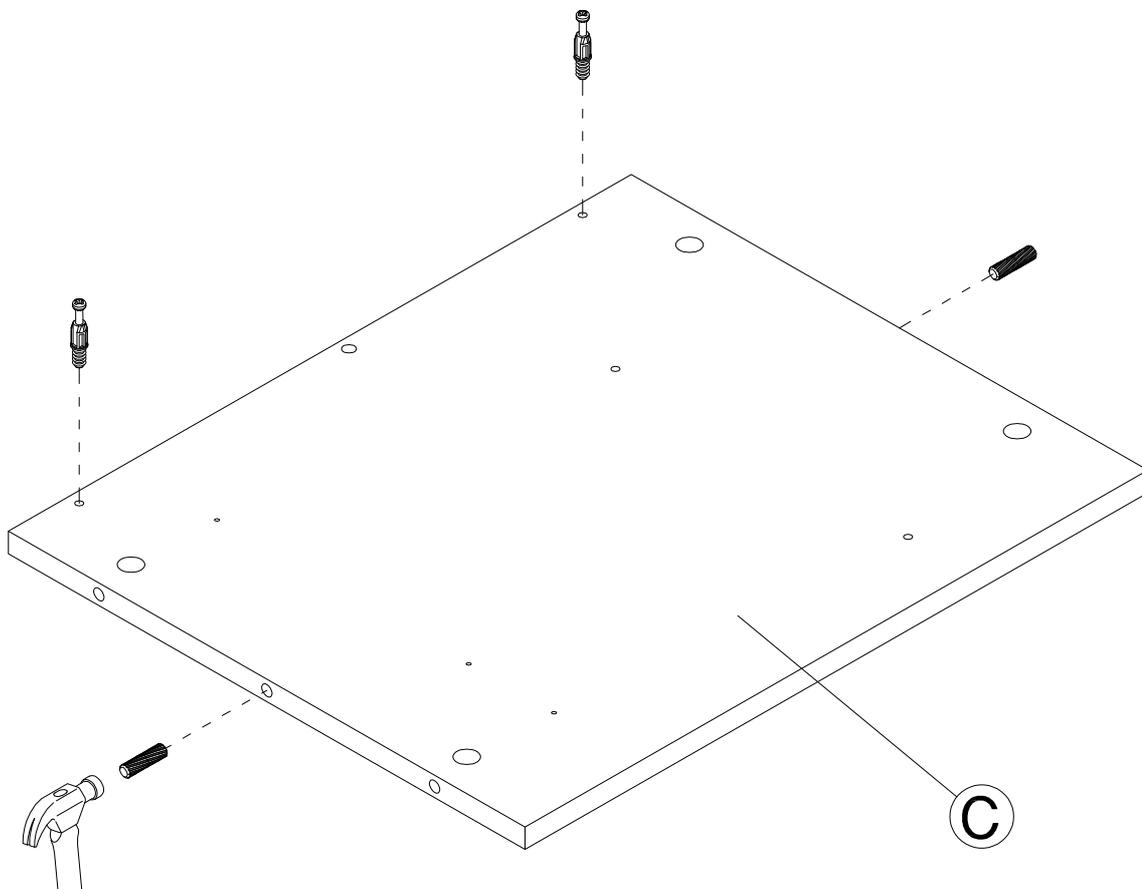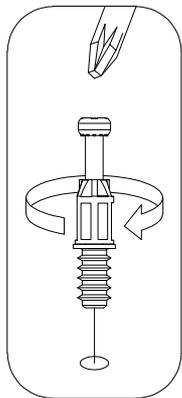

Safety glasses
Gafas de seguridad
Lunettes de protection

STEP 9

Prepare Panel

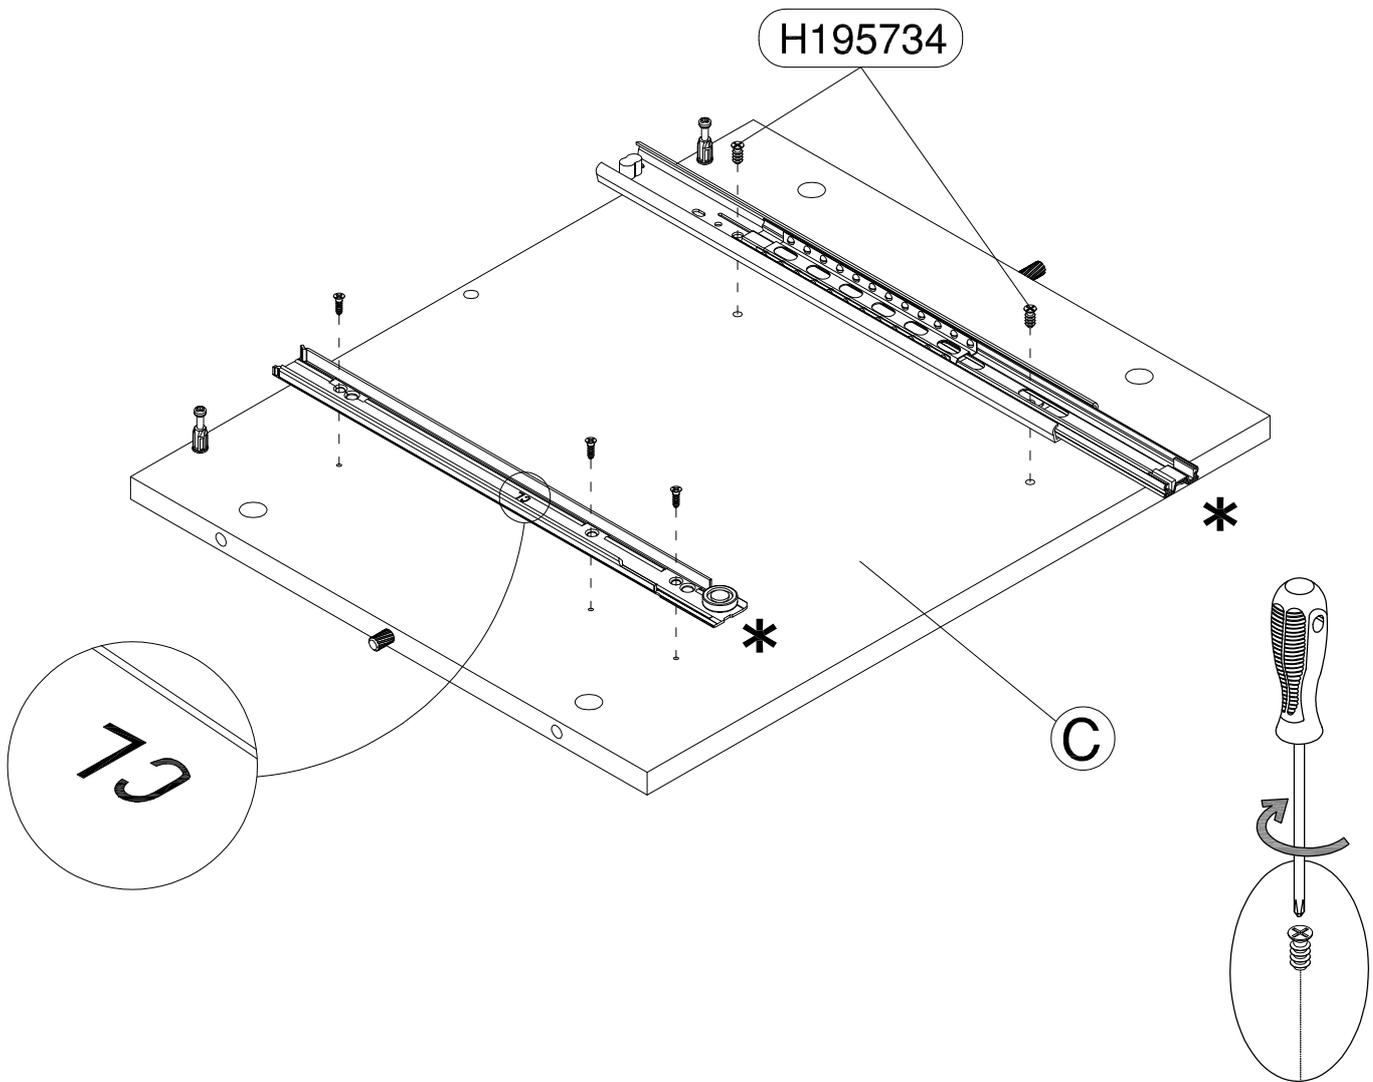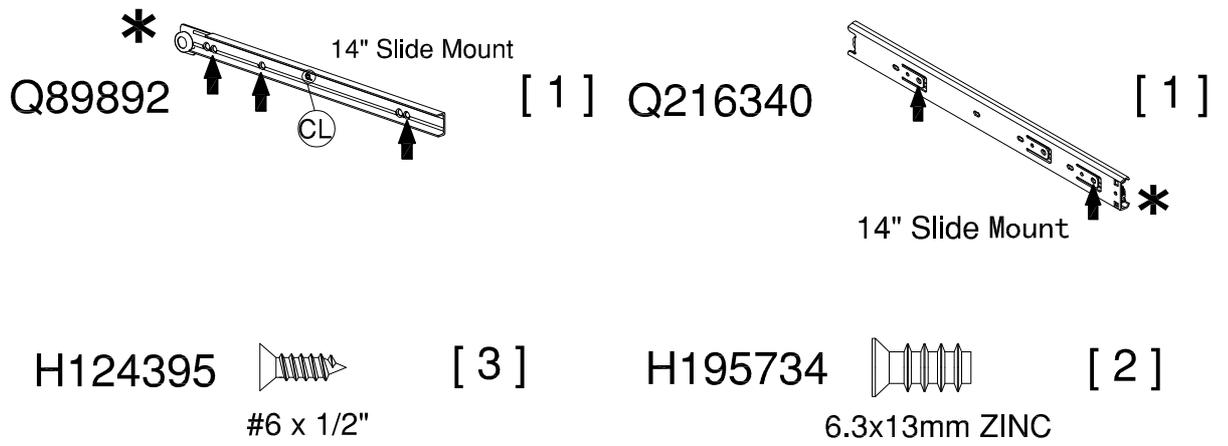

STEP 10

Prepare Panel


H38169



[2]



Wood Dowel
8 x 30mm

H72988



[2]

KD Bolt

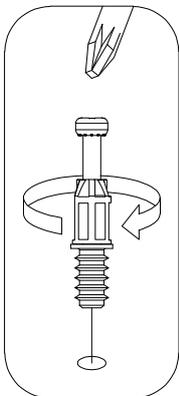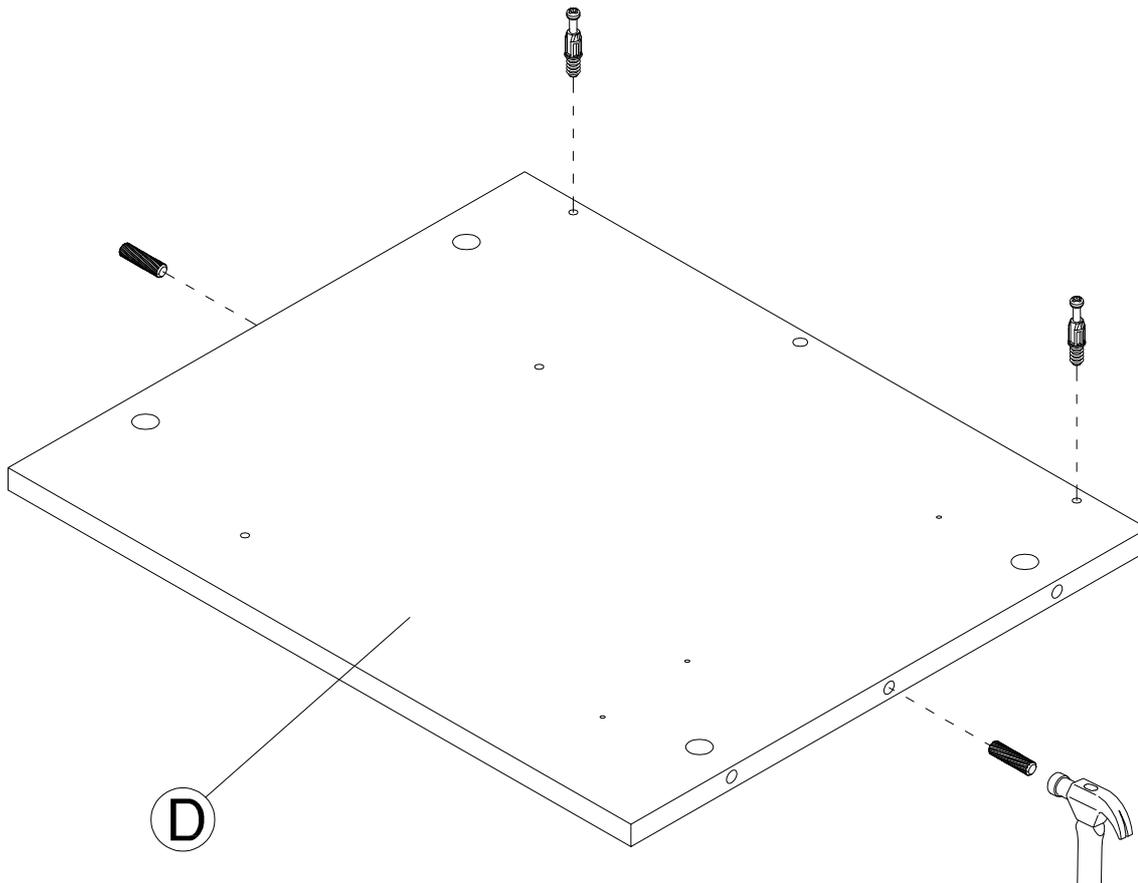

Safety glasses
Gafas de seguridad
Lunettes de protection

STEP 12



Prepare Panel

H38169



[2]


Wood Dowel
8 x 30mm

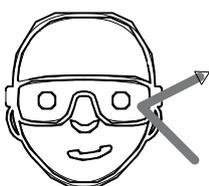
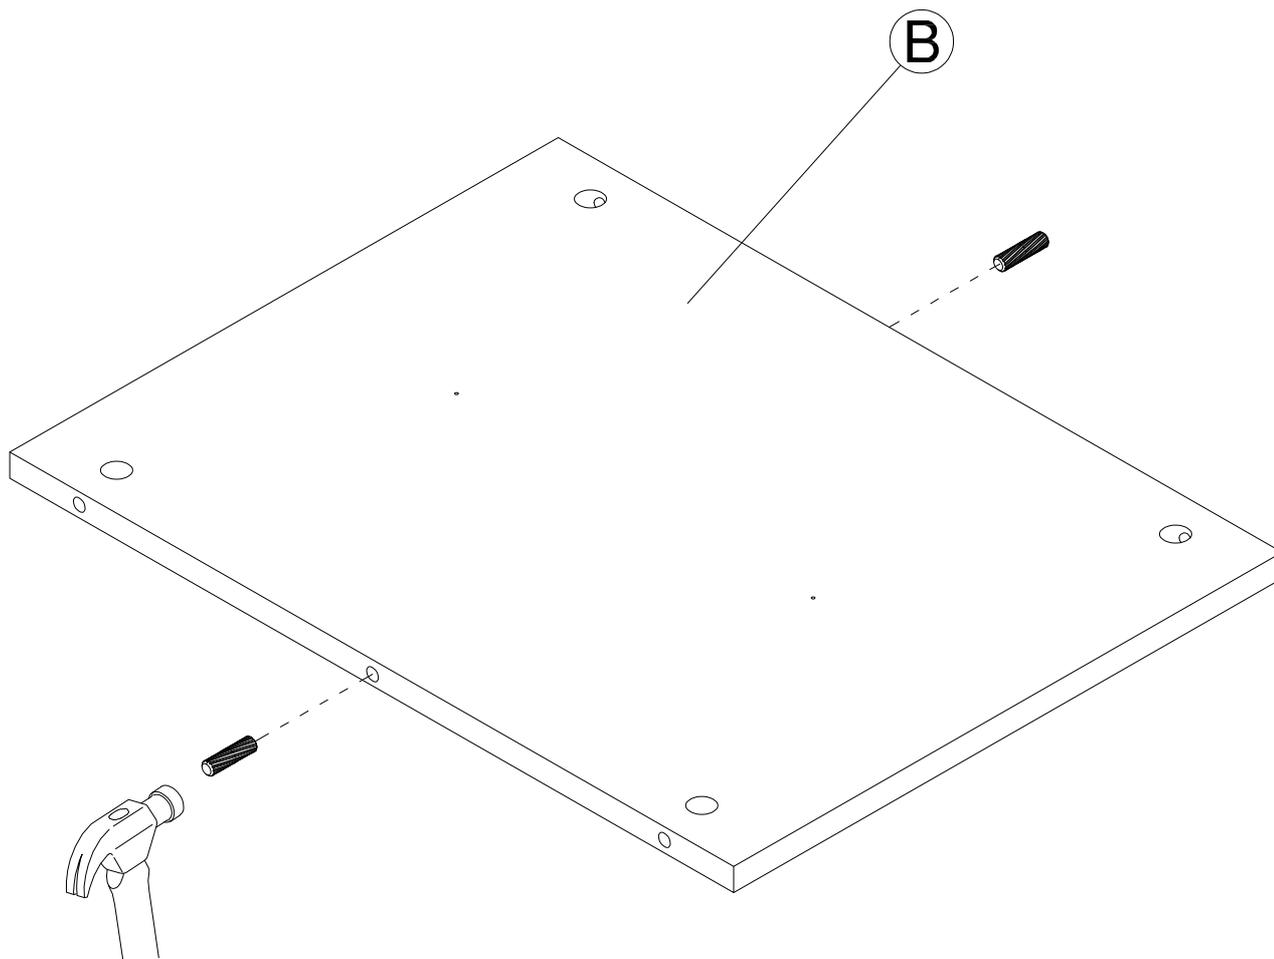


Safety glasses
Gafas de seguridad
Lunettes de protection

STEP 13

Assemble Panels

H150019  [2]
#8 x 1"

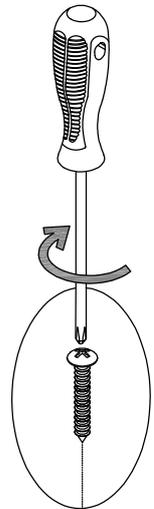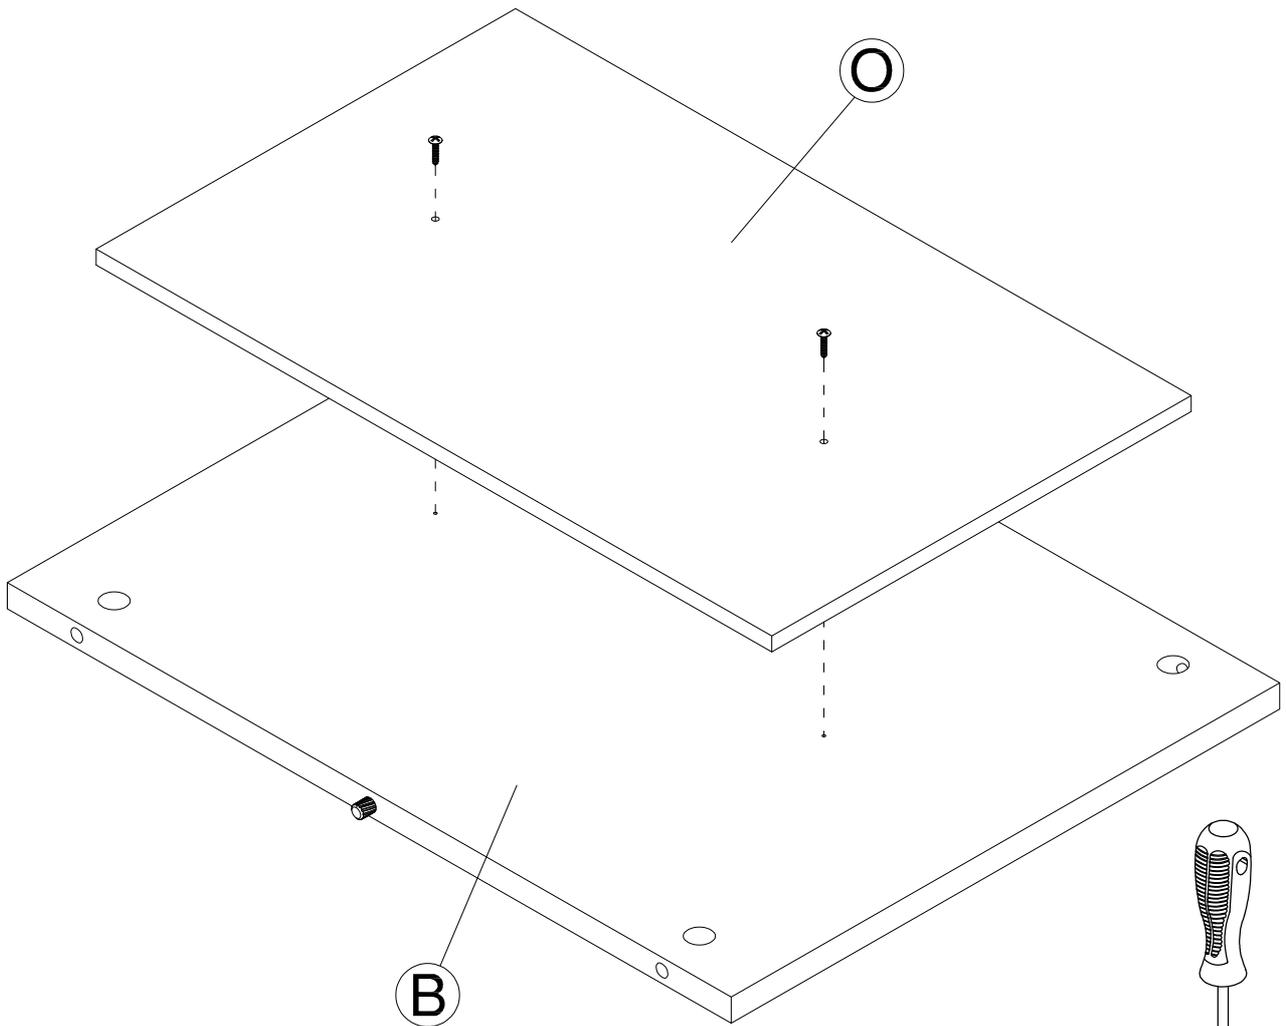



STEP 14

Assemble Panels

H181468




[2]

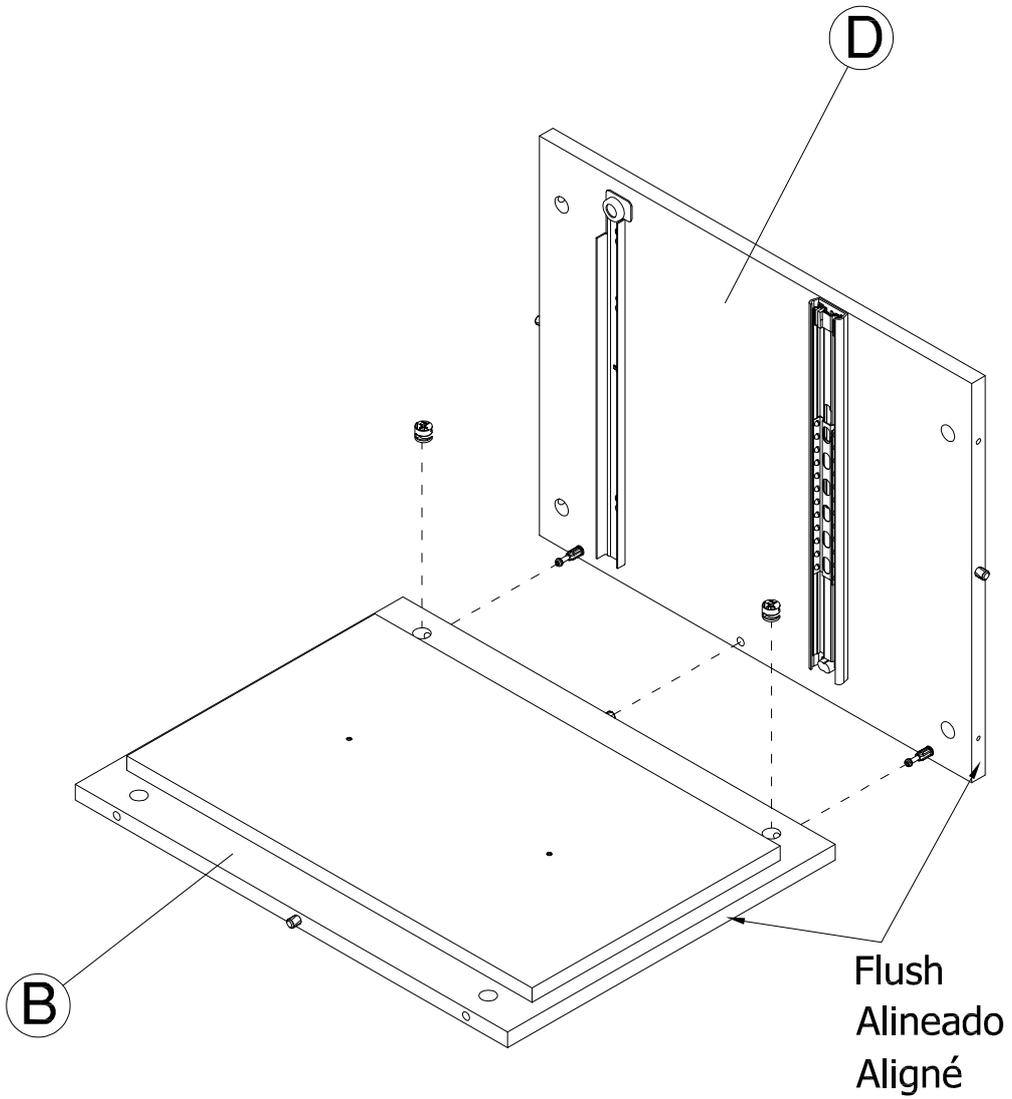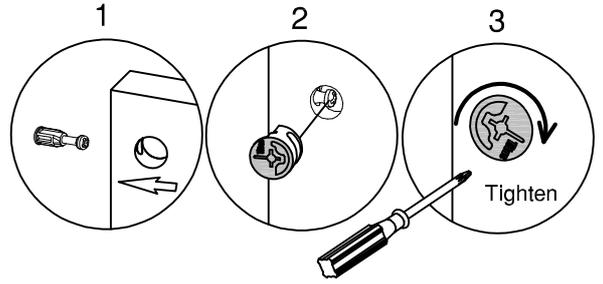

STEP 15



Assemble Panels

H181468

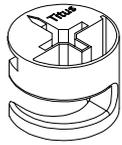

KD Cam


[2]

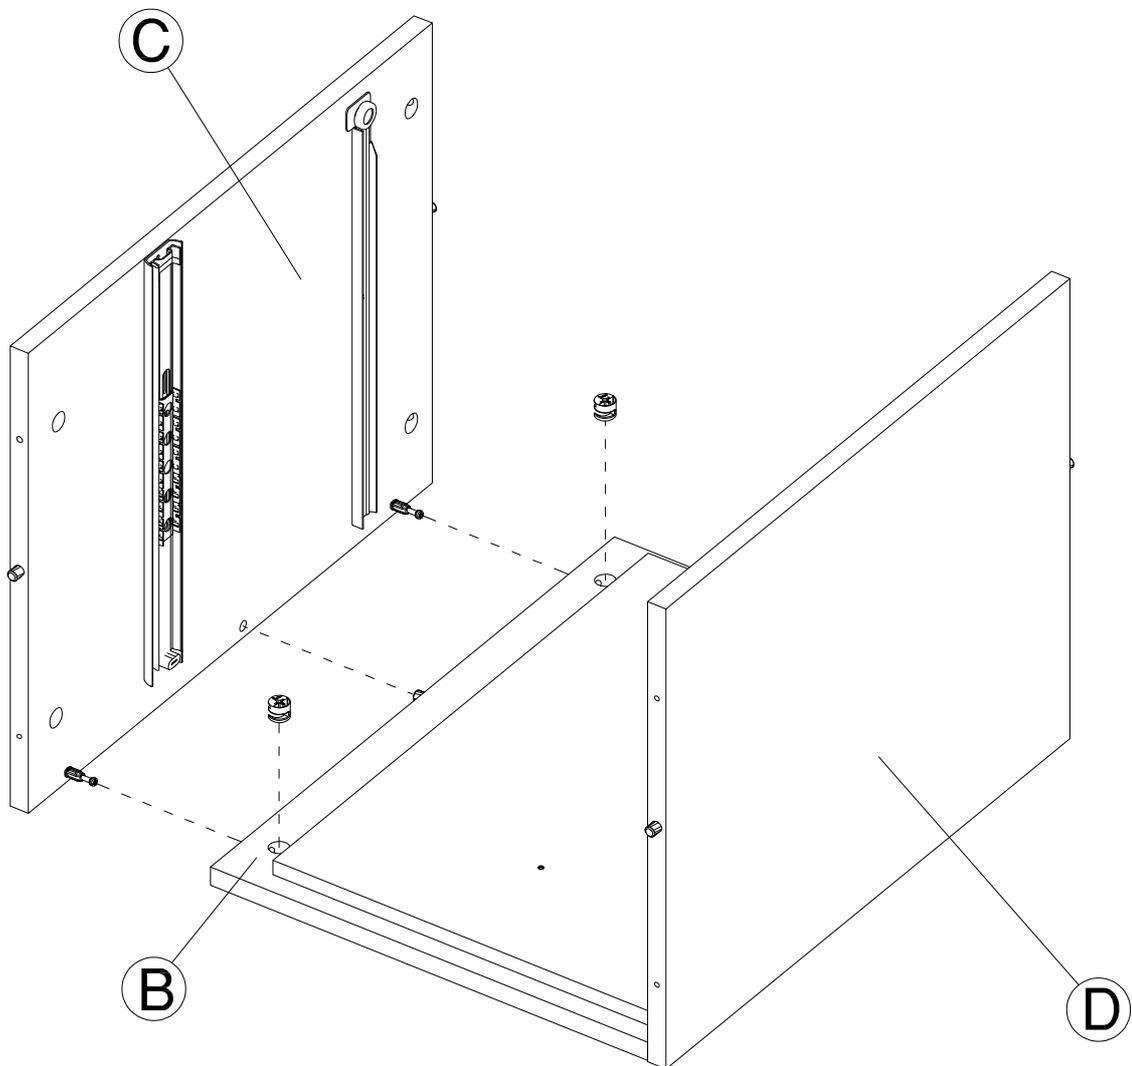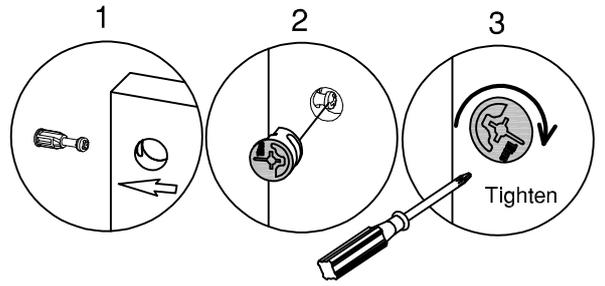

STEP 16

Prepare Panel


H211930



[16]

#8 -18x 15/32"


H72988



[4]

KD Bolt


Z118863

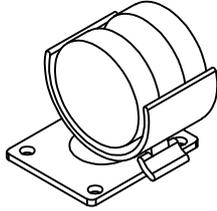

[2]


Caster, Locking

Z118862

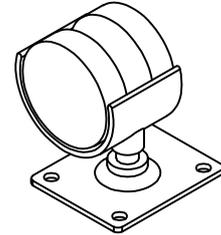

[2]



Caster

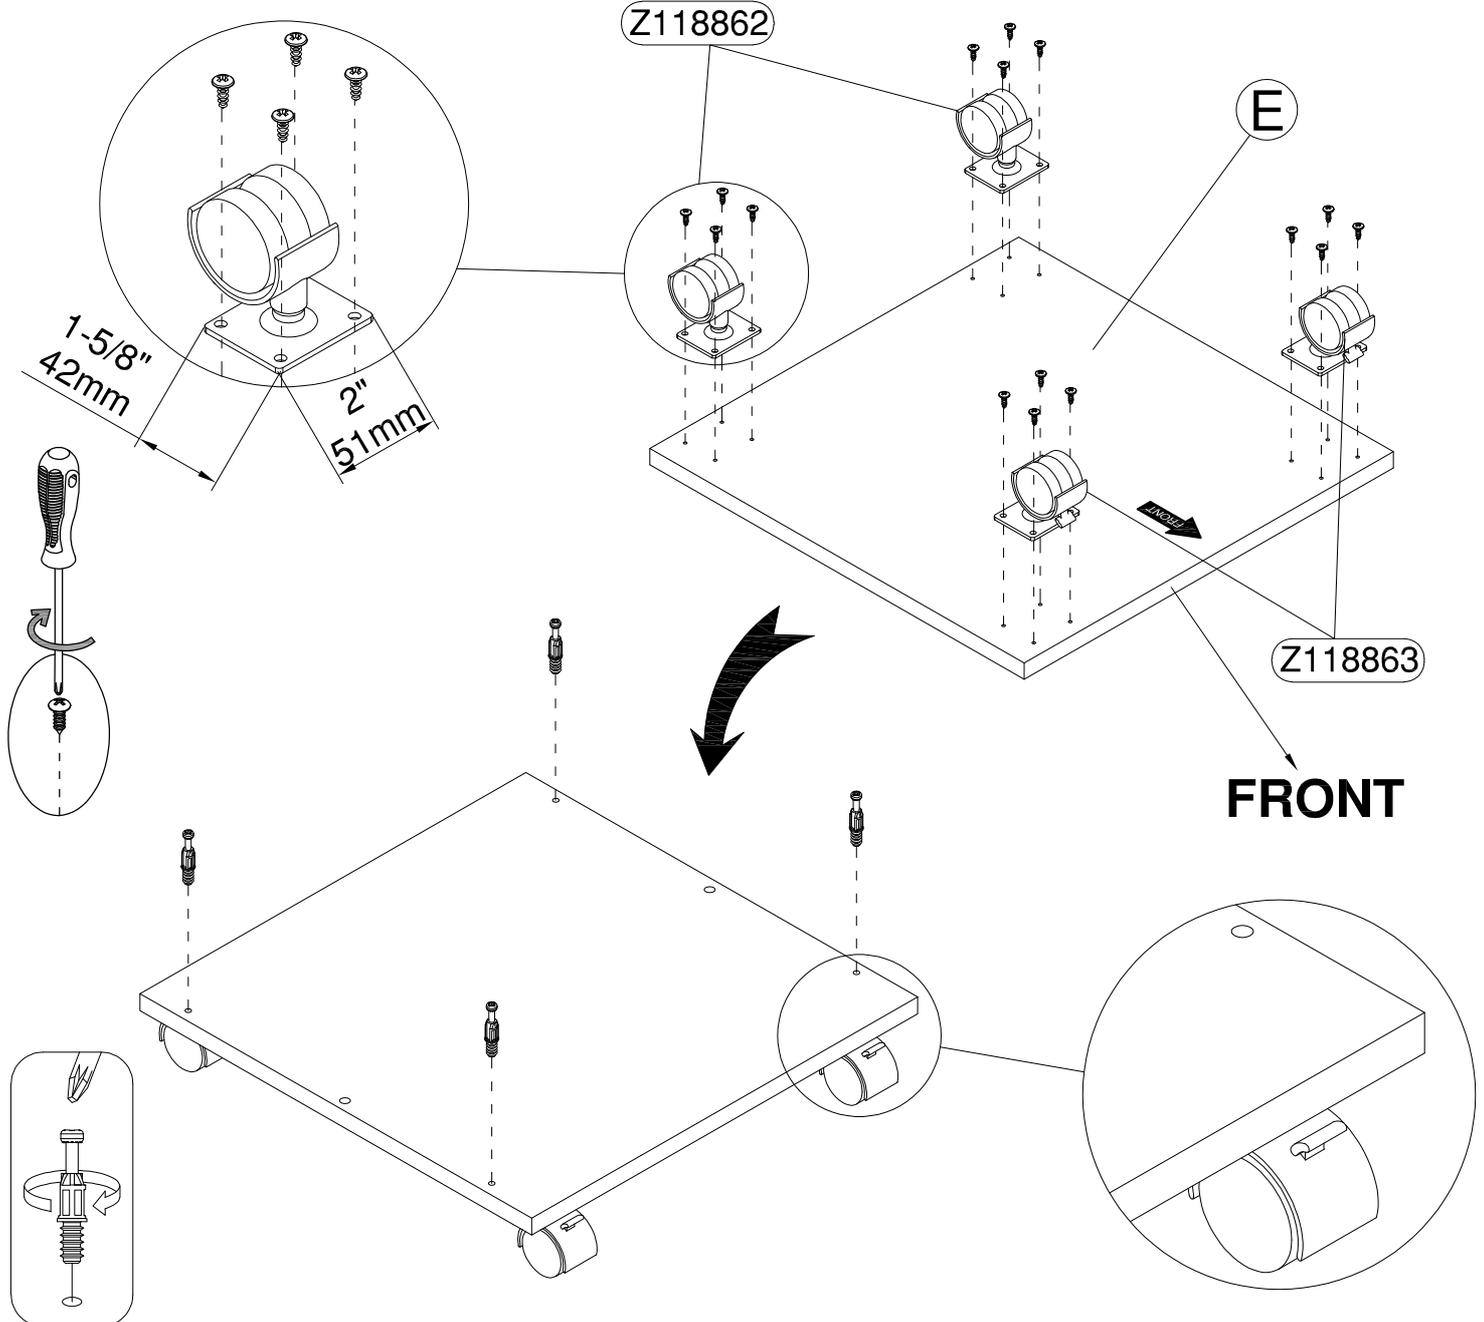

STEP 17

Assemble Panels


H181468 [4]
KD Cam

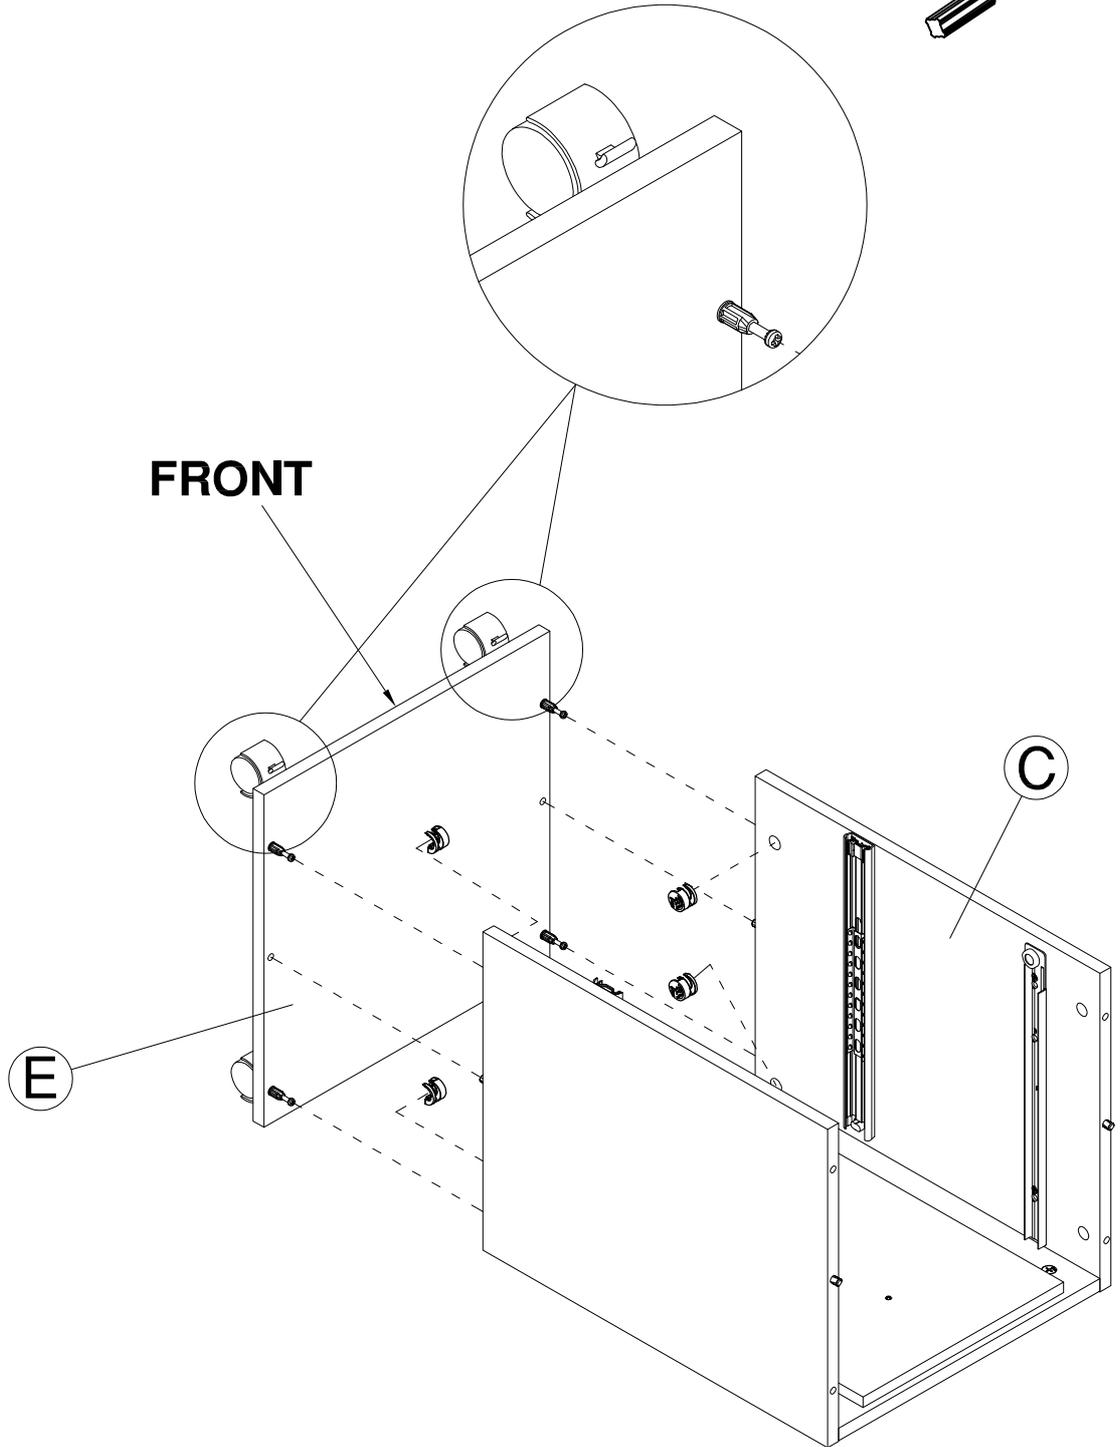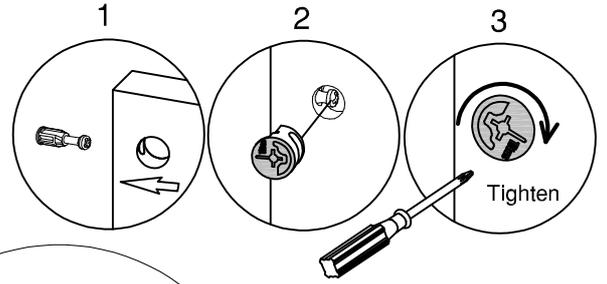

STEP 18



Prepare Panel

H72988



[4]


KD Bolt

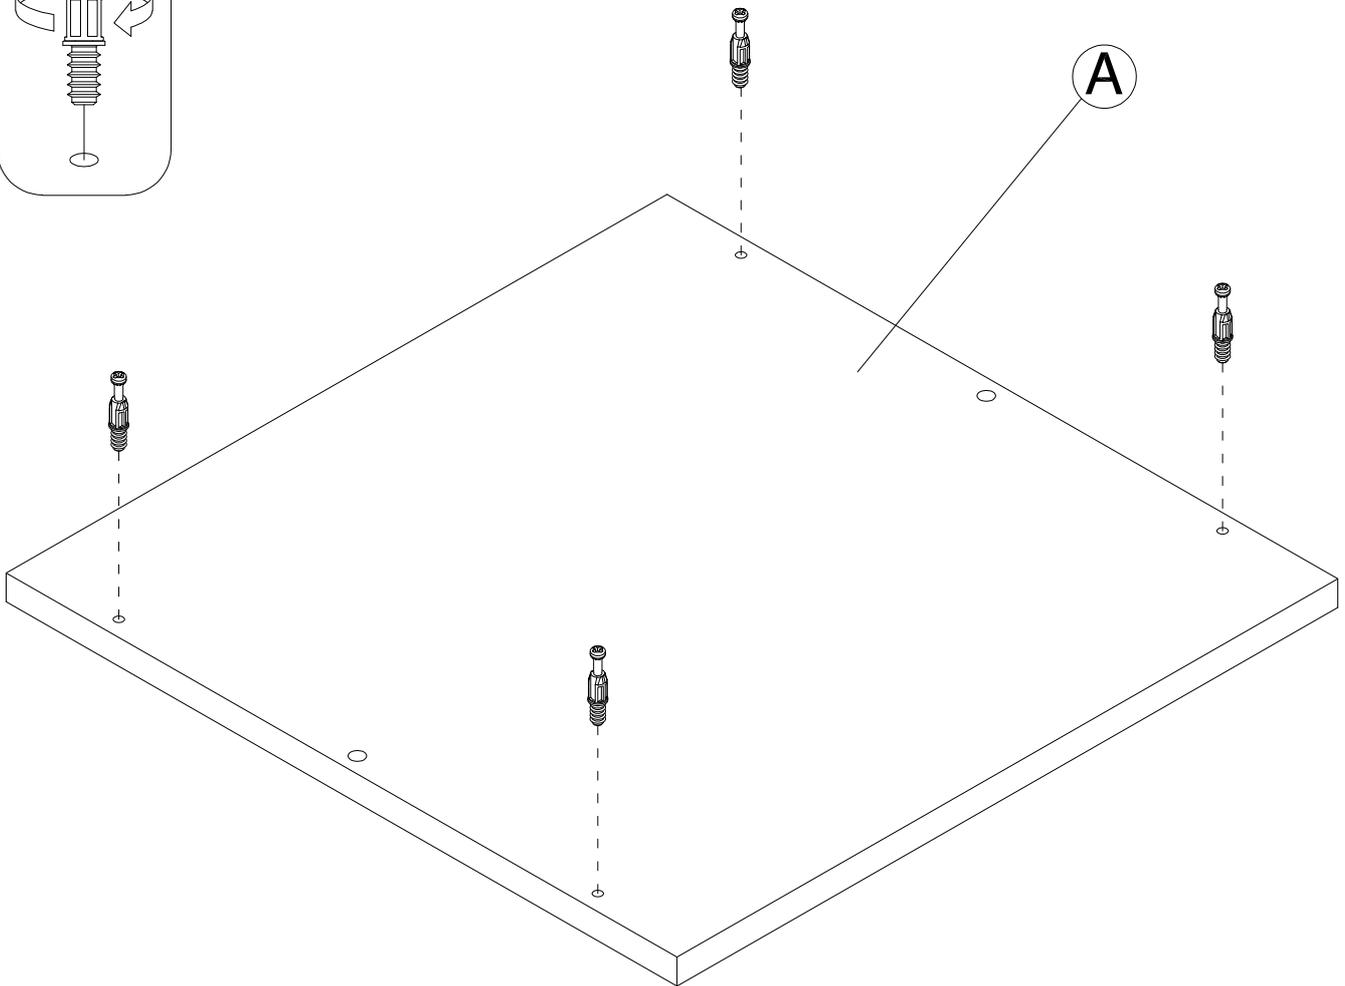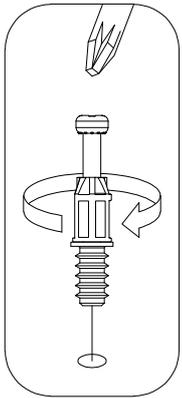

STEP 19



Assemble Panels

H181468

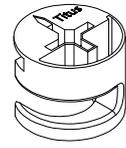


[4]

KD Cam

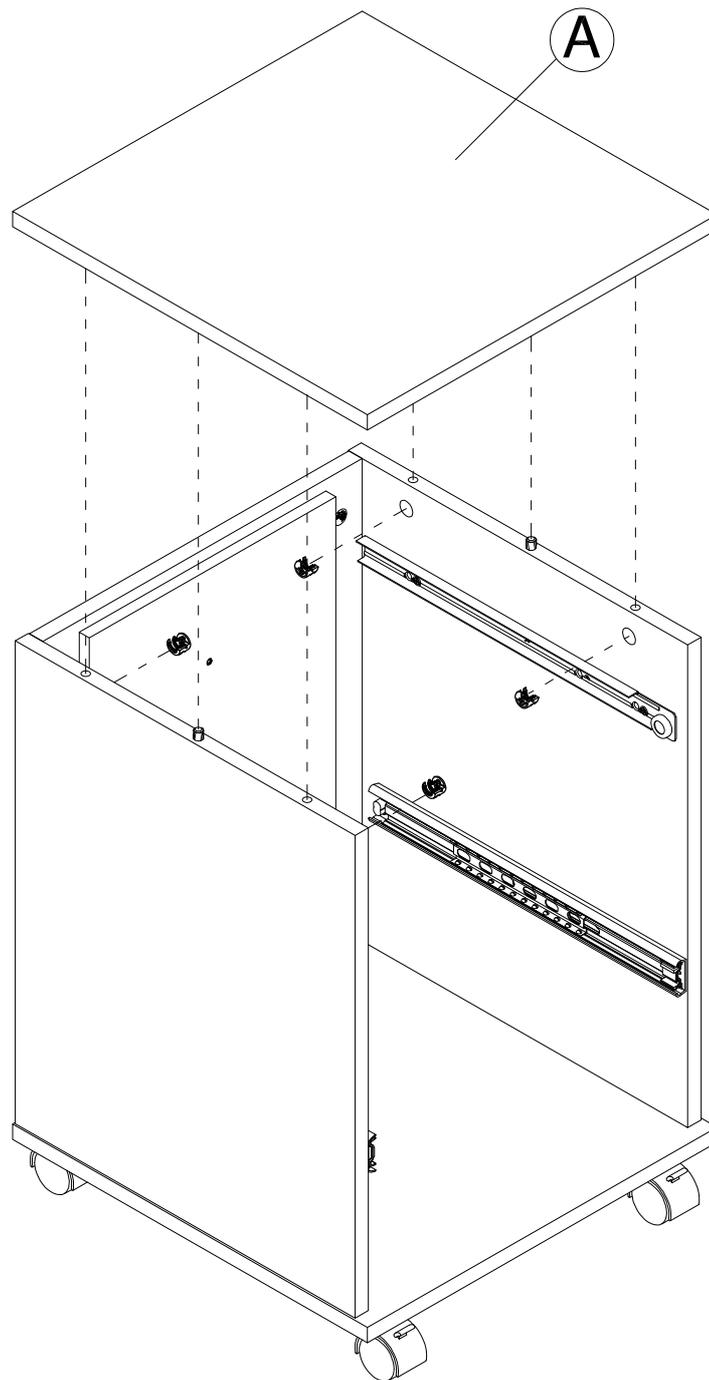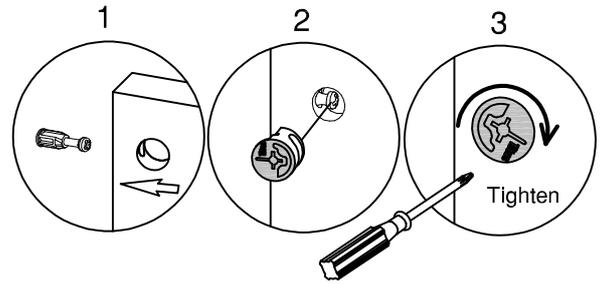

STEP 20







Insert Drawers

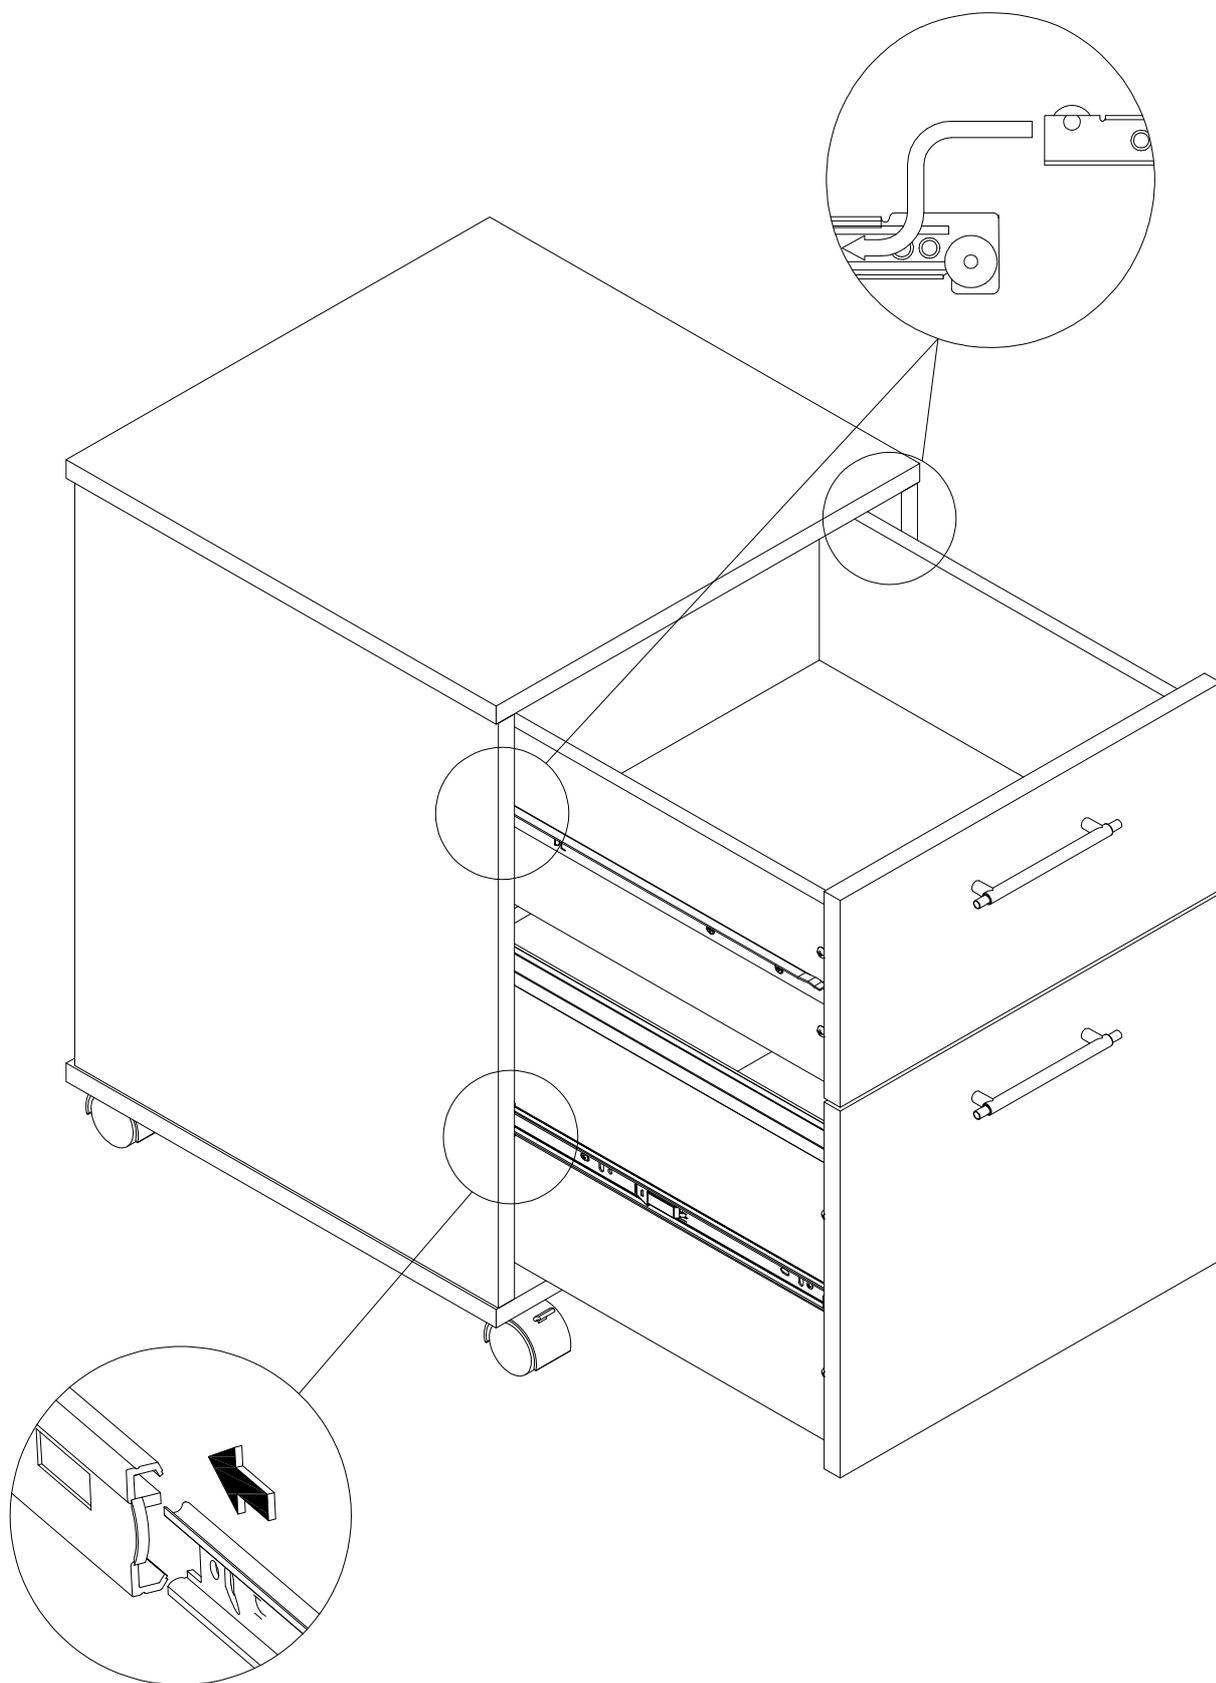

STEP 21

Drawer Adjustment

DRAWER FRONT VIEW

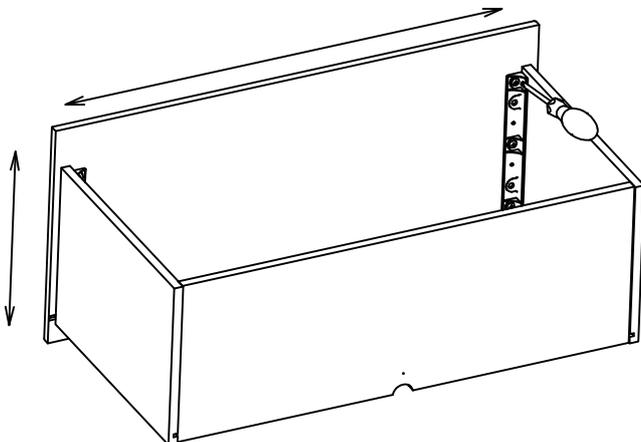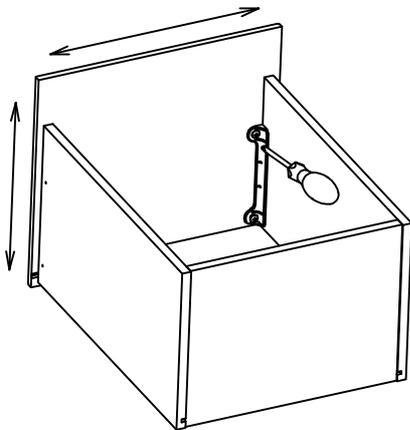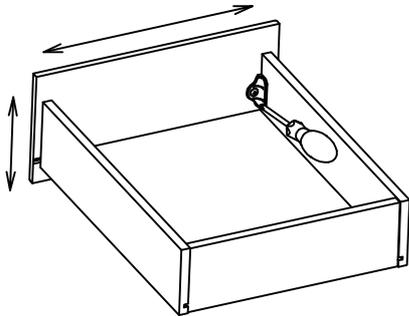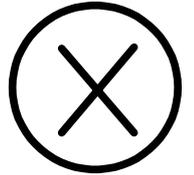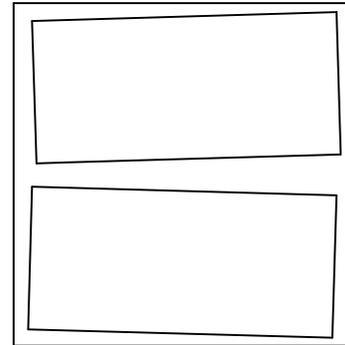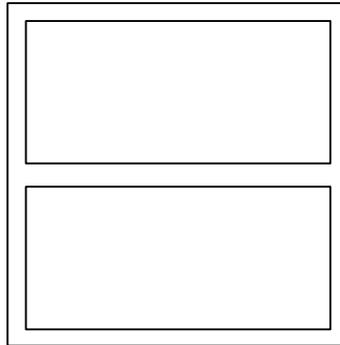

REQUIRED TOOL: PHILLIPS SCREWDRIVER

HERRAMIENTA REQUERIDA: DESTORNILLADOR PHILLIPS
OUTIL REQUIS: TOURNEVIS CRUCIFORME



1. LOOSEN SCREWS.
2. ADJUST DRAWER FRONTS.
3. TIGHTEN SCREWS.

1. Afloje los tornillos
2. Ajustar frentes de cajón
3. Apriete los tornillos


1. Desserrer les vis
2. Ajuster les façades des tiroirs
3. Serrer les vis

STEP 22

Maximum Loading and Cleaning

Gently clean surfaces with a damp sponge eraser.

MAXIMUM WEIGHT: 50 LBS (22.5 KG)
PESO MÁXIMO: 50 LIBRAS (22.5 KILOGRAMO)
POIDS MAXIMUM: 50 LIVRES (22.5 KILOGRAMME)

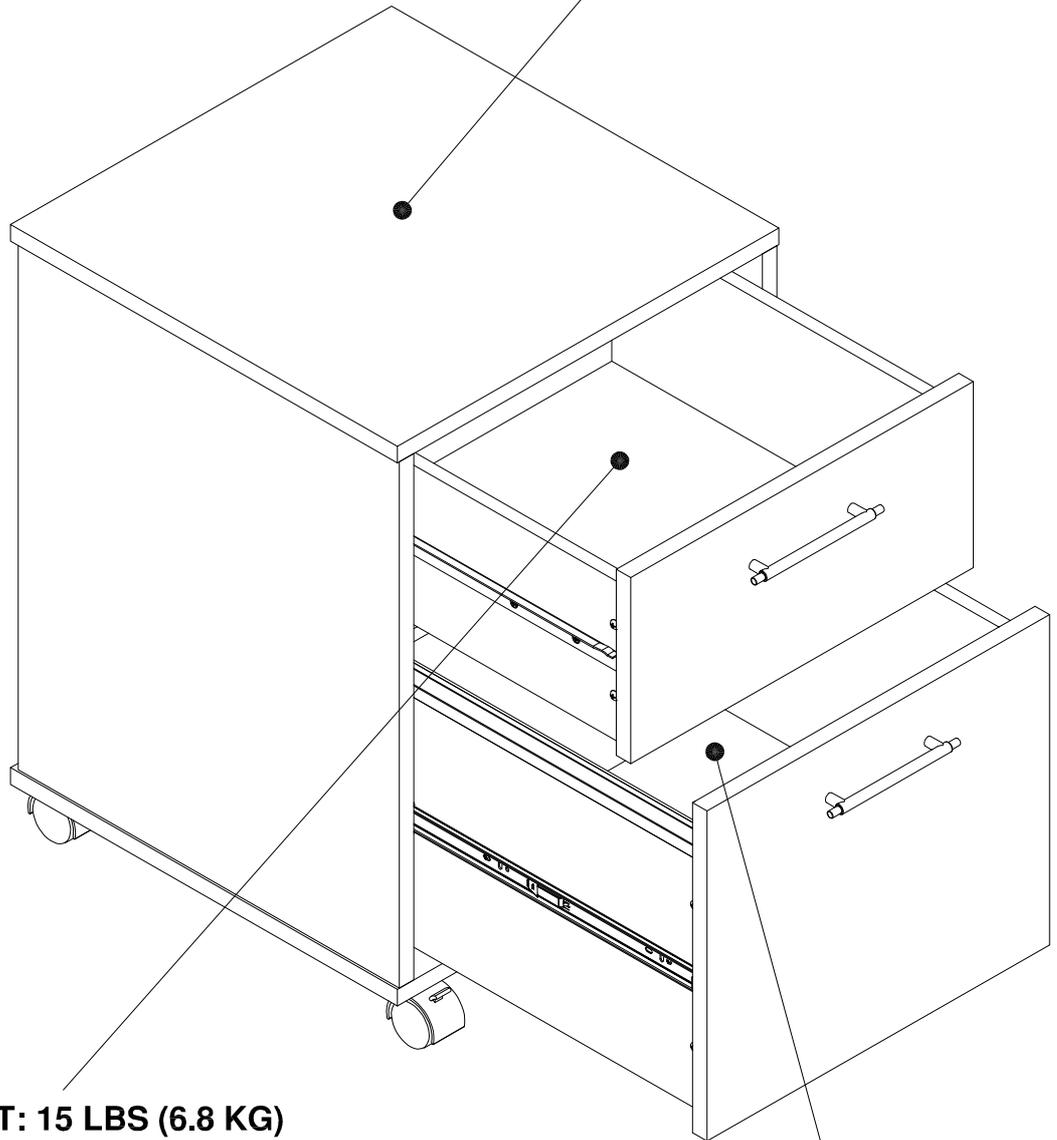

MAXIMUM WEIGHT: 15 LBS (6.8 KG)
PESO MÁXIMO: 15 LIBRAS (6.8 KILOGRAMO)
POIDS MAXIMUM: 15 LIVRES (6.8 KILOGRAMME)

MAXIMUM WEIGHT: 30 LBS (13.61 KG)
PESO MÁXIMO: 30 LIBRAS (13.61 KILOGRAMO)
POIDS MAXIMUM: 30 LIVRES (13.61 KILOGRAMME)


Congratulations! You are all done. If you have any questions or concerns, please call.

PARTS LIST

KWF116GH

A [1]	W194908	I [1]	W212355
B [1]	W208811	J [1]	W212356
C [1]	W212353	K [1]	W194918
D [1]	W212354	L [2]	W194919
E [1]	W194912	M [1]	W208502
F [1]	W194913	N [1]	W194921
G [1]	W194914	O [1]	W208810
H [1]	W208501		

H200219

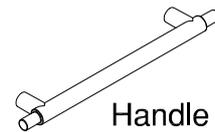


[2]

KWF116RCP

A [1]	W194922	I [1]	W212359
B [1]	W208812	J [1]	W212360
C [1]	W212357	K [1]	W194932
D [1]	W212358	L [2]	W194933
E [1]	W194926	M [1]	W208504
F [1]	W194927	N [1]	W194935
G [1]	W194928	O [1]	W208810
H [1]	W208503		

H180971

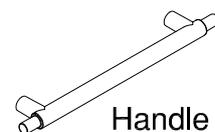


[2]

PARTS LIST

KWF116LW

A [1]	W194936	I [1]	W212363
B [1]	W208813	J [1]	W212364
C [1]	W212361	K [1]	W194946
D [1]	W212362	L [2]	W194947
E [1]	W194940	M [1]	W208506
F [1]	W194941	N [1]	W194949
G [1]	W194942	O [1]	W208810
H [1]	W208505		

H180971

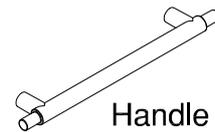


[2]

KWF116CG

A [1]	W194950	I [1]	W212367
B [1]	W208814	J [1]	W212368
C [1]	W212365	K [1]	W194960
D [1]	W212366	L [2]	W194961
E [1]	W194954	M [1]	W208508
F [1]	W194955	N [1]	W194963
G [1]	W194956	O [1]	W208810
H [1]	W208507		

H200219

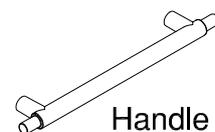


[2]

PARTS LIST

KWF116G2W

A [1]	W194964	I [1]	W212371
B [1]	W208815	J [1]	W212372
C [1]	W212369	K [1]	W194974
D [1]	W212370	L [2]	W194975
E [1]	W194968	M [1]	W208510
F [1]	W194969	N [1]	W194977
G [1]	W194970	O [1]	W208810
H [1]	W208509		

H180971

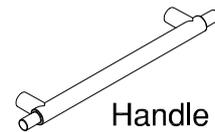


[2]

KWF116WG

A [1]	W182187	I [1]	W212375
B [1]	W208816	J [1]	W212376
C [1]	W212373	K [1]	W182197
D [1]	W212374	L [2]	W182198
E [1]	W182191	M [1]	W208512
F [1]	W182192	N [1]	W182200
G [1]	W182193	O [1]	W208810
H [1]	W208511		

H180971

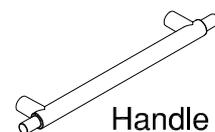


[2]

PARTS LIST

KWF116BC

A [1]	W183036	I [1]	W212379
B [1]	W208817	J [1]	W212380
C [1]	W212377	K [1]	W183046
D [1]	W212378	L [2]	W183047
E [1]	W183040	M [1]	W208514
F [1]	W183041	N [1]	W183049
G [1]	W183042	O [1]	W208810
H [1]	W208513		

H180971

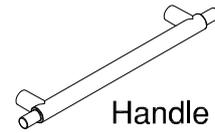


[2]

KWF116WT

A [1]	W190280	I [1]	W212383
B [1]	W208818	J [1]	W212384
C [1]	W212381	K [1]	W190290
D [1]	W212382	L [2]	W190291
E [1]	W190284	M [1]	W208516
F [1]	W190285	N [1]	W190293
G [1]	W190286	O [1]	W208810
H [1]	W208515		

H180971

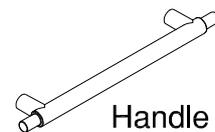

[2]