

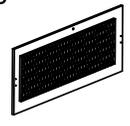
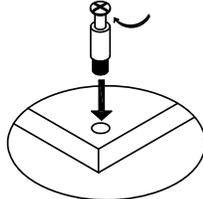
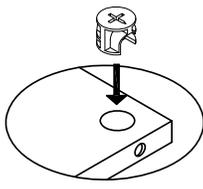



EVD861GG EVD863GG EVD865GG
60x30 72x30 66x30 Top and Modesty P.1

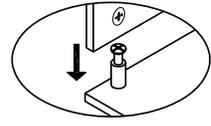

<p>1</p>  <p>Allen Wrench M4 1 Pc</p>	<p>2</p>  <p>T Rectangle Support Part 1 Pc</p>	<p>3</p>  <p>Cam Post 1 Pc</p>	<p>4</p>  <p>Cam Lock 1 Pc</p>	<p>5</p>  <p>Cam Sticker 1 Pc</p>	<p>6</p>  <p>Screw M6*15mm 2 Pcs</p>
<p>7</p>  <p>Screw Ø4*14mm 8 Pcs</p>	<p>8</p>  <p>L-Bracket 32*30*30mm 4 Pcs</p>	<p>A</p>  <p>Top Panel 1 Pc</p>		<p>B</p>  <p>Modesty Panel 1 Pc</p>	

CAM INSTRUCTIONS


<p>1</p>  <p>Line up Cam Post turn clockwise</p>	<p>2</p>  <p>Insert the Cam Lock with the arrow pointing toward the hole in the edge</p>	<p>3</p>  <p>Insert the Cam Post into Cam Lock. Turn Cam Lock</p>
--	--	--

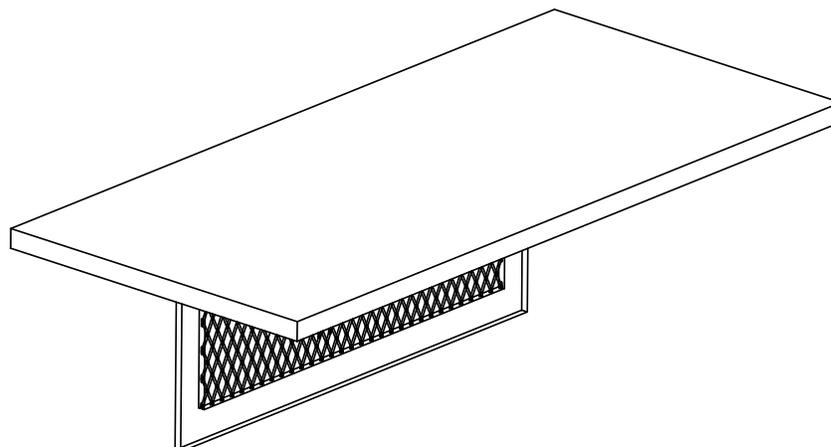


IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start assemble.
- Do not tighten all screws or bolts until all completely assembled.
- Keep all hardware parts out of reach of children.


- ① Use the Screw (7) and the Bracket (8) to connect the Pedestal (EVP100GG,EVP110GG) and the Modesty Panel (B).

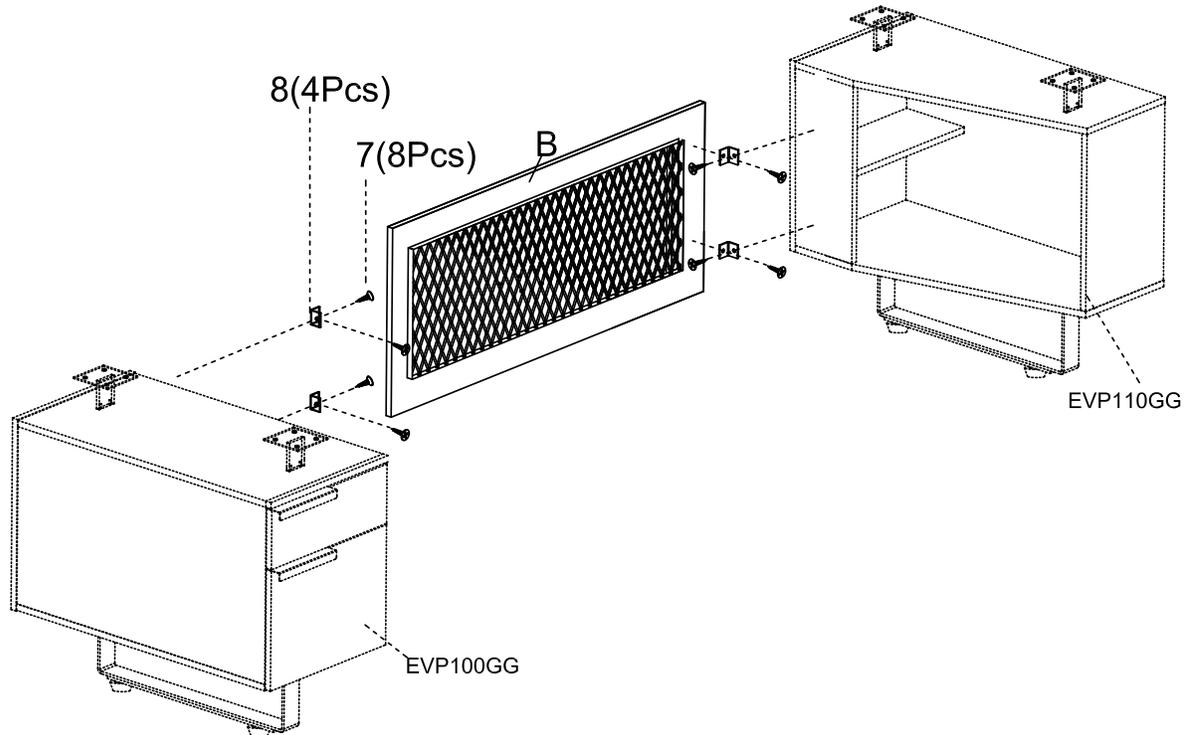


- ② Insert the Cam Post (3) to the T Rectangle Support Part (2), Use the Screw (6) to install the T Rectangle Support Part (2) to the middle edge of the Top Panel (A):

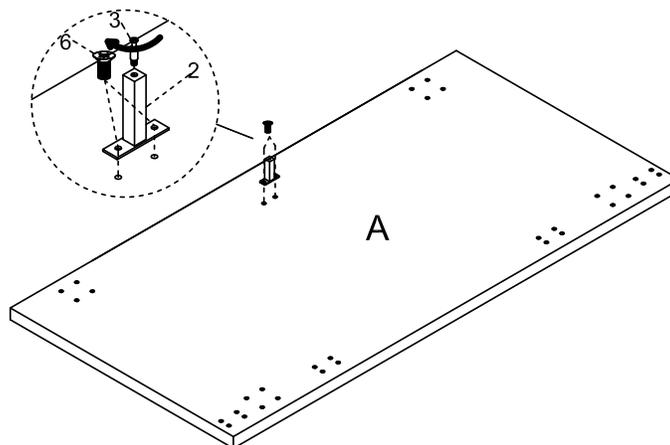

- ③ Put the Top Panel (A) on the Pedestal (EVP100GG,EVP110GG) use the Screw (6) to lock the Top (A).

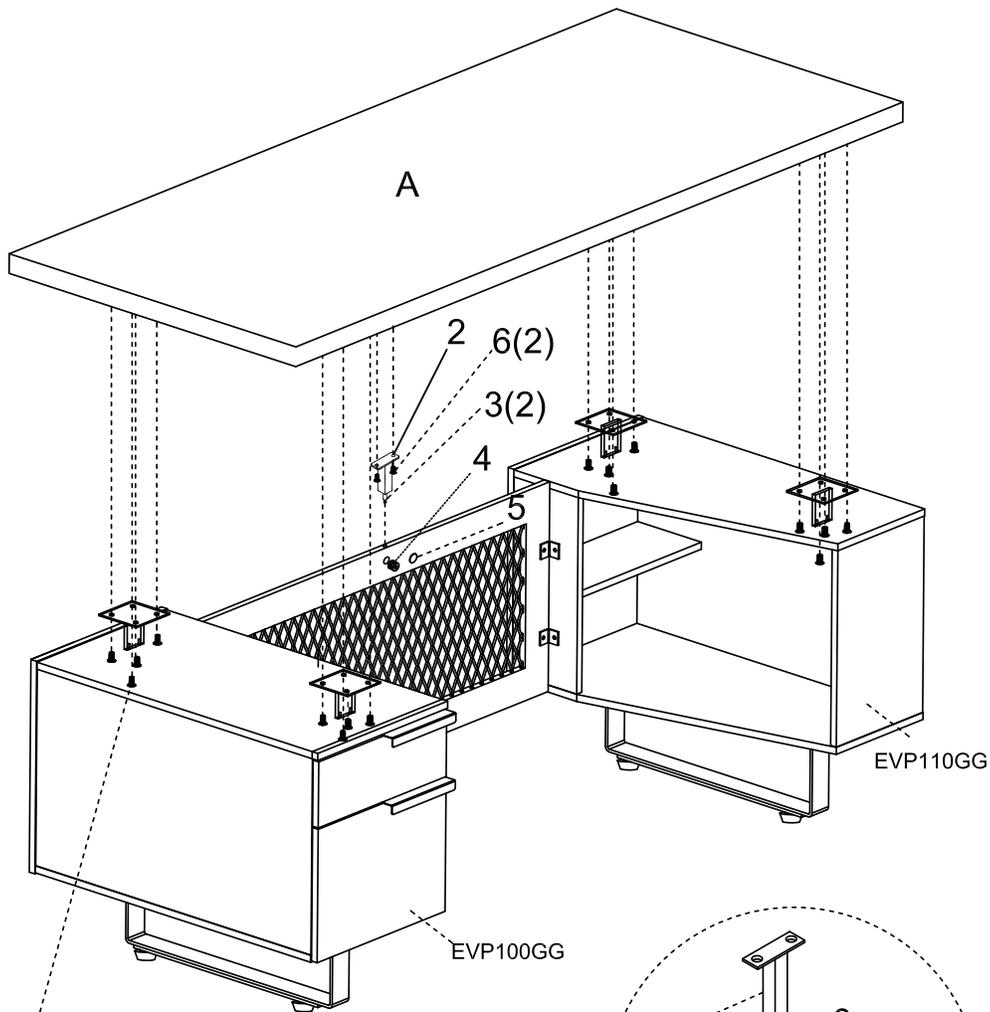

Notes: These screw are packed with the carton for the Pedestal (EVP100GG,EVP110GG)

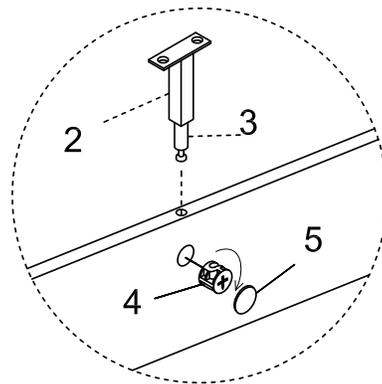

④ Completely assembly

