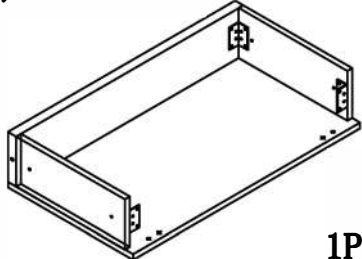
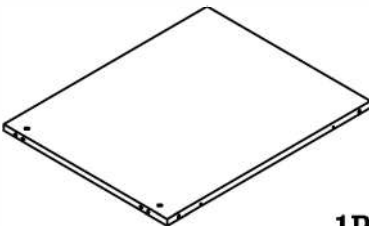
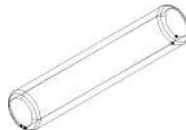
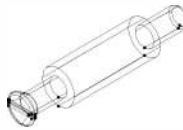
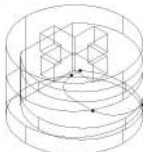
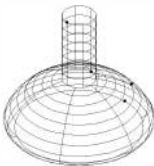
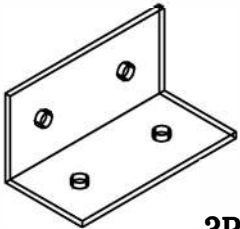
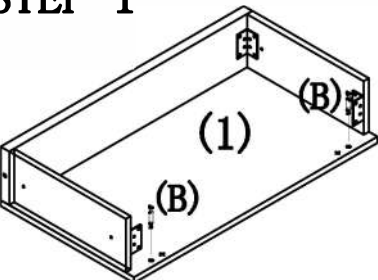
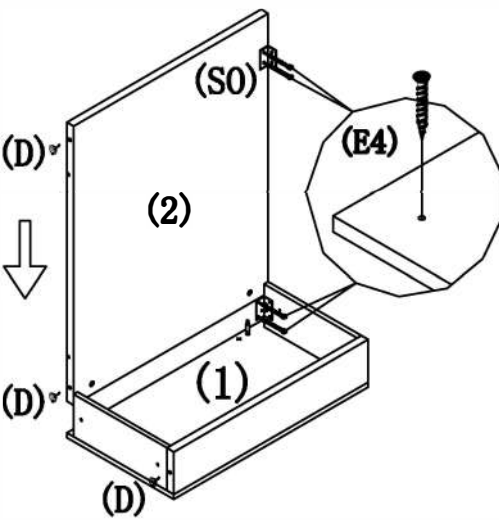
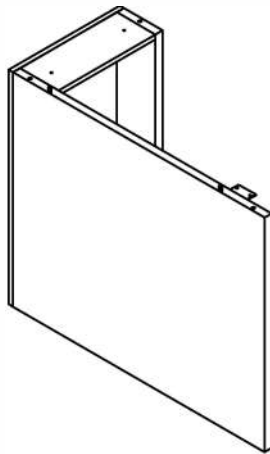
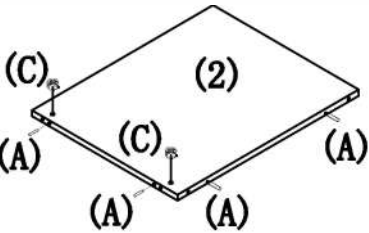


(1) NAP-271-1  1PC	(2) NAP-271-2  1PC	(A) Dowel  4PCS	(B) Cam Pin  2PCS	(C) Cam Lock  2PCS+1
(D) Leg leveller  3PCS	(P) Adhesive Cam Cover  2PCS	(E4) Wood Screw  20PCS+1	(E9) Wood Screw  2PCS+1	(S0) Corner Bracket  3PCS
STEP 1 	STEP 3 		STEP 4 	
STEP 2 	FALSE PEDESTAL, 36" DEEP NAP-271 15"W*36"D*28"H  Always lay components on A clean, soft-cushioned surface during assembly.			