







(1) Top	(2) End Panel	(3) Modesty Panel	(S2) Flat Bracket	(A) Dowel	(B) Cam Pin	(C) Cam Lock	(p) Cam Cover	(W) Grommet	(D) Leg Leveller	(E2) Wood Screw	(E4) Wood Screw	(N) Cam Cover	(q) Plug
													
1PCS	1PCS	1PCS	2PCS	6PCS+1	6PCS+1	8PCS+2	8PCS+2	2PCS	4PCS	2PCS+1	12PCS+2	6PCS+1	2PCS+1


STEP 1

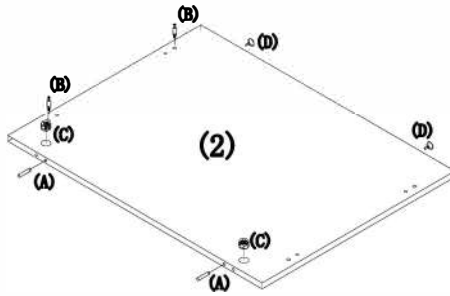


STEP 2

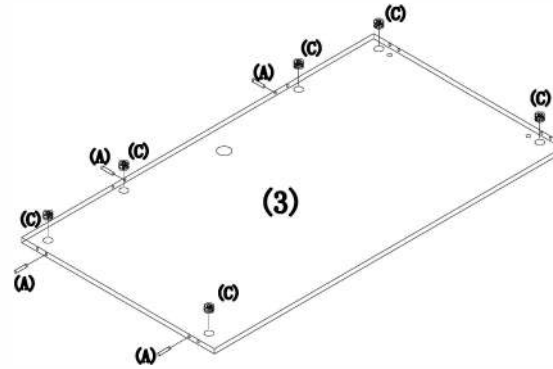


STEP 3

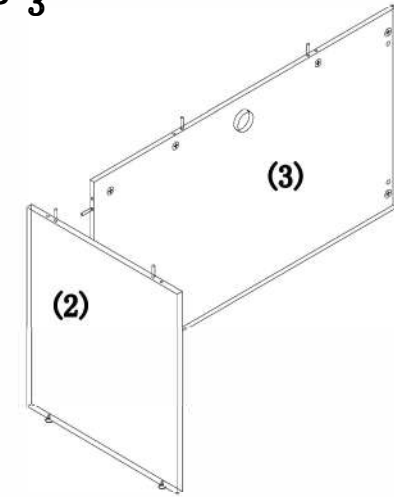

STEP 4

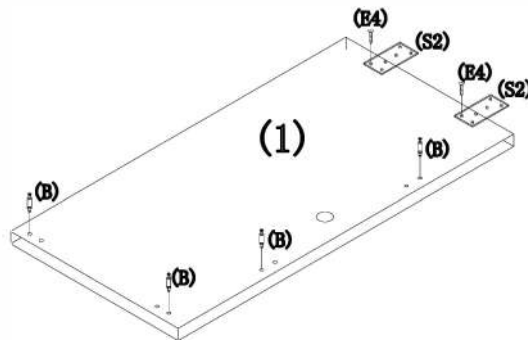

STEP 5

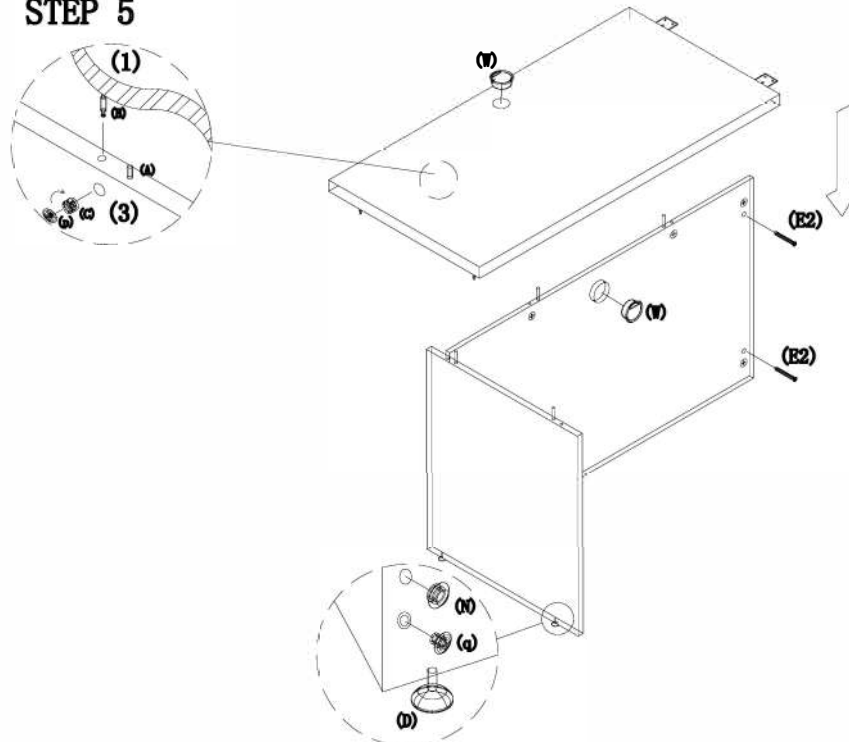

RETURN, 48*24
NAP-45
 48"W*24"D*29"H



Always lay components on A clean, soft-cushioned surface during assembly.