
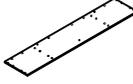
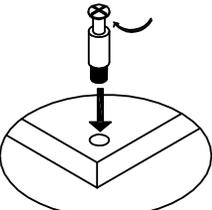
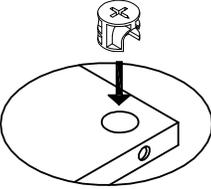


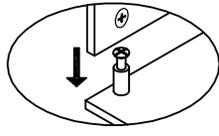

1  Wood dowel 32 Pcs	2  Cam Post 32 Pcs	3  Cam Lock 32 Pcs	4  Cam sticker 32 Pcs	5  Hex Screw M6*15mm 8Pcs	6  Screw M6*15mm 4Pcs	7  Screw M6*30mm 1Pc
8  Hinges Section 4Pcs	9  Square Support 100*100*70mm 1Pc	10  Shelf Support 8Pcs	11  Screw Ø3.5*30mm 7Pcs	12  Wrench 1 Pc	13  Allen Wrench 1 Pc	


A  Top 1Pc	B  Bottom 1Pc	C  Left Side Panel 1Pc	D  Right Side Panel 1Pc	E  Left Divided Panel 1Pc	F  Right Divided Panel 1Pc
G  Fixed Shelf 1Pc	H  Back Panel 1Pc	I  Wood Door 2Pcs	J  Adjustable Shelf 2Pcs	K  Wall Mounting Board 1Pc	L  Back cabinet Mounting Board 1Pc

### CAM INSTRUCTIONS


1  Line up Cam Post turn clockwise.	2  Insert the cam lock with the arrow pointing toward the hole in the edge.	3  Insert the Cam Post into Cam Lock. Turn Cam Lock.
---	--	--

### IMPORTANT NOTE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start assemble.
- Do not tighten all screws or bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

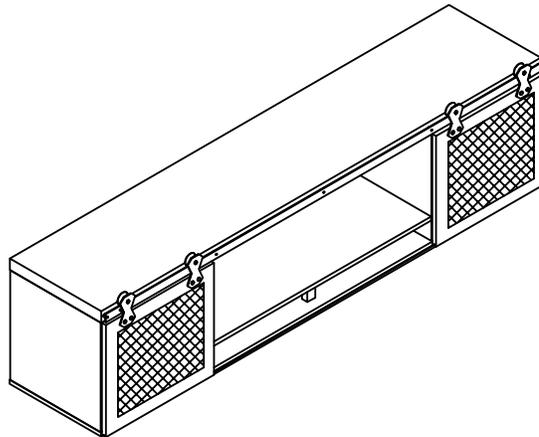


- 
- ① Insert Wood Dowel (1) & Cam Post (2) to all panels. Install Cam Lock (3) to Panel (C&D&H). Fasten Side Panel (C&D) to Back Panel (H), Attach the Cam Sticker (4) to Cams;

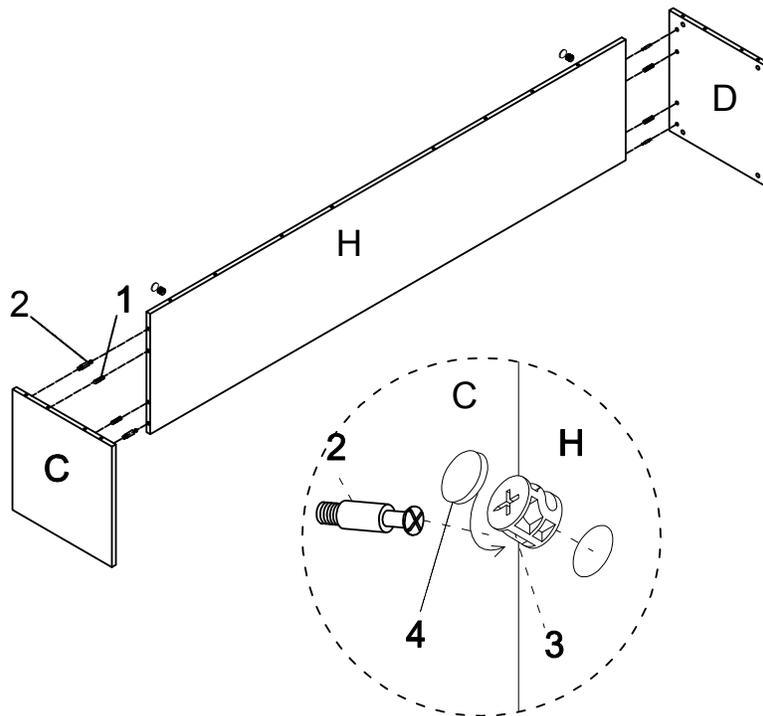


- 2** Insert Wood Dowel (1) & Cam Post (2) to the panels (E&G&F), Install Cam Lock (3) to Panels (E&G&F), Fasten Left / Right inside panel (E&F) to Fixed Shelf (G). Use Screw (6) to install the T Rectangle Support Connection (9) to Fixed Shelf (G), Attach the Cam Sticker (4) to Cams;

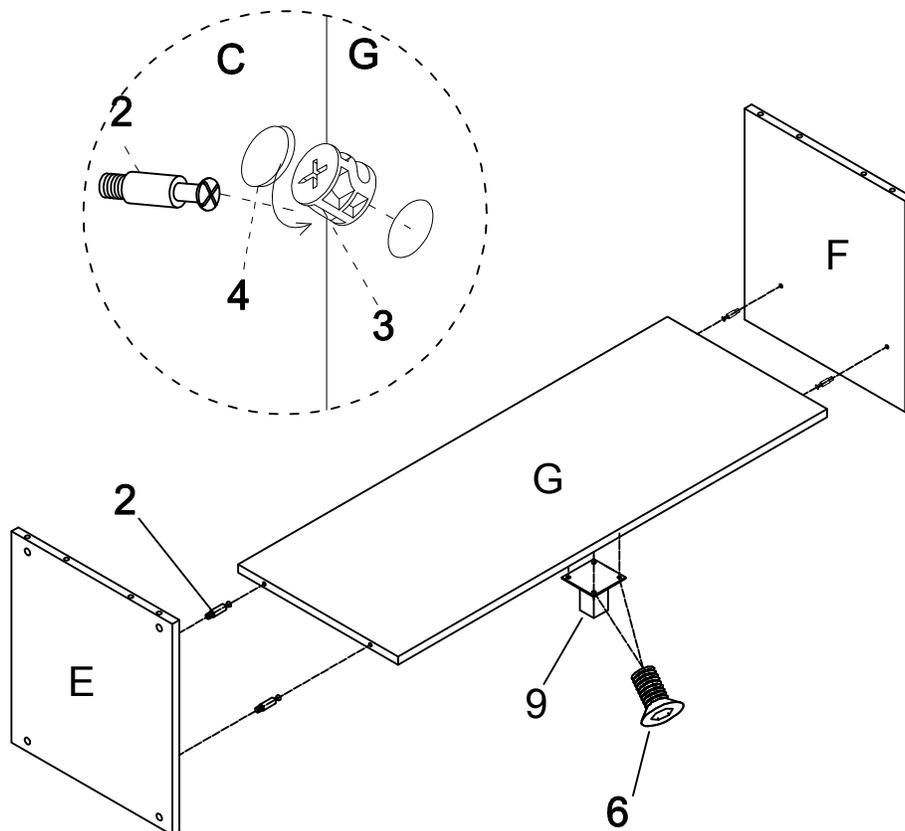


- 3** Use Wood Dowel (1), Cam Post (2) & Cam Lock (3) to fasten Top panel (A) and Bottom Panel (B) and other panels (C&D&E&F&G&H) together. Use Screw (7) to install the T Rectangle Support Connection (9) to the Bottom panel (B), Attach the Cam Sticker (4) to Cams;

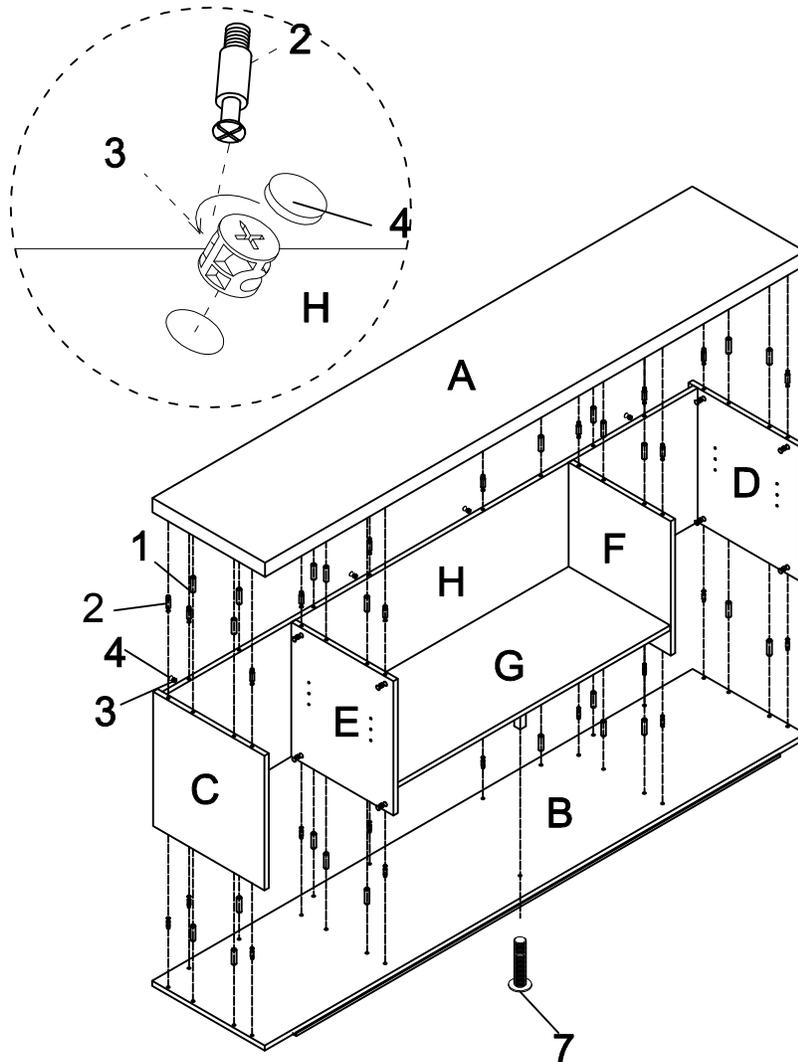

- 4** Use Screw (11) to fasten Panels (E&F) to Back Panel (G);

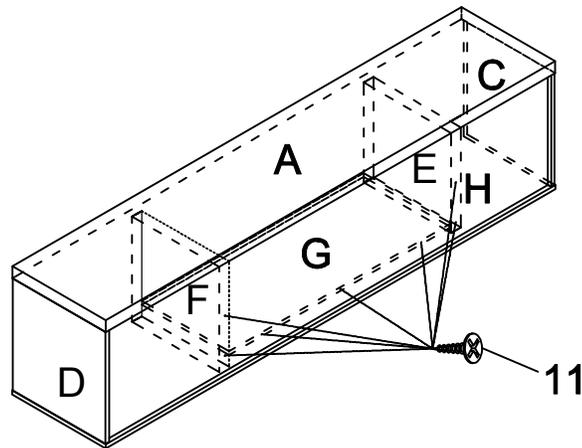

- 5** Put Door Panel ( I & K ) between the gap of the Slide , Use Screw (5) to install the Wheel bracket(8) to Door Panel (I);

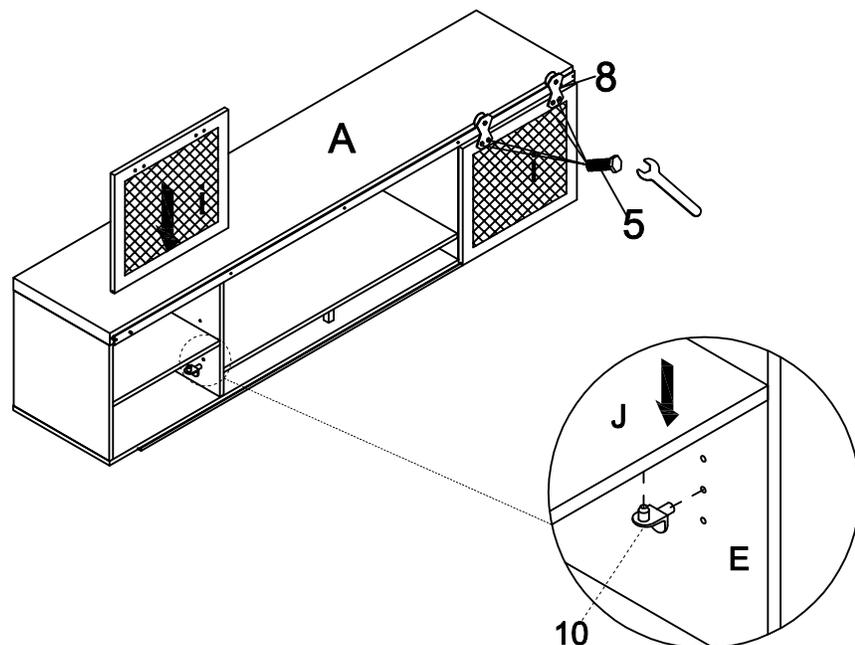

- 6** If you want to install the cabinet on the wall, please refer this instruction ;

**Mounting Cabinet Installation** - Due to the various wall construction methods, it is up to a professional installer to secure the Wall Mounting Board (K) to the wall with the proper fasteners and/or anchors as required by the wall construction at the desired mounting location. COE does not take responsibility for safe, proper fastening.

**To Hang Cabinet** - Position cabinet so that Mounting Board (L) is above Wall Mounting Board (K), and lower cabinet until Mounting Board (L) and Wall Mounting Board (K) lock together.

