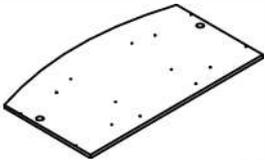
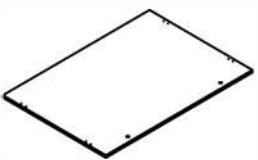
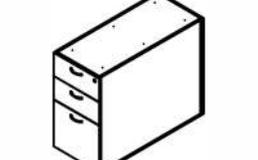
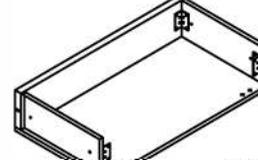
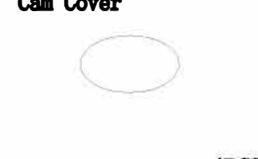
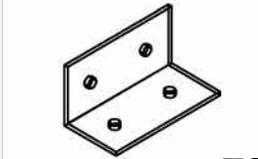
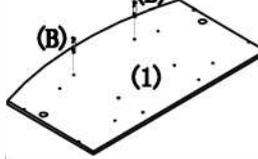
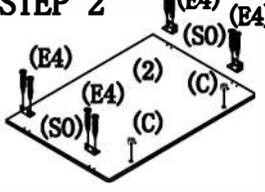
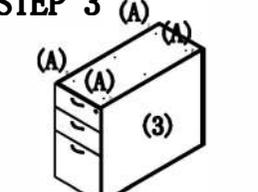
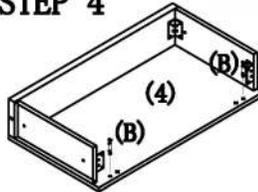
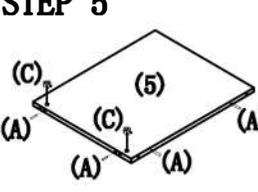
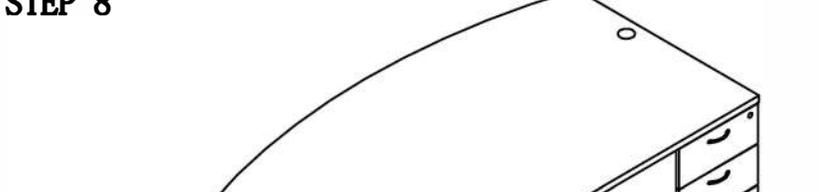
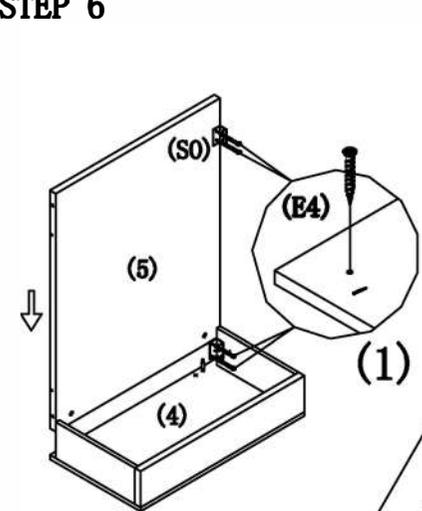
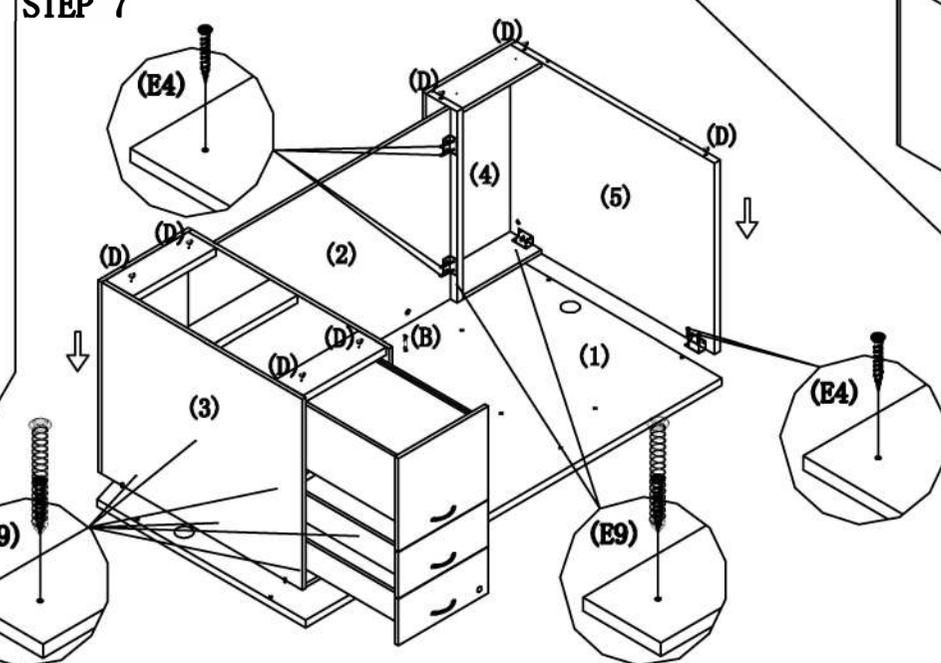


(1) TOP  1PC	(2) Modesty Panel  1PC	(3) NAP-265  1PC	(4) NAP-271-1  1PC	(5) NAP-271-2  1PC	(A) Dowel  8PCS	(B) Cam Pin  4PCS
---	---	---	--	---	--	--

(C) Cam Lock  4PCS+1	(D) Leg leveller  7PCS	(p) Adhesive Cam Cover  4PCS	(E4) Wood Screw  28PCS+1	(E9) Wood Screw  8PCS+1	(S0) Corner Bracket  5PCS	STEP 1 
---	---	---	--	--	--	---

STEP 2 	STEP 3 	STEP 4 	STEP 5 	STEP 8 
---	---	---	--	---

STEP 6 	STEP 7 
--	---

BOW TOP/MODESTY SET (LAMINATE)
 (Left Or Right Application)
NAP-289
 71"W*40"D*29"H



Always lay components on A clean, soft-cushioned surface during assembly.