




**cubicles.com**

## Coffee Table

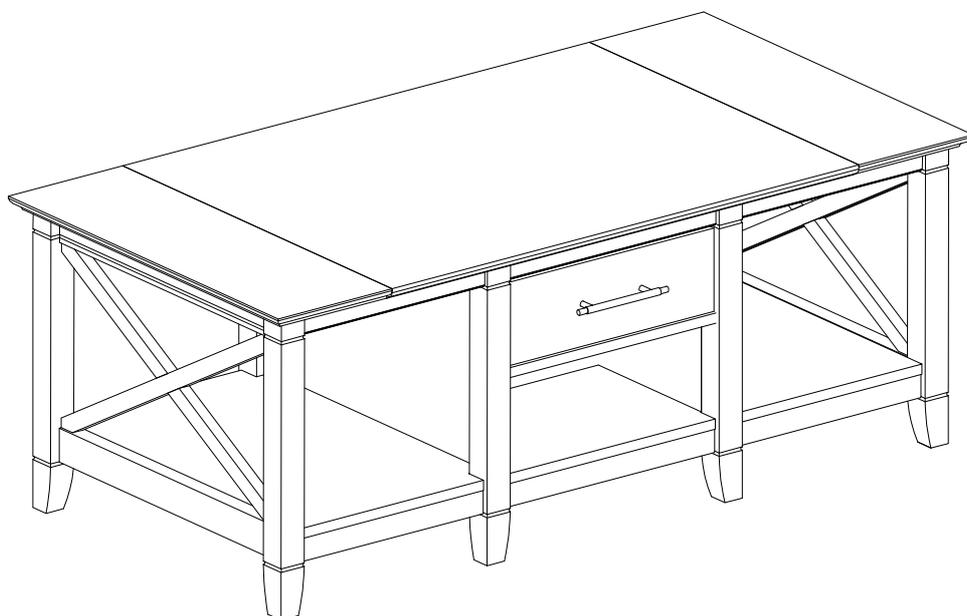

## Get Ready to Assemble

### For best results, keep these tips in mind:

- ① We know you want to finish this assembly as quickly as possible, but trust us: you'll have a better experience if you take it one step at a time.
- ② Give yourself some room to work near where you want the fully assembled product.
- ③ If your floor isn't carpeted, assemble this product on the empty carton to avoid scratching.
- ④ Do you have a friend who owes you a favor? Some steps may go a little easier with a second set of hands.

### DOs

- ✔ Use a #2 Phillips head screwdriver (or other handheld tools as indicated)
- ✔ Wear safety glasses at all times during assembly
- ✔ Carefully follow the instructions in this guide and complete all steps in order
- ✔ Give us a call if you're having trouble with a particularly tricky step

### DON'Ts

- ✘ We know power tools are quick and easy, but you shouldn't use them when assembling this product (unless otherwise specified)
- ✘ Never move your furniture with items inside or resting on the surface
- ✘ Do not attempt to use this product before all steps have been completed

# IMPORTANT SAFETY INFORMATION



## PLEASE READ WARNINGS



Improper use can cause safety hazards, or damage to your furniture and household items.

Warning	Do	Don't	Why it's important
<b>Serious injury may occur.</b>	<ul style="list-style-type: none"><li>Assemble following all instructions using all indicated parts and hardware provided.</li></ul>	<ul style="list-style-type: none"><li>Do not move unit when loaded.</li><li>Do not load with a television or other heavy equipment.</li><li>Do not exceed the maximum load limits stated in the instructions.</li></ul>	Improper assembly, use or loading can lead to product instability, tipover, or collapse.

Advertencia	Hacer	No	Por qué es importante
<b>Pueden producirse lesiones graves.</b>	<ul style="list-style-type: none"><li>Realice el montaje siguiendo todas las instrucciones y utilizando todas las piezas indicadas y los herrajes suministrados.</li></ul>	<ul style="list-style-type: none"><li>No mueva la unidad cuando esté cargada.</li><li>No cargue el mueble con un televisor u otro equipo pesado.</li><li>No supere los límites máximos de carga indicados en las instrucciones.</li></ul>	El montaje, uso o carga inadecuados pueden provocar inestabilidad, vuelco o colapso del producto.

Avertissement	À faire	À ne pas faire	Pourquoi c'est important
<b>Peut entraîner des blessures graves.</b>	<ul style="list-style-type: none"><li>Assembler en suivant toutes les instructions et en utilisant toutes les pièces et la quincaillerie incluses.</li></ul>	<ul style="list-style-type: none"><li>Ne pas déplacer le meuble lorsqu'il est chargé.</li><li>Ne pas charger le meuble avec un téléviseur ou tout autre équipement lourd.</li><li>Ne pas dépasser les limites de poids maximales indiquées dans les instructions.</li></ul>	Un assemblage, une utilisation ou un chargement incorrects peuvent entraîner l'instabilité, le basculement ou l'effondrement du produit.


# Get to know your Boards

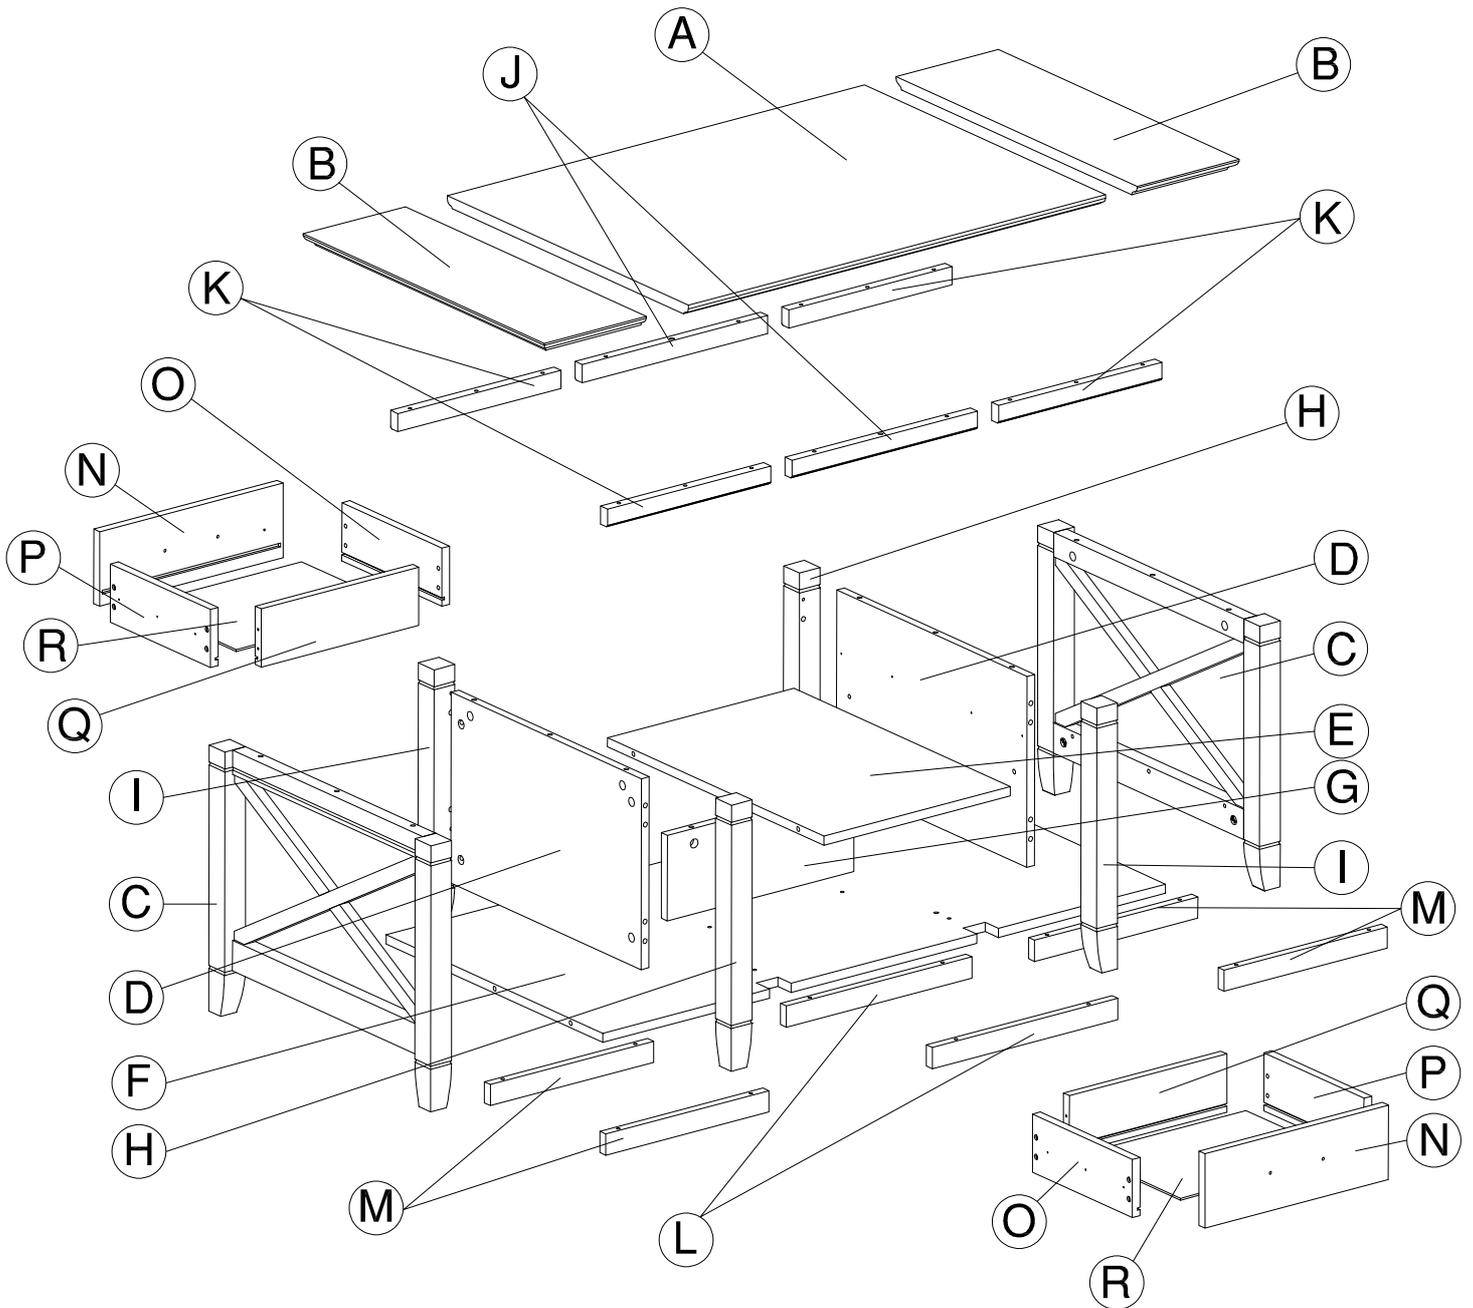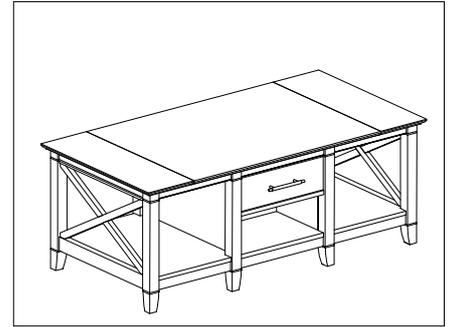

# Get to know your Fasteners

Fasteners are shown actual size.


H181468

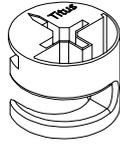

[ 26 ]

KD Cam

H72988



[ 20 ]

KD Bolt


H38169



[ 20 ]

Wood Dowel  
8 x 30mm


H171556



[ 6 ]

Quick Connect


H158933



[ 4 ]

#8 x 3/4"


H23198



[ 14 ]

#10 x 1-1/2"


H23370



[ 28 ]

#10 x 1-1/4"


H211930



[ 32 ]

#8 -18x 15/32"


H35251



[ 16 ]

#10 x 1/2"

H146988




[ 4 ]

#12 x 1/2"

# Get to know your Hardware

Hardware not to scale.


Q184100

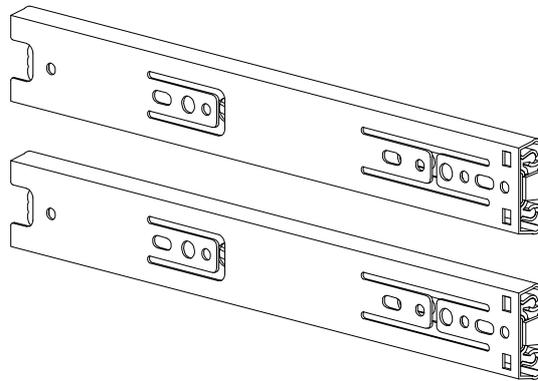

[ 2 ]

10" Slide


H211290

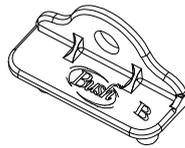

[ 4 ]


Drawer Bracket

H39922



[ 4 ]

Strap

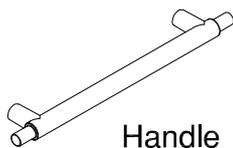

[ 2 ]

Handle




[ 14 ]

Cover Cap

# STEP 1

# Prepare Panels


H211290

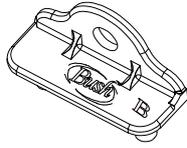

[ 4 ]

Drawer Bracket


H158933



[ 4 ]


#8 x 3/4"

H146988



[ 4 ]


#12 x 1/2"

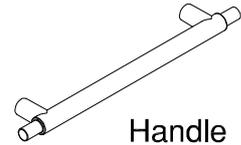

[ 2 ]


Handle


**2 X**

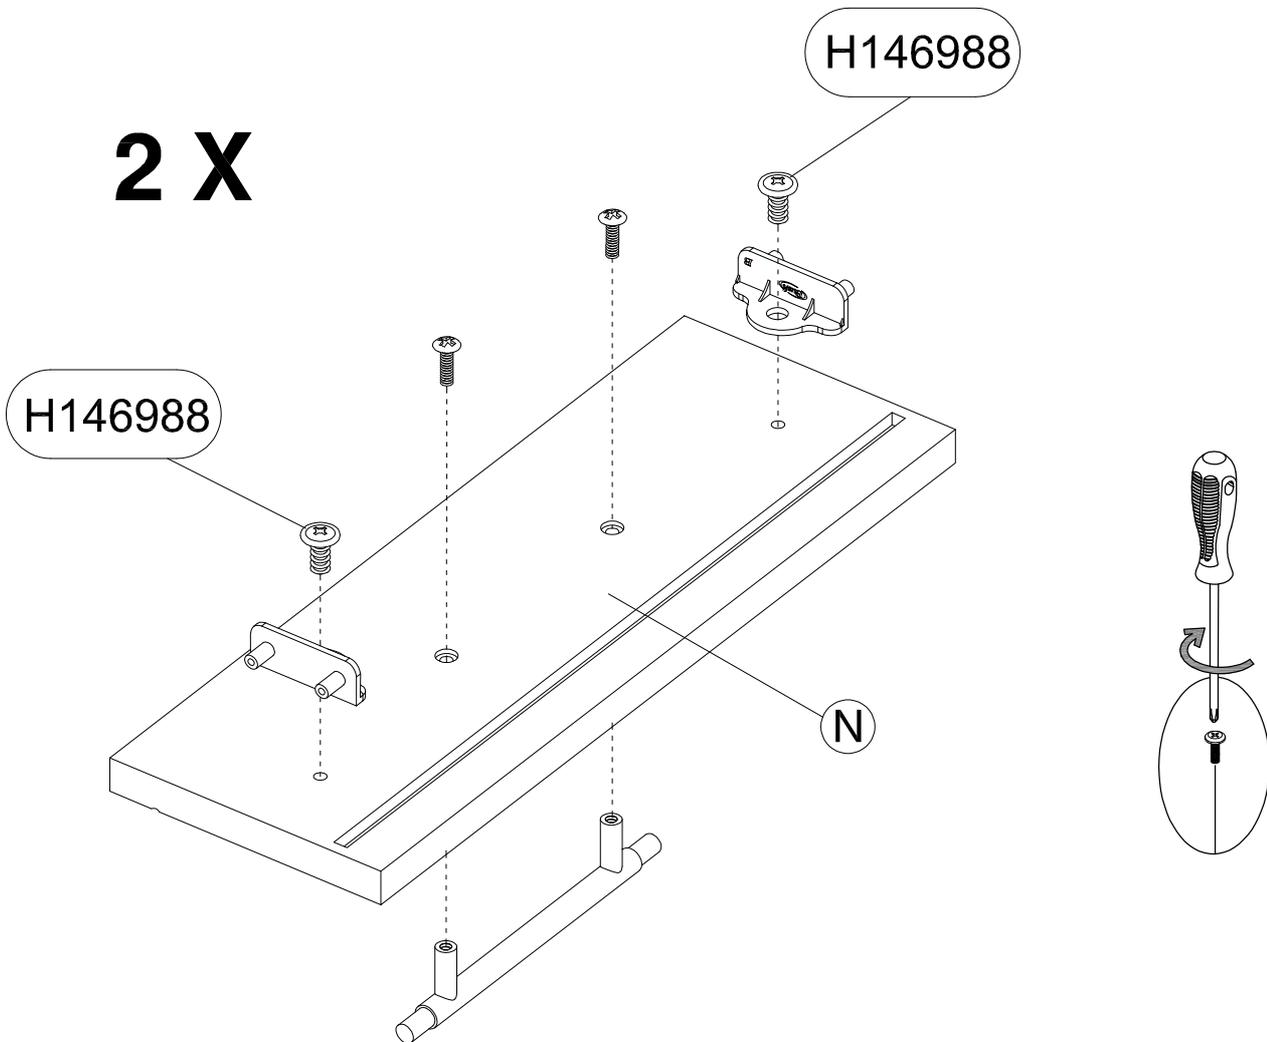


# STEP 2

# Assemble Panels

H211930  [ 8 ]  
#8 -18x 15/32"

H23198  [ 8 ]  
#10 x 1-1/2"

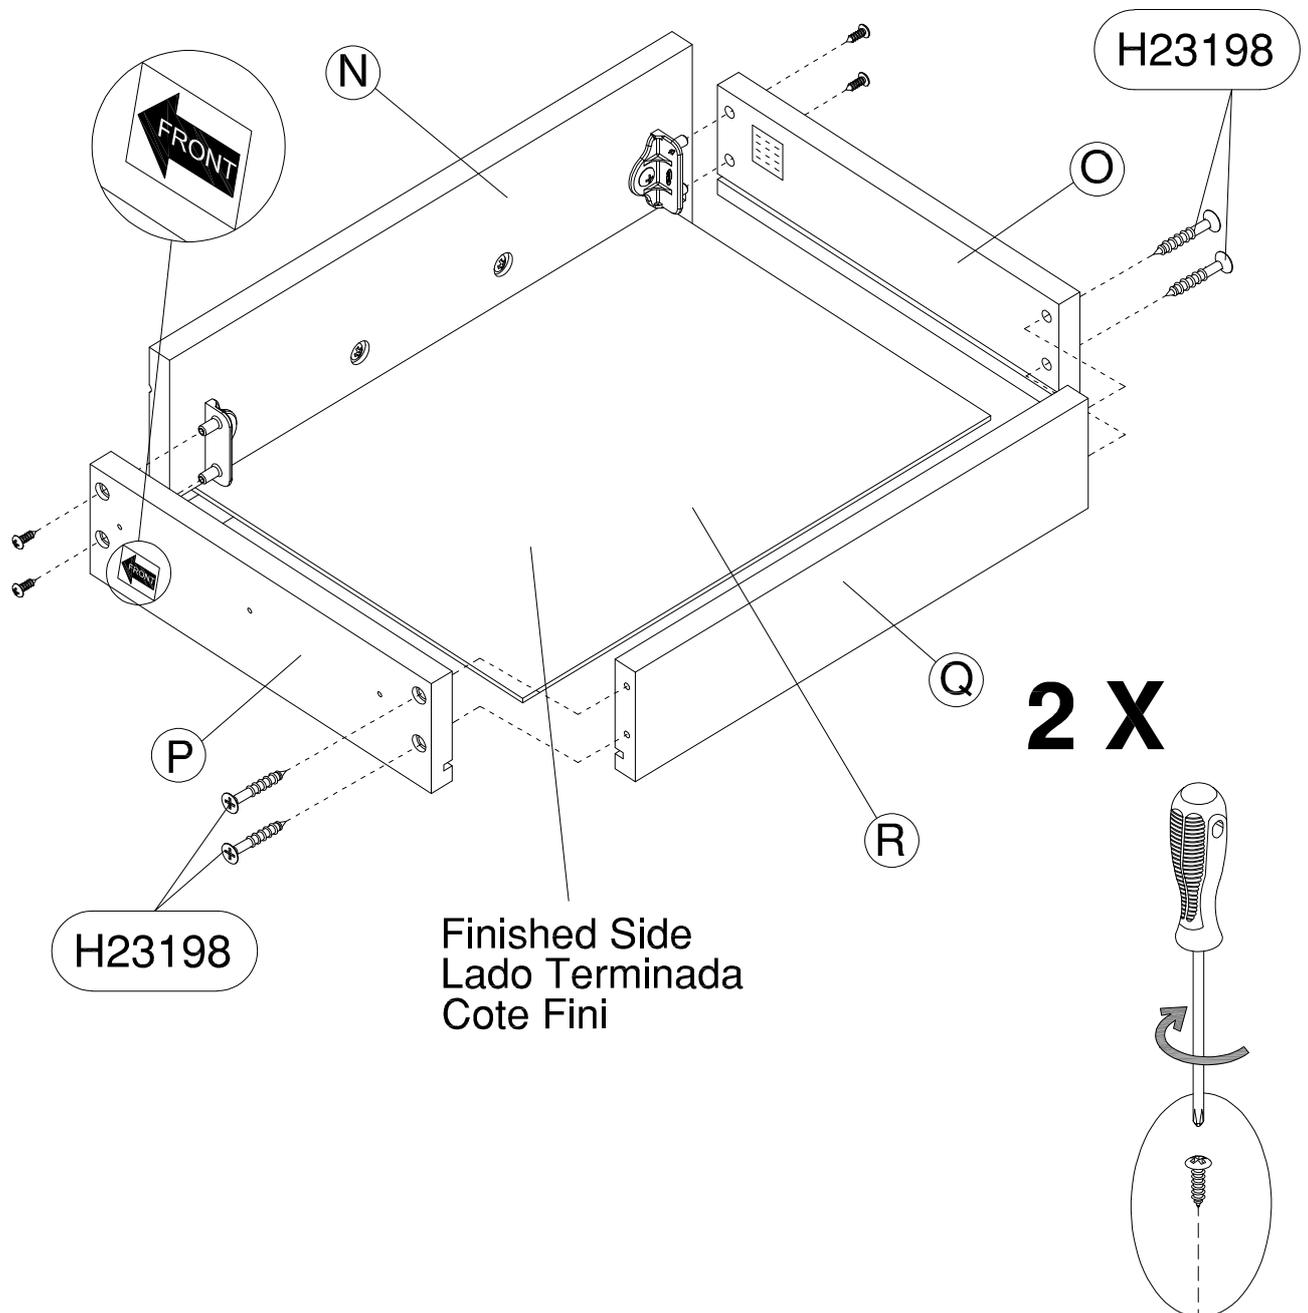

H23198

Finished Side  
Lado Terminada  
Cote Fini

**2 X**


# STEP 3

# Separate Slides


**Slides Must Be Separated Before Assembly.  
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.  
Después de la separación, déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage.  
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

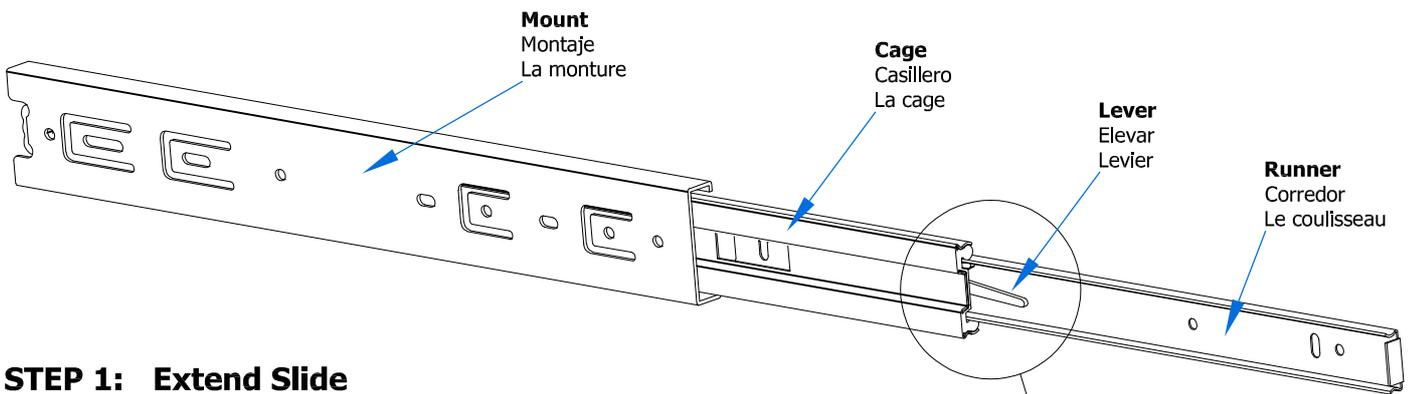


**STEP 1: Extend Slide**  
Extender la diapositiva  
Extendre la diapositive

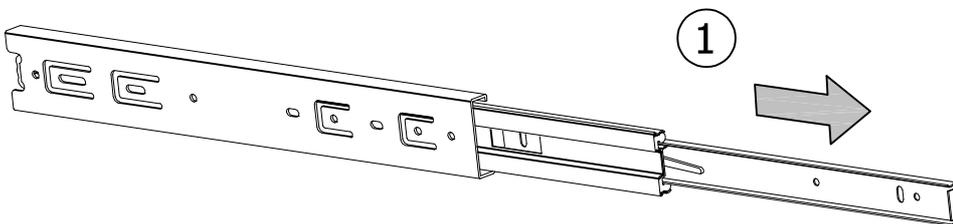

**STEP 2: Push Lever UP**  
Empujar hacia arriba  
Lever le levier

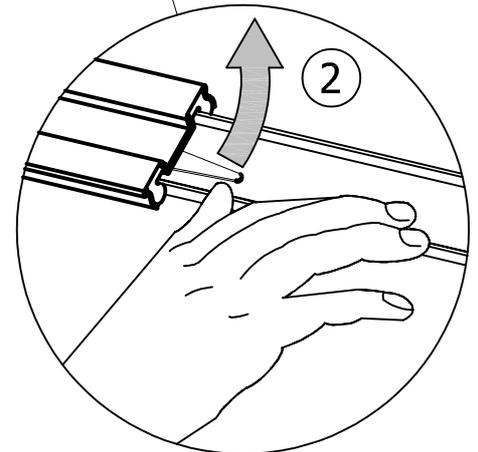


**STEP 3: Remove Runner**  
Quitar el corredor  
Enlever le coureur

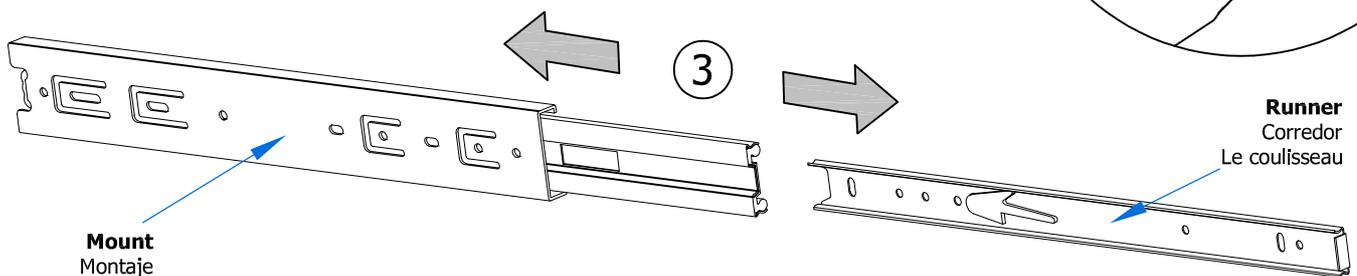

# STEP 4

# Install Slide Runners


Q184100

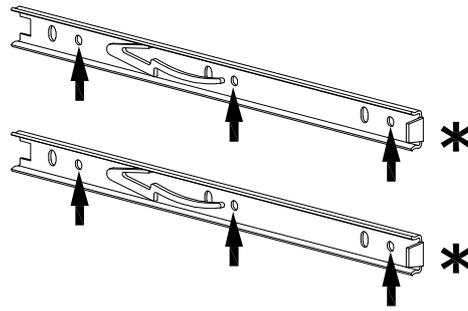

[ 2 ]


10"(250mm) Slide Runner

H211930




[ 12 ]

#8 -18x 15/32"

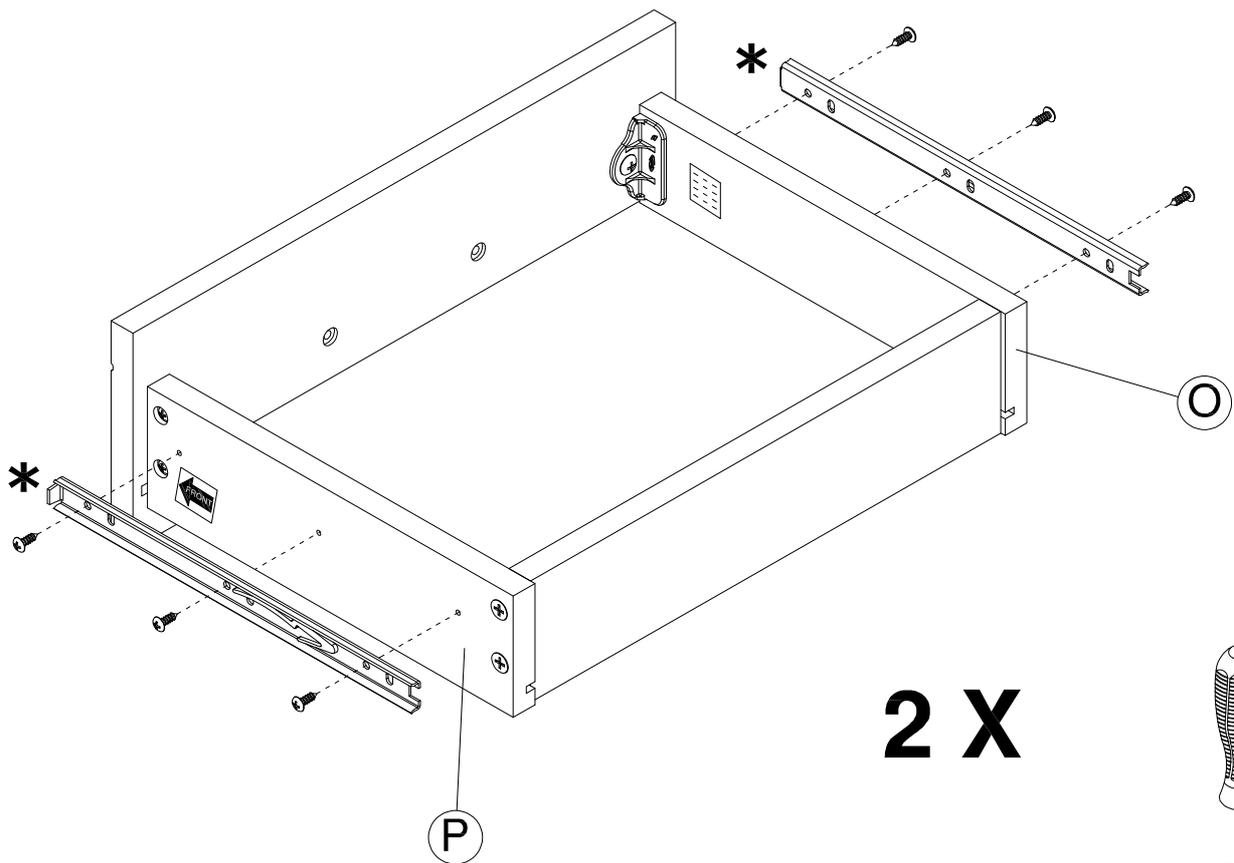


**2 X**

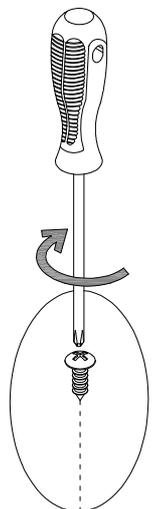

# STEP 5


# Prepare Panels

H72988




[ 8 ]


KD Bolt

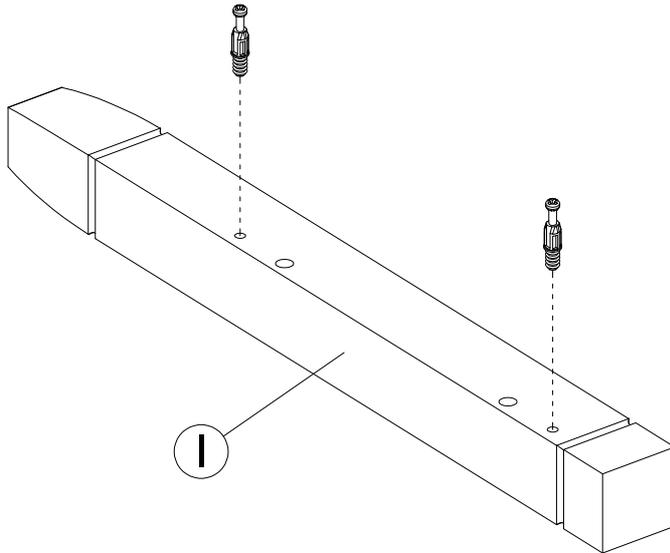

**2 X**

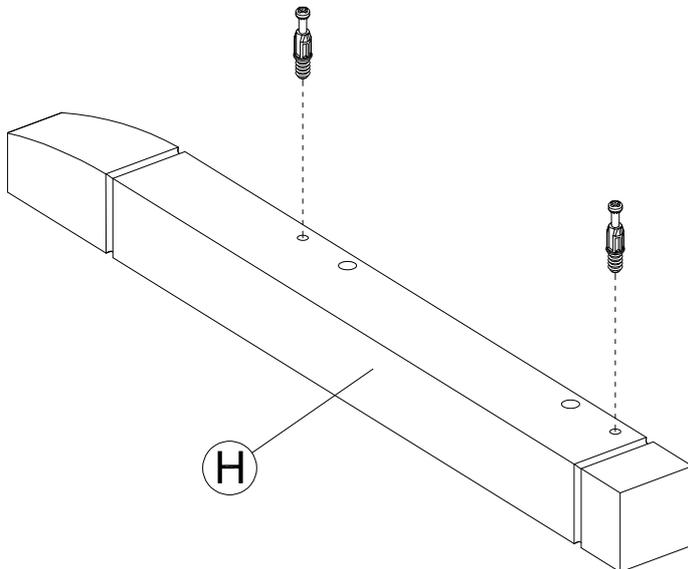

**2 X**

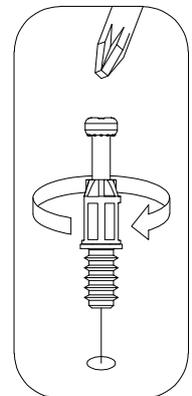

# STEP 6



# Prepare Panels

H38169



[ 14 ]





Wood Dowel  
8 x 30mm

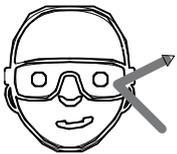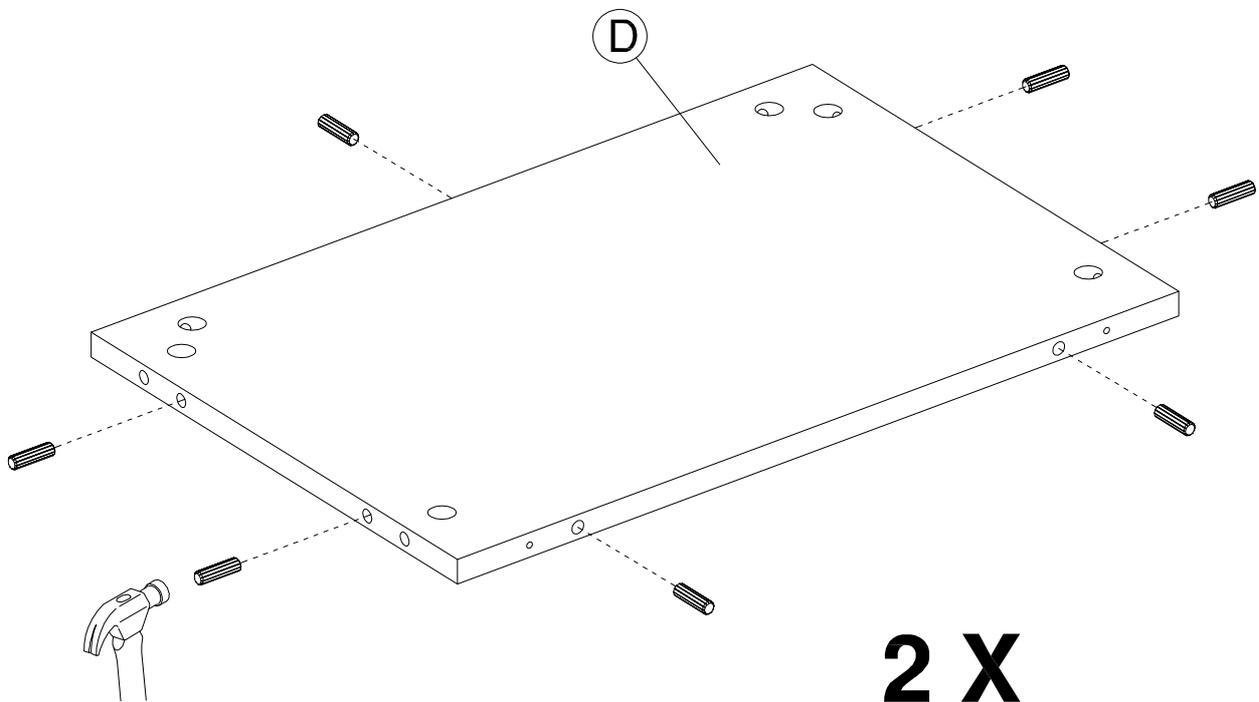

Safety glasses  
Gafas de seguridad  
Lunettes de protection







# STEP 7

# Assemble Panels

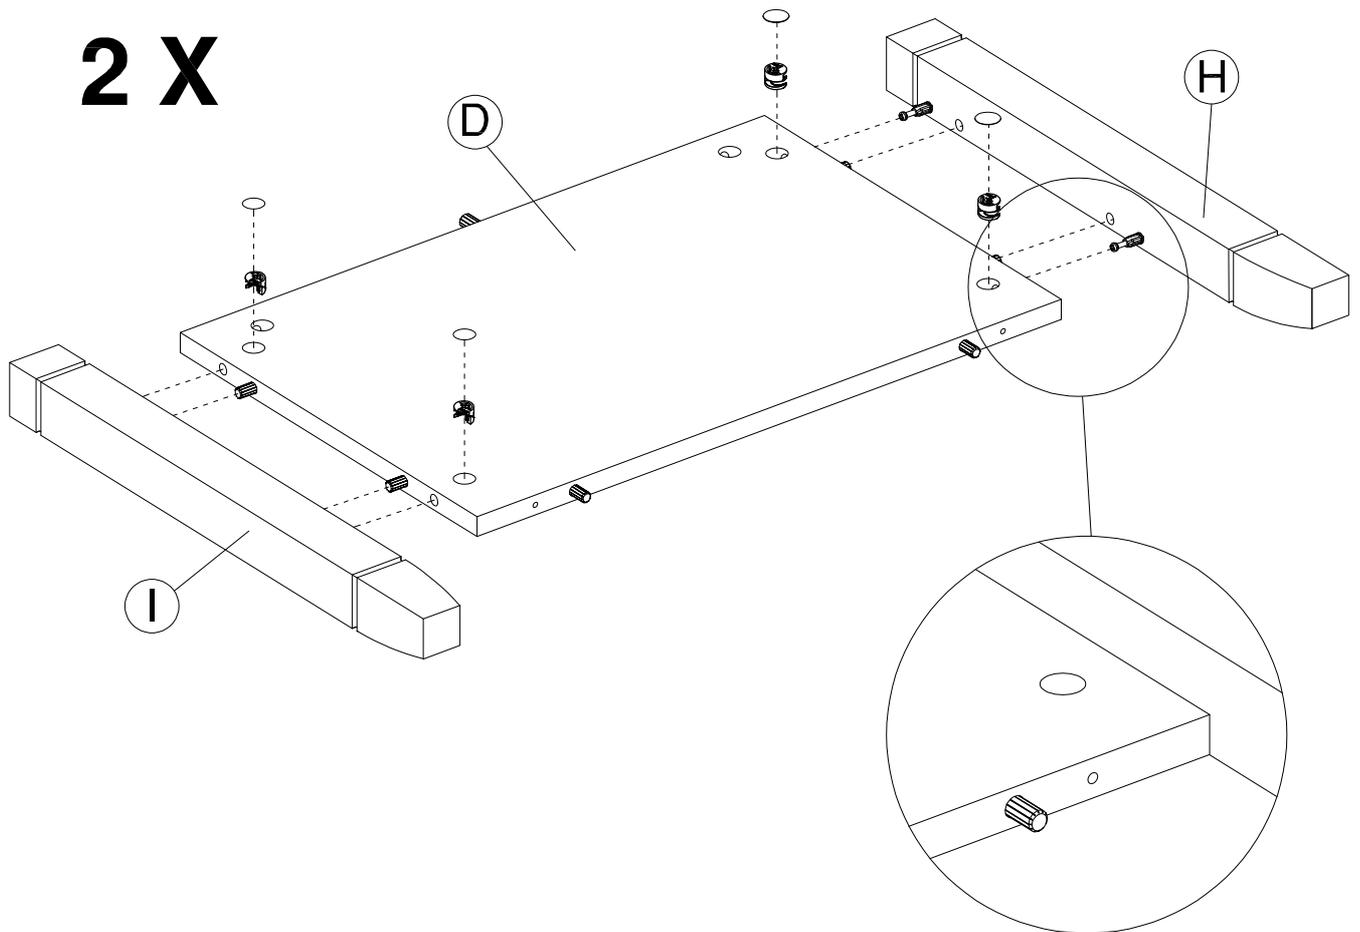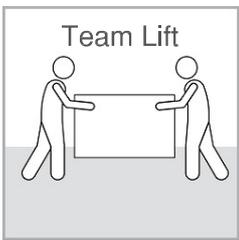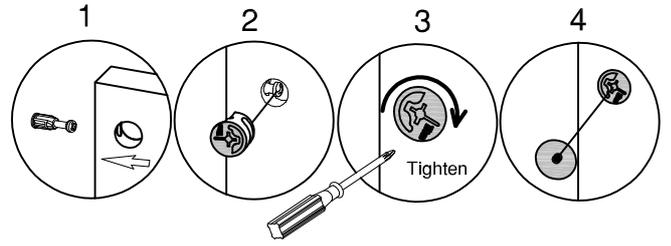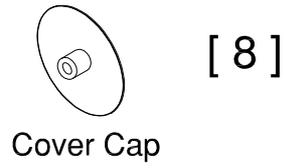

# STEP 8


# Install Mounts

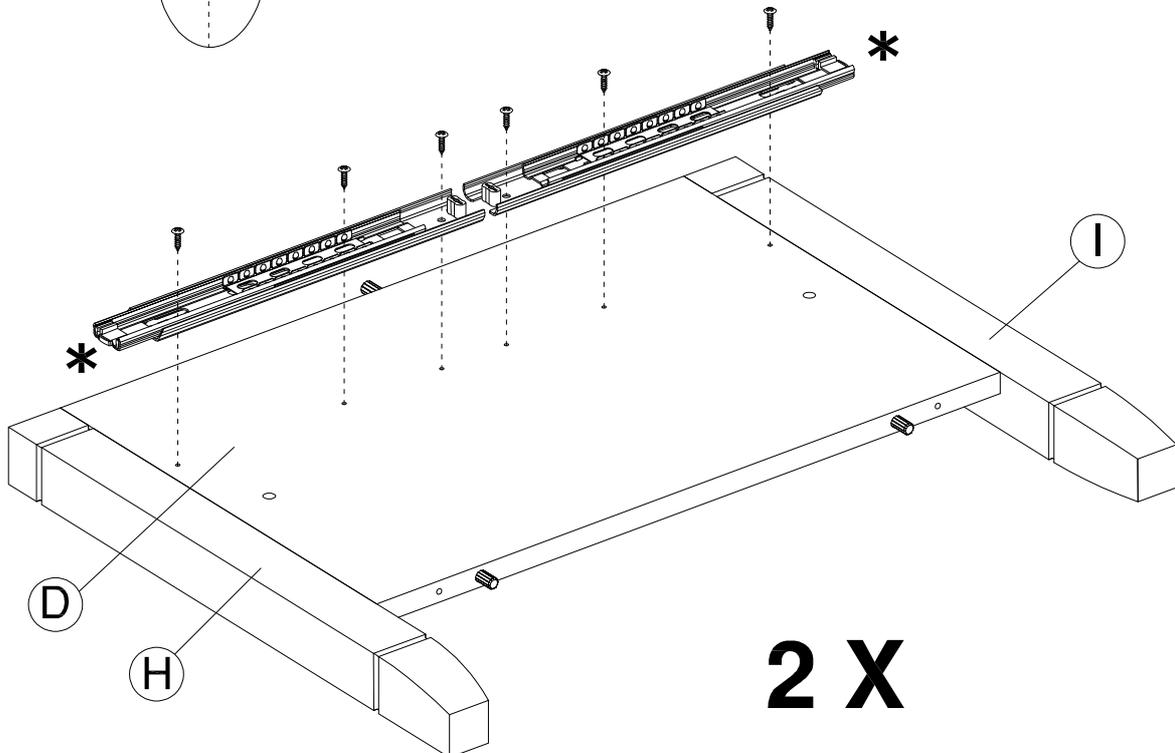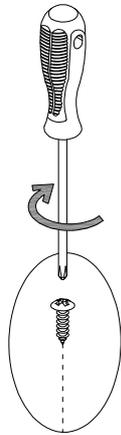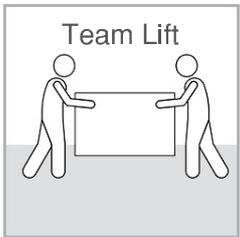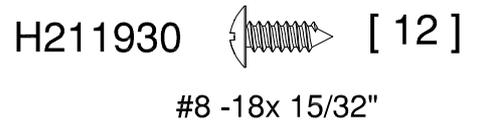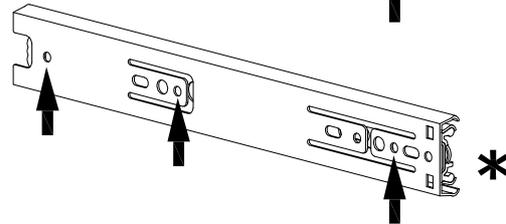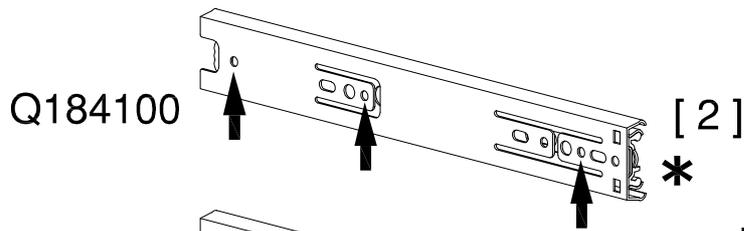

# STEP 9


# Insert Fasteners

H171556




[ 4 ]

Quick Connect

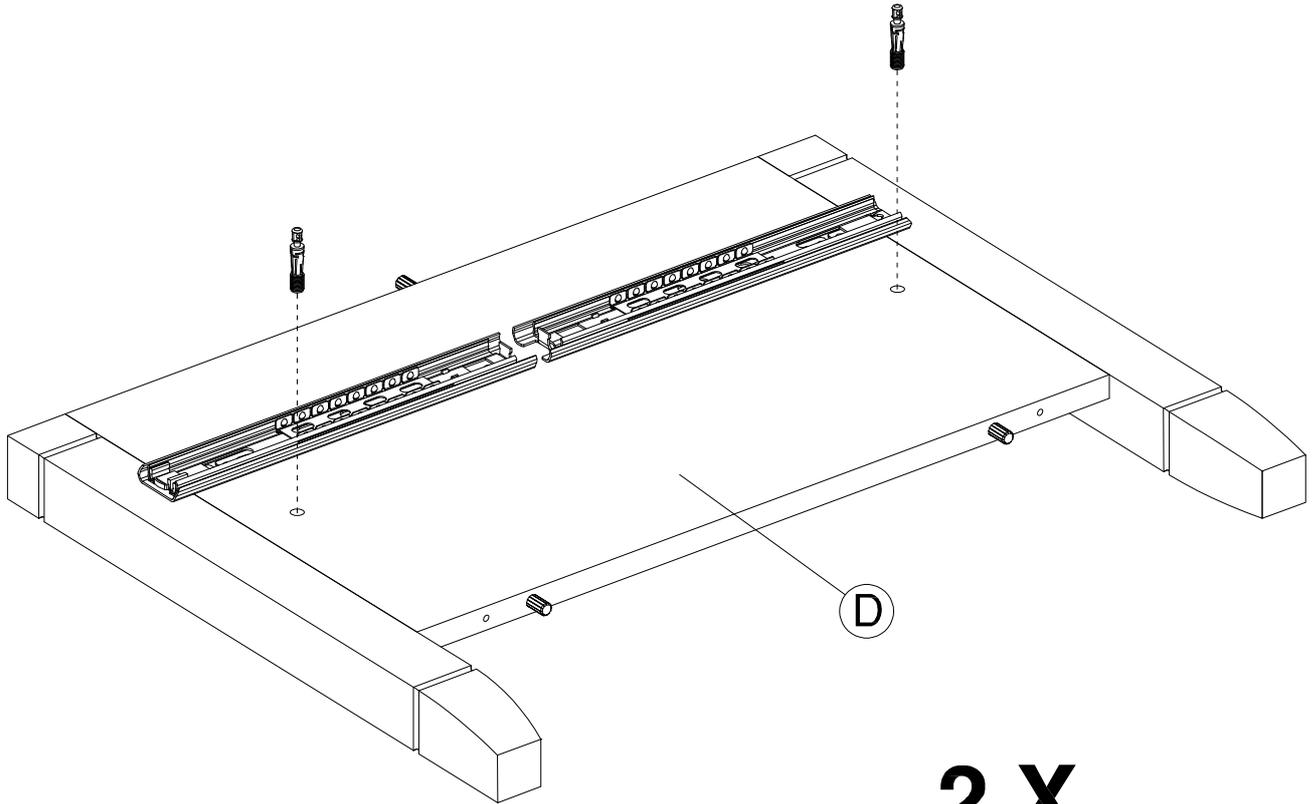

**2 X**

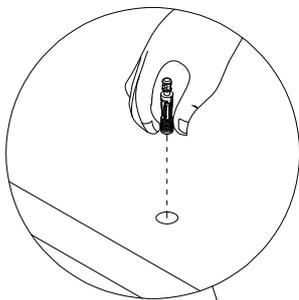


MAY HAVE TO SQUEEZE PLASTIC TO INSERT INTO HOLE.  
PUEDE TENER QUE APRETAR PLÁSTICO PARA INSERTAR EN EL AGUJERO.  
PEUT AVOIR À PRESSER EN PLASTIQUE À INSÉRER DANS LE TROU.

# STEP 10



# Prepare Panel

H171556



[ 2 ]

Quick Connect

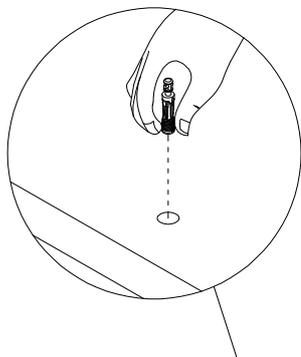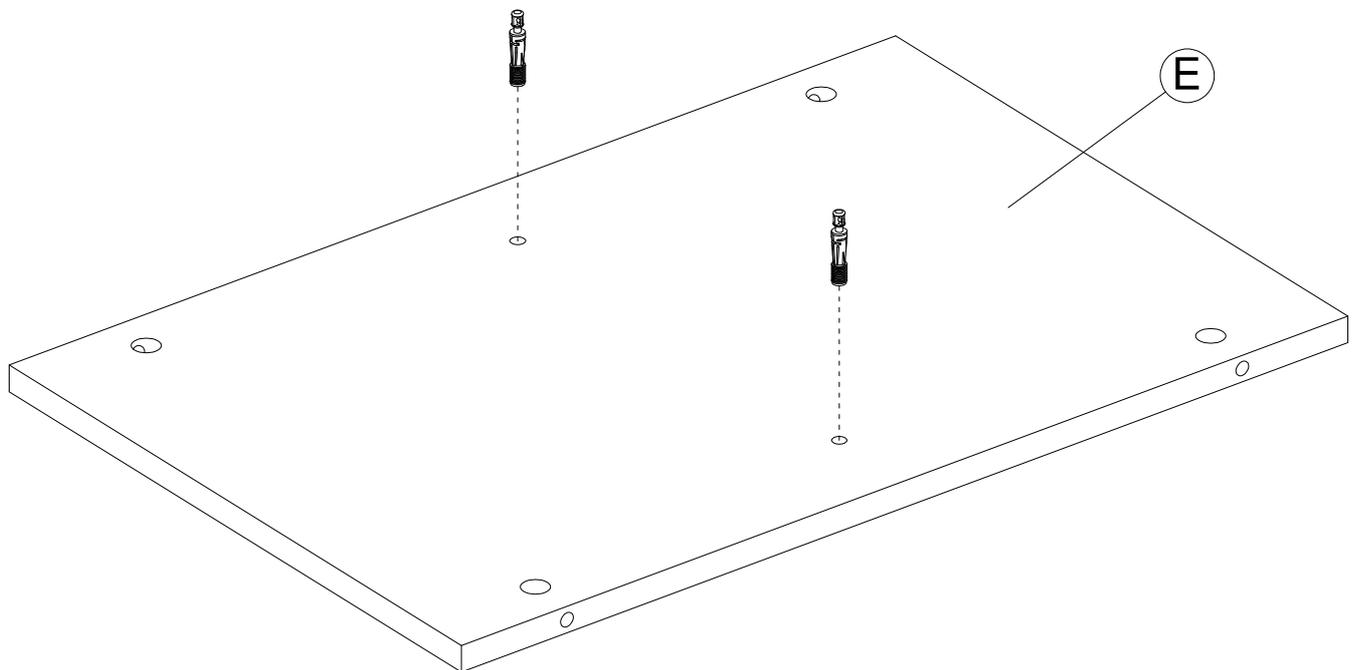


MAY HAVE TO SQUEEZE PLASTIC TO INSERT INTO HOLE.  
PUEDE TENER QUE APRETAR PLÁSTICO PARA INSERTAR EN EL AGUJERO.  
PEUT AVOIR À PRESSER EN PLASTIQUE À INSÉRER DANS LE TROU.

# STEP 11




# Assemble Panels

H181468

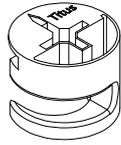

KD Cam

[ 2 ]

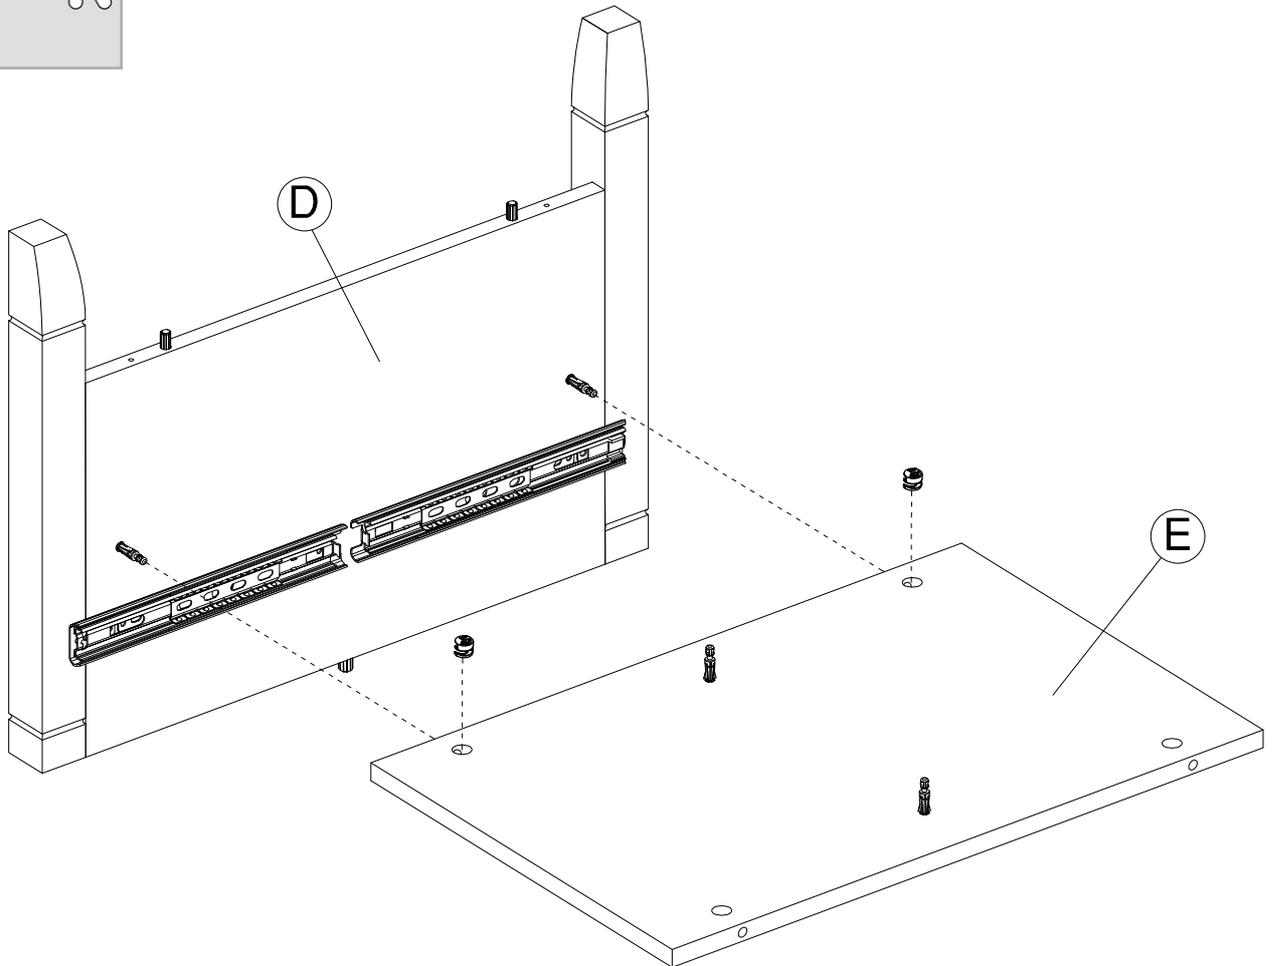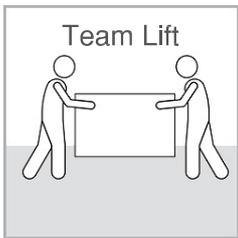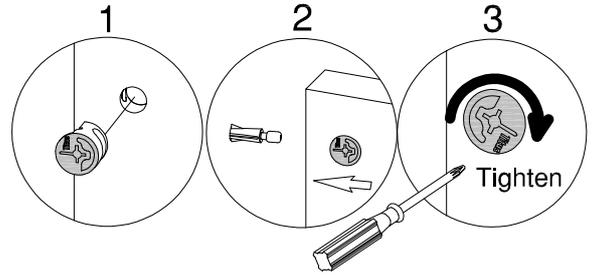




# STEP 12

# Assemble Panel

H181468






[ 2 ]

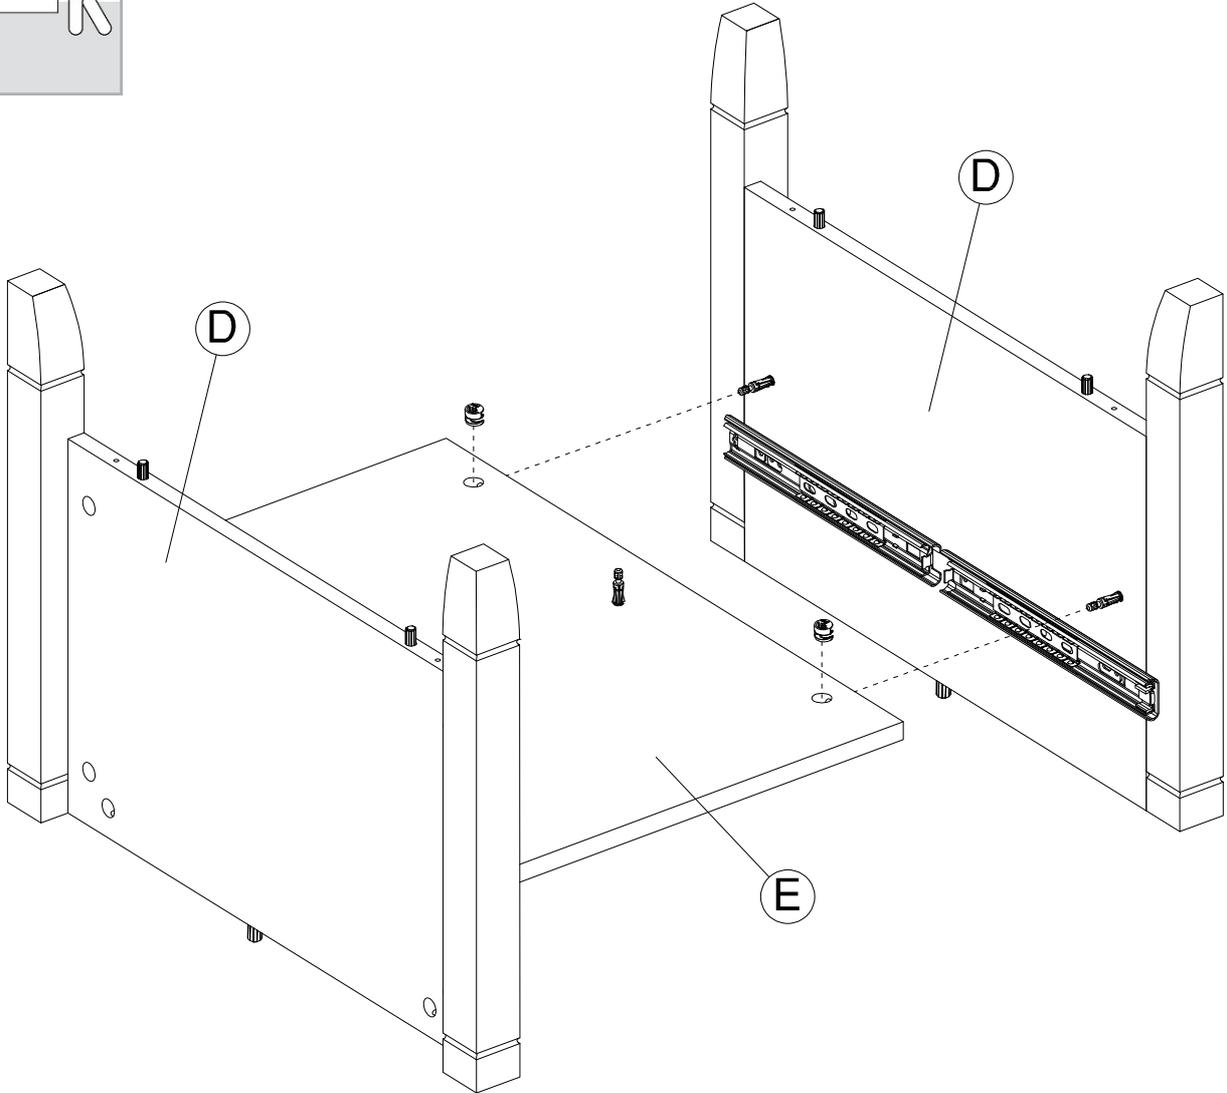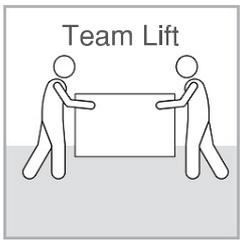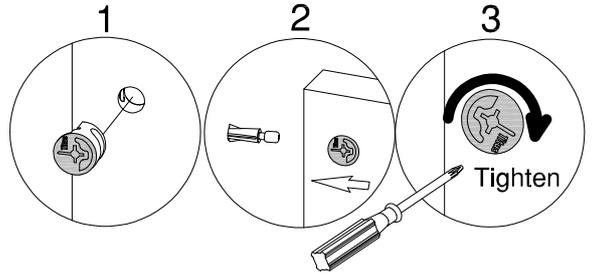

# STEP 13


# Assemble Panel

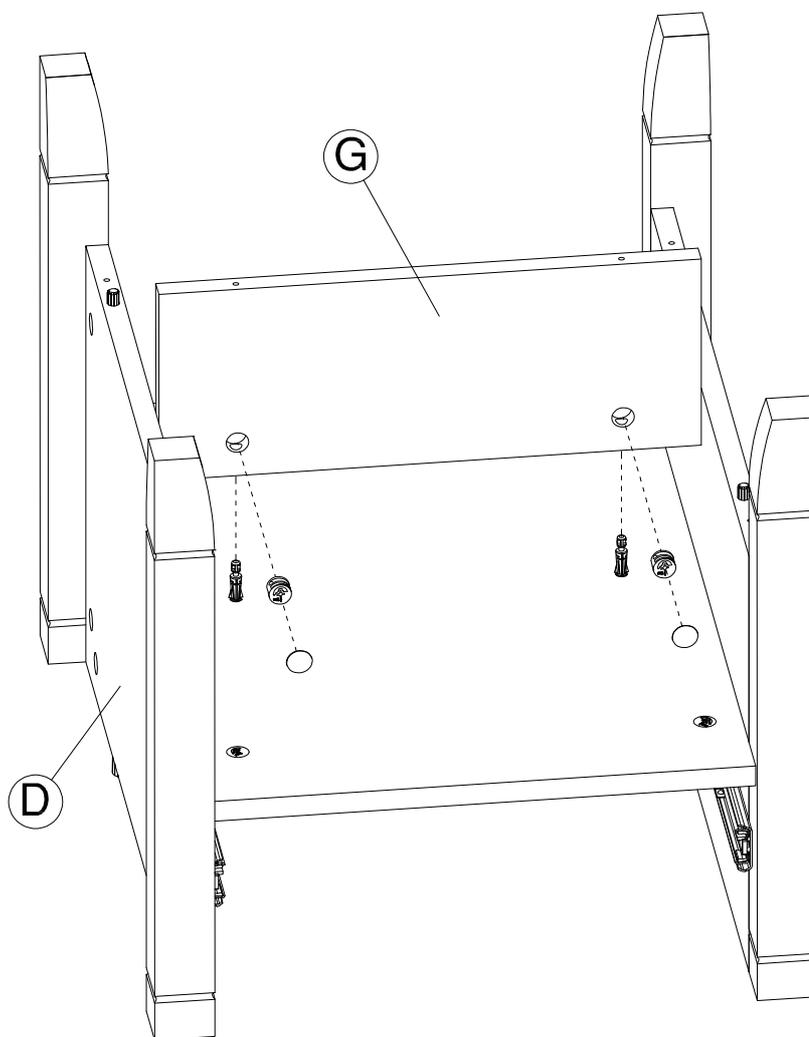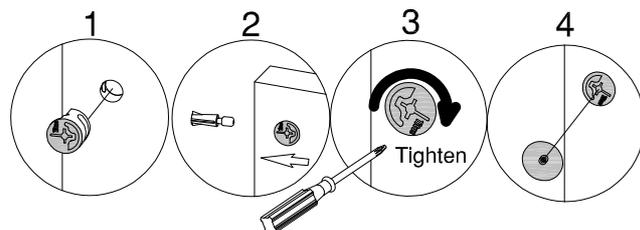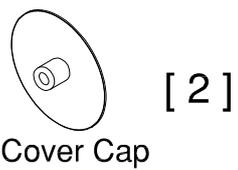

# STEP 14



# Prepare Panel

H38169



[ 2 ]


Wood Dowel  
8 x 30mm

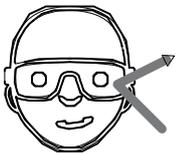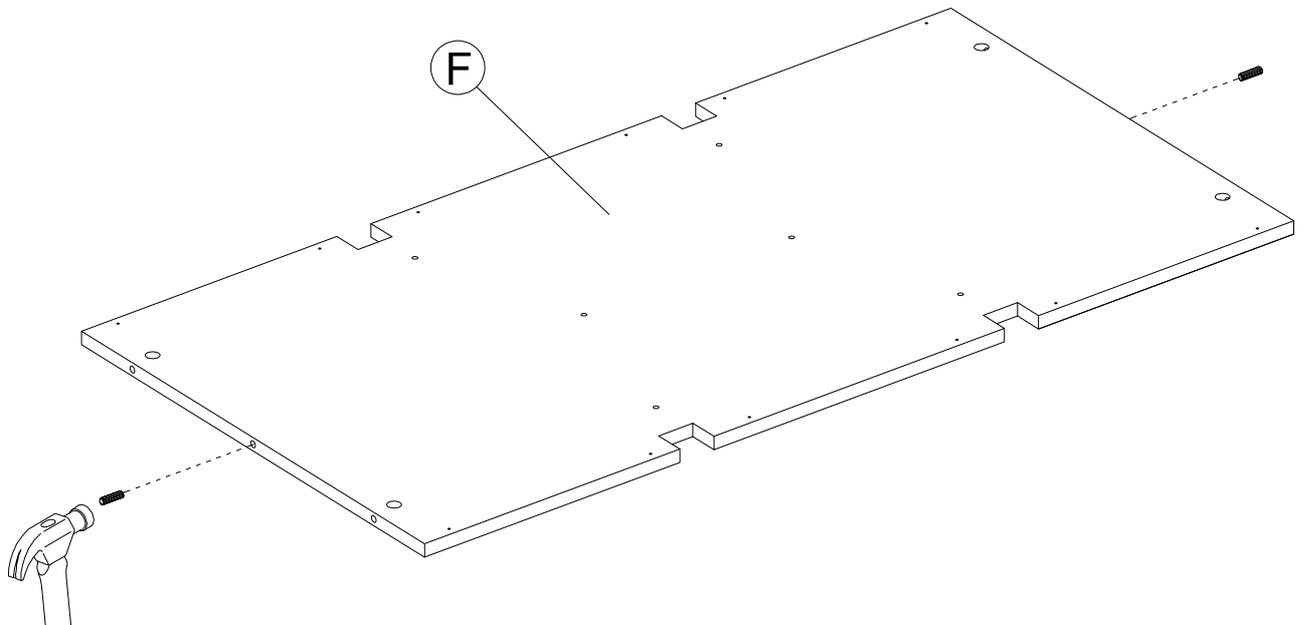


Safety glasses  
Gafas de seguridad  
Lunettes de protection

# STEP 15

# Assemble Panels

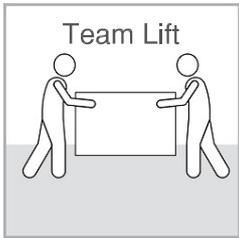



H23198



[ 6 ]

#10 x 1-1/2"


Raw Side  
Lado Crudo  
Cote Brut

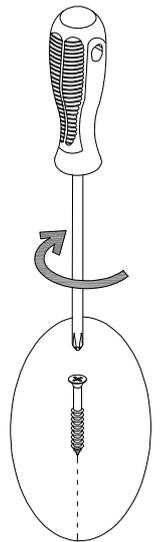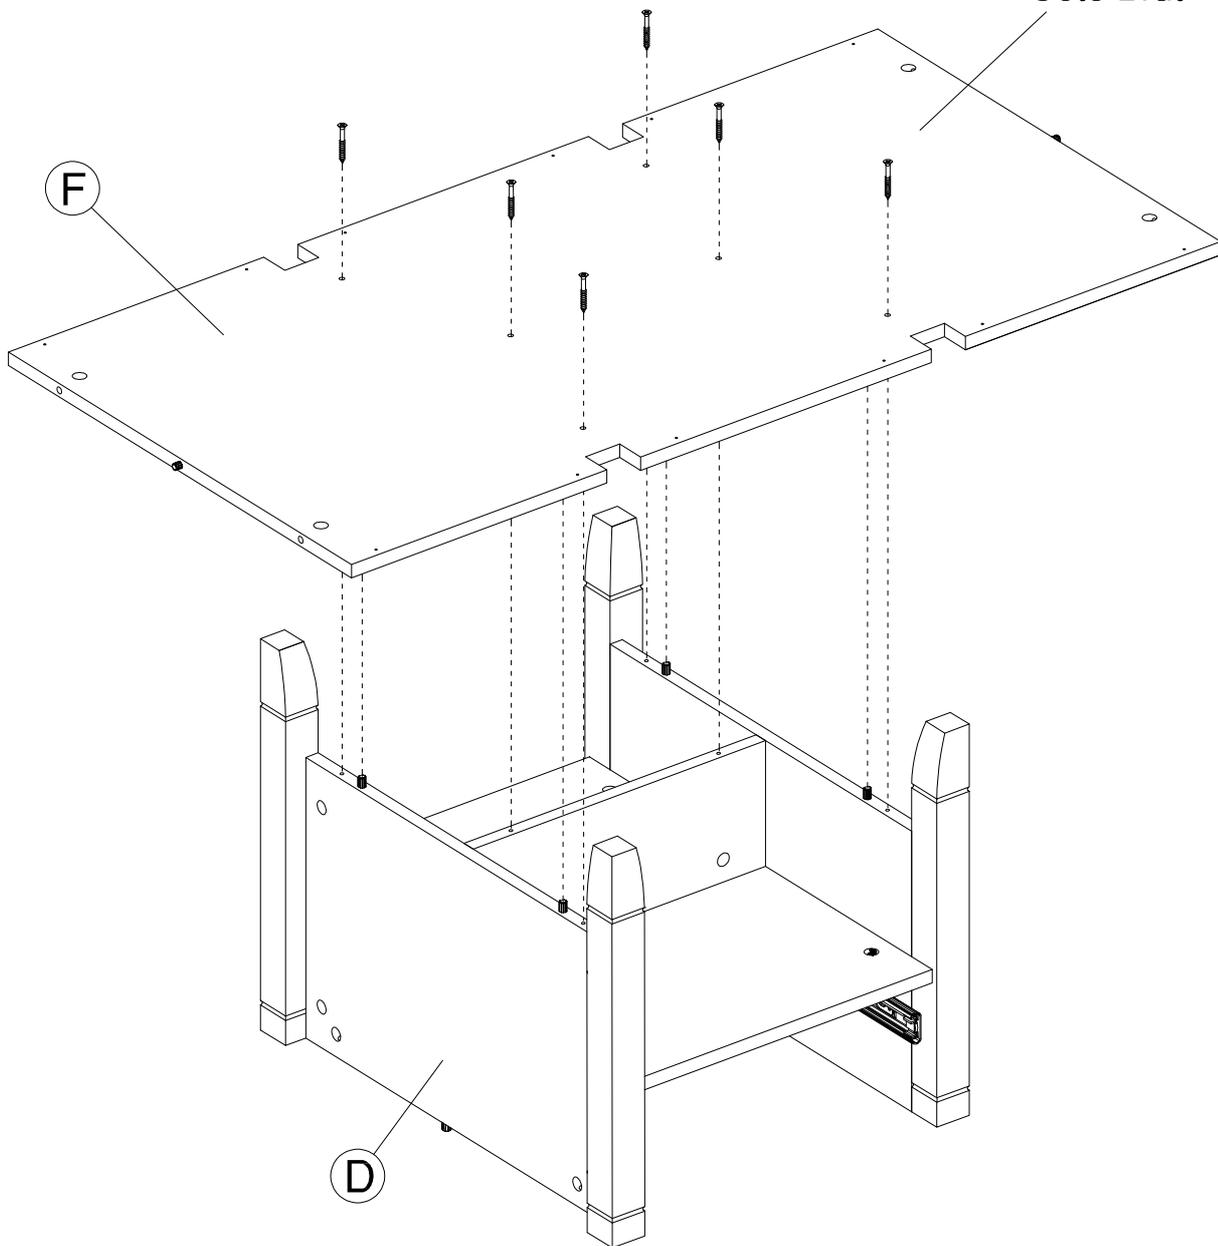

# STEP 16

# Prepare Panels

H72988



[ 4 ]



KD Bolt

H38169




[ 2 ]

Wood Dowel  
8 x 30mm

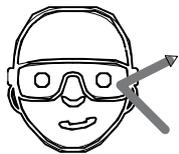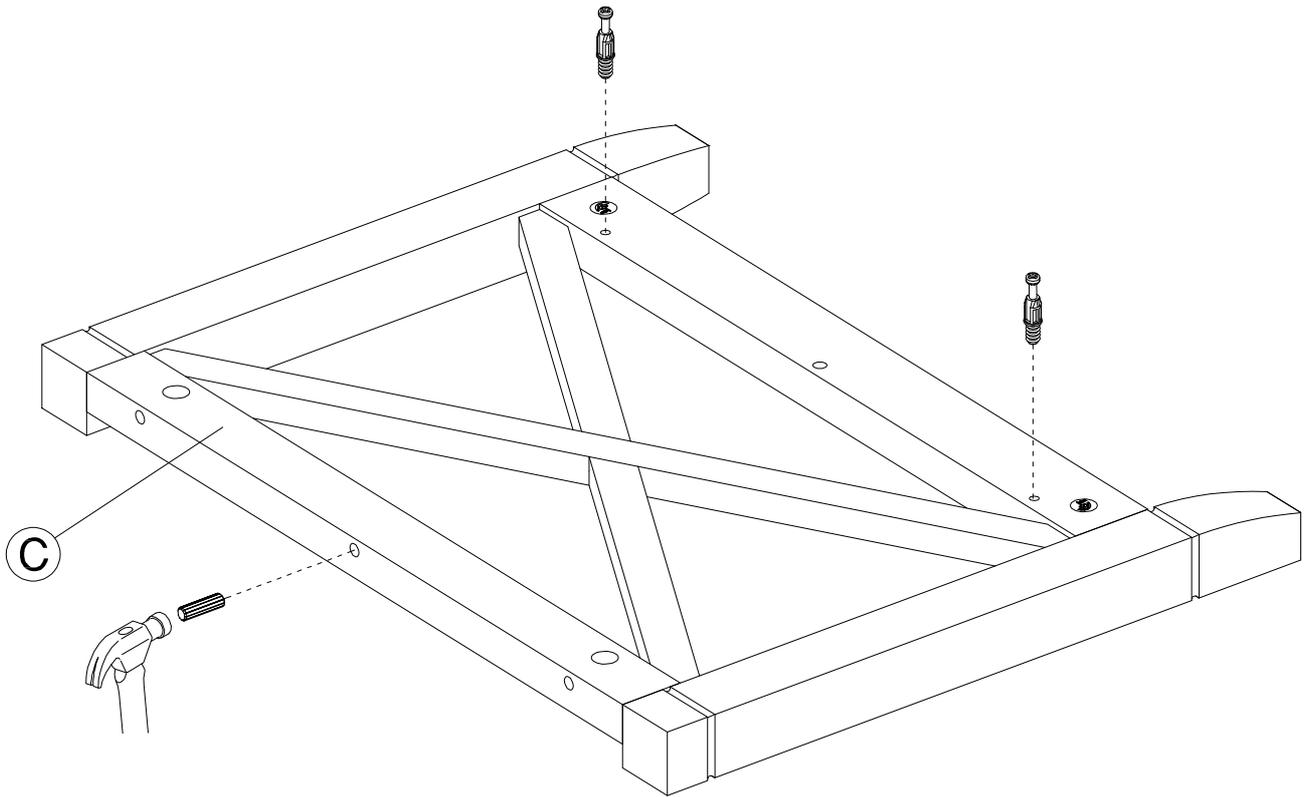

Safety glasses  
Gafas de seguridad  
Lunettes de protection

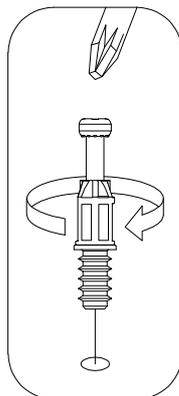


# 2 X

# STEP 17




# Assemble Panel

H181468

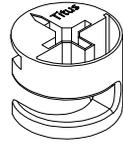

KD Cam

[ 2 ]

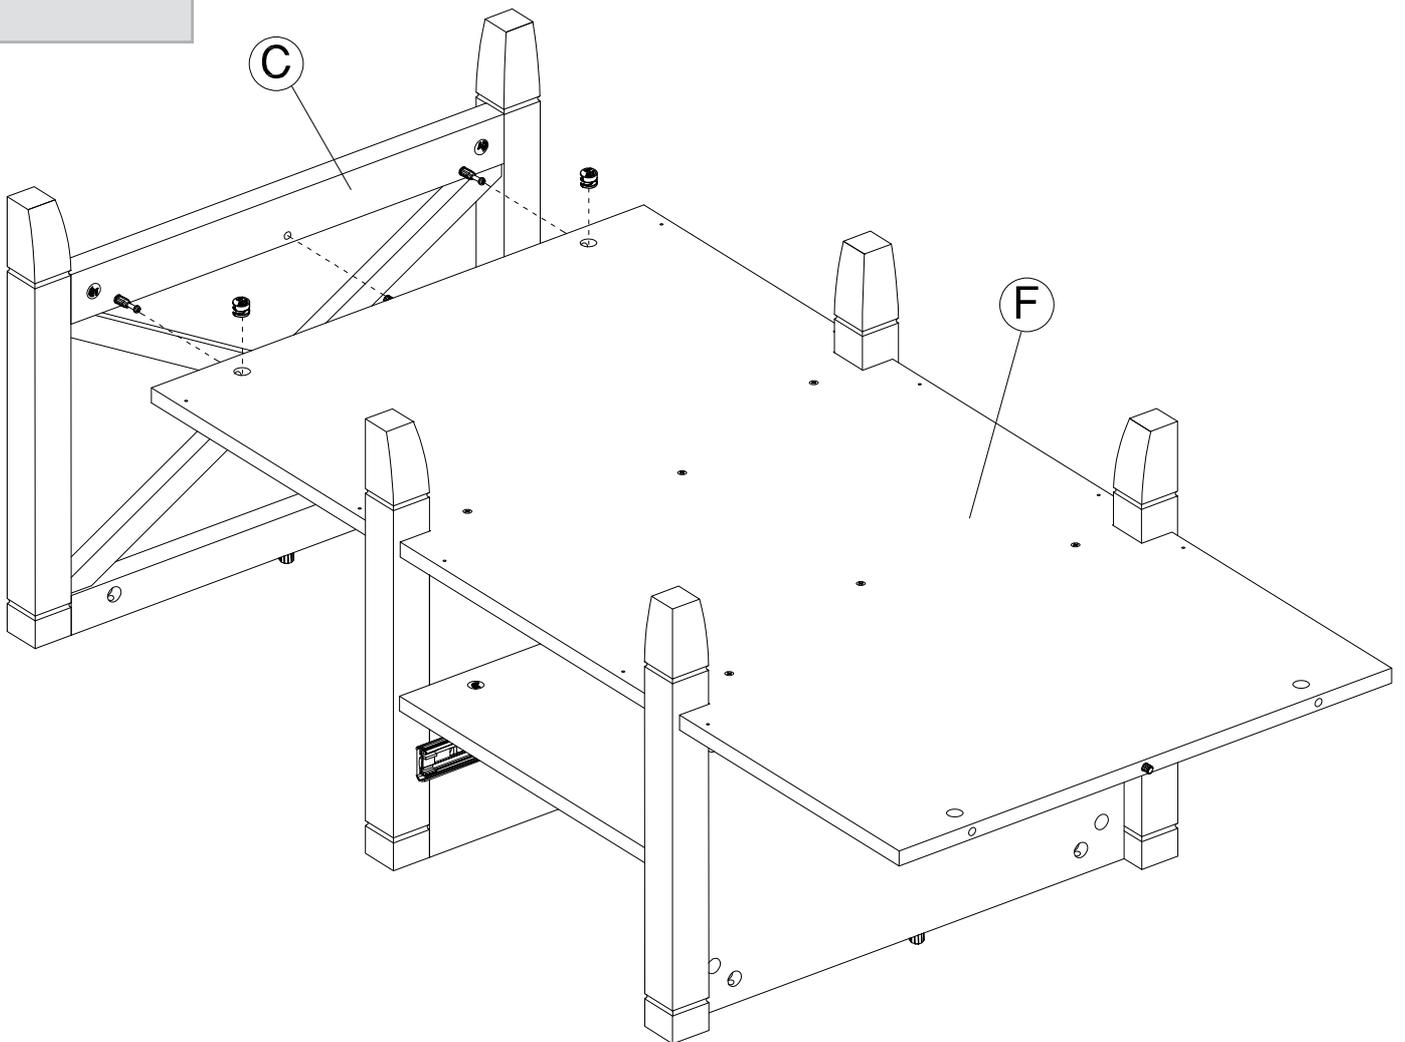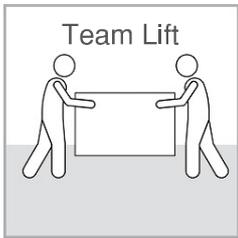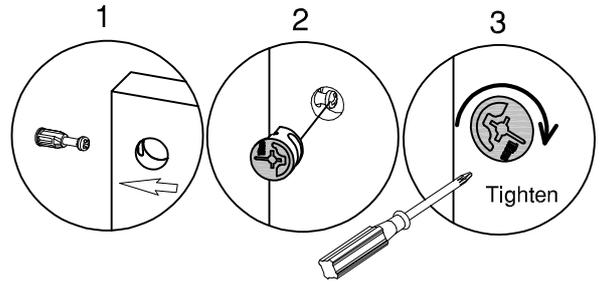




# STEP 18

# Assemble Panel

H181468




[ 2 ]

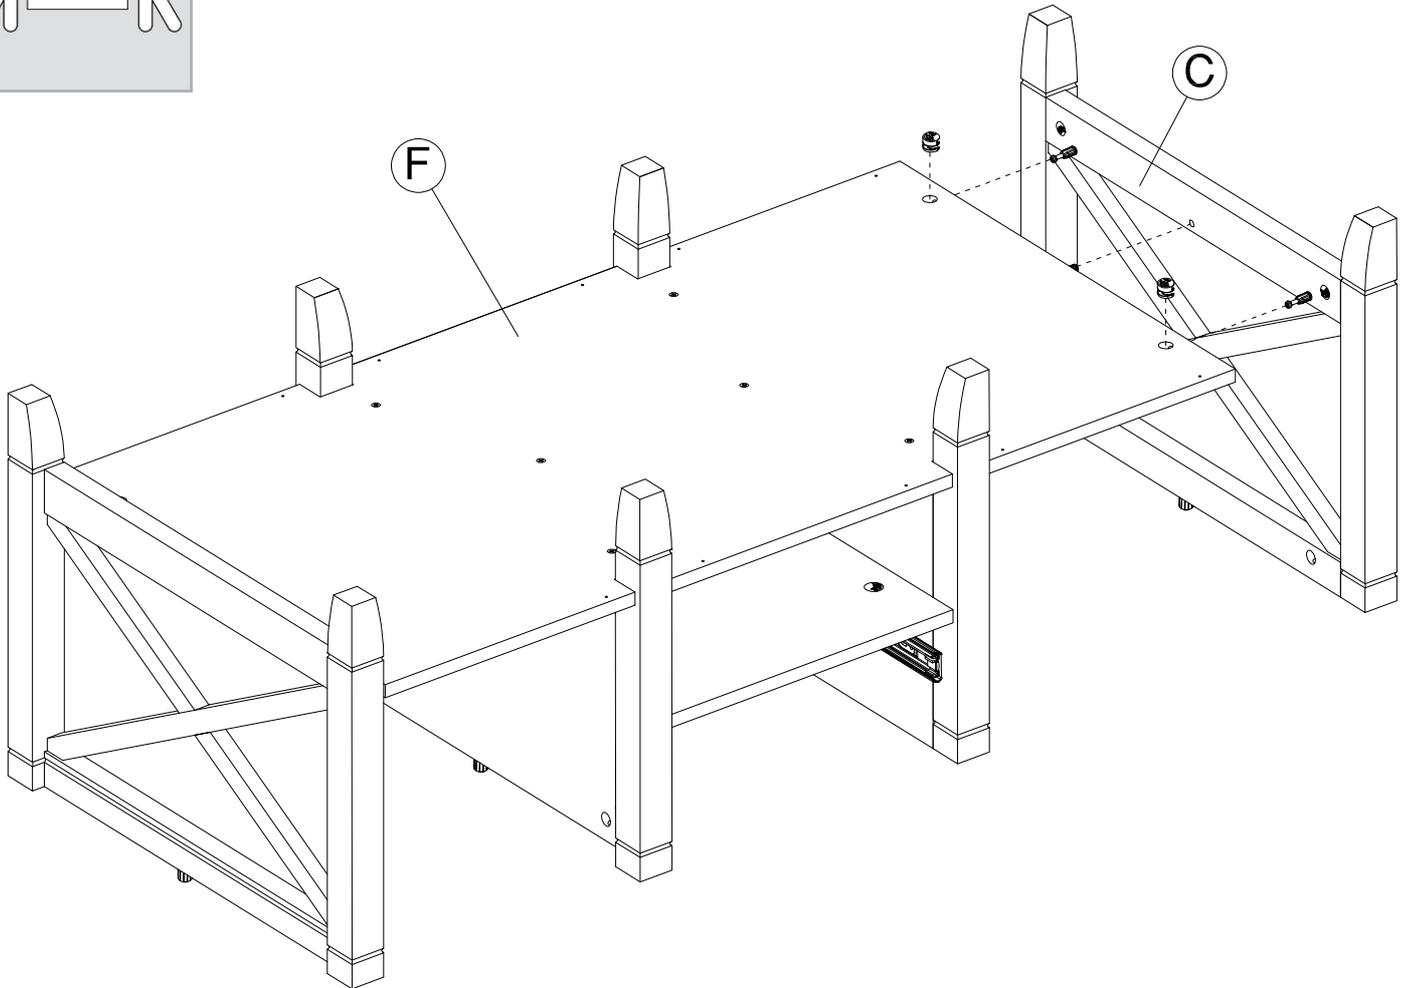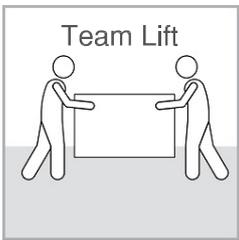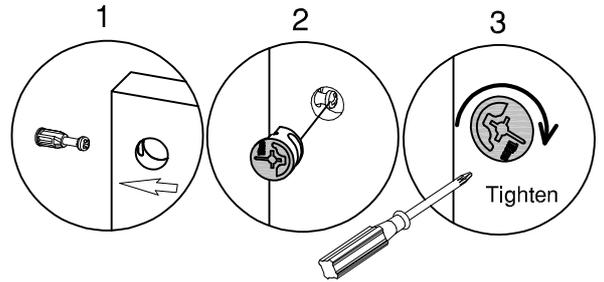

# STEP 19




# Assemble Rails

H23370




[ 12 ]

#10 x 1-1/4"

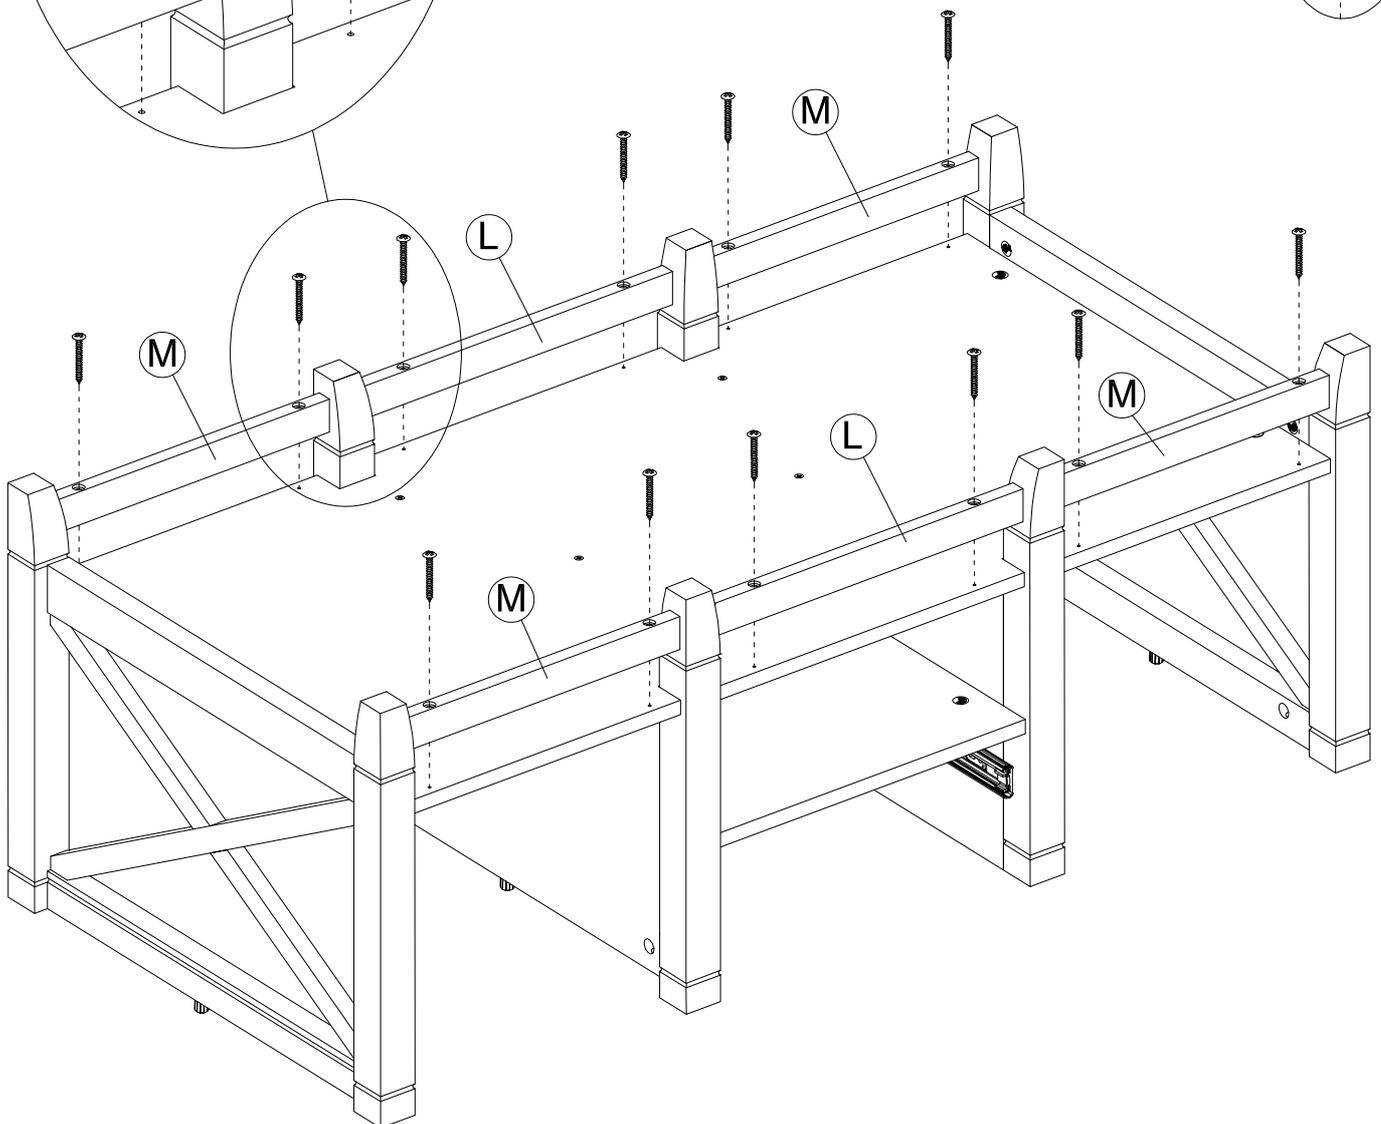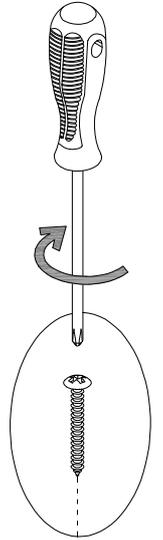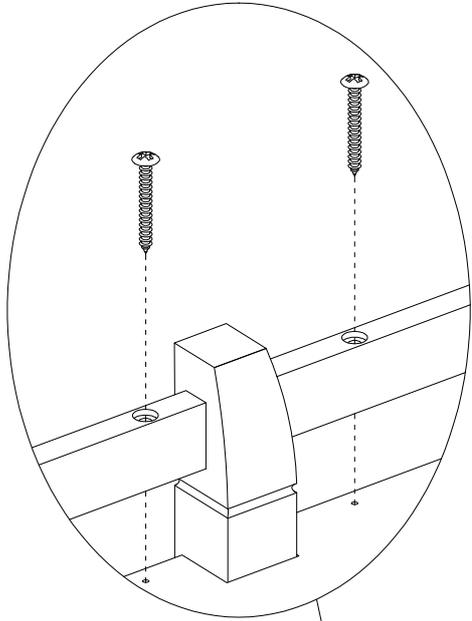


# STEP 20

# Assemble Panels

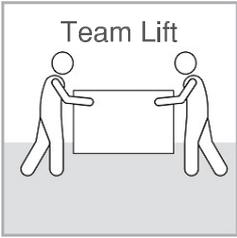


H39922

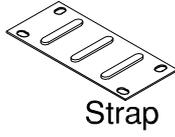





[ 4 ]

H35251



[ 16 ]


#10 x 1/2"

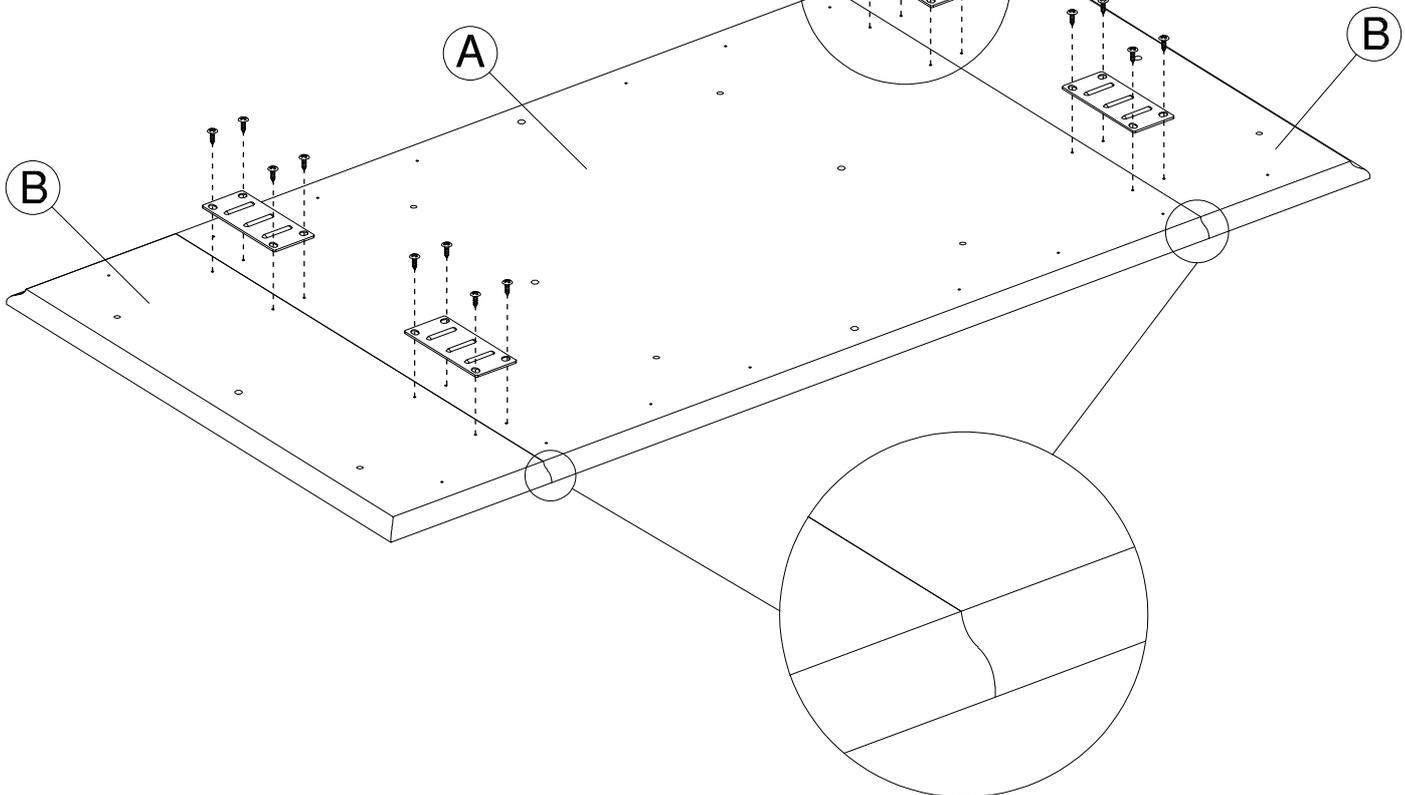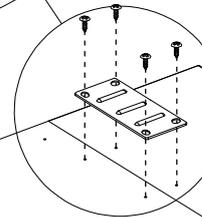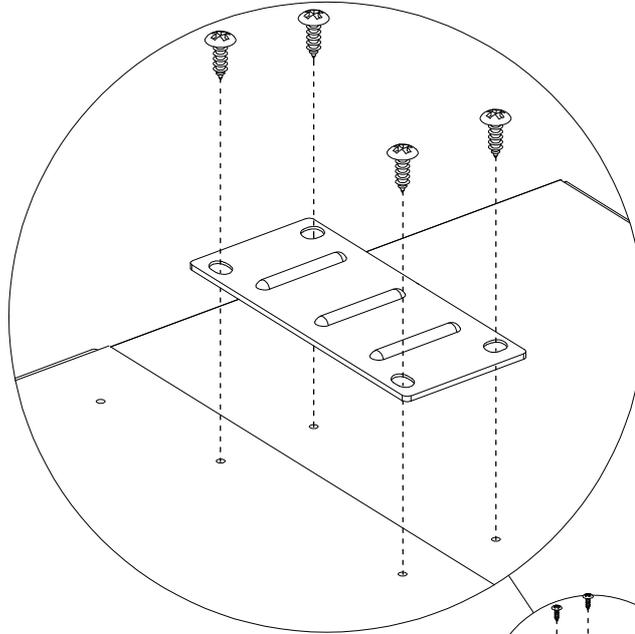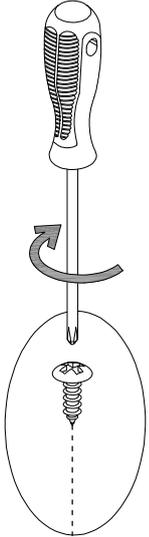

# STEP 21


# Prepare Rails

H38169





[ 2 ]

Wood Dowel  
8 x 30mm

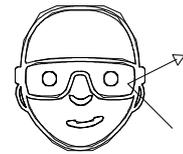

Safety glasses  
Gafas de seguridad  
Lunettes de protection


**2 X**

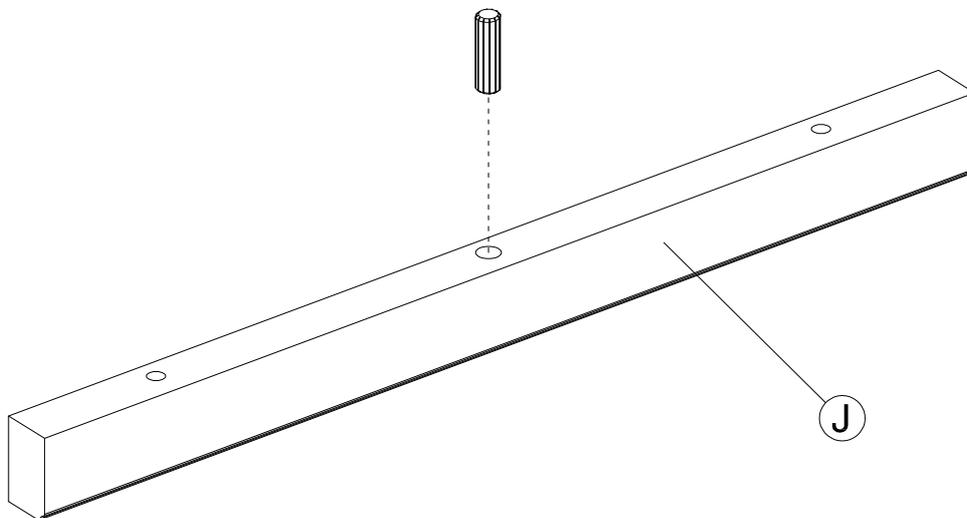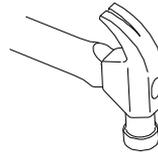

# STEP 22


# Assemble Rails

H23370



[ 4 ]


#10 x 1-1/4"

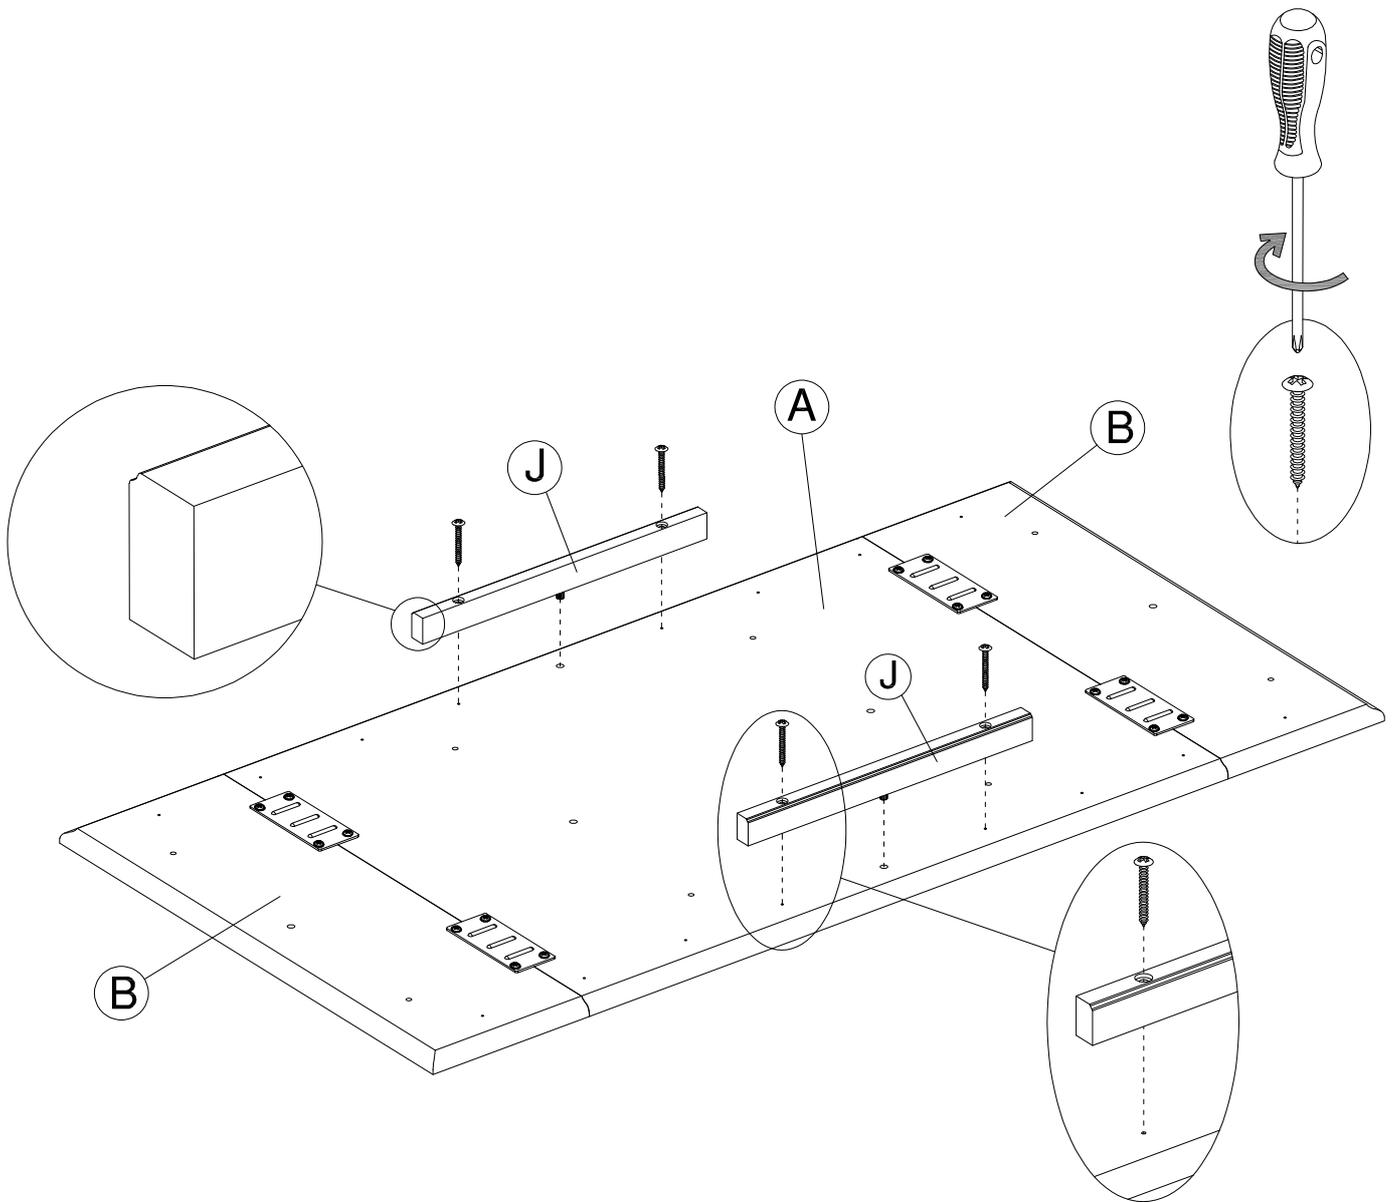

# STEP 23



# Insert Fasteners

H72988




[ 8 ]

KD Bolt

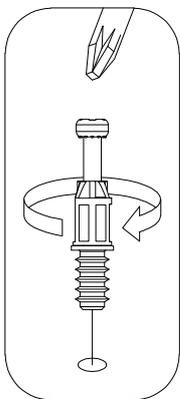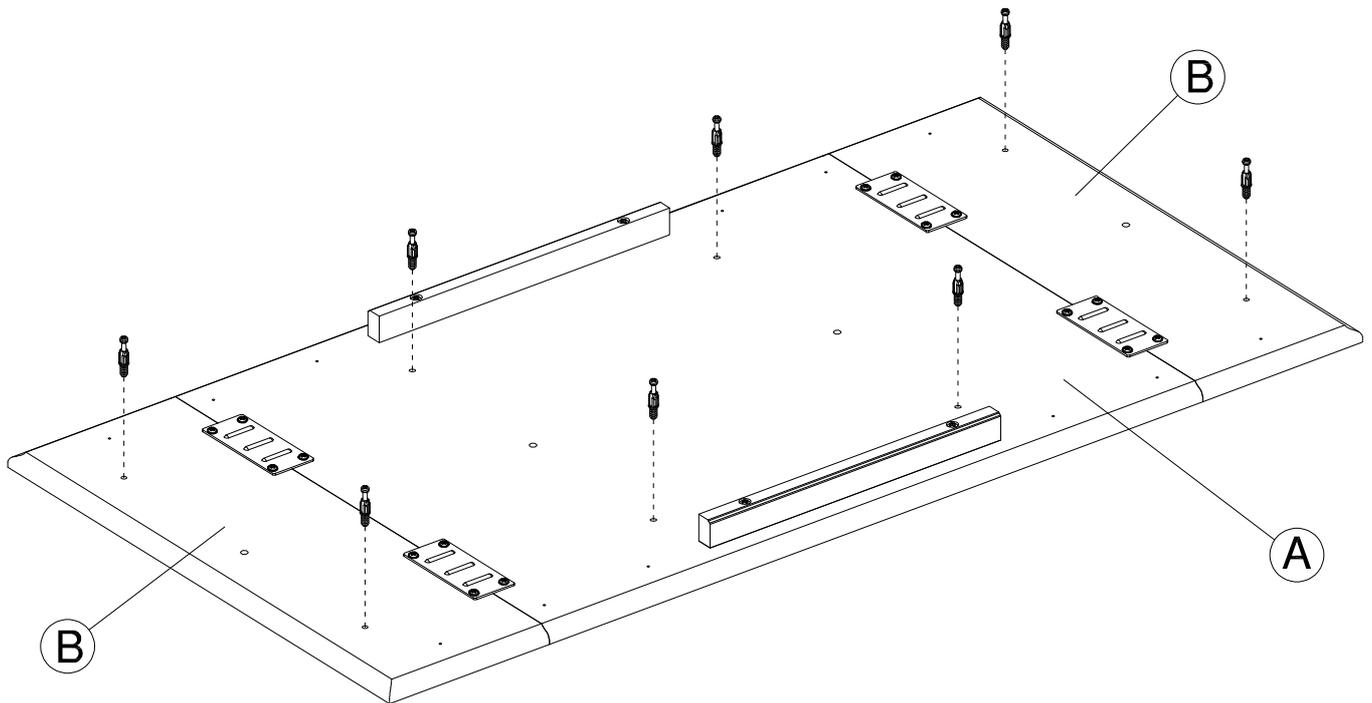


# STEP 24

# Assemble Panels




[ 4 ]

Cover Cap


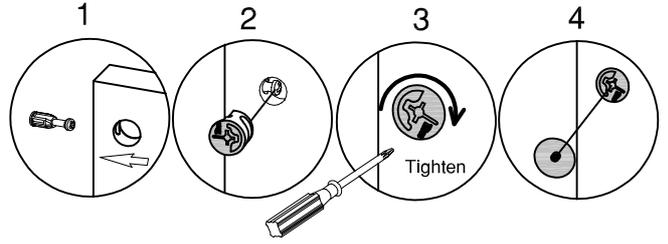


H181468

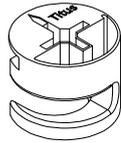


[ 8 ]

KD Cam

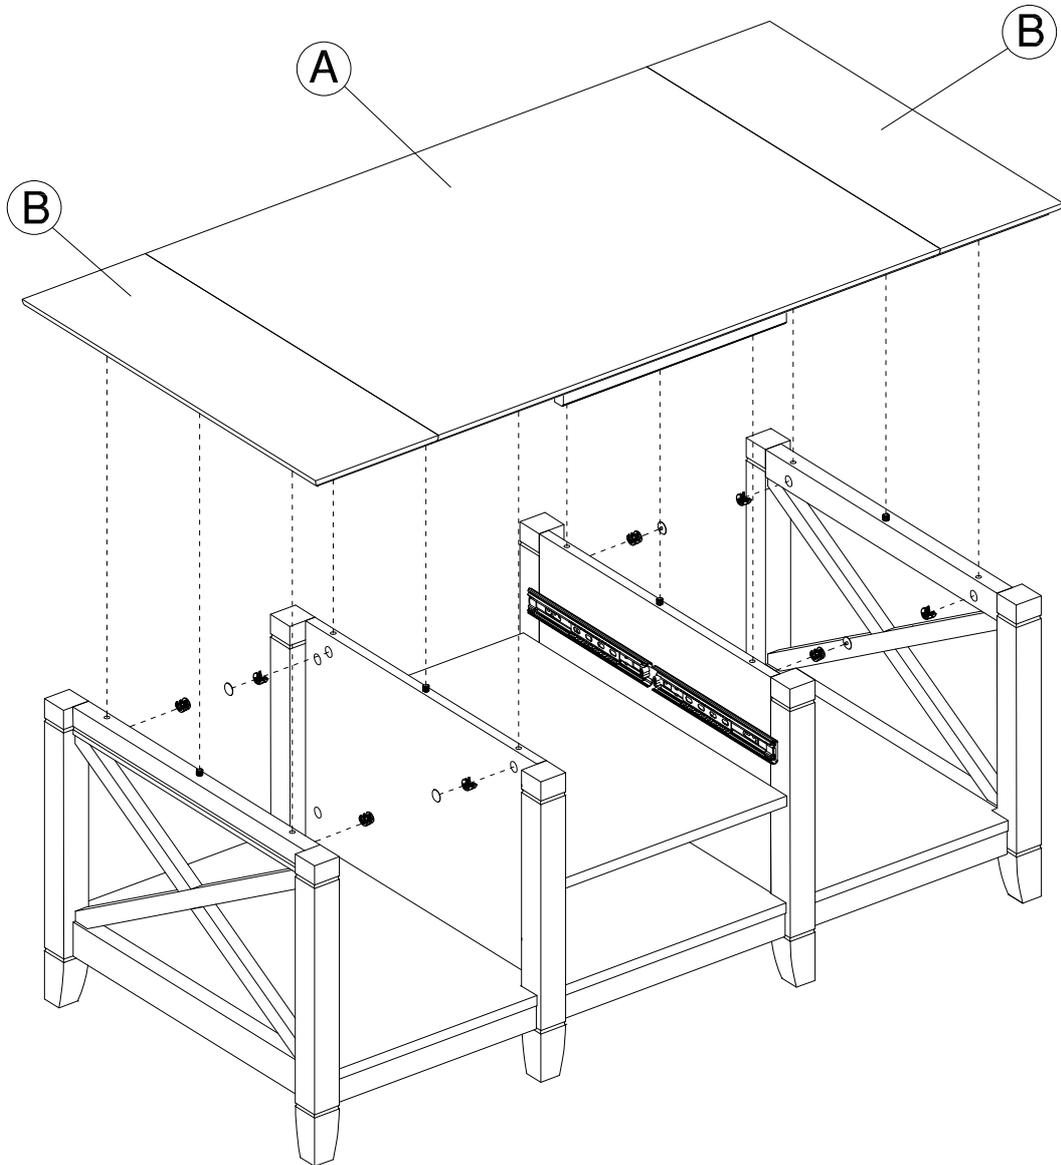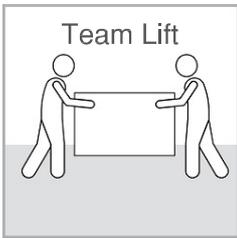


# STEP 25



# Assemble Panels

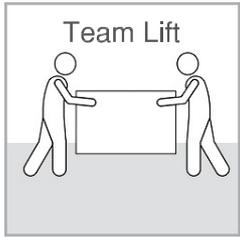

H23370

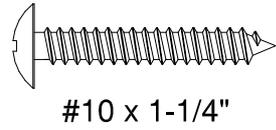

[ 12 ]


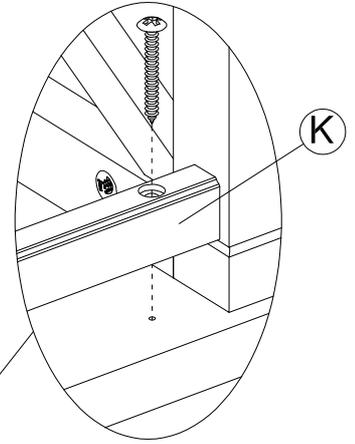
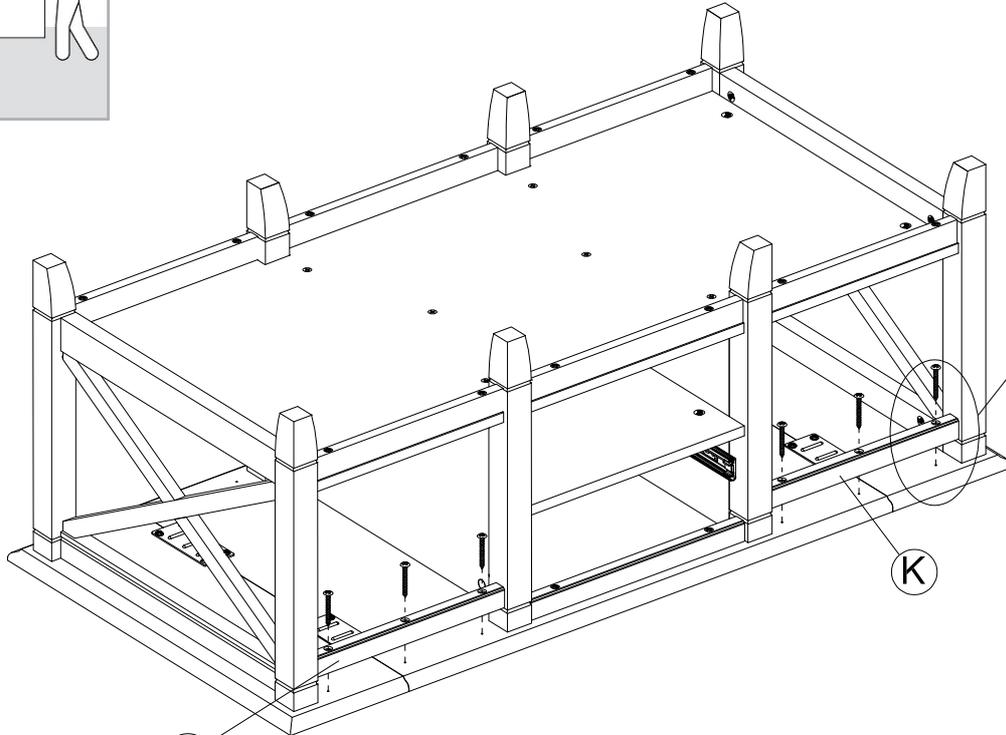


K

With assistant carefully turn unit around.

Con la ayuda de un asistente, gire con cuidado el dispositivo.

Avec l'aide de l'assistant, tournez prudemment le dispositif.

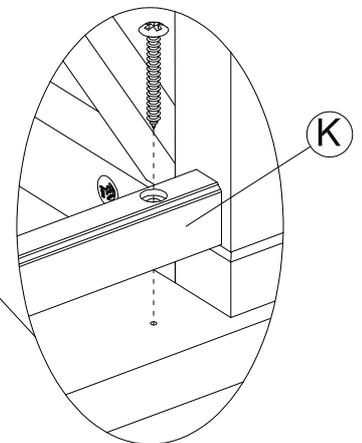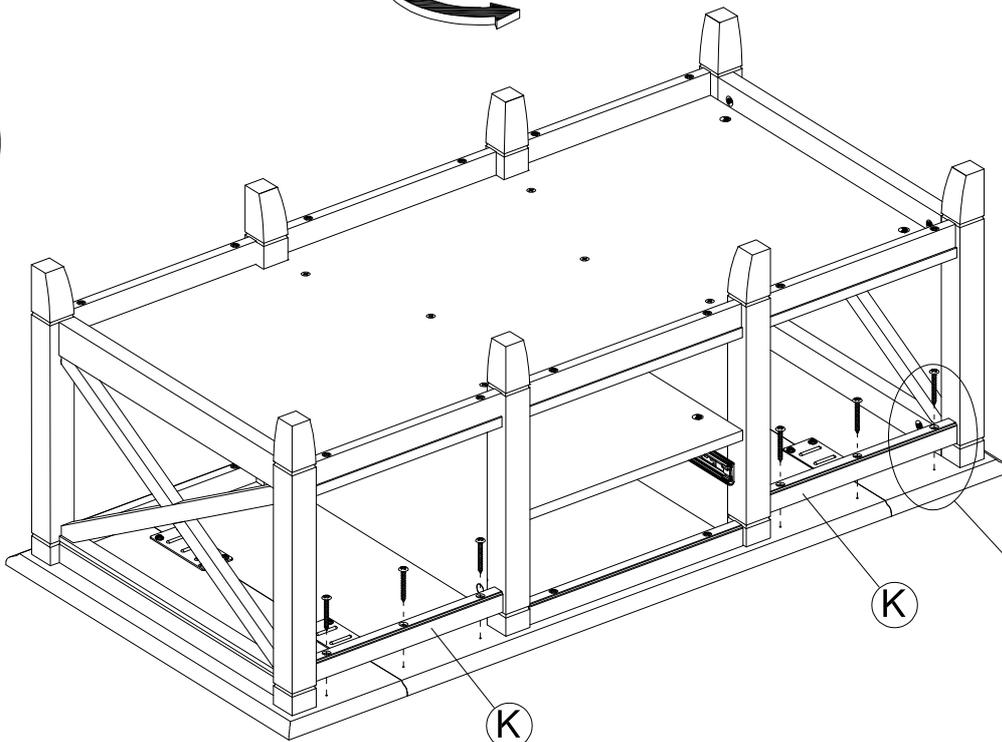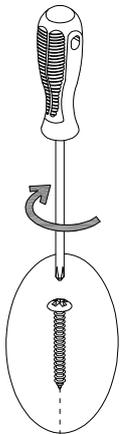



K

K

K

# STEP 26







# Insert Drawers

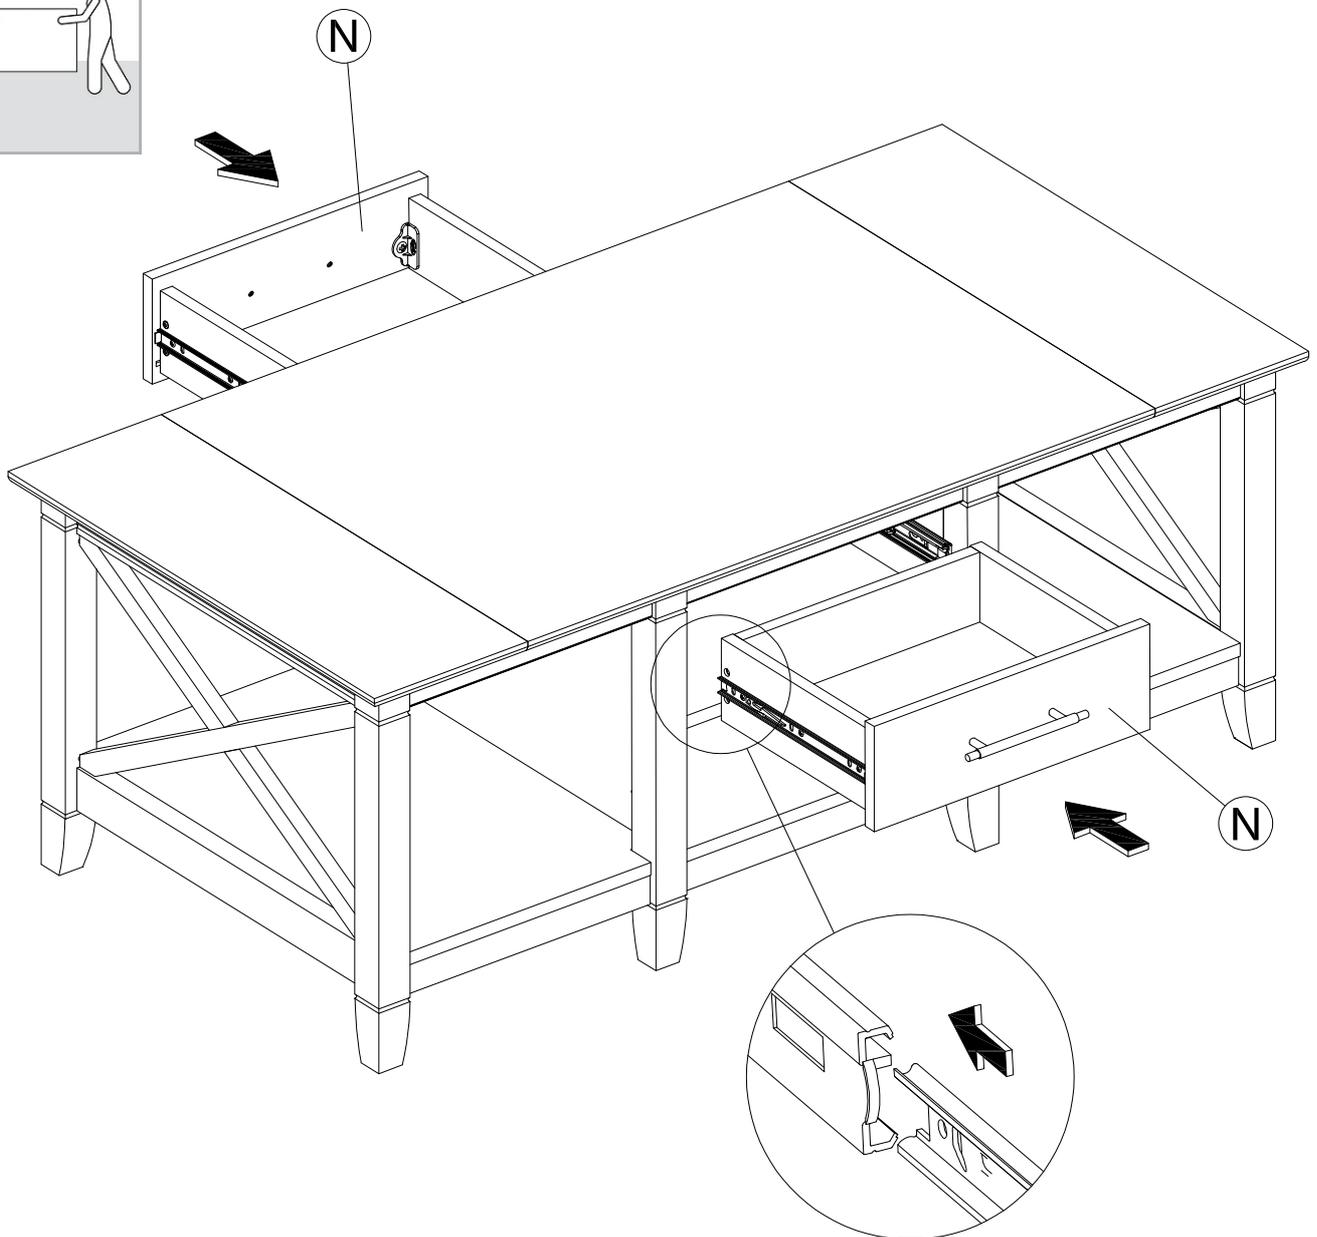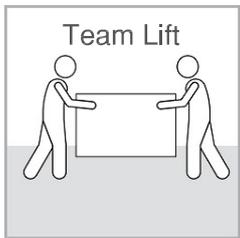

# STEP 27

# Drawer Adjustment

## DRAWER FRONT VIEW

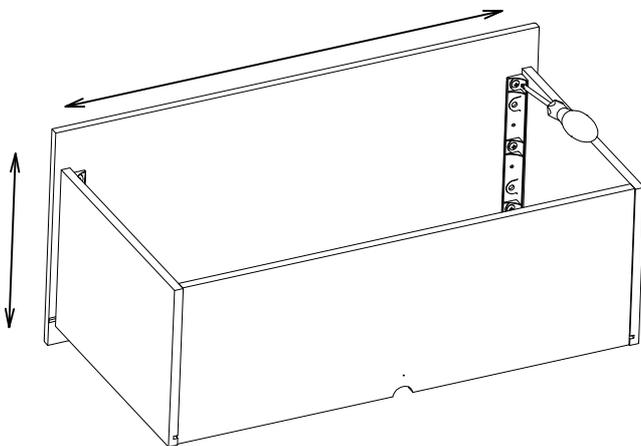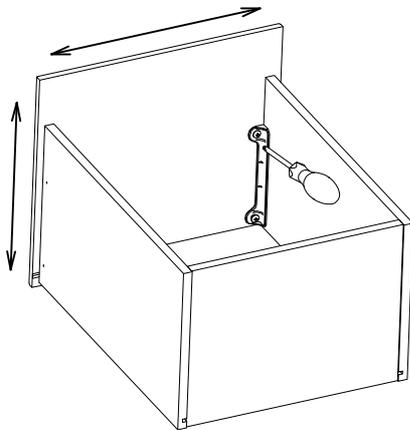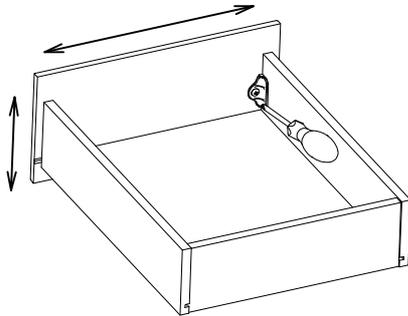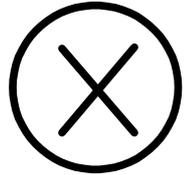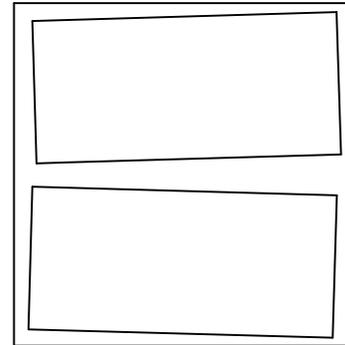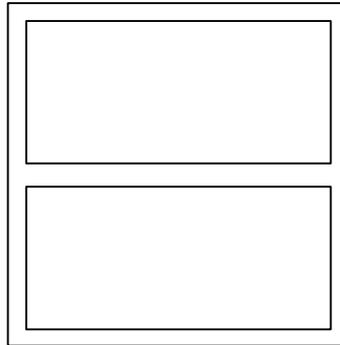

REQUIRED TOOL: PHILLIPS SCREWDRIVER

HERRAMIENTA REQUERIDA: DESTORNILLADOR PHILLIPS  
OUTIL REQUIS: TOURNEVIS CRUCIFORME



1. LOOSEN SCREWS.
2. ADJUST DRAWER FRONTS.
3. TIGHTEN SCREWS.

1. Afloje los tornillos
2. Ajustar frentes de cajón
3. Apriete los tornillos

1. Desserrer les vis
2. Ajuster les façades des tiroirs
3. Serrer les vis


## STEP 28

## Maximum Loading and Cleaning

Gently clean surfaces with a damp sponge eraser.

MAXIMUM WEIGHT: 50 LBS (22.68 KG)  
PESO MÁXIMO: 50 LIBRAS (22.68 KILOGRAMO)  
POIDS MAXIMUM: 50 LIVRES (22.68 KILOGRAMME)

MAXIMUM WEIGHT: 15 LBS (6.8KG)  
PESO MÁXIMO: 15 LIBRAS (6.8KILOGRAMO)  
POIDS MAXIMUM: 15LIVRES (6.8 KILOGRAMME)

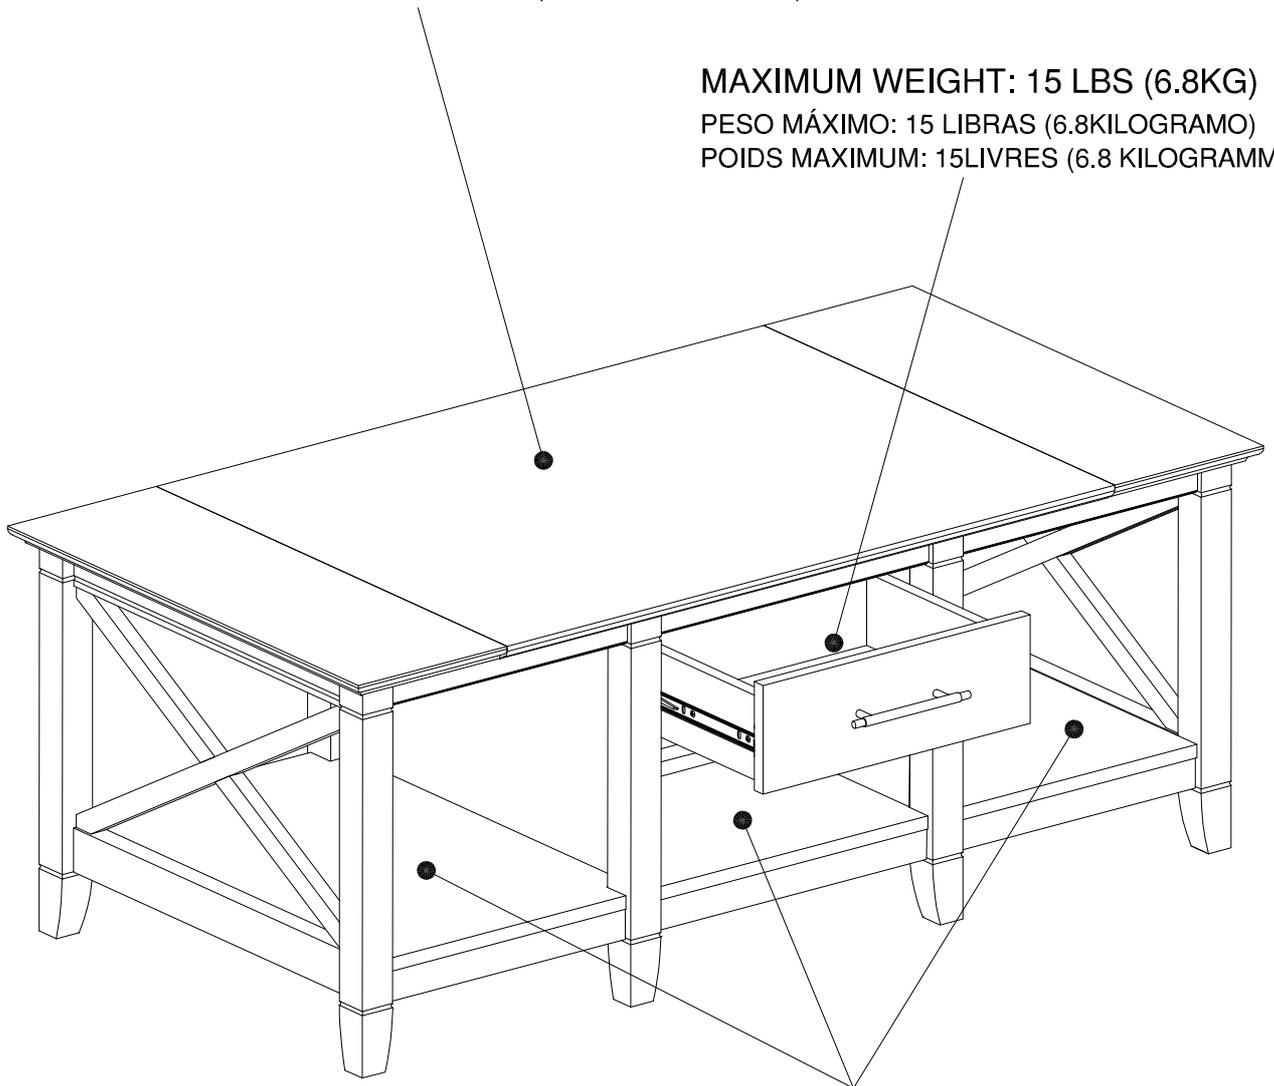

MAXIMUM WEIGHT: 25 LBS (11.34KG)  
PESO MÁXIMO: 25 LIBRAS (11.34KILOGRAMO)  
POIDS MAXIMUM: 25 LIVRES (11.34 KILOGRAMME)

**Congratulations! You are all done. If you have any questions or concerns, please call.**

# PARTS LIST

## KWT148GH

A [ 1 ] W208971  
B [ 2 ] W208972  
C [ 2 ] S208973  
D [ 2 ] W208995  
E [ 1 ] W197171  
F [ 1 ] W208996

G [ 1 ] W197173  
H [ 2 ] W197174  
I [ 2 ] W197175  
J [ 2 ] W197176  
K [ 4 ] W197177  
L [ 2 ] W197178


M [ 4 ] W197179  
N [ 2 ] W208546  
O [ 2 ] W197181  
P [ 2 ] W197182  
Q [ 2 ] W197183  
R [ 2 ] W197184

H200205



[ 14 ]

H200219

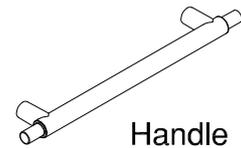

[ 2 ]

Cover Cap

Handle

## KWT148RCP

A [ 1 ] W208974  
B [ 2 ] W208975  
C [ 2 ] S208976  
D [ 2 ] W208997  
E [ 1 ] W197189  
F [ 1 ] W208998

G [ 1 ] W197191  
H [ 2 ] W197192  
I [ 2 ] W197193  
J [ 2 ] W197194  
K [ 4 ] W197195  
L [ 2 ] W197196


M [ 4 ] W197197  
N [ 2 ] W208547  
O [ 2 ] W197199  
P [ 2 ] W197200  
Q [ 2 ] W197201  
R [ 2 ] W197202

H200199



[ 14 ]

H180971

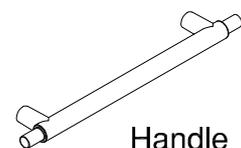

[ 2 ]

Cover Cap

Handle

# PARTS LIST

## KWT148LW


A [ 1 ] W208977	G [ 1 ] W197209	M [ 4 ] W197215
B [ 2 ] W208978	H [ 2 ] W197210	N [ 2 ] W208548
C [ 2 ] S208979	I [ 2 ] W197211	O [ 2 ] W197217
D [ 2 ] W208999	J [ 2 ] W197212	P [ 2 ] W197218
E [ 1 ] W197207	K [ 4 ] W197213	Q [ 2 ] W197219
F [ 1 ] W209000	L [ 2 ] W197214	R [ 2 ] W197220

H200203



[ 14 ]

H180971

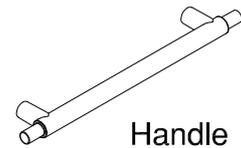

[ 2 ]

## KWT148CG


A [ 1 ] W208980	G [ 1 ] W197227	M [ 4 ] W197233
B [ 2 ] W208981	H [ 2 ] W197228	N [ 2 ] W208549
C [ 2 ] S208982	I [ 2 ] W197229	O [ 2 ] W197235
D [ 2 ] W209001	J [ 2 ] W197230	P [ 2 ] W197236
E [ 1 ] W197225	K [ 4 ] W197231	Q [ 2 ] W197237
F [ 1 ] W209002	L [ 2 ] W197232	R [ 2 ] W197238

H186180



[ 14 ]

H200219

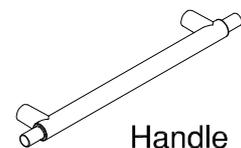

[ 2 ]

# PARTS LIST

## KWT148G2W


A [ 1 ] W208983	G [ 1 ] W197245	M [ 4 ] W197251
B [ 2 ] W208984	H [ 2 ] W197246	N [ 2 ] W208550
C [ 2 ] S208985	I [ 2 ] W197247	O [ 2 ] W197253
D [ 2 ] W209003	J [ 2 ] W197248	P [ 2 ] W197254
E [ 1 ] W197243	K [ 4 ] W197249	Q [ 2 ] W197255
F [ 1 ] W209004	L [ 2 ] W197250	R [ 2 ] W197256

H170595



[ 14 ]

H180971

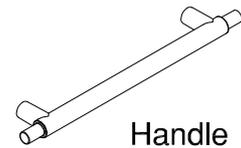

[ 2 ]

## KWT148WG


A [ 1 ] W208986	G [ 1 ] W190440	M [ 4 ] W190446
B [ 2 ] W208987	H [ 2 ] W190441	N [ 2 ] W208551
C [ 2 ] S208988	I [ 2 ] W190442	O [ 2 ] W190407
D [ 2 ] W209005	J [ 2 ] W190443	P [ 2 ] W190408
E [ 1 ] W190438	K [ 4 ] W190444	Q [ 2 ] W190448
F [ 1 ] W209006	L [ 2 ] W190445	R [ 2 ] W190449

H180730



[ 14 ]

H180971

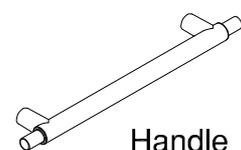

[ 2 ]

# PARTS LIST

## KWT148BC

A [ 1 ] W208989	G [ 1 ] W201995	M [ 4 ] W202001
B [ 2 ] W208990	H [ 2 ] W201996	N [ 2 ] W208552
C [ 2 ] S208991	I [ 2 ] W201997	O [ 2 ] W202003
D [ 2 ] W209007	J [ 2 ] W201998	P [ 2 ] W202004
E [ 1 ] W201993	K [ 4 ] W201999	Q [ 2 ] W202005
F [ 1 ] W209008	L [ 2 ] W202000	R [ 2 ] W202006


H159346



Cover Cap

[ 14 ]

H180971

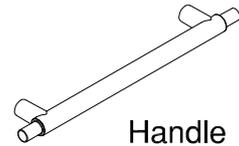

Handle

[ 2 ]

## KWT148WT

A [ 1 ] W208992	G [ 1 ] W202013	M [ 4 ] W202019
B [ 2 ] W208993	H [ 2 ] W202014	N [ 2 ] W208553
C [ 2 ] S208994	I [ 2 ] W202015	O [ 2 ] W202021
D [ 2 ] W209009	J [ 2 ] W202016	P [ 2 ] W202022
E [ 1 ] W202011	K [ 4 ] W202017	Q [ 2 ] W202023
F [ 1 ] W209010	L [ 2 ] W202018	R [ 2 ] W202024


H192368



Cover Cap

[ 14 ]

H180971

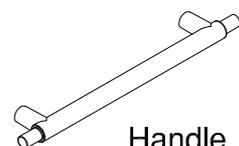

Handle

[ 2 ]