


72W L Desk

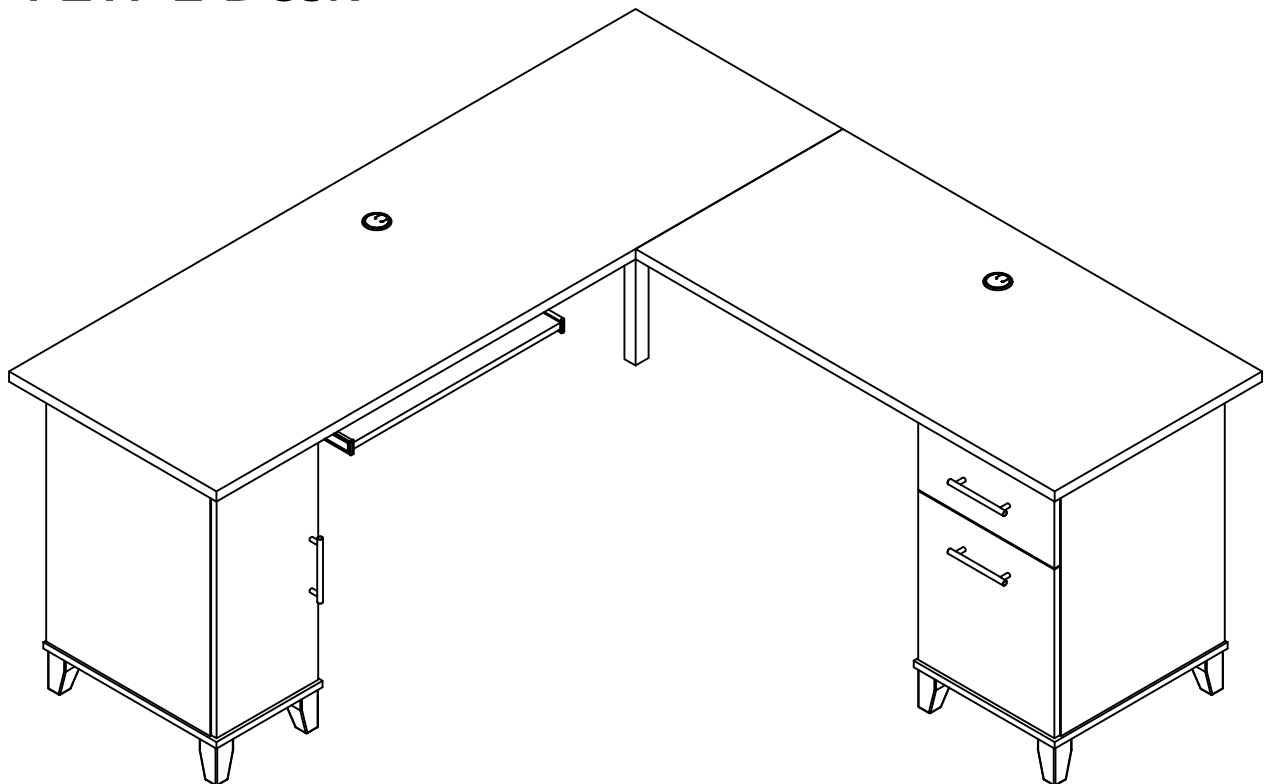

Get Ready to Assemble

For best results, keep these tips in mind:

- ① We know you want to finish this assembly as quickly as possible, but trust us: you'll have a better experience if you take it one step at a time.
- ② Give yourself some room to work near where you want the fully assembled product.
- ③ If your floor isn't carpeted, assemble this product on the empty carton to avoid scratching.
- ④ Do you have a friend who owes you a favor? Some steps may go a little easier with a second set of hands.

DOs

- ✓ Use a #2 Phillips head screwdriver (or other handheld tools as indicated)
- ✓ Wear safety glasses at all times during assembly
- ✓ Carefully follow the instructions in this guide and complete all steps in order
- ✓ Give us a call if you're having trouble with a particularly tricky step

DON'Ts

- ✗ We know power tools are quick and easy, but you shouldn't use them when assembling this product (unless otherwise specified)
- ✗ Never move your furniture with items inside or resting on the surface
- ✗ Do not attempt to use this product before all steps have been completed

IMPORTANT SAFETY INFORMATION



PLEASE READ WARNINGS



Improper use can cause safety hazards, or damage to your furniture and household items.

Warning	Do	Don't	Why it's important
Serious injury may occur.	Assemble following all instructions using all indicated parts and hardware provided.	- Do not move unit when loaded. - Do not load with a television or other heavy equipment. - Do not exceed the maximum load limits stated in the instructions.	Improper assembly, use or loading can lead to product instability, tipover, or collapse.



Advertencia	Hacer	No	Por qué es importante
Pueden producirse lesiones graves.	Realice el montaje siguiendo todas las instrucciones y utilizando todas las piezas indicadas y los herrajes suministrados.	- No mueva la unidad cuando esté cargada. - No cargue el mueble con un televisor u otro equipo pesado. - No supere los límites máximos de carga indicados en las instrucciones.	El montaje, uso o carga inadecuados pueden provocar inestabilidad, vuelco o colapso del producto.

Avertissement	À faire	À ne pas faire	Pourquoi c'est important
Peut entraîner des blessures graves.	Assembler en suivant toutes les instructions et en utilisant toutes les pièces et la quincaillerie incluses.	- Ne pas déplacer le meuble lorsqu'il est chargé. - Ne pas charger le meuble avec un téléviseur ou tout autre équipement lourd. - Ne pas dépasser les limites de poids maximales indiquées dans les instructions.	Un assemblage, une utilisation ou un chargement incorrects peuvent entraîner l'instabilité, le basculement ou l'effondrement du produit.

Assembly Option 1










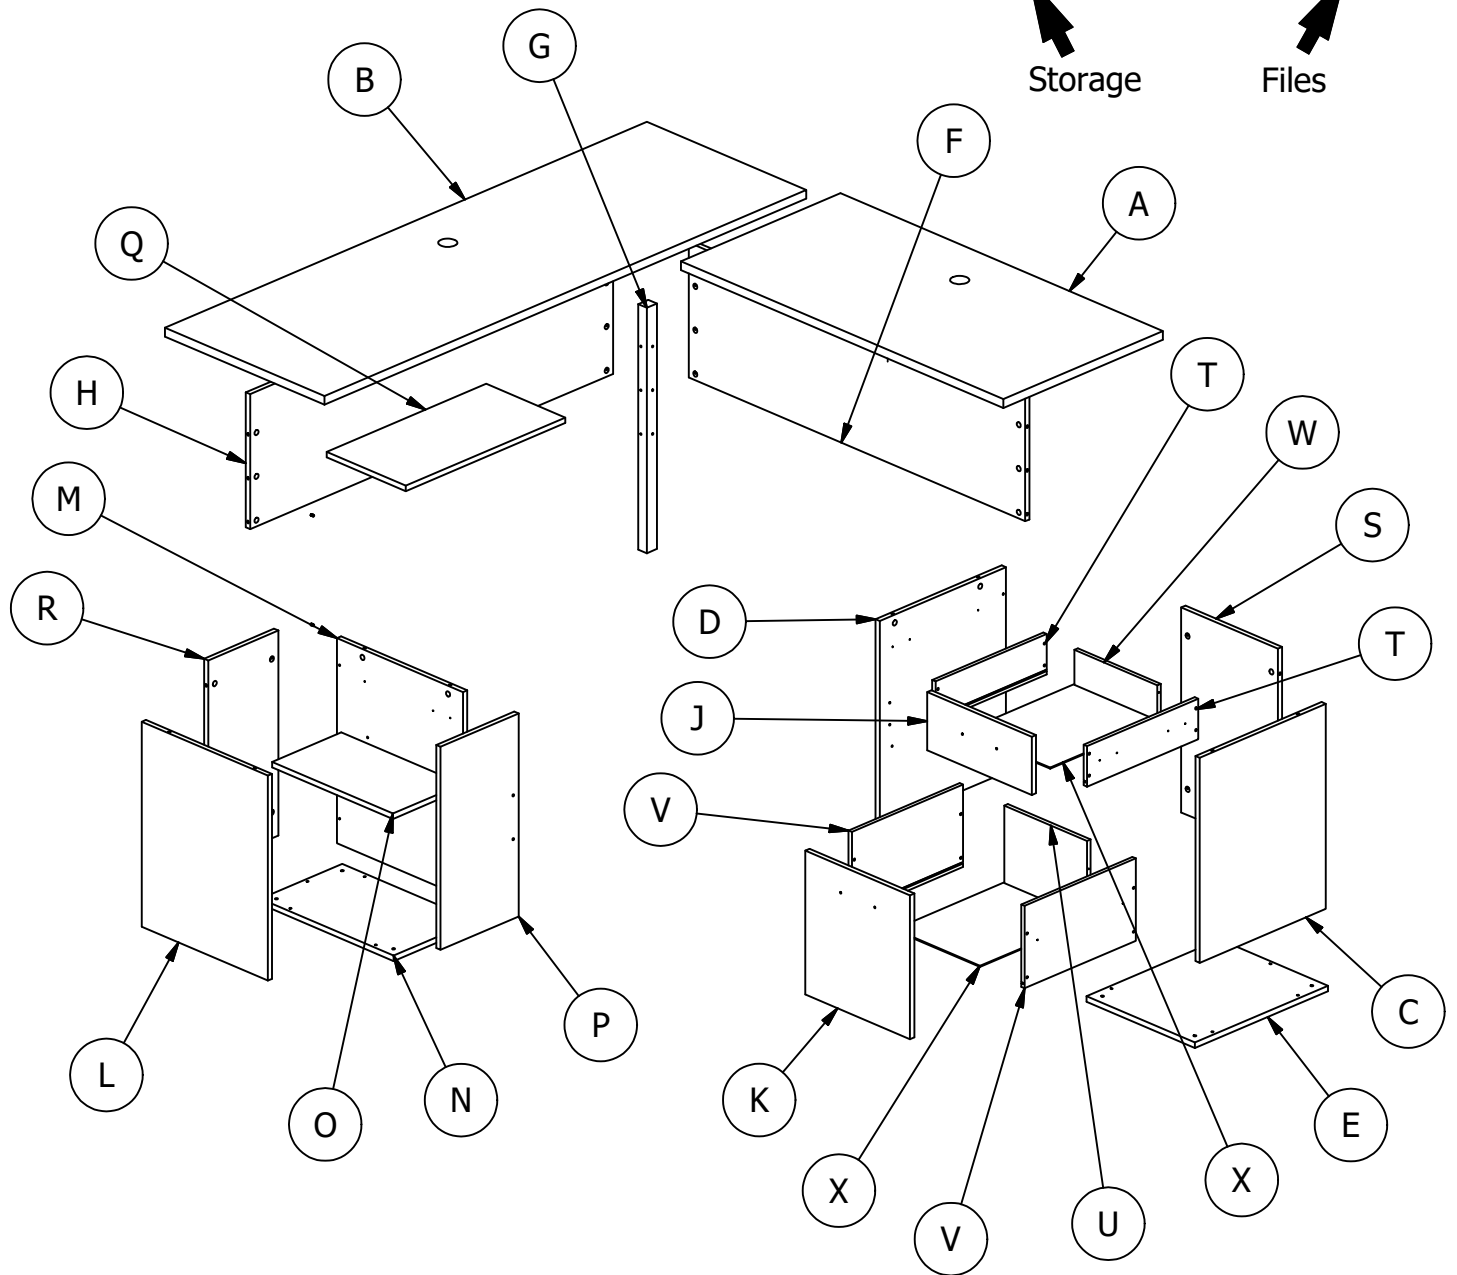
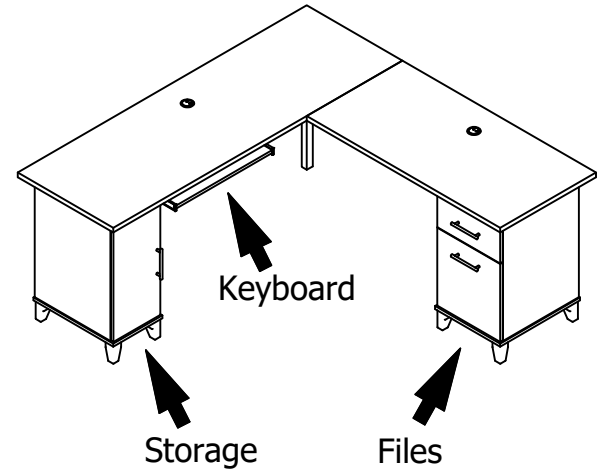


Assembly Option 2

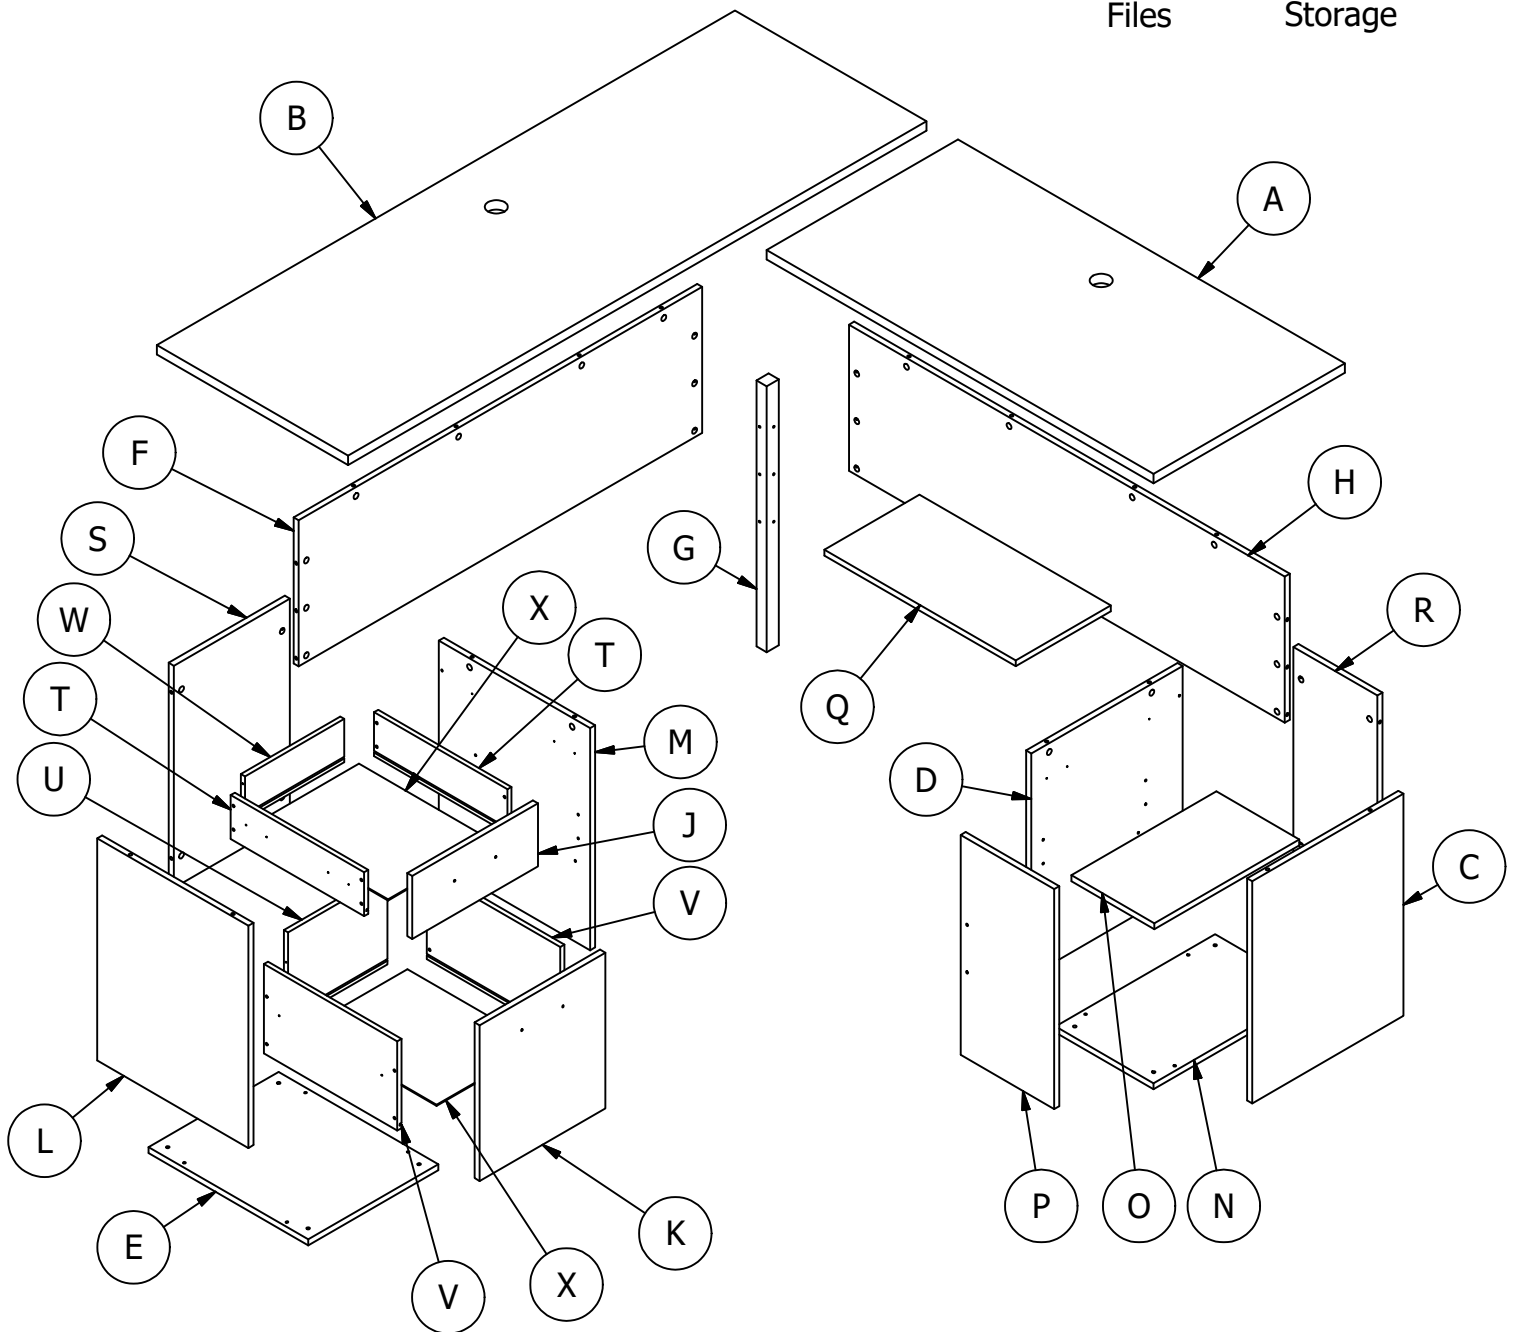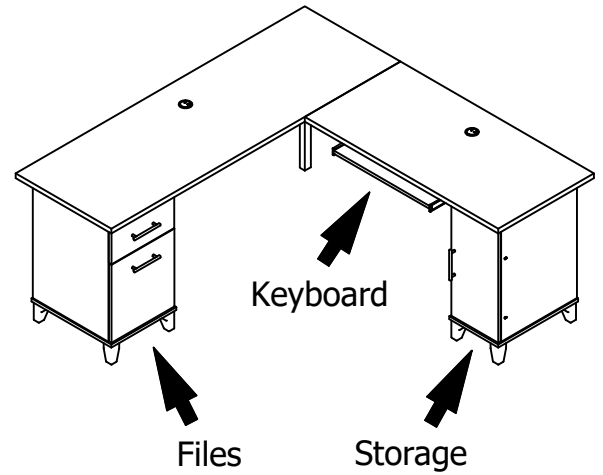










Get to know your Fasteners

Fasteners are shown actual size.

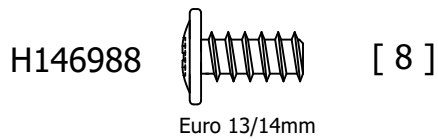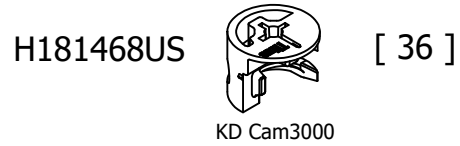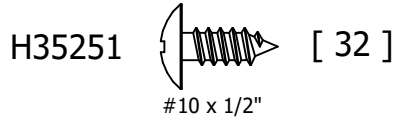






Get to know your Hardware

Hardware not to scale.

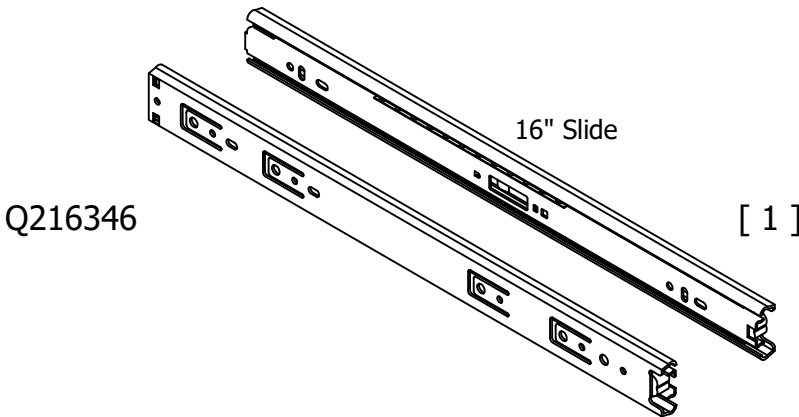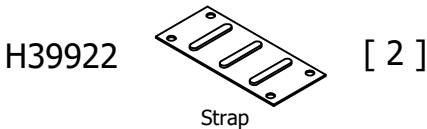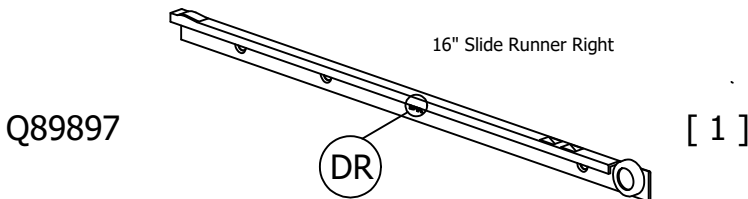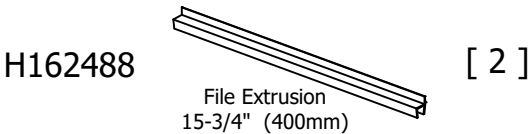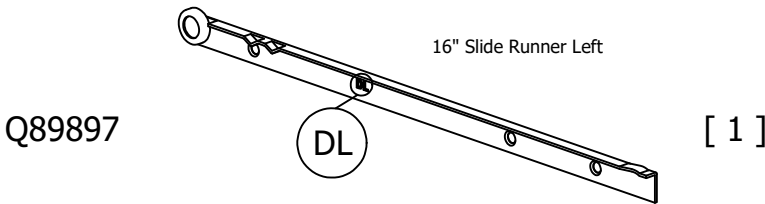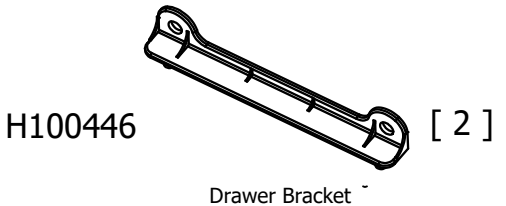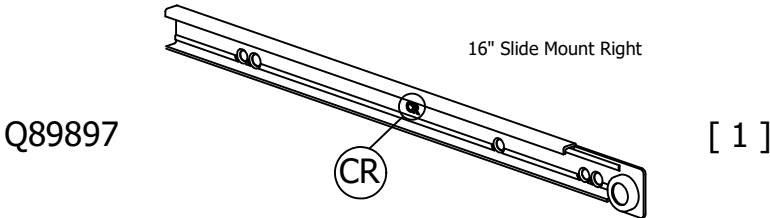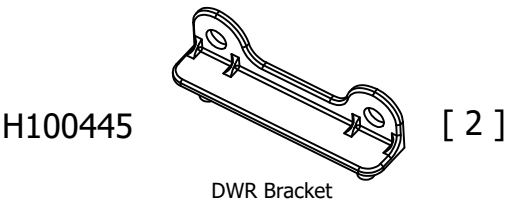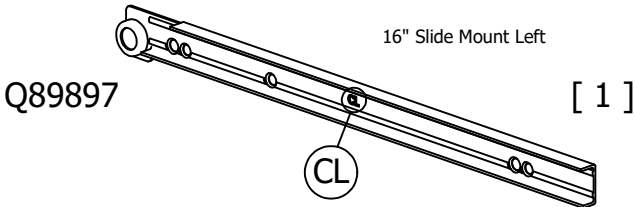





Get to know your Hardware

Hardware not to scale.

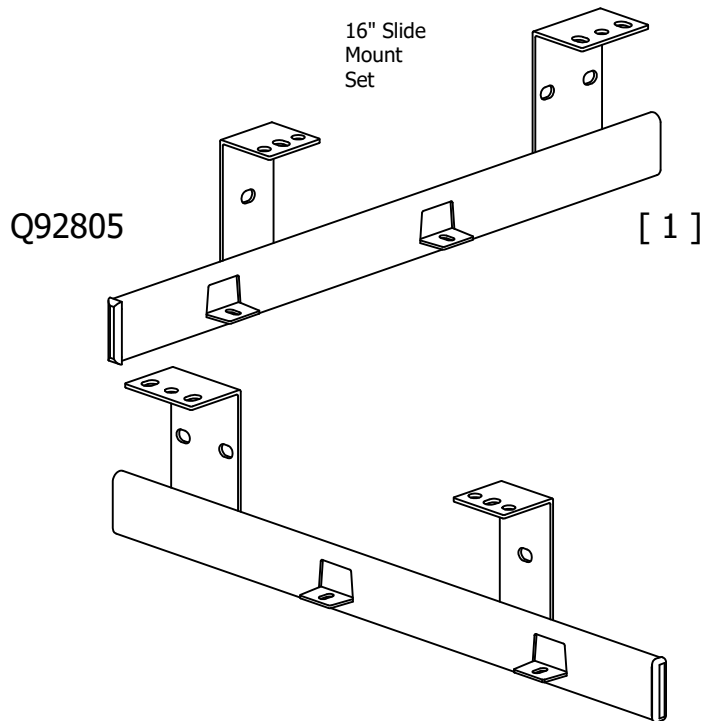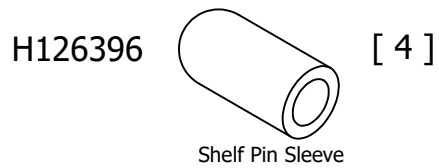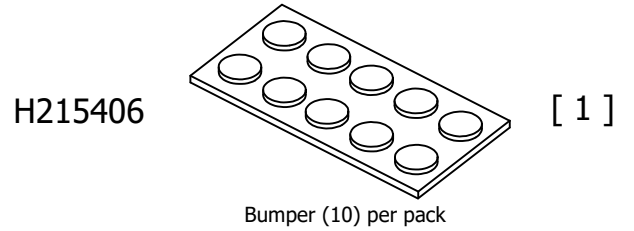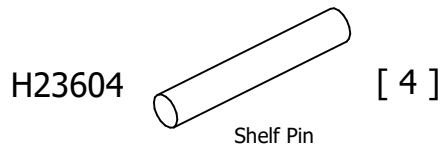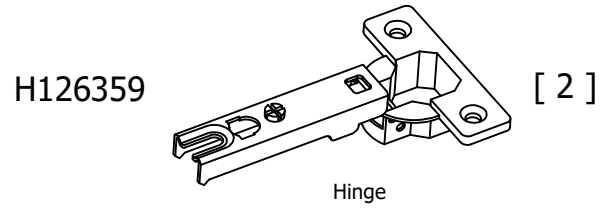

Get to know your Hardware


Hardware not to scale.

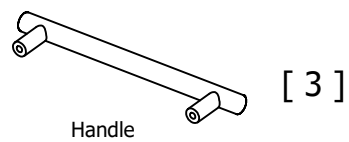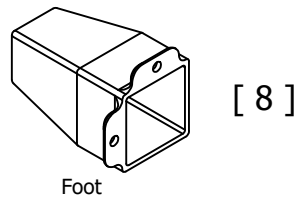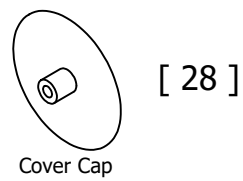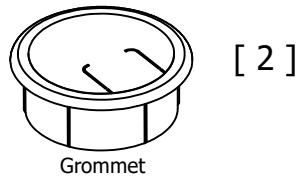

STEP 1

Prepare Panels


H100446

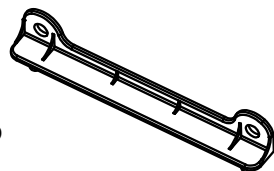

Drawer Bracket

[2]


H100445

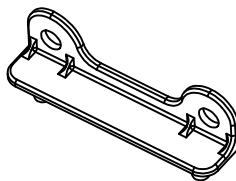

DWR Bracket


[2]

H146988



Euro 13/14mm

[8]

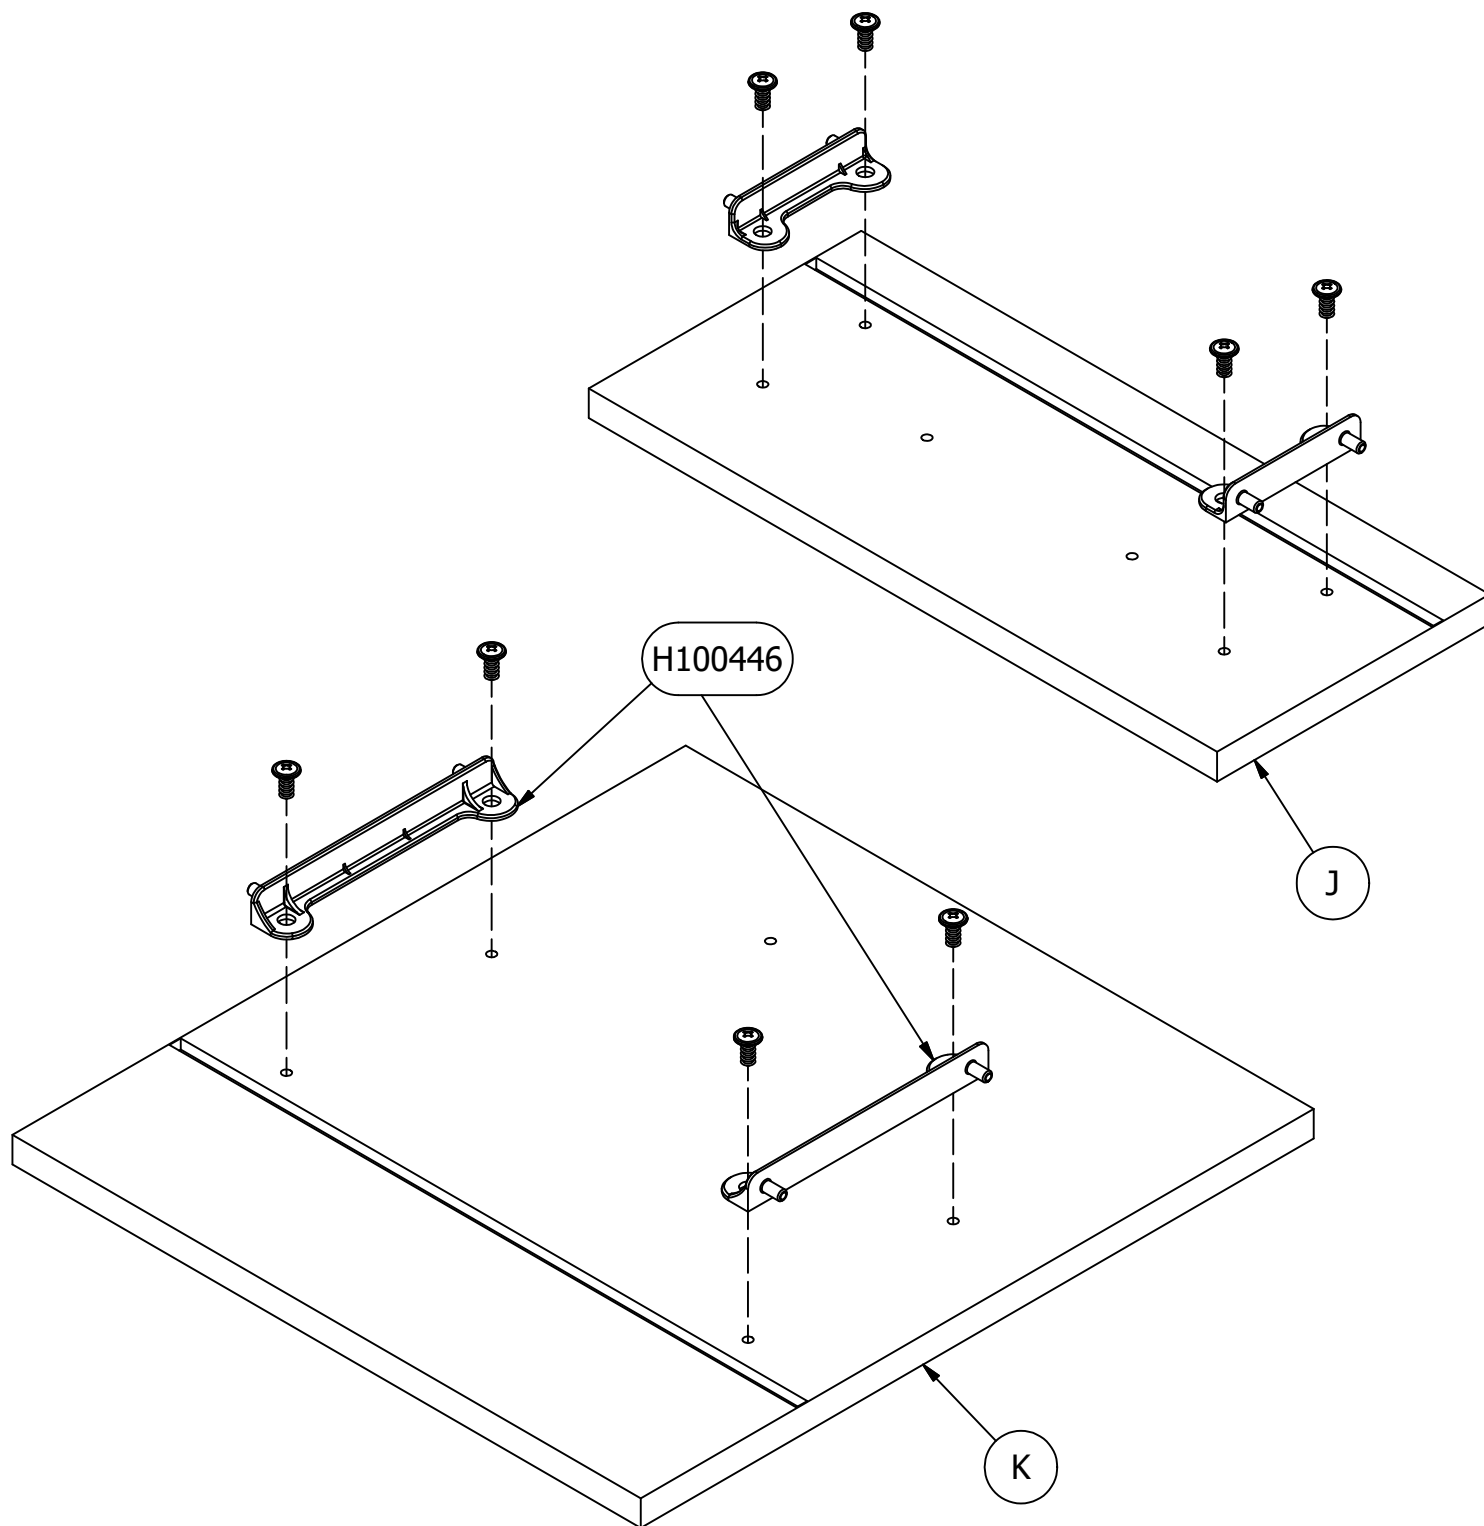


STEP 2

Assemble Panels


H128624

(Black)



#8 x .5"


[4]

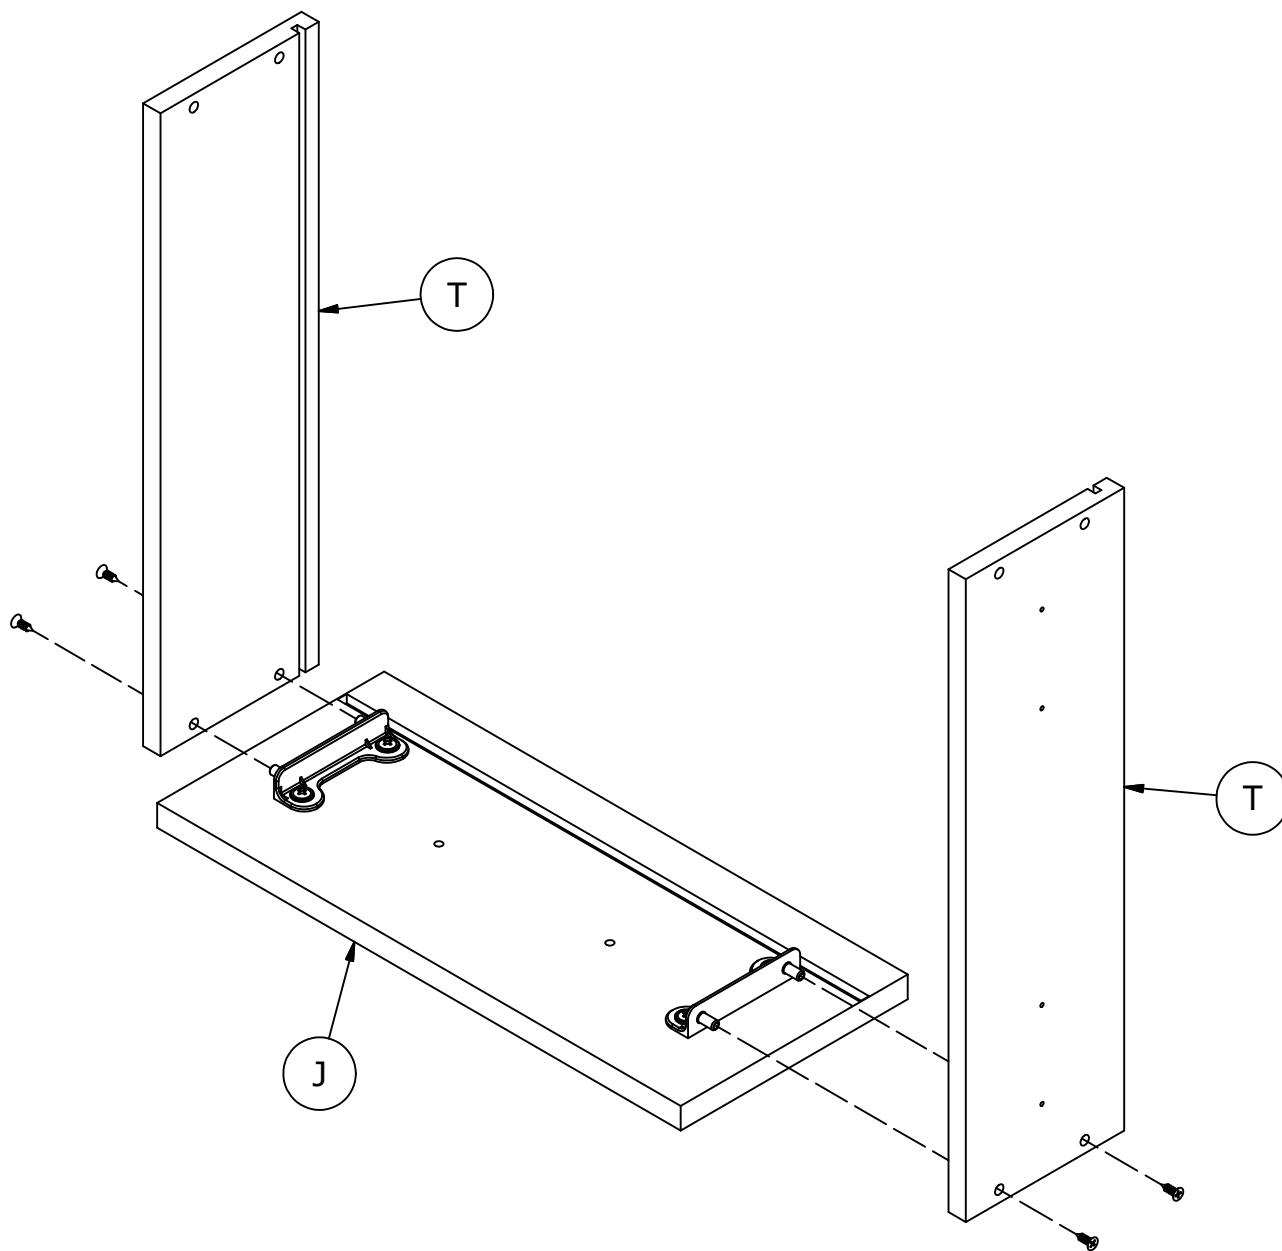

STEP 3


Assemble Panels

H150333



#8 x 1-1/2"


[4]

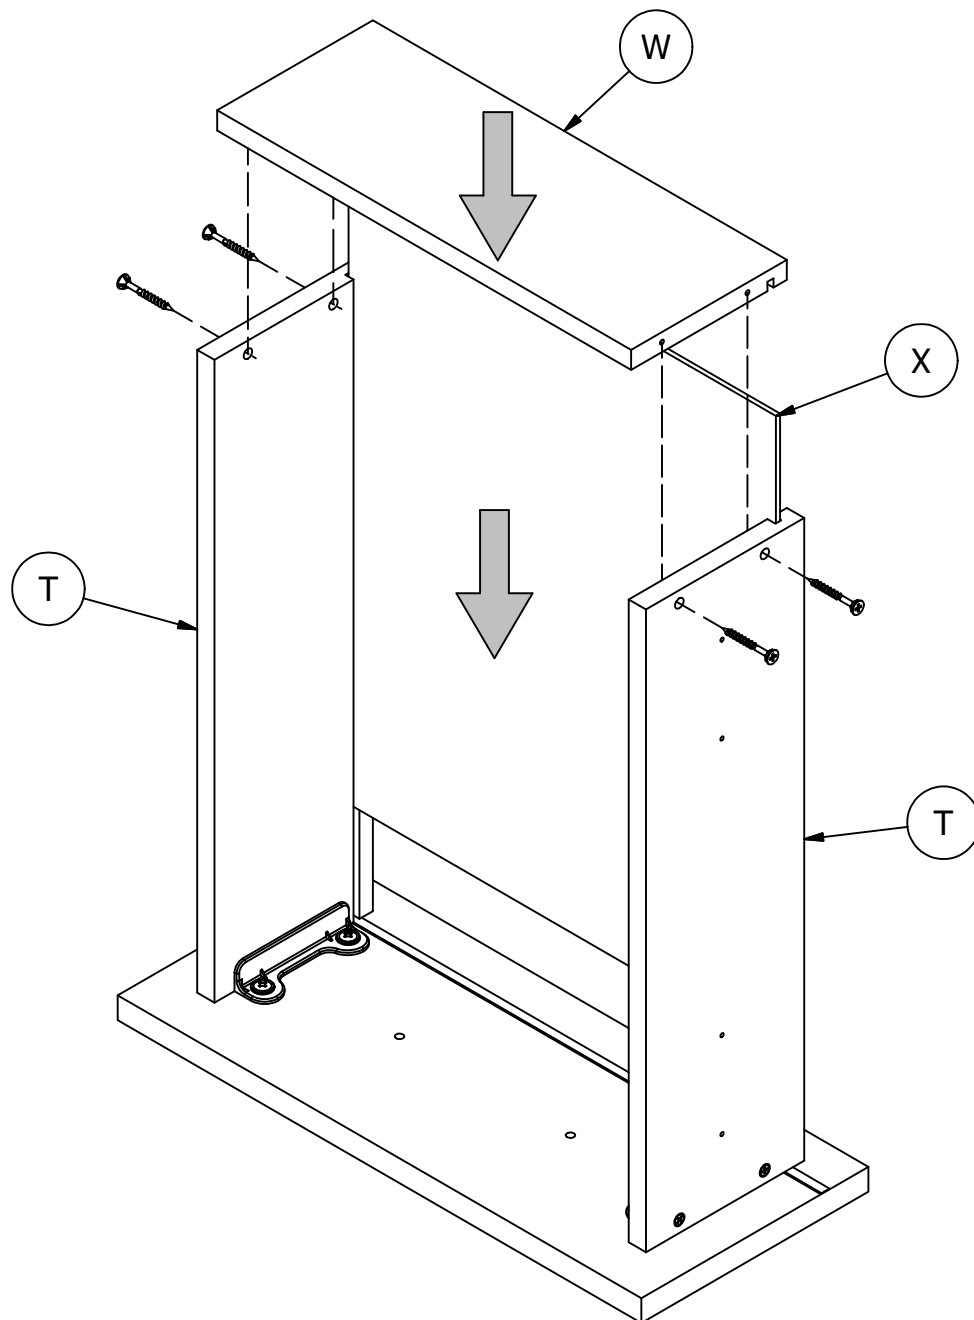

STEP 4


Attach Hardware

H23480




[2]

H28917



[6]

#6 x 1/2" Silver

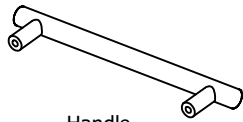

[1]

Handle

Q89897


16" Slide Runner Right

[1]

16" Slide Runner Left

Q89897

[1]

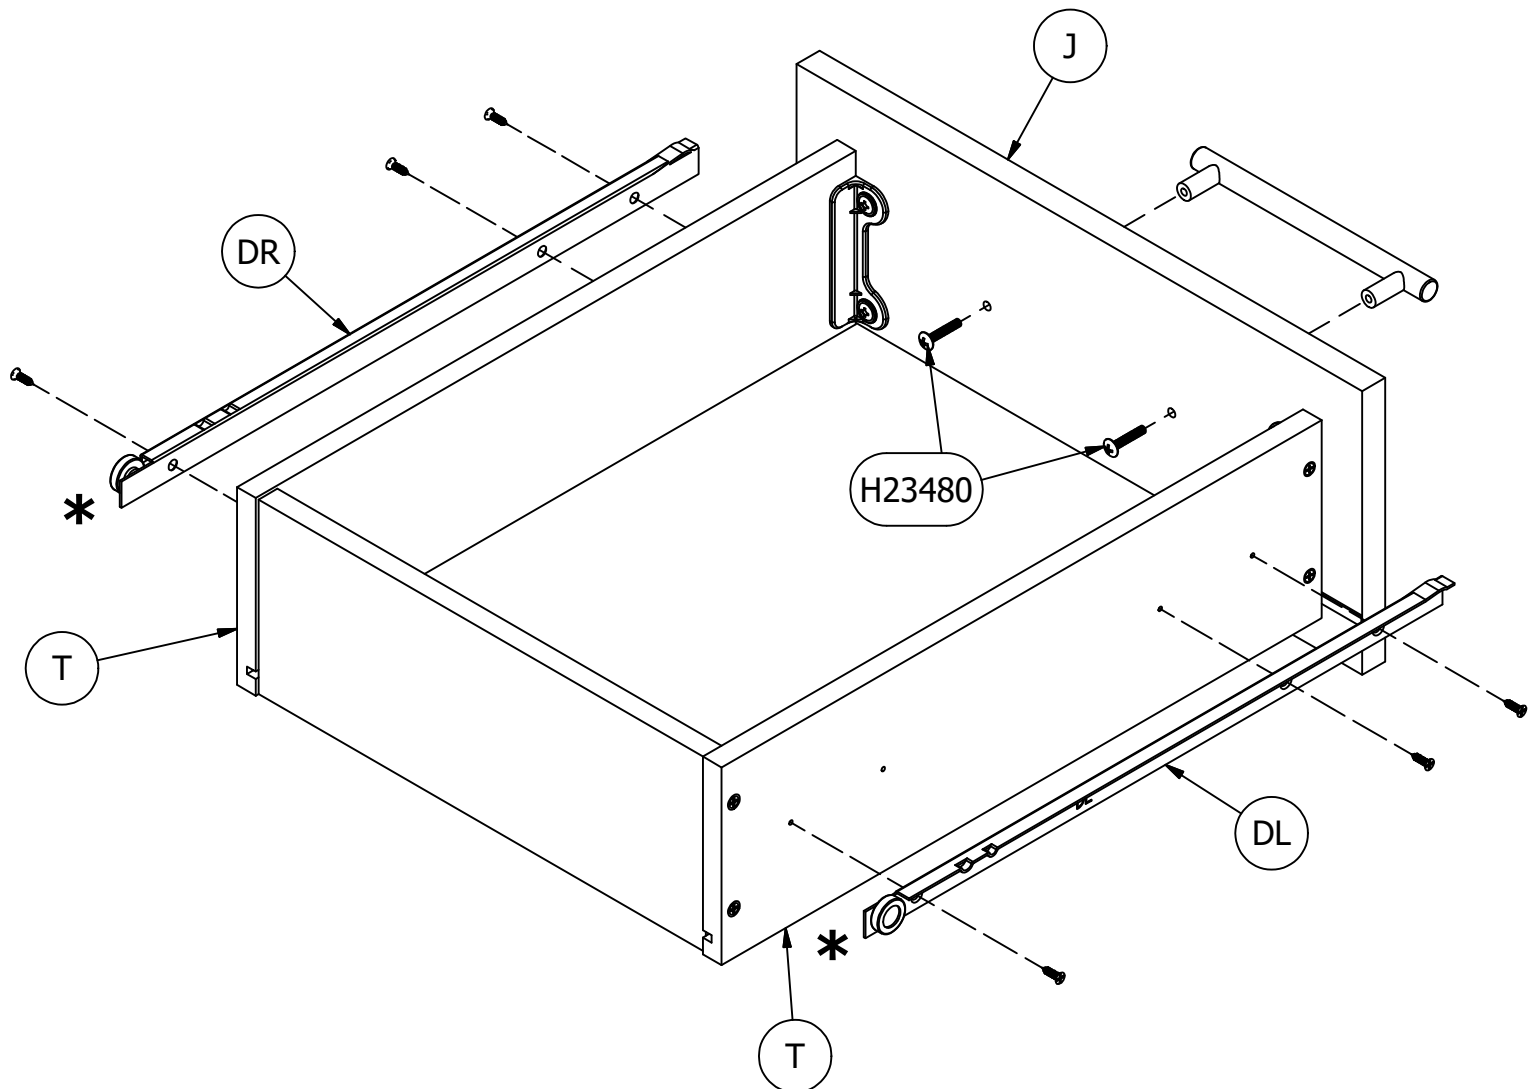


STEP 5

Separate Slides

**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

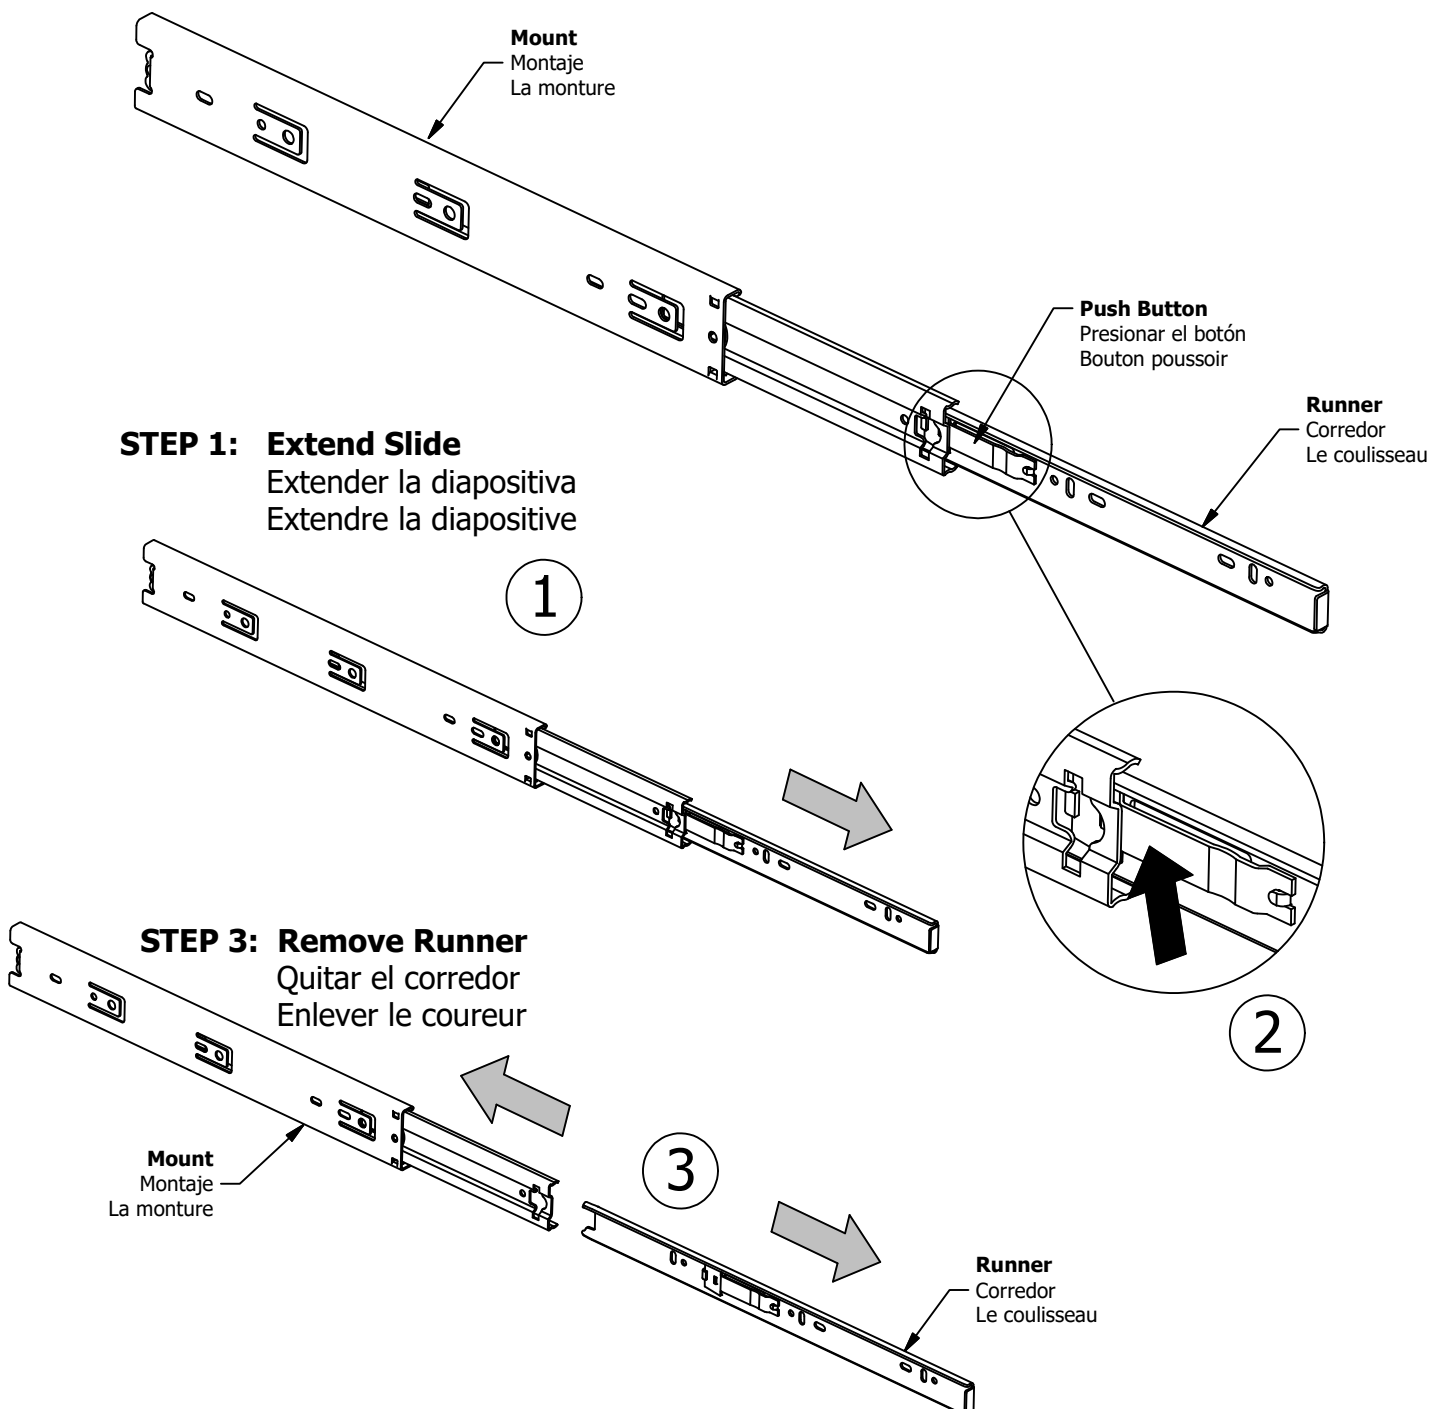


STEP 6

Assemble Panels


H128624

(Black)



#8 x .5"


[4]

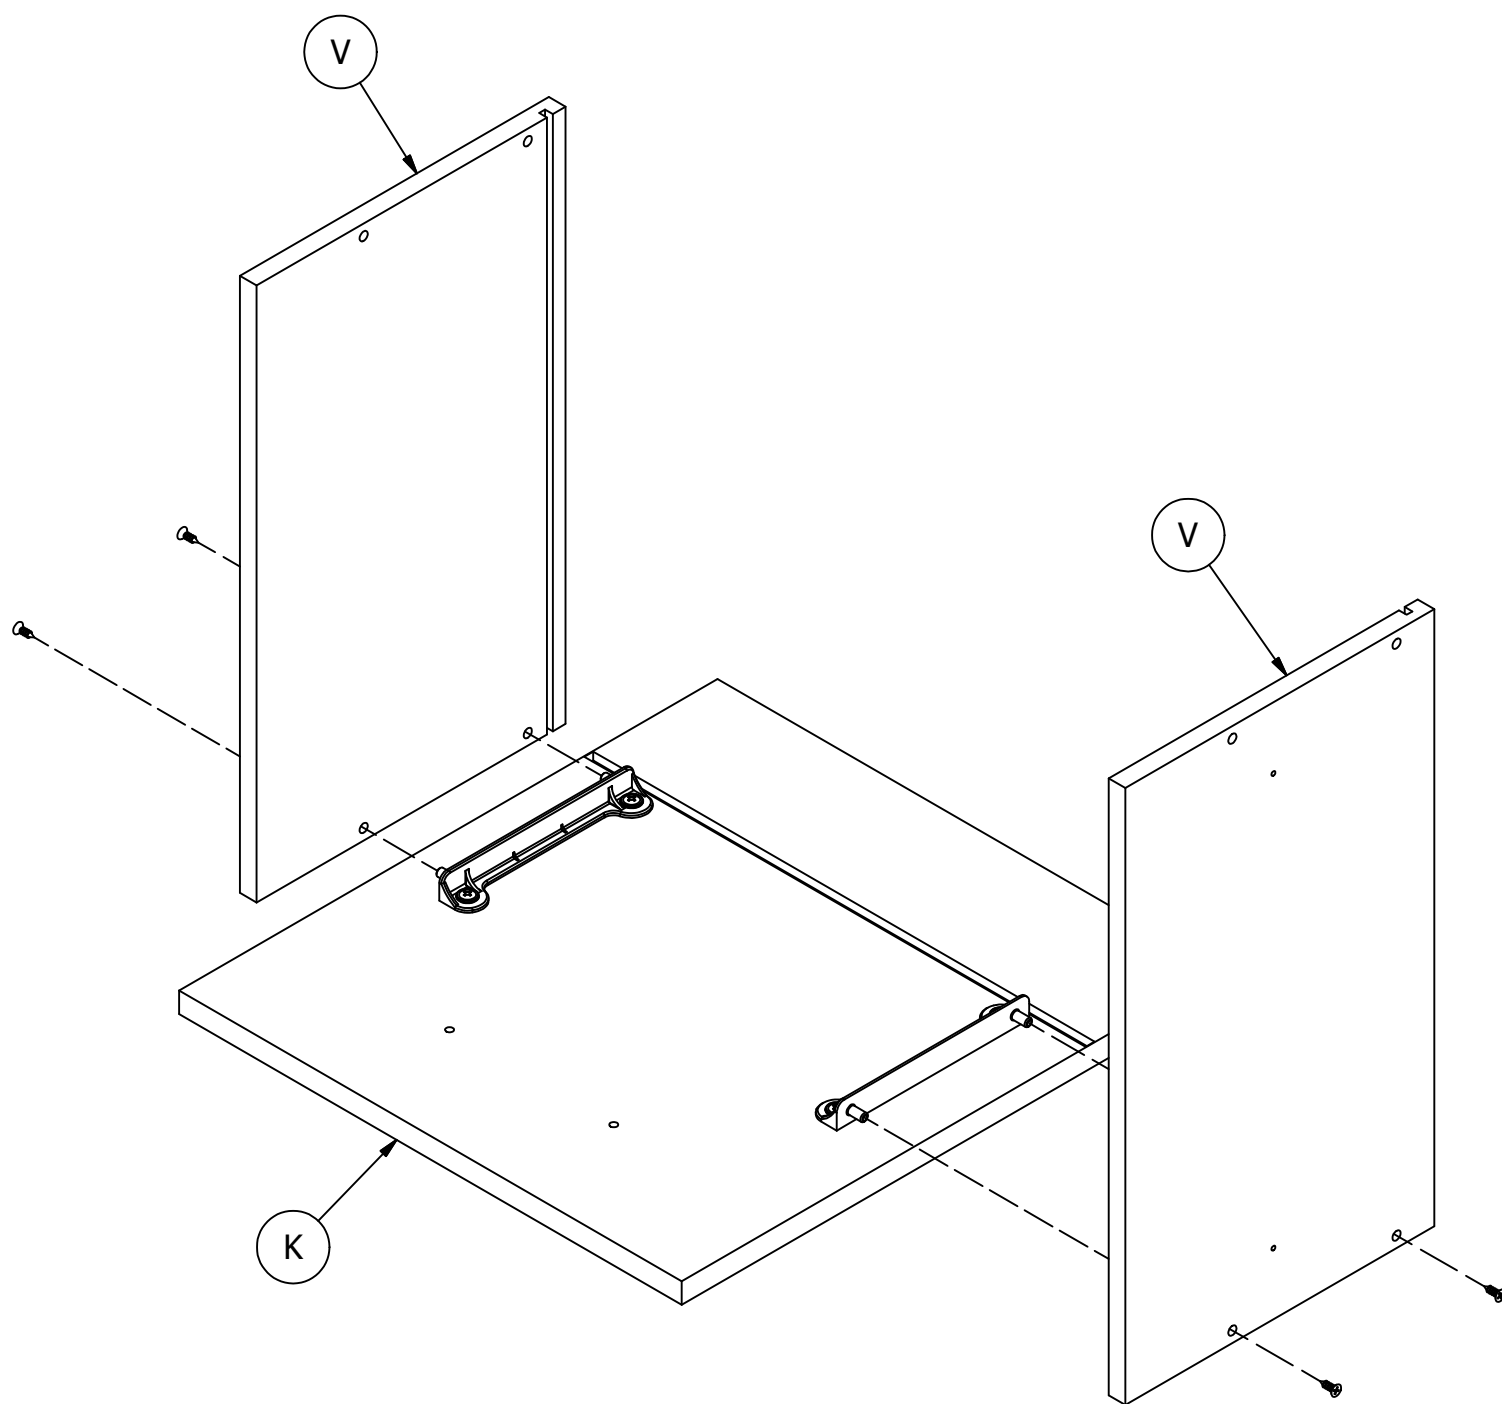

STEP 7


Assemble Panels

H150333




#8 x 1-1/2"

[4]

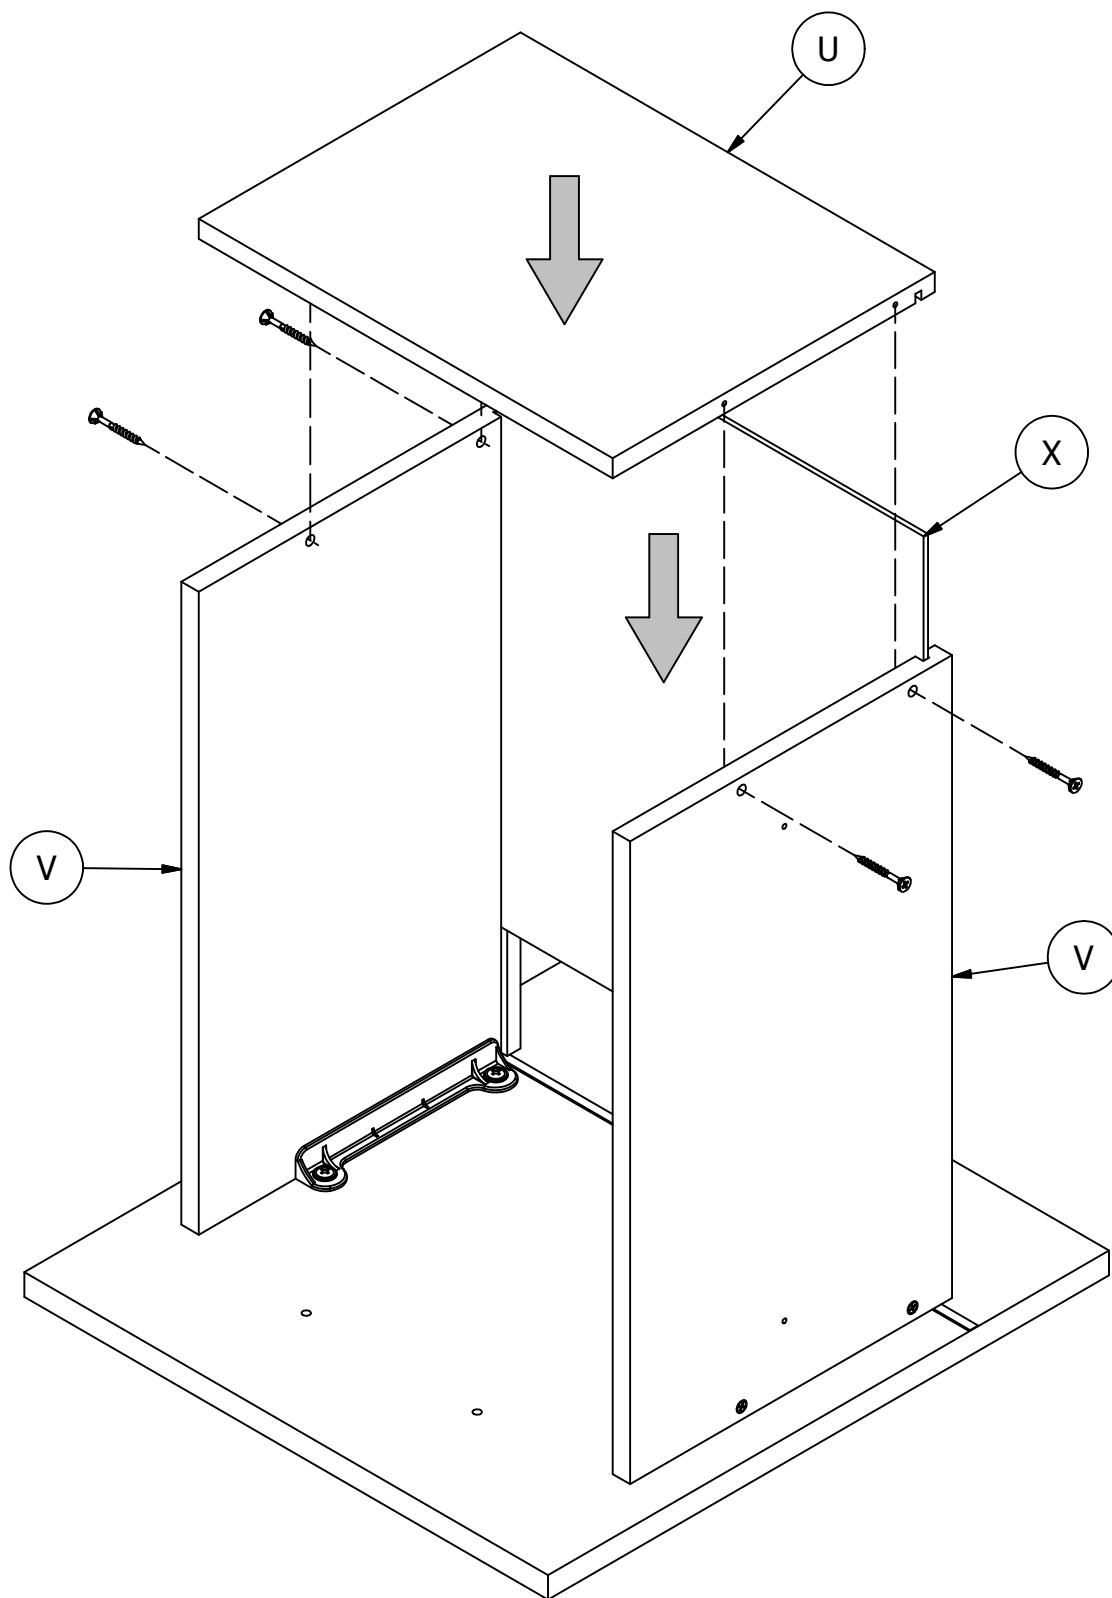

STEP 8


Attach Hardware

H23480  [2]
#8-32 x 7/8"

H192100  [4]
#8 x 1/2"


Q216346

[2]

 [1]
Handle

16" Slide Runner


Orientation
Orientación
L'orientation

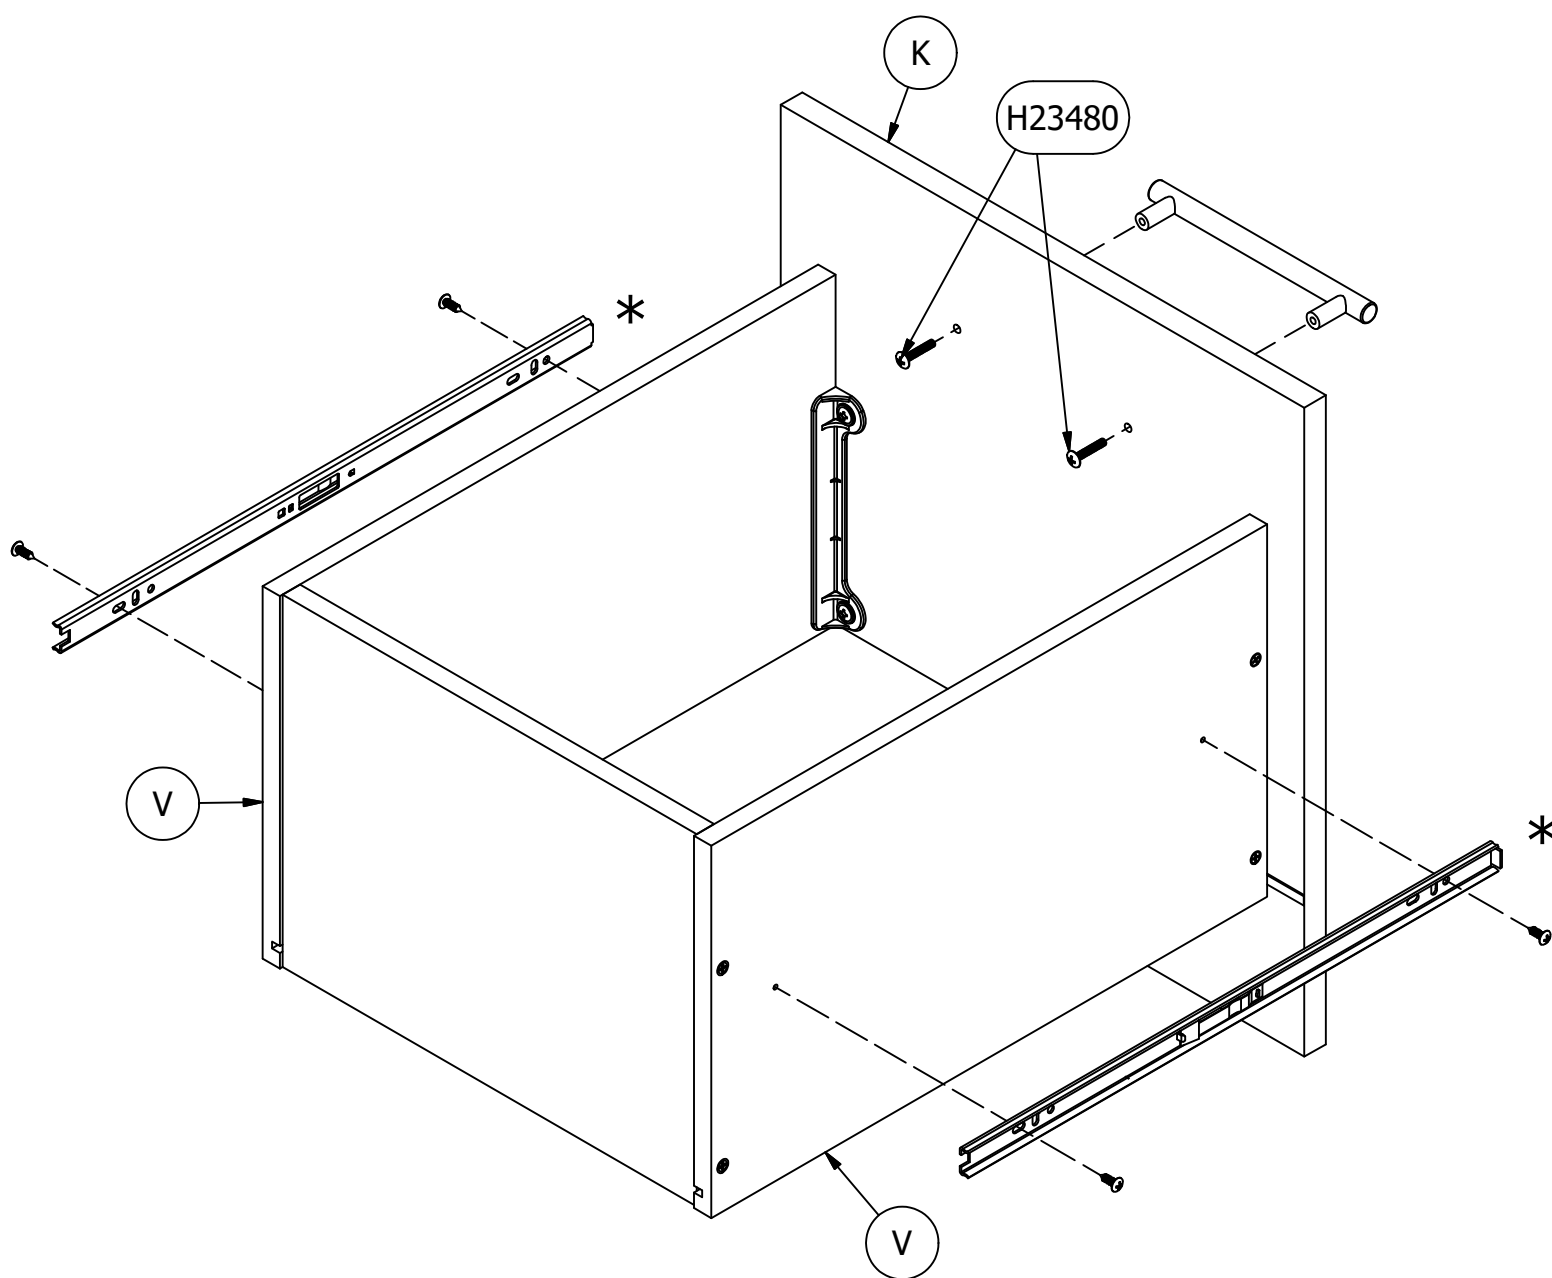

STEP 9

Attach Hardware

H162488


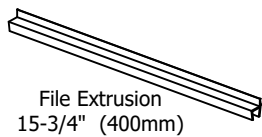


[2]

H215406




[4]

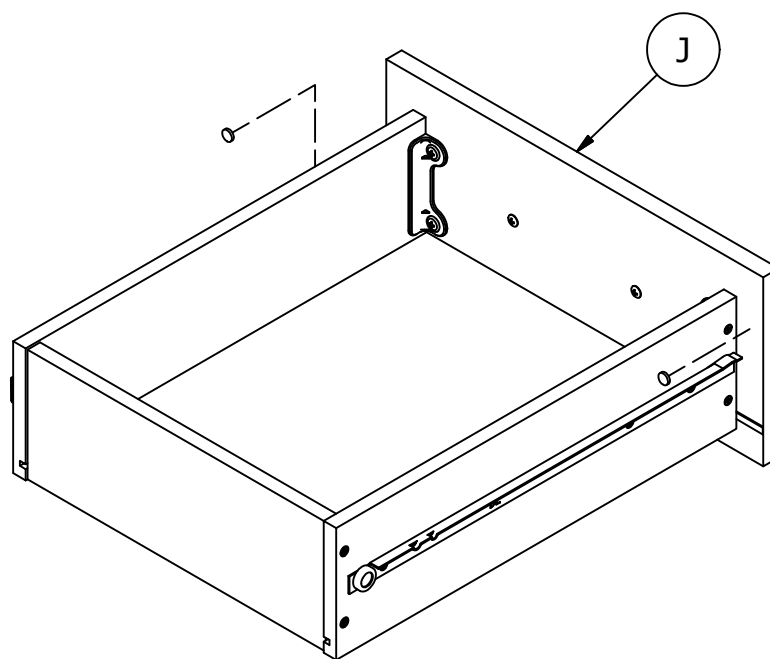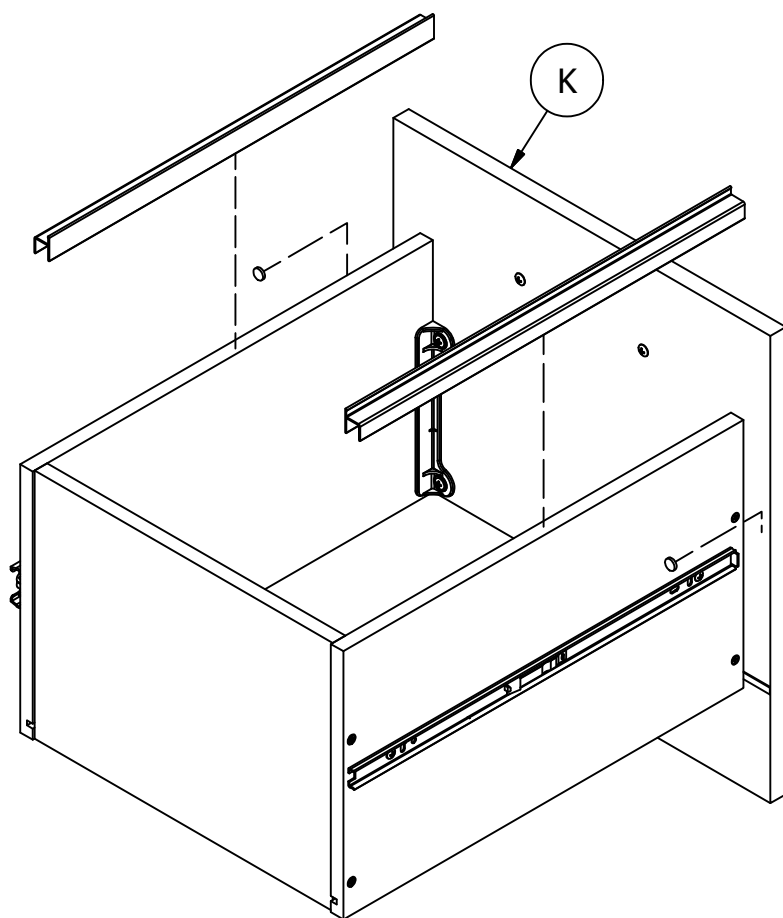


STEP 10


Prepare Panel


H23480  [2]
#8-32 x 7/8"

H215406  [2]
Bumper

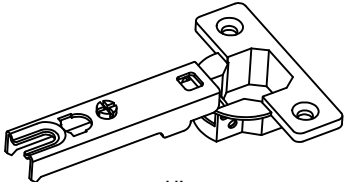H126359  [2]
Hinge

H28917  [4]
#6 x 1/2" Silver


 [1]
Handle

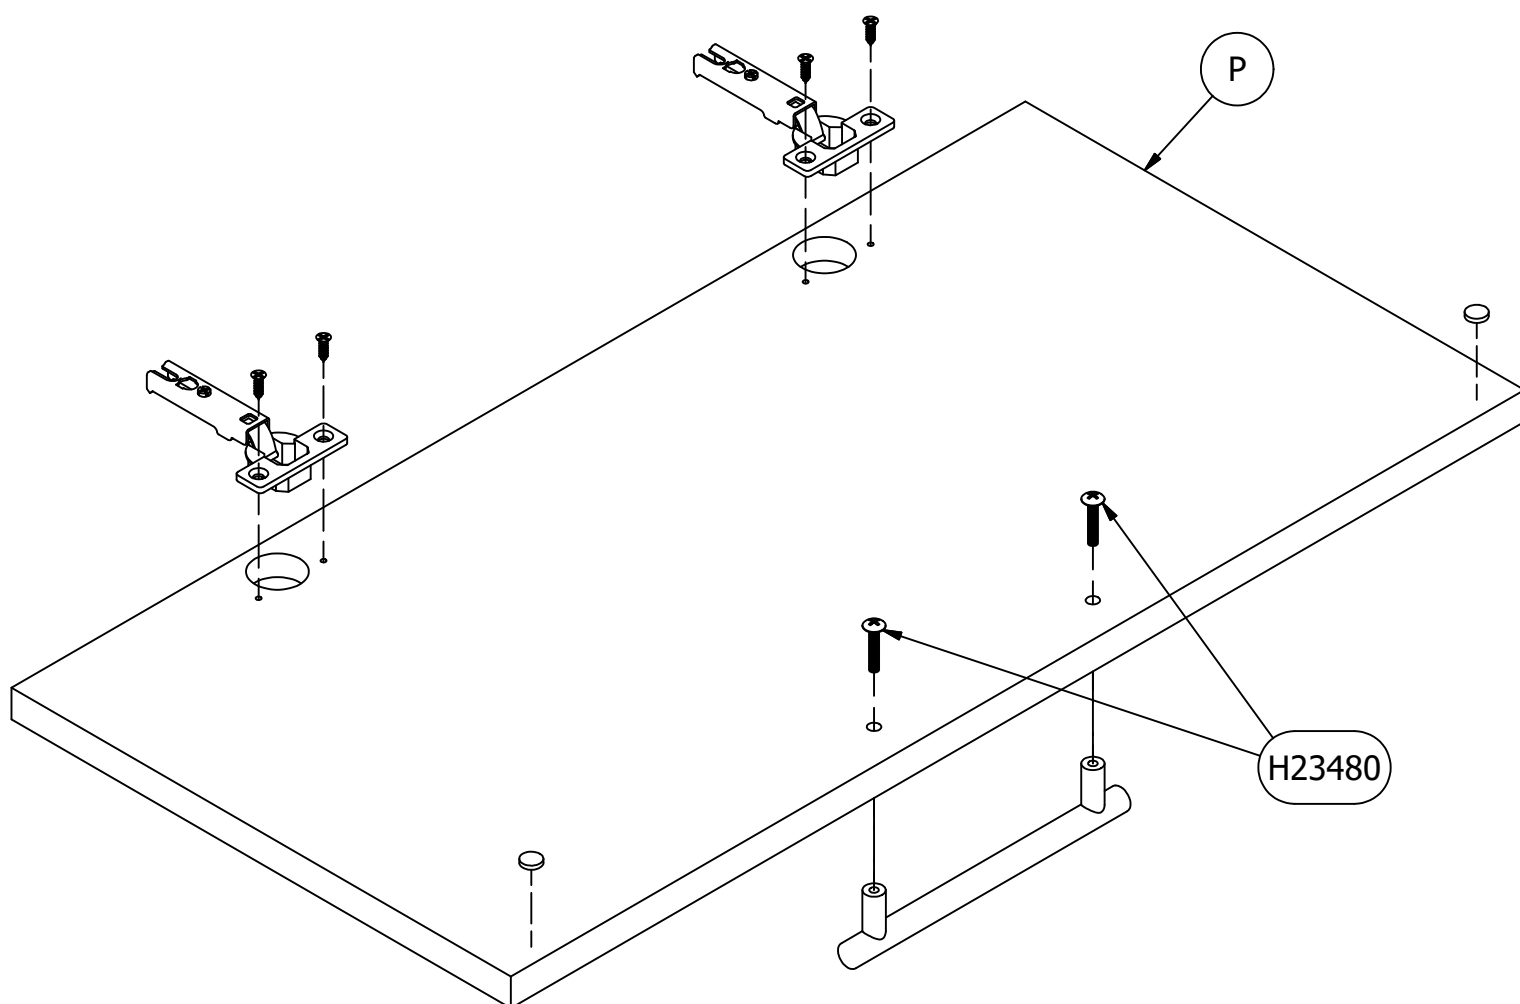

STEP 11



Prepare Panel


H72988




[6]

KD Bolt

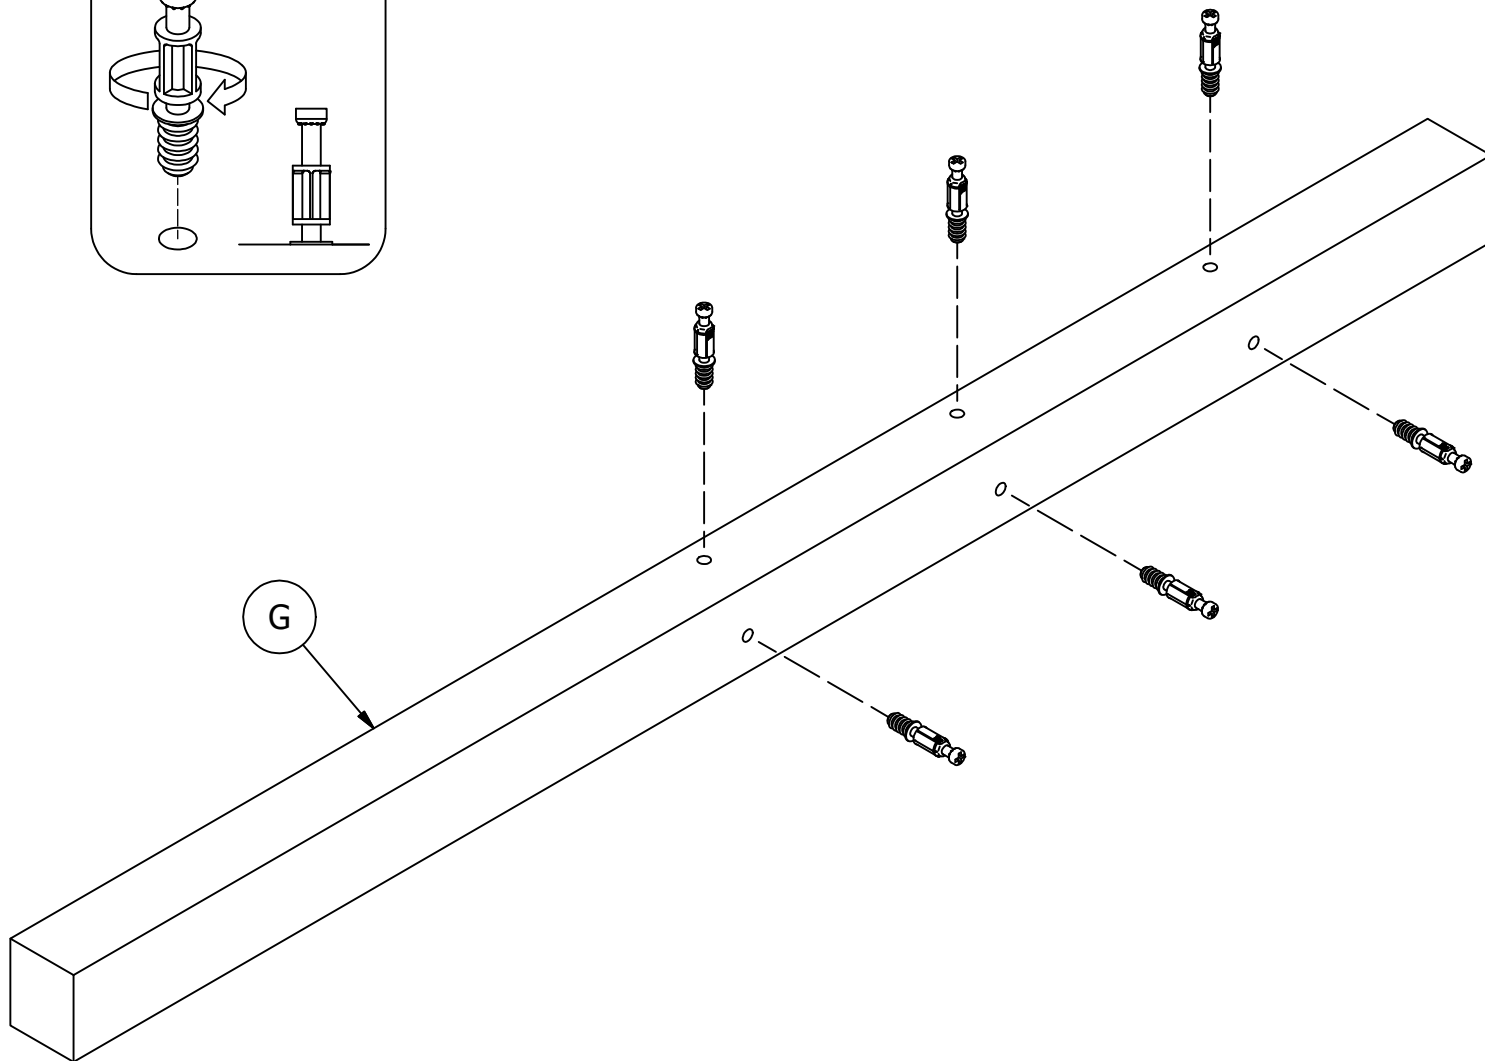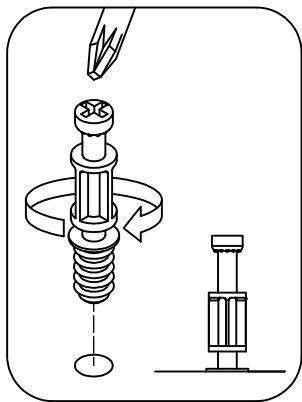

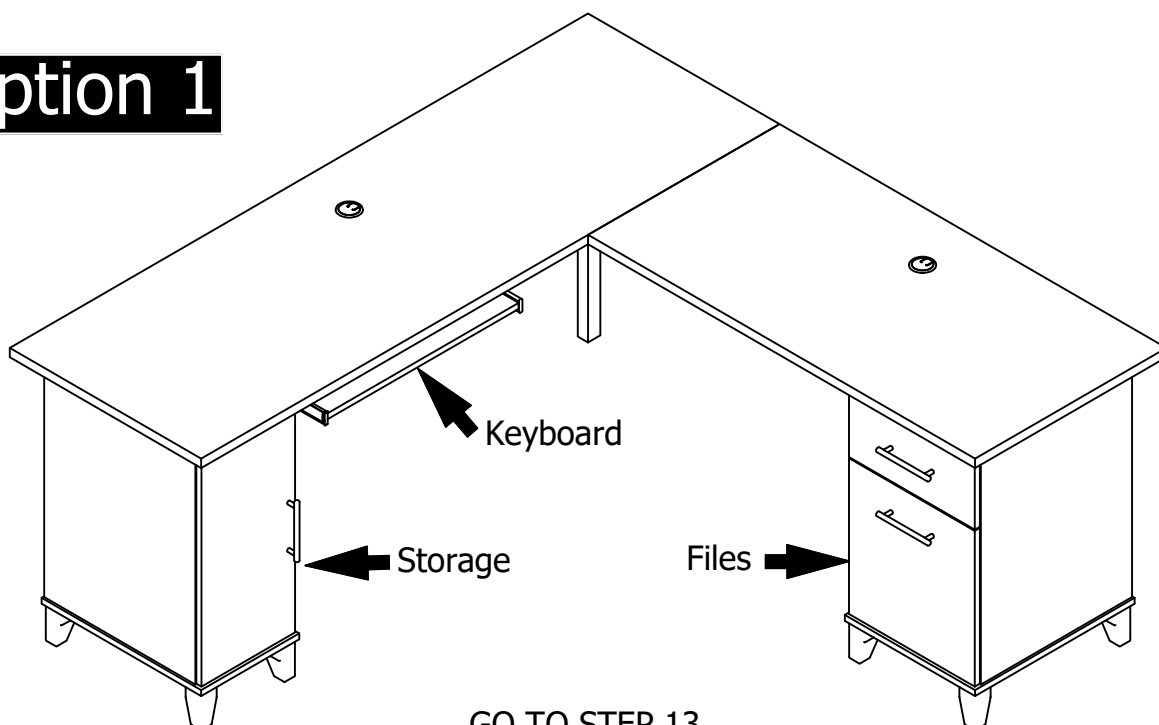Option 1

GO TO STEP 13
Vaya al PASO 13
Allez à l'ÉTAPE 13

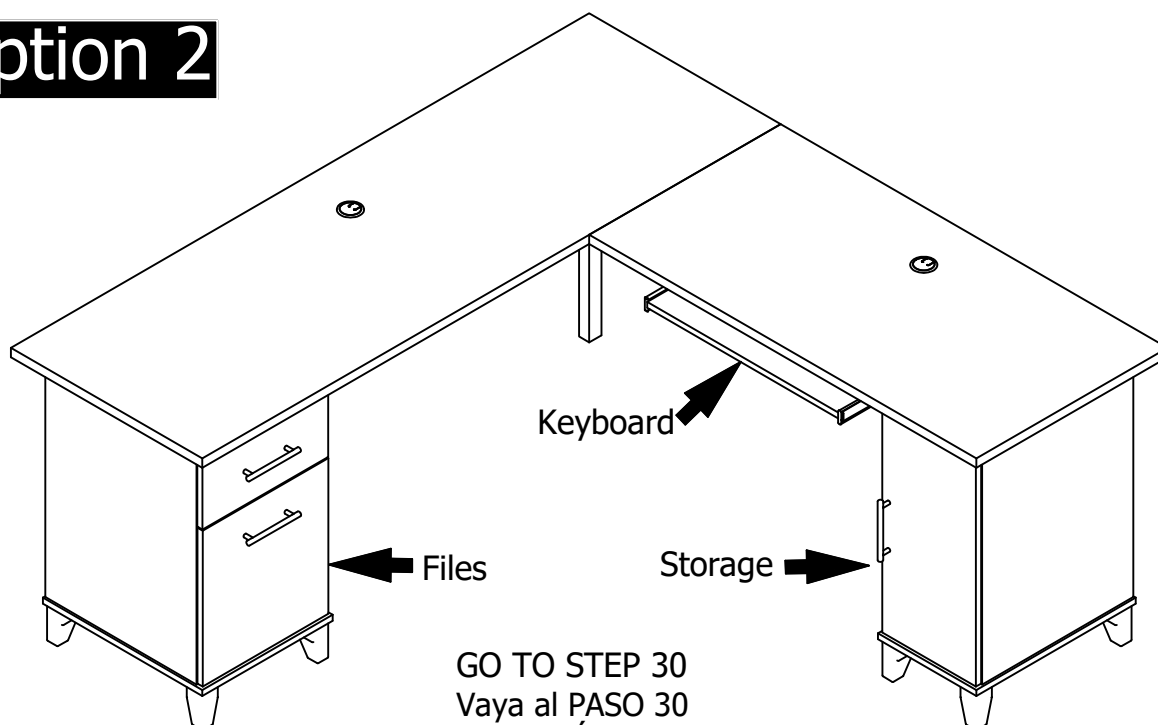Option 2

GO TO STEP 30
Vaya al PASO 30
Allez à l'ÉTAPE 30

STEP 13


Prepare Panels

H72988 [7]




KD Bolt

H126364 [2]

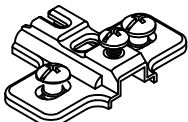

Mounting Plate

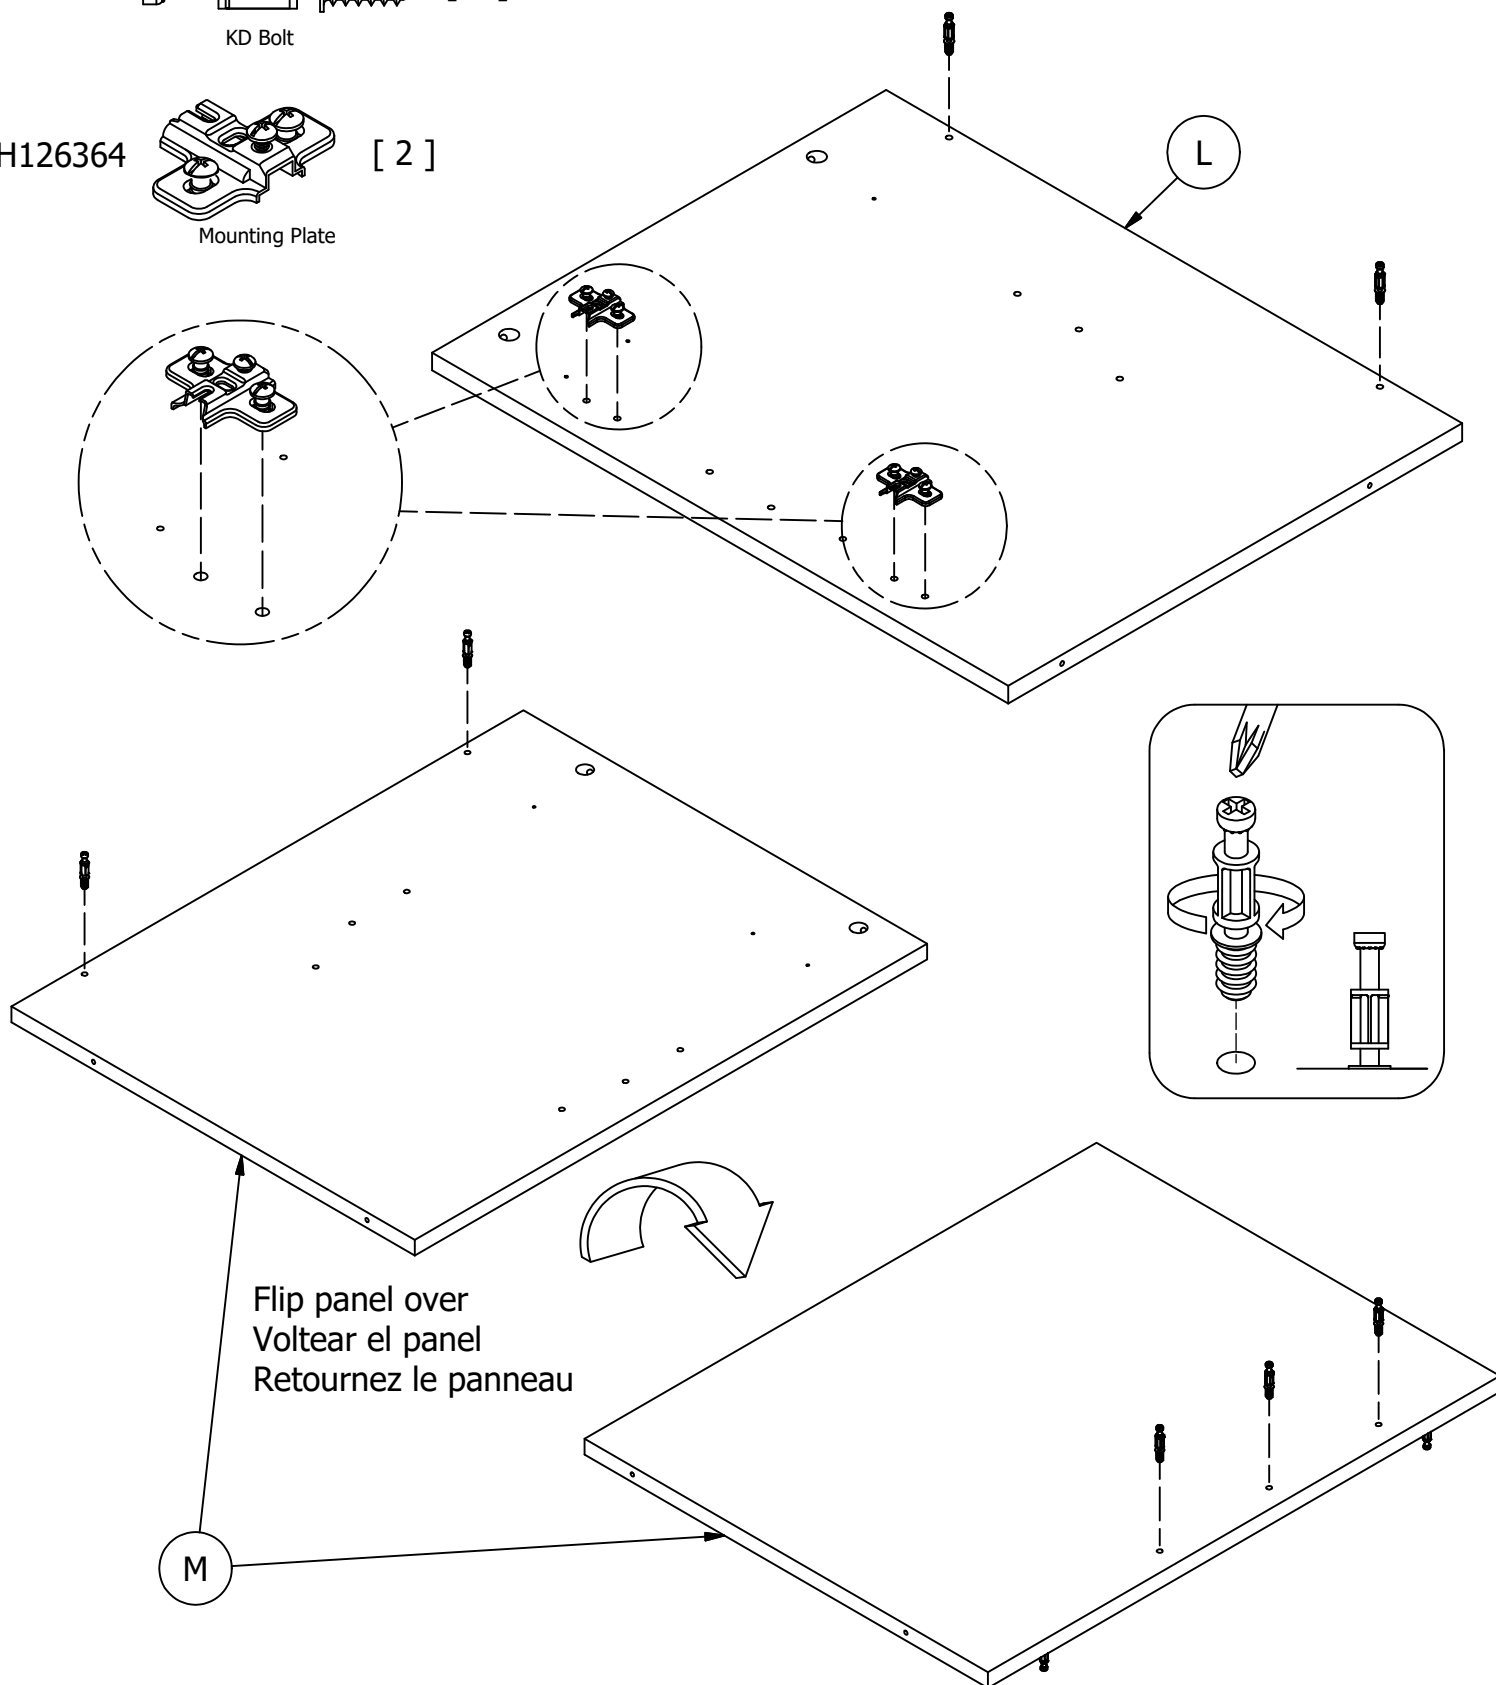


STEP 14

Assemble Panels



H181468US




[4]

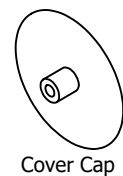

[4]

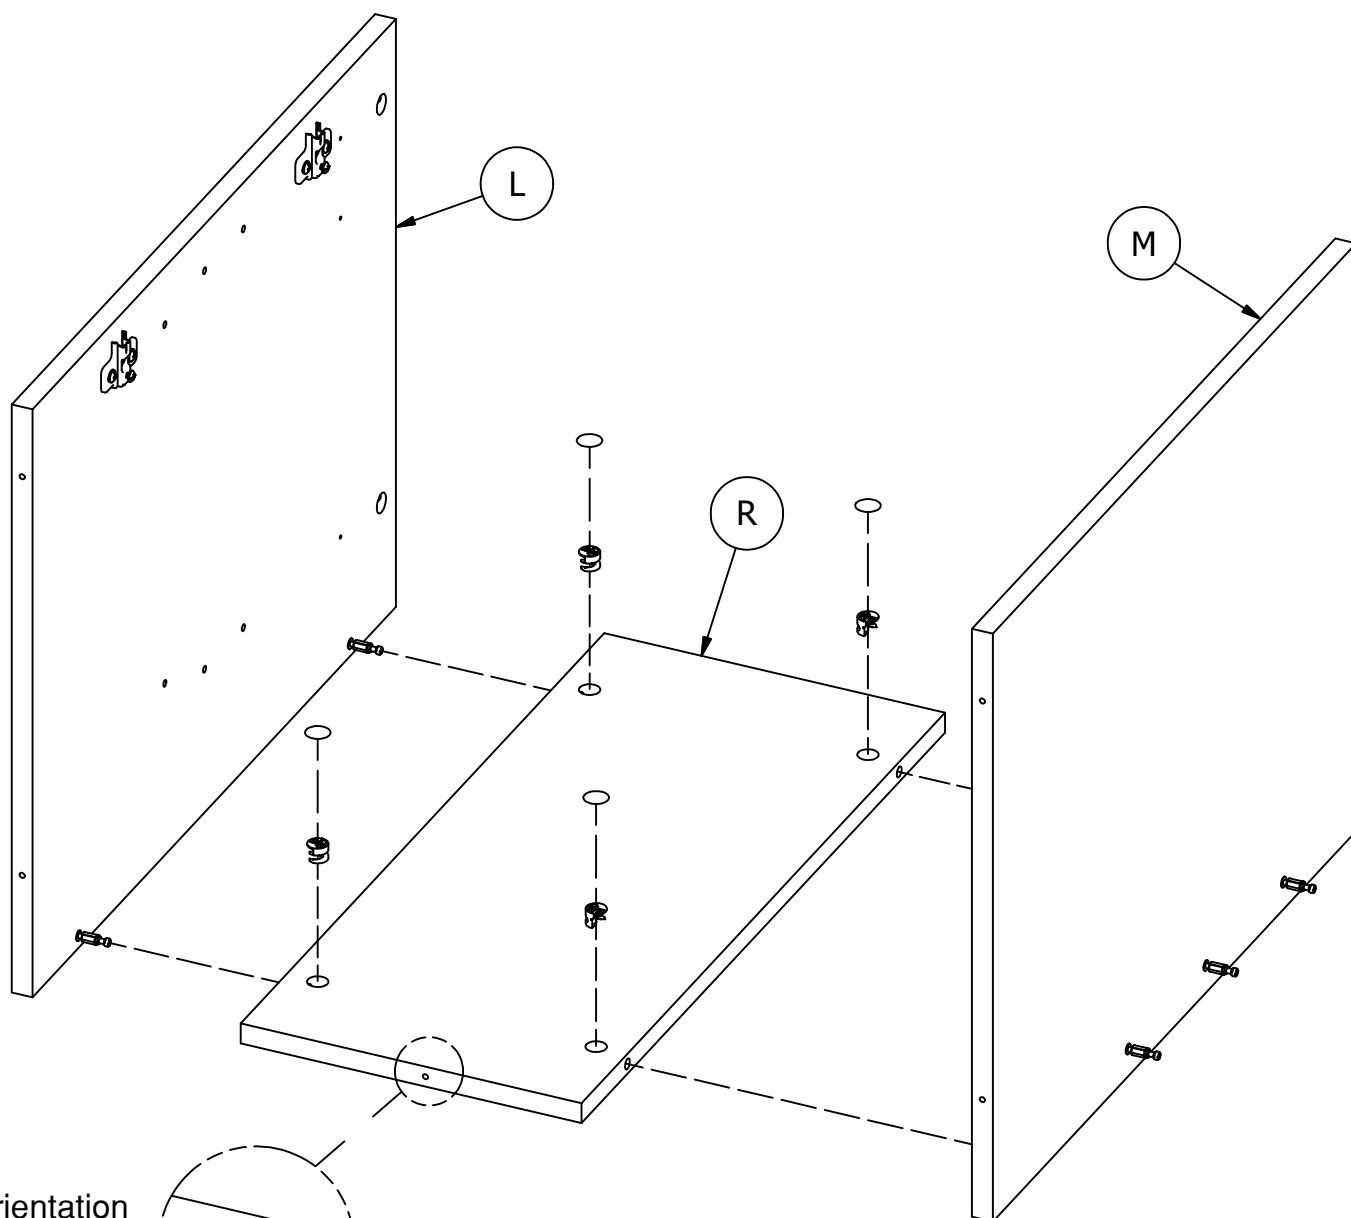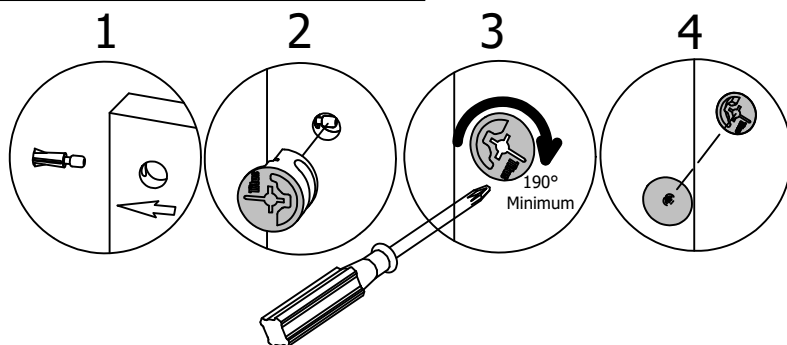


Orientation
Orientación
L'orientation

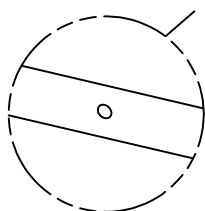


STEP 15

Prepare Panel

H143460




[4]

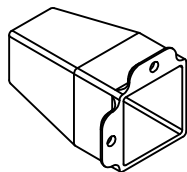


[4]


H35251

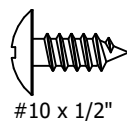

[8]

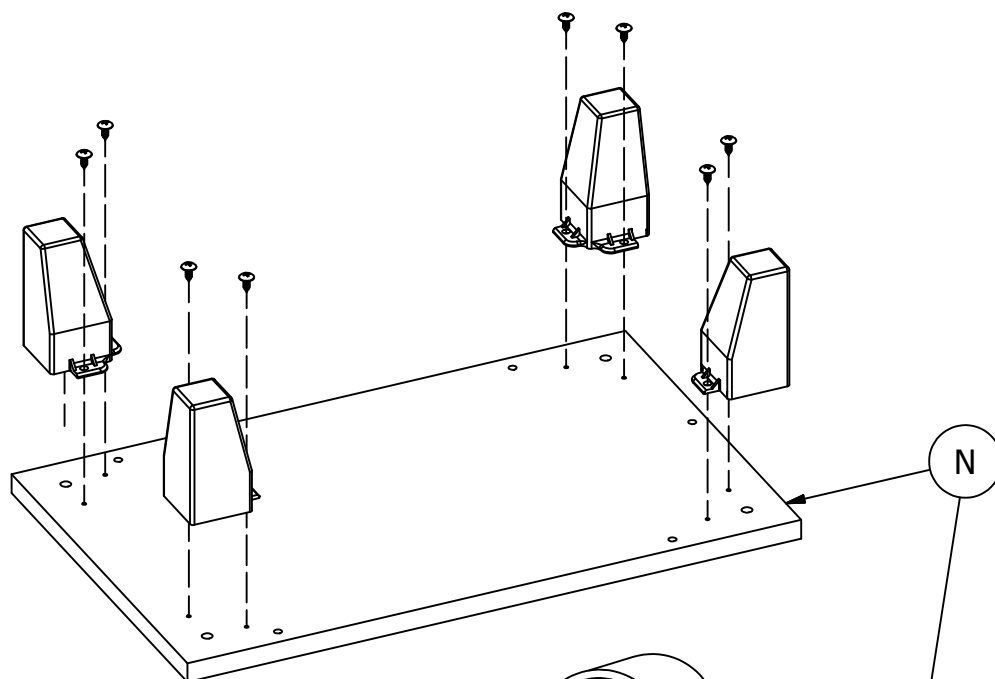


Flip panel over
Voltear el panel
Retournez le panneau

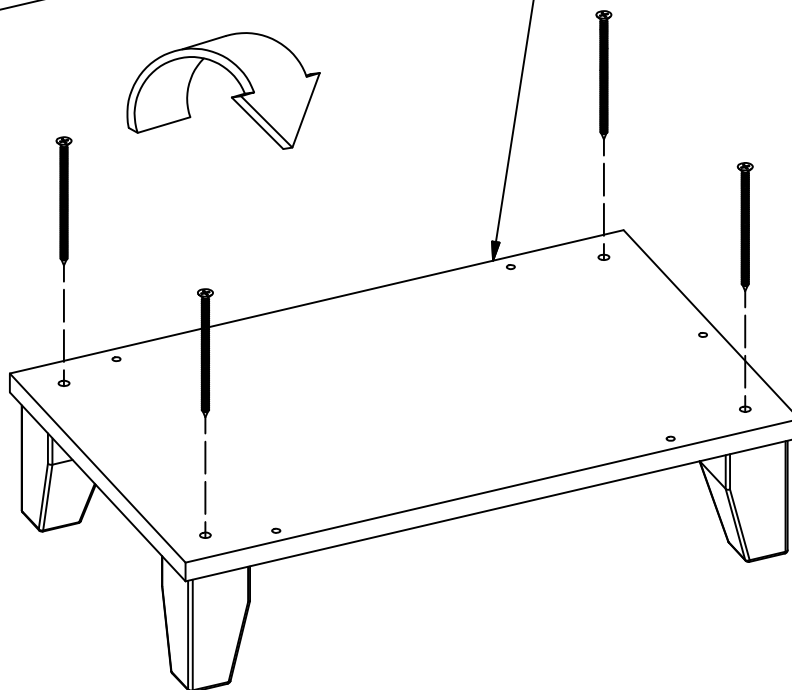

STEP 16


Assemble Panels

H23491



[5]

#10 x 2"

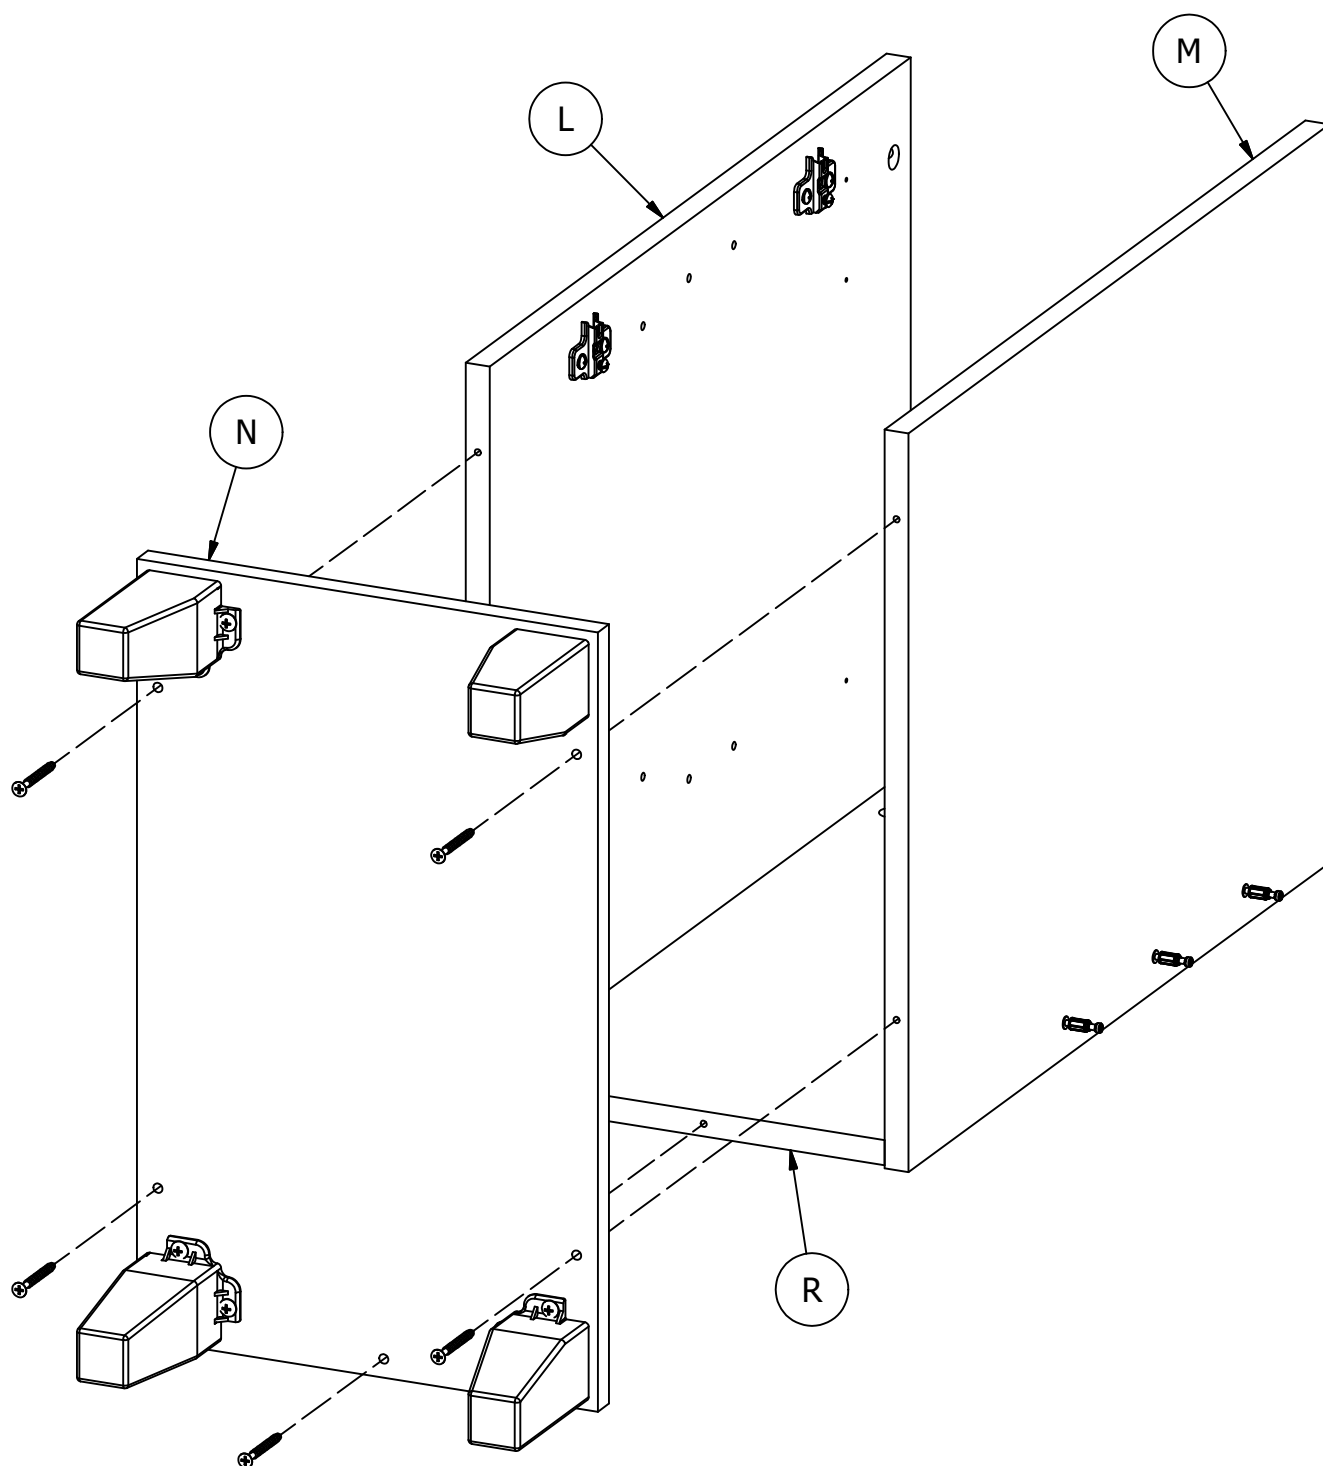





STEP 17

Prepare Panel

H28917  [3]
#6 x 1/2" Silver


H195734  [2]
M6.3 X 13MM

H72988  [2]
KD Bolt

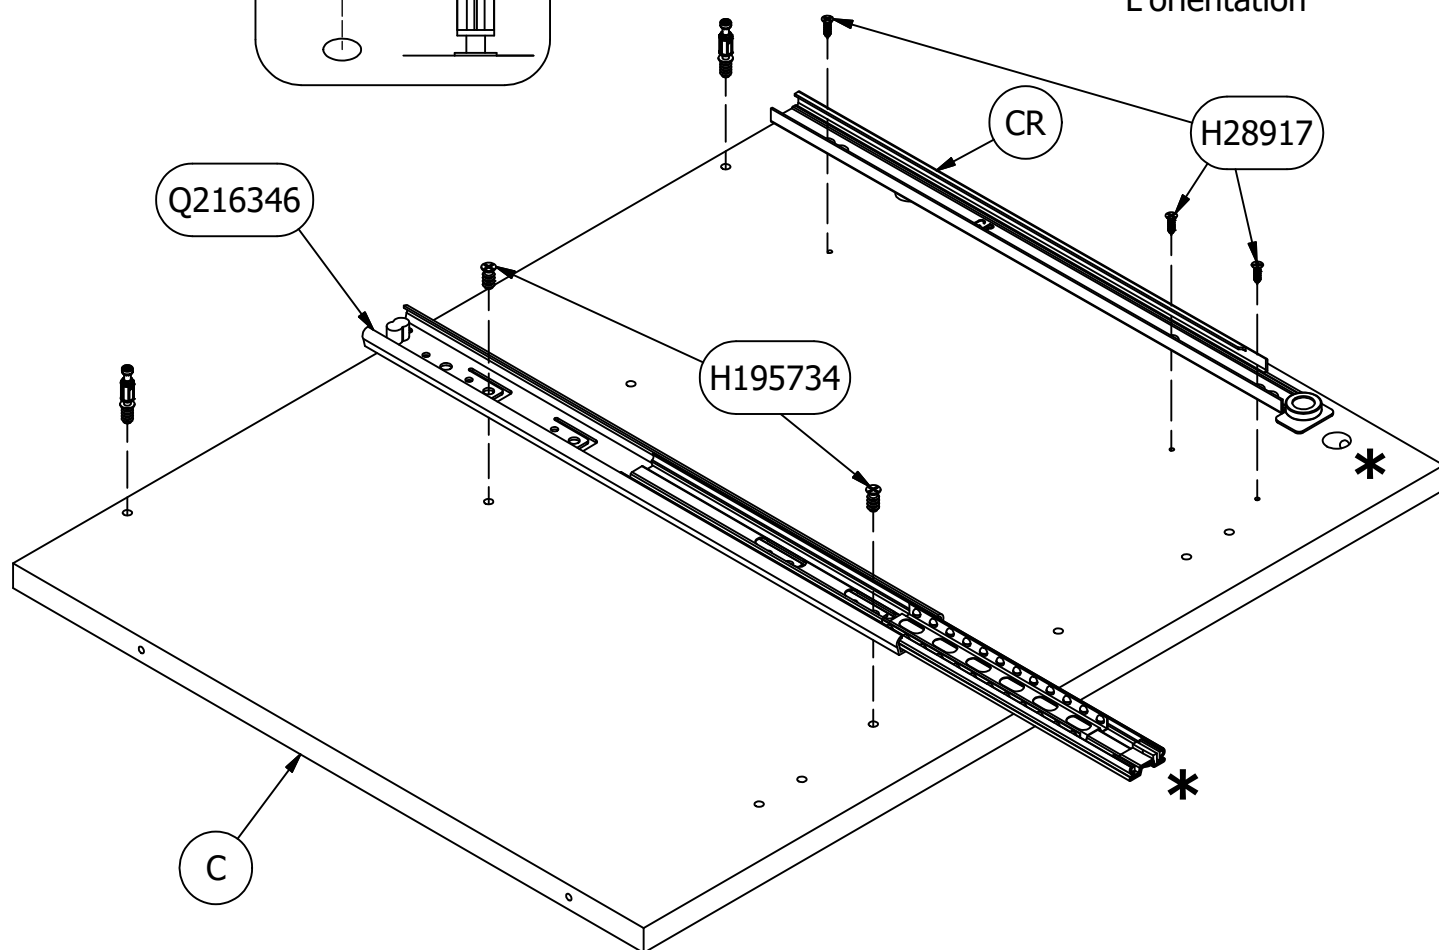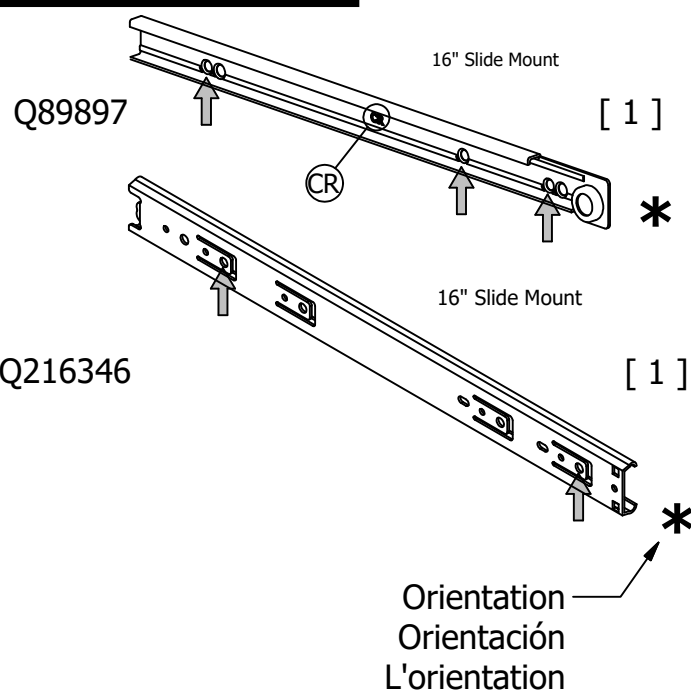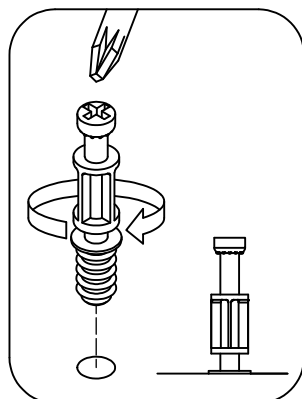




STEP 18

Prepare Panel




H72988  [5]
KD Bolt

H195734  [2]
M6.3 X 13MM

H28917  [3]
#6 x 1/2" Silver

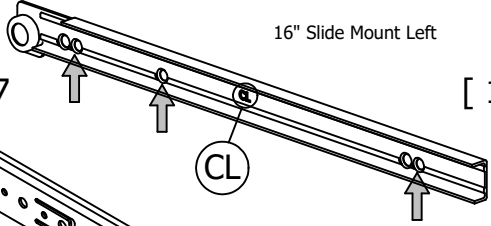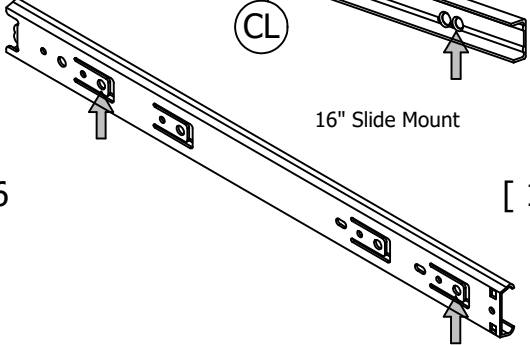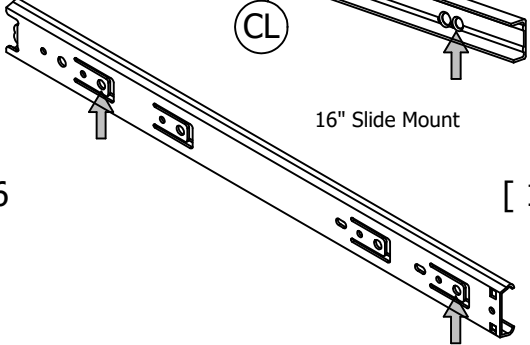*  [1]
16" Slide Mount Left
Q89897  [1]
16" Slide Mount
Q216346  [1]

Orientation
Orientación
L'orientation

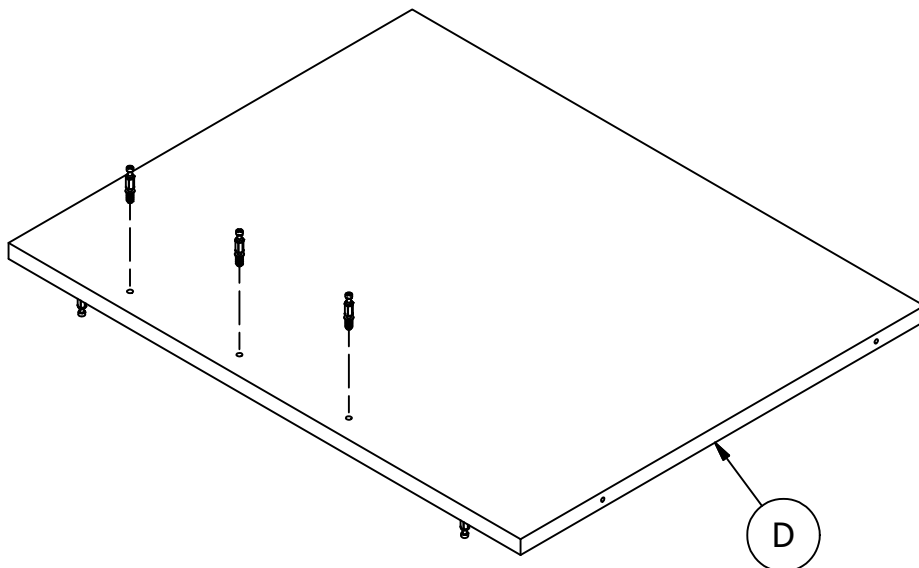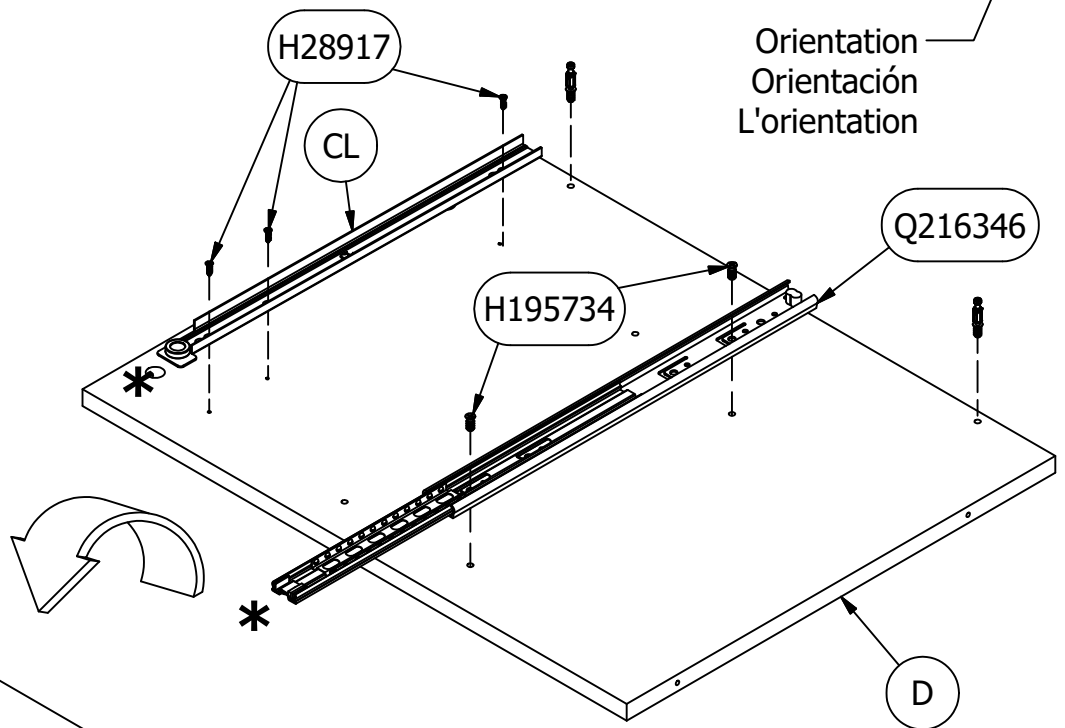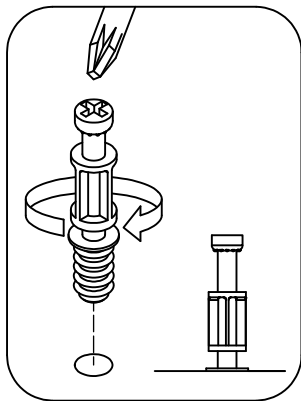

Flip panel over
Voltear el panel
Retournez le panneau




STEP 19

Assemble Panels


H181468US



[4]

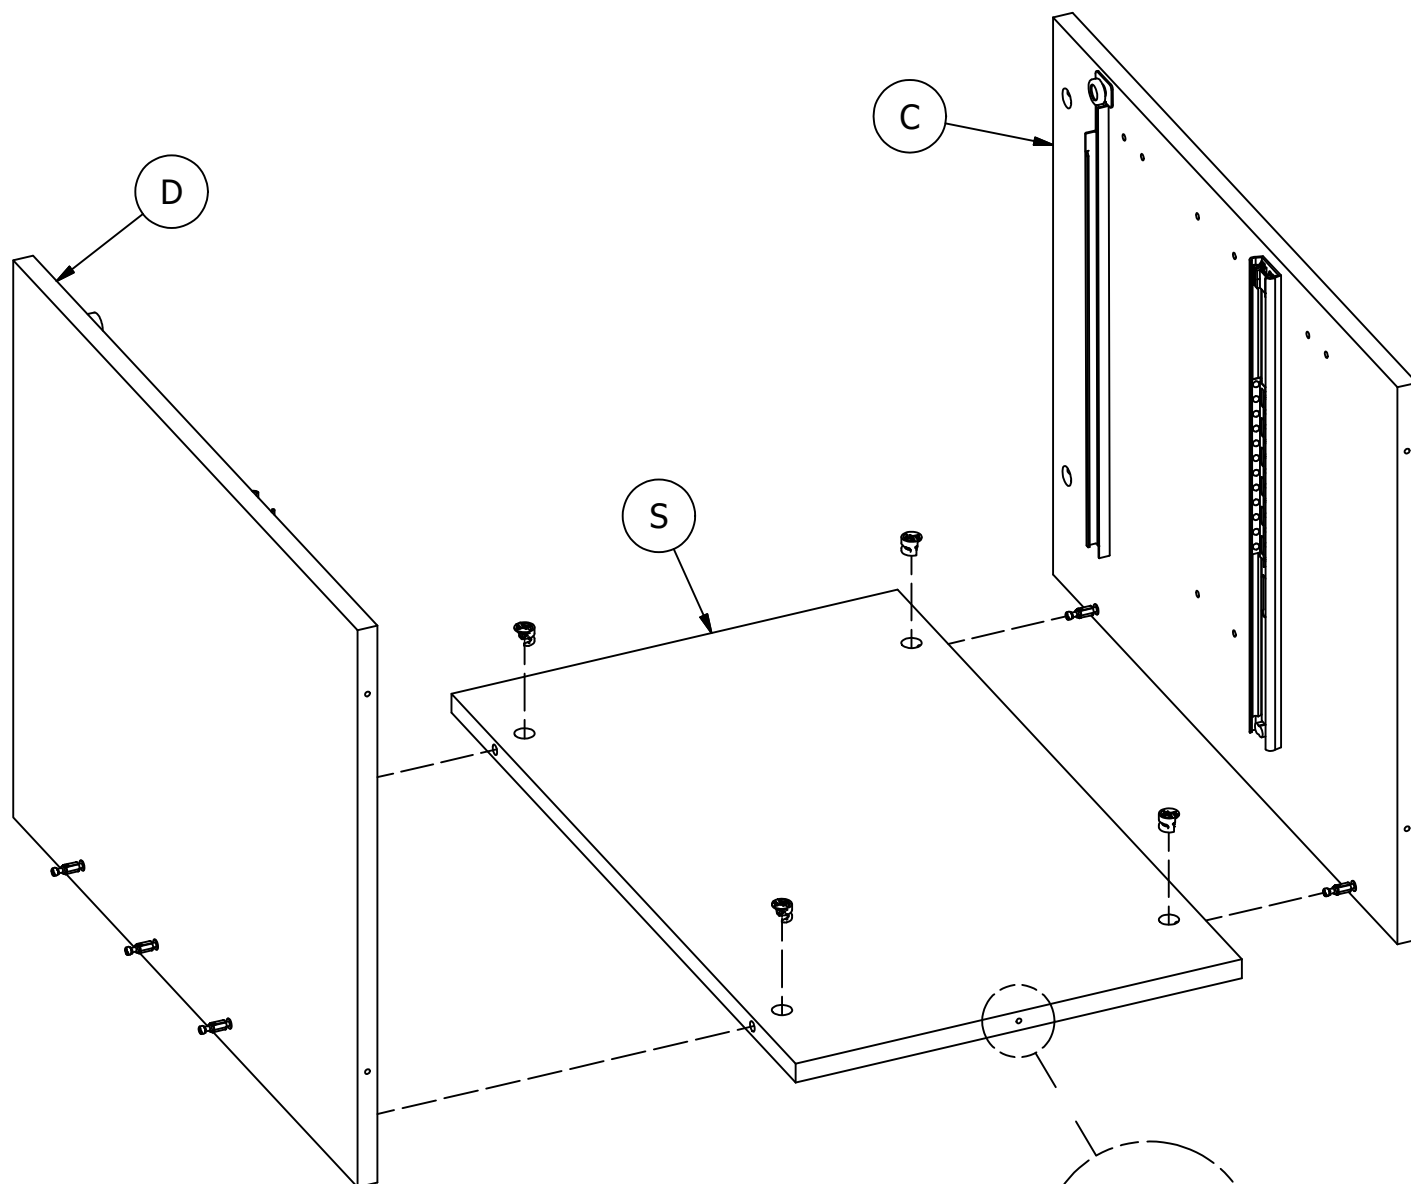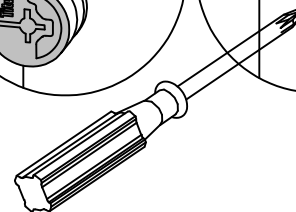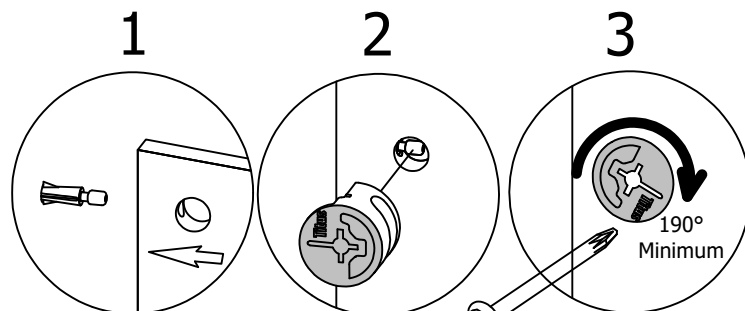


Orientation
Orientación
L'orientation

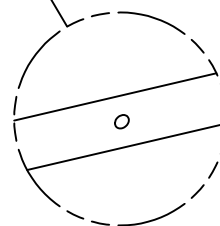


STEP 20

Prepare Panel

H143460




[4]

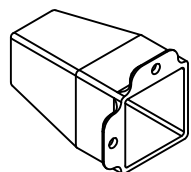


Foot

[4]

H35251





[8]

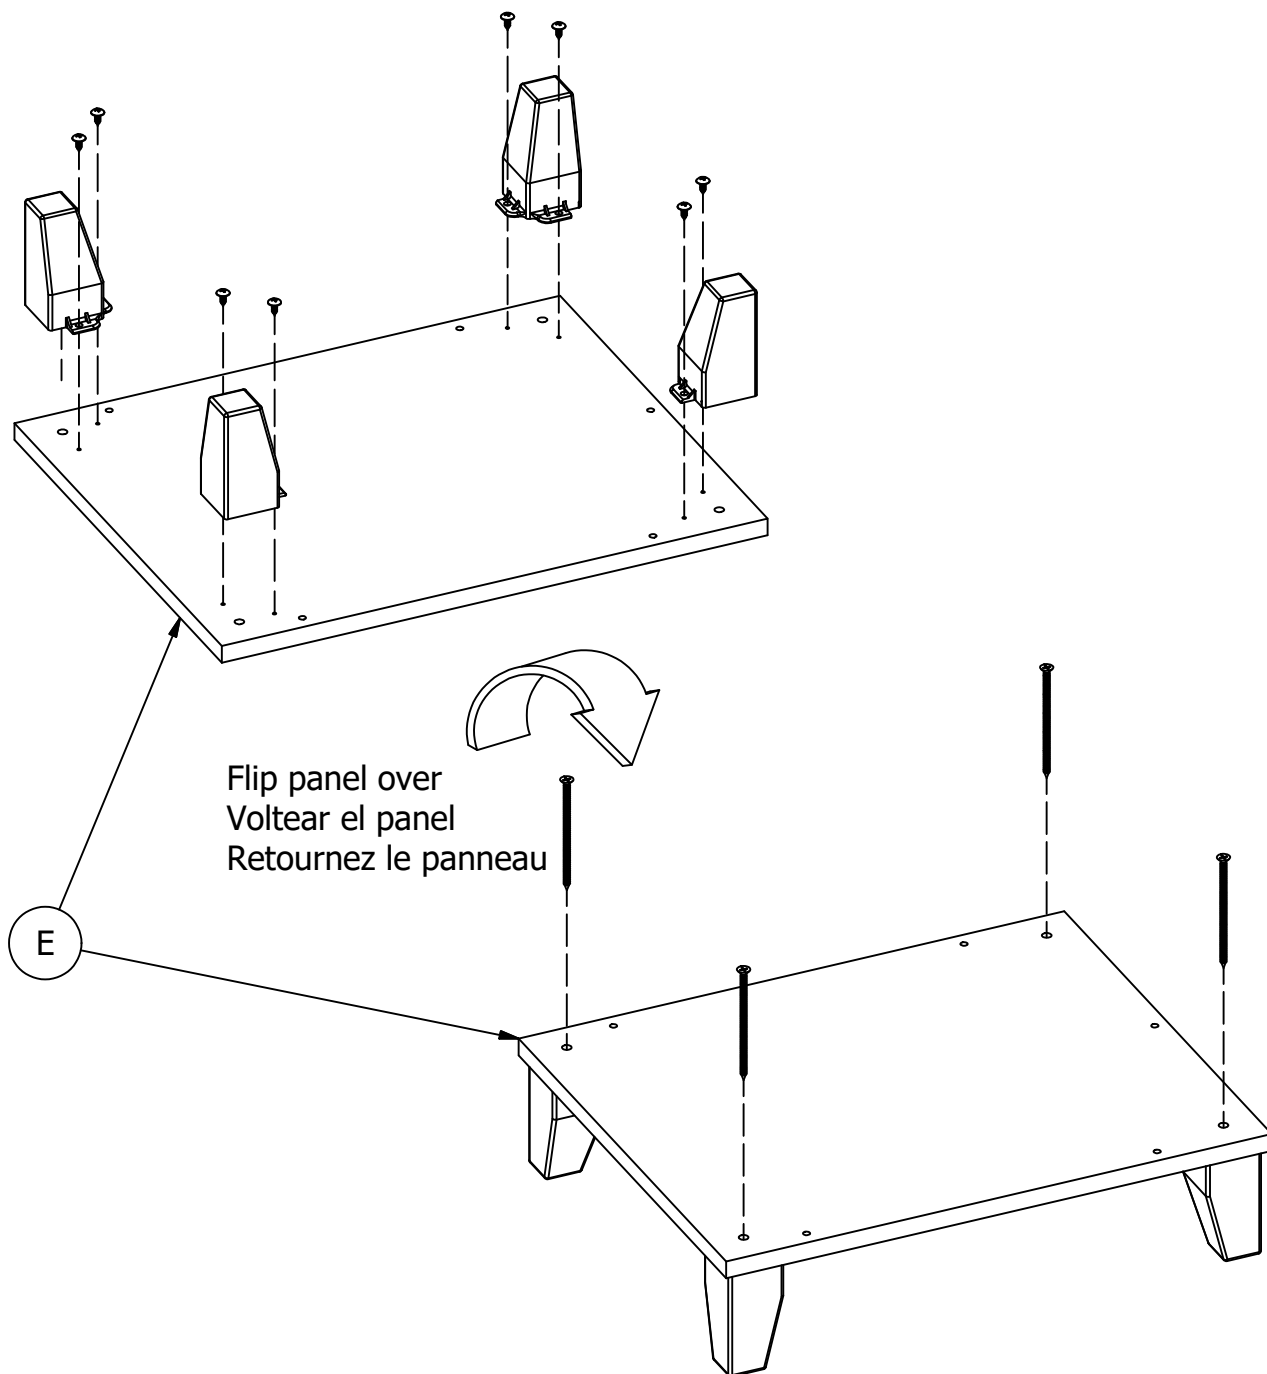

STEP 21

Assemble Panels

H23491  [5]
#10 x 2"

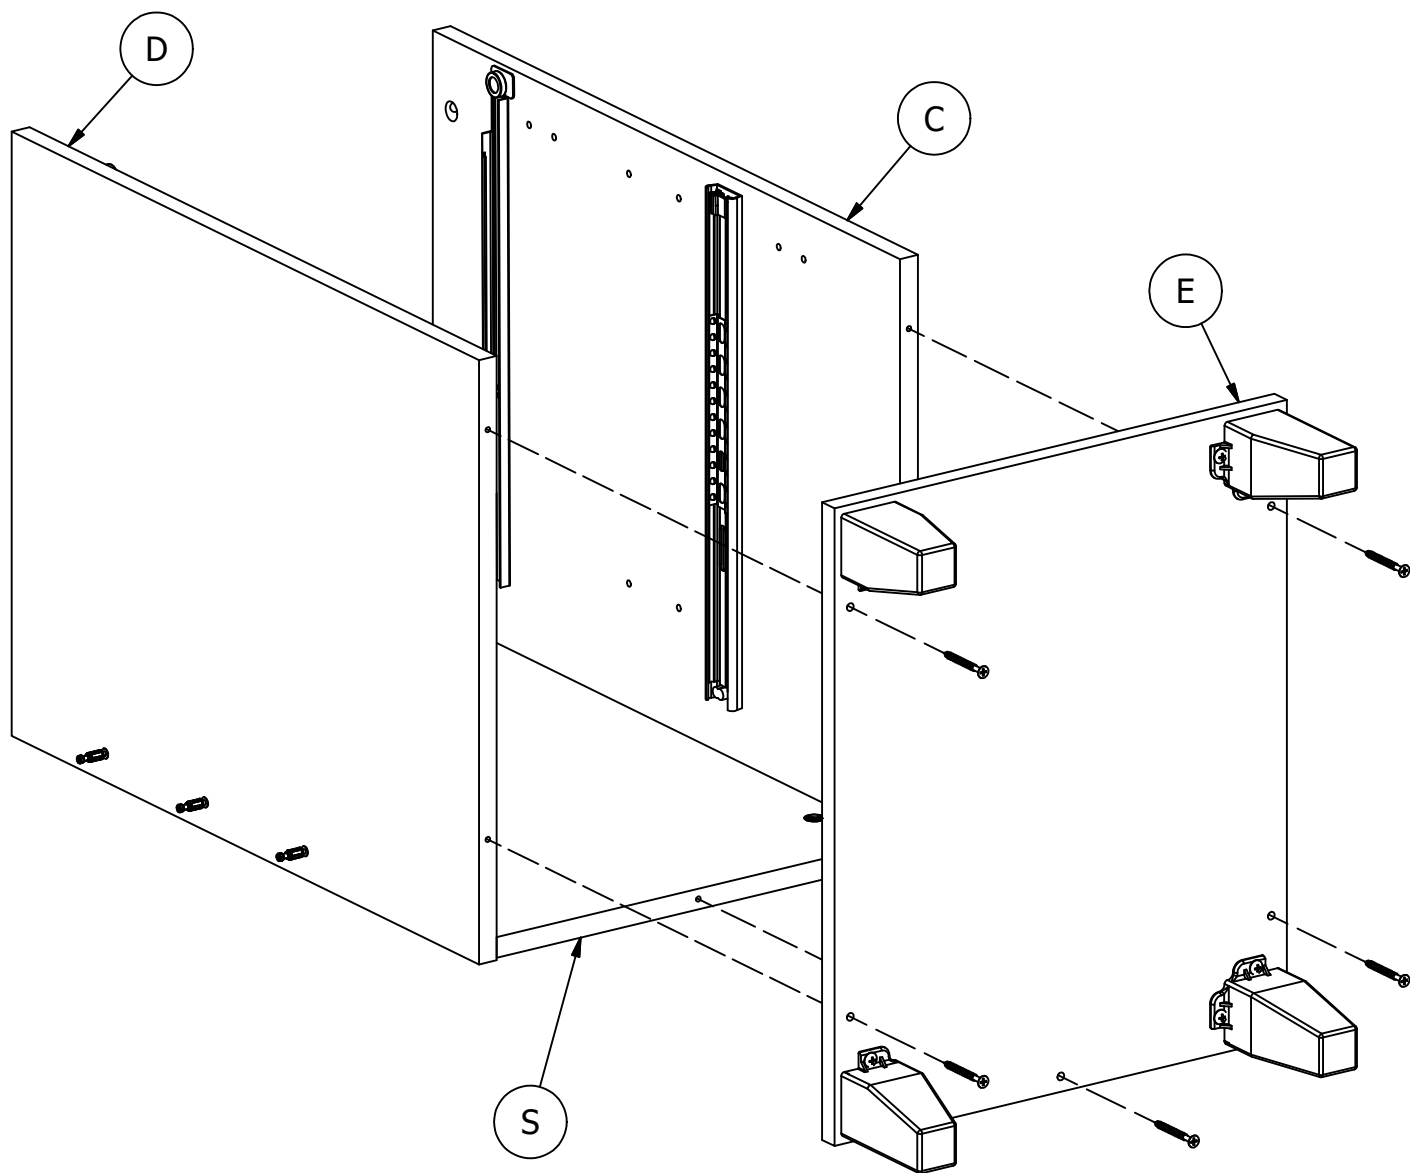

STEP 22 Assemble Panels

STEP 22 Assemble Panels

H181468US



KD Cam3000

[3]

[3]

Cover Cap


1

2

3

4

190°
Minimum

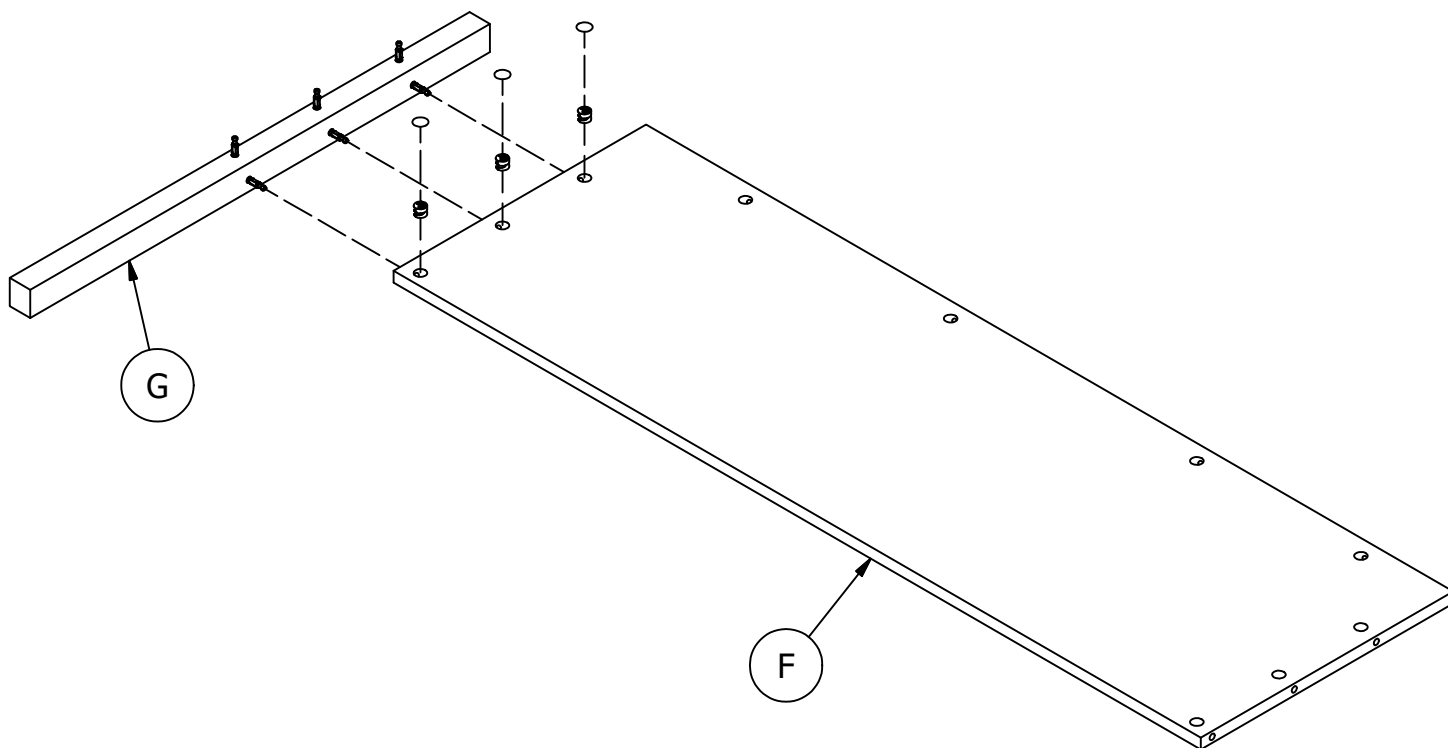

STEP 23

Assemble Panels

H181468US






KD Cam3000



Cover Cap

[3]

[3]

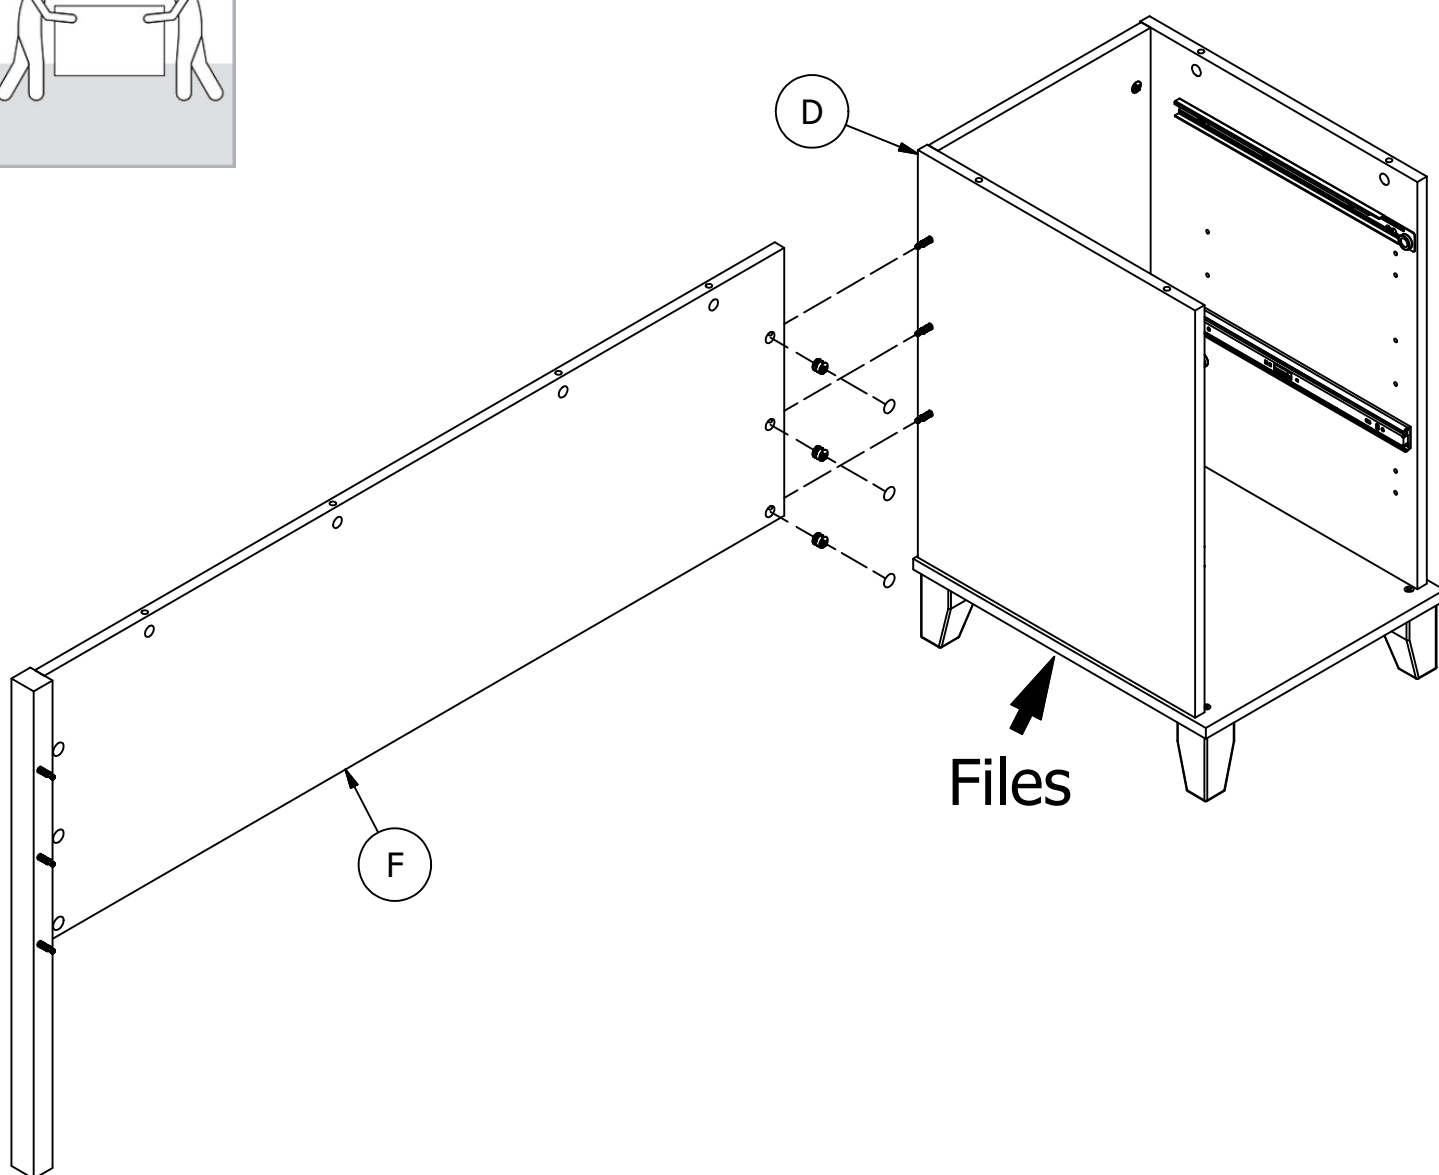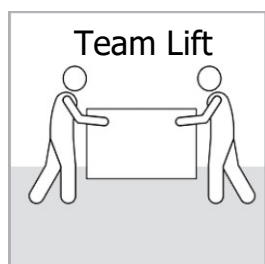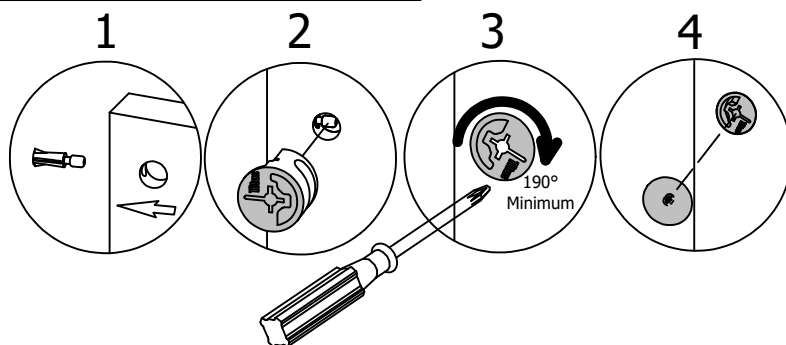


STEP 24

Assemble Panels


H181468US





[6]

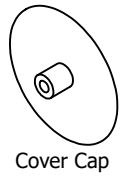

[6]

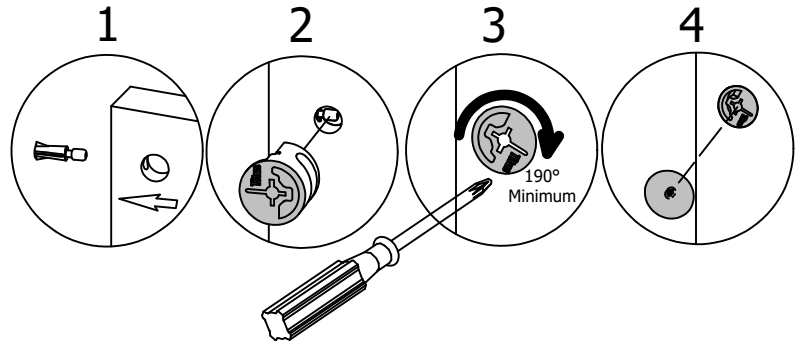

Team Lift

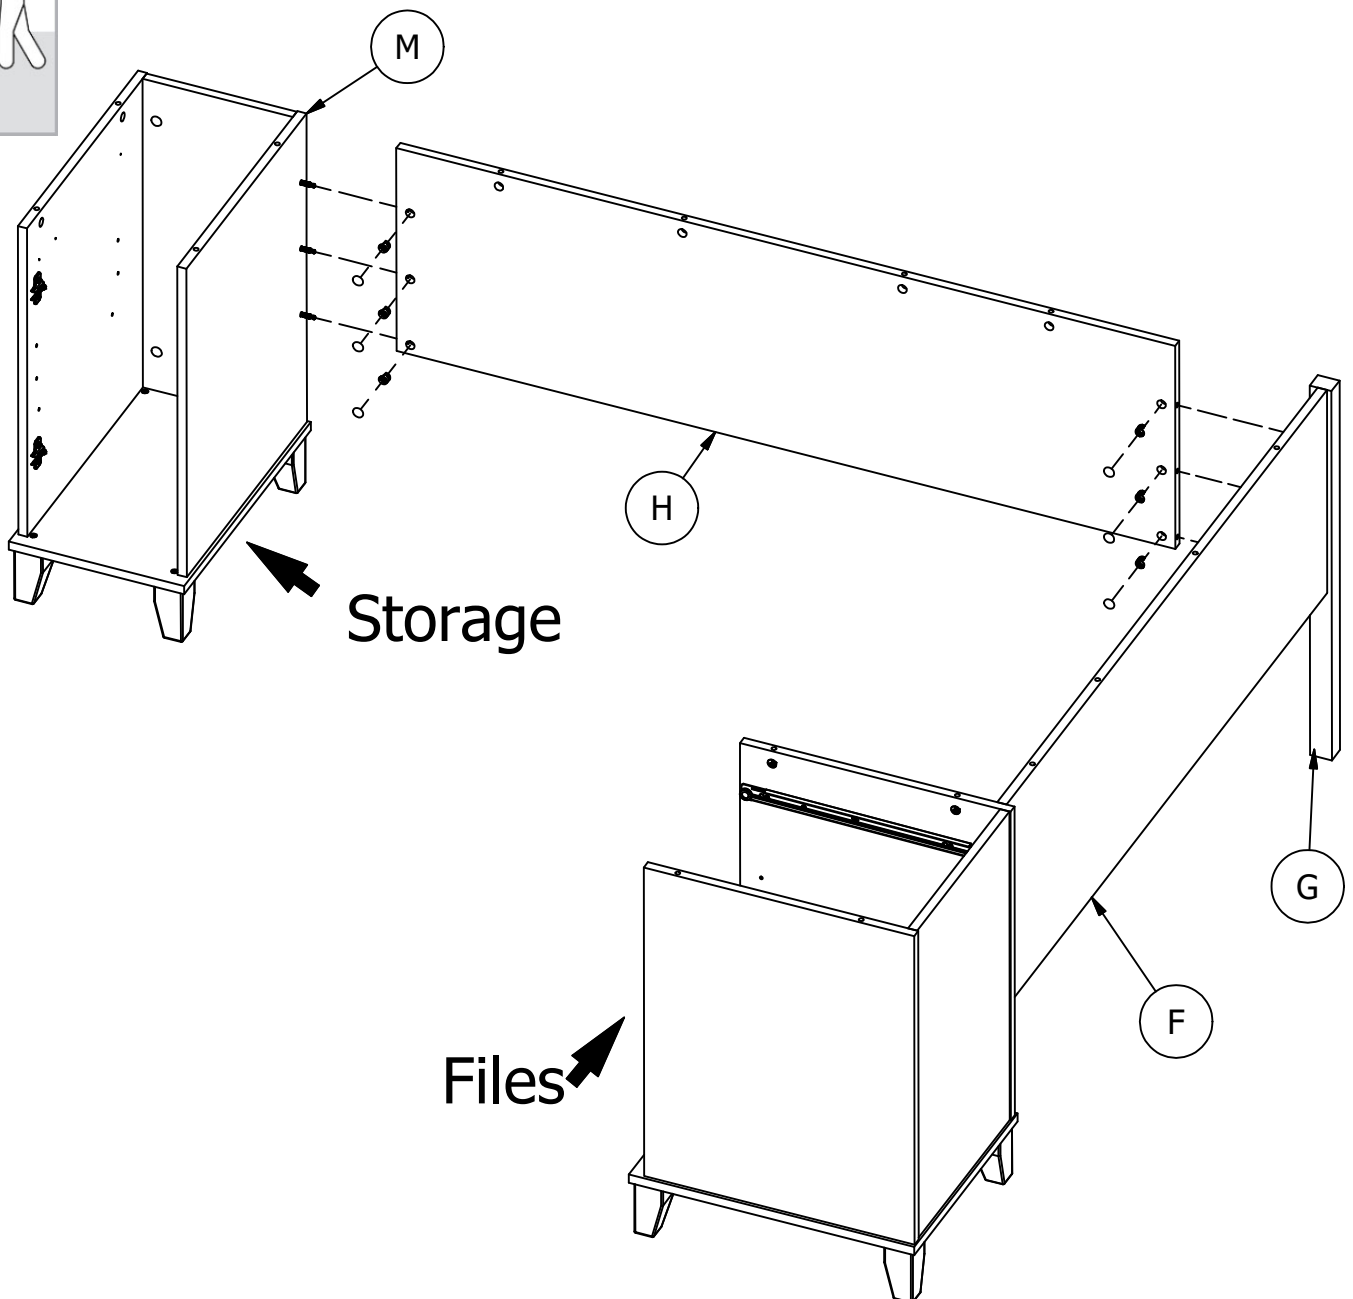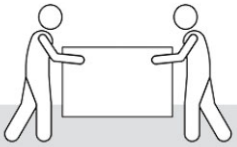



STEP 25

Prepare Panel

H72988 [9]
KD Bolt





H35251 [4]
#10 x 1/2"

H39922 [2]
Strap

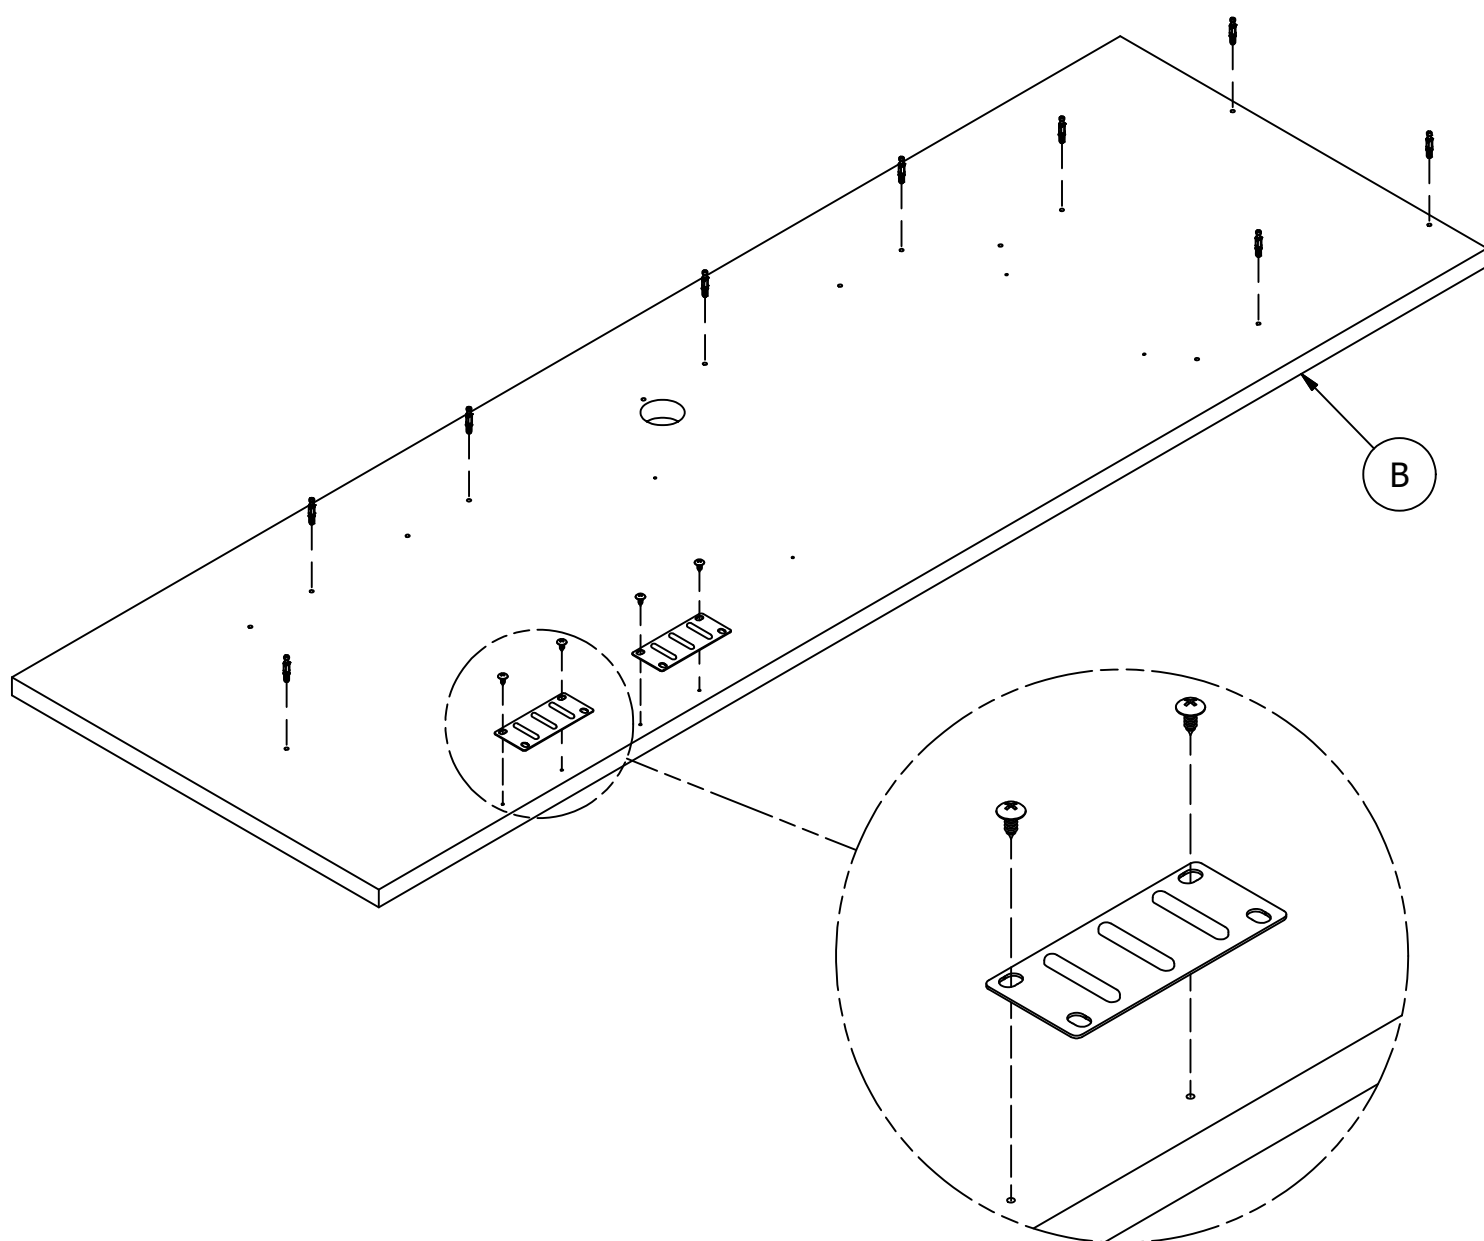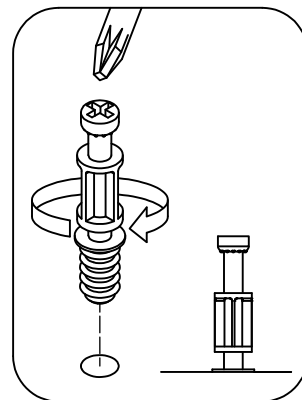

STEP 26

Attach Hardware

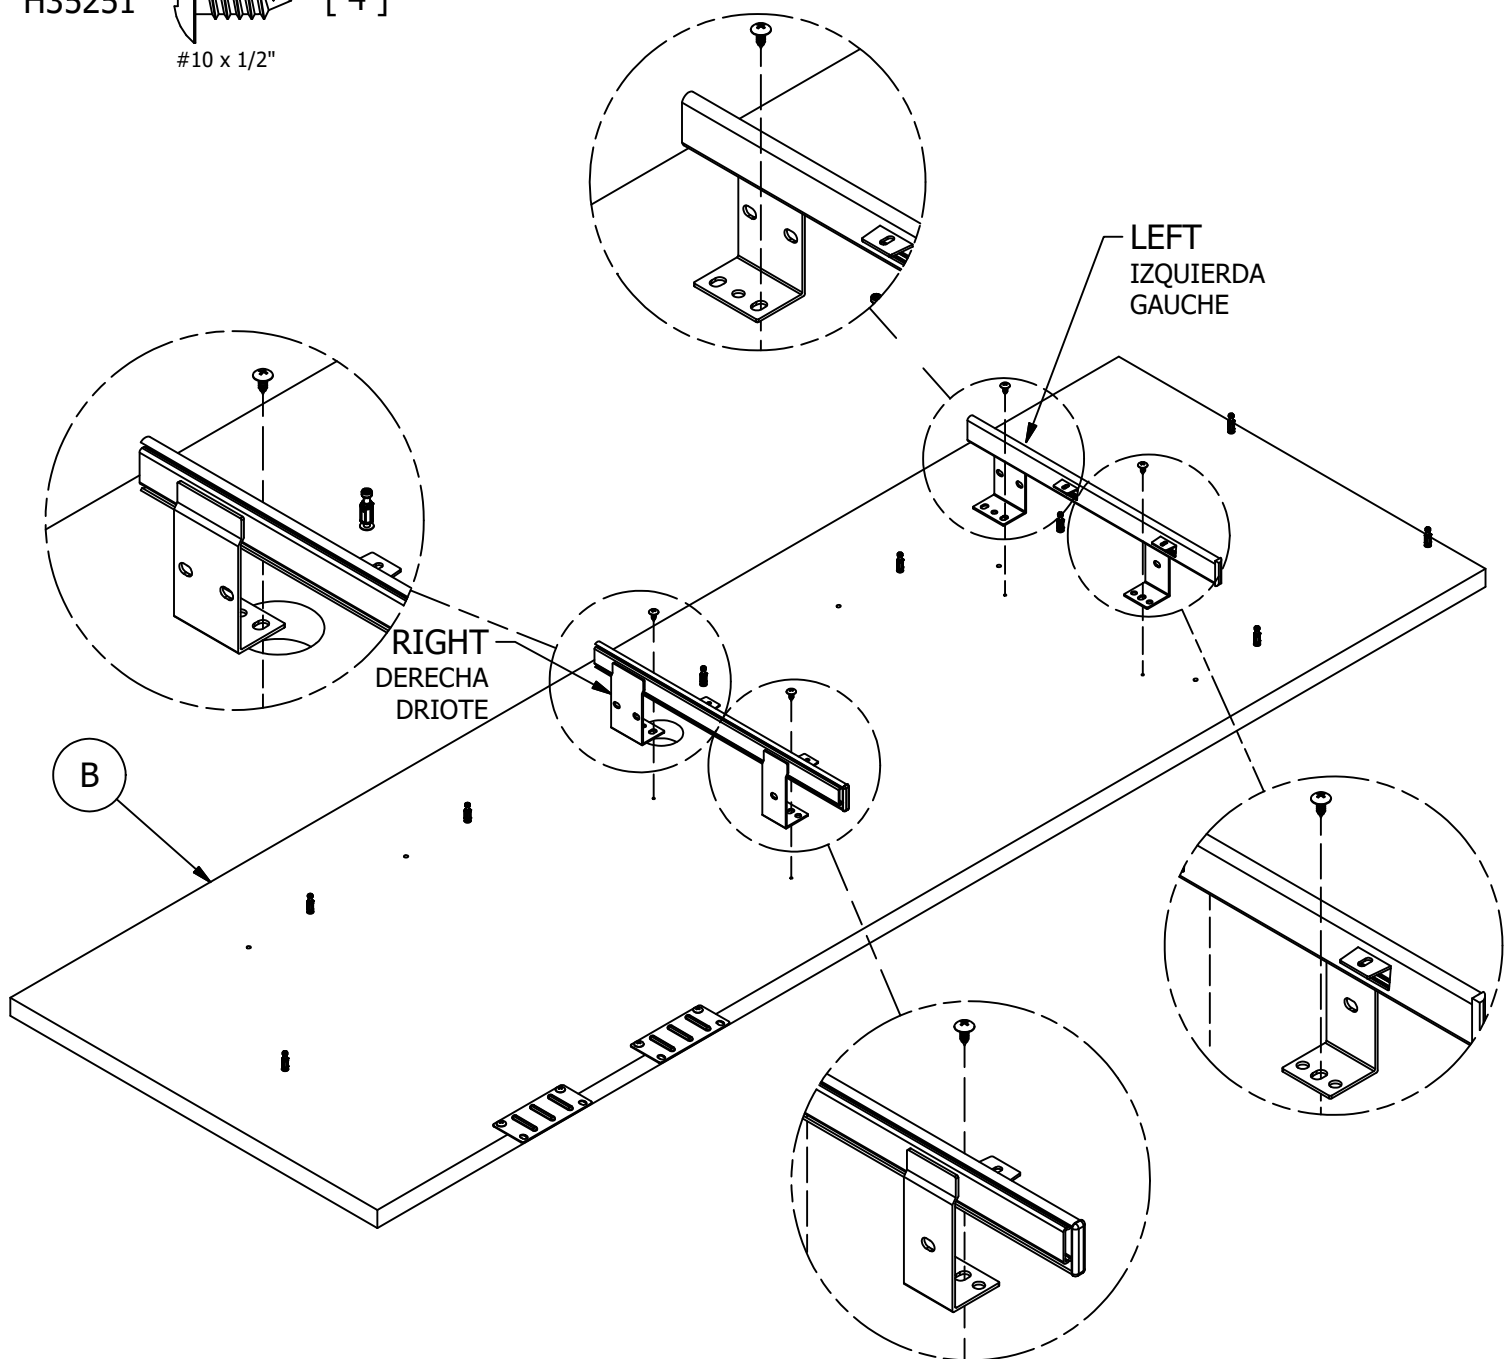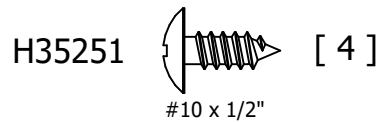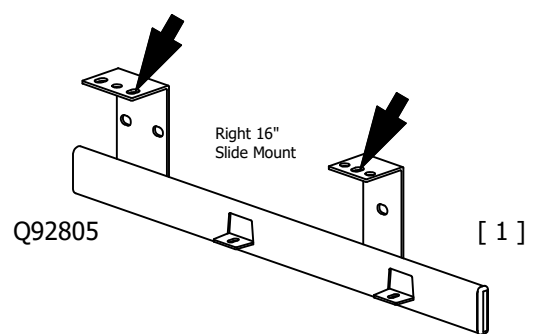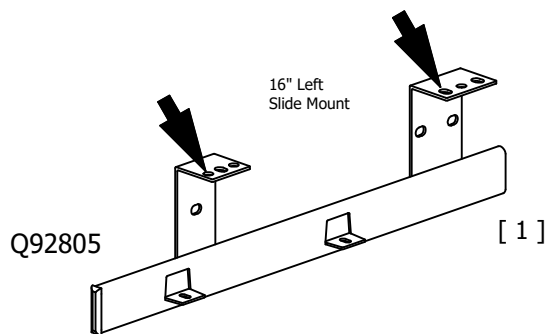


STEP 27

Attach Panel


H181468US





[9]

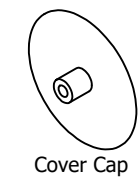

[9]

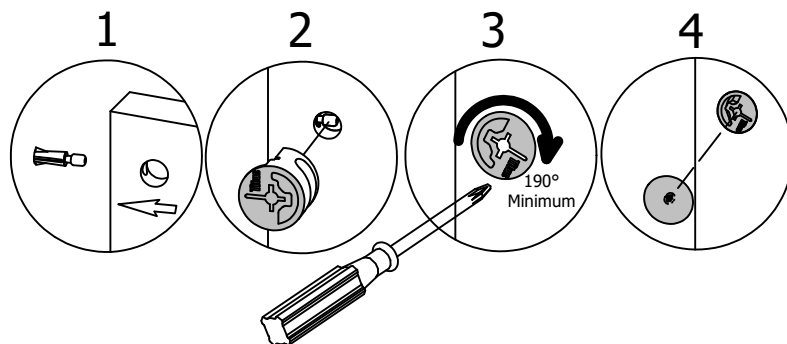


Team Lift

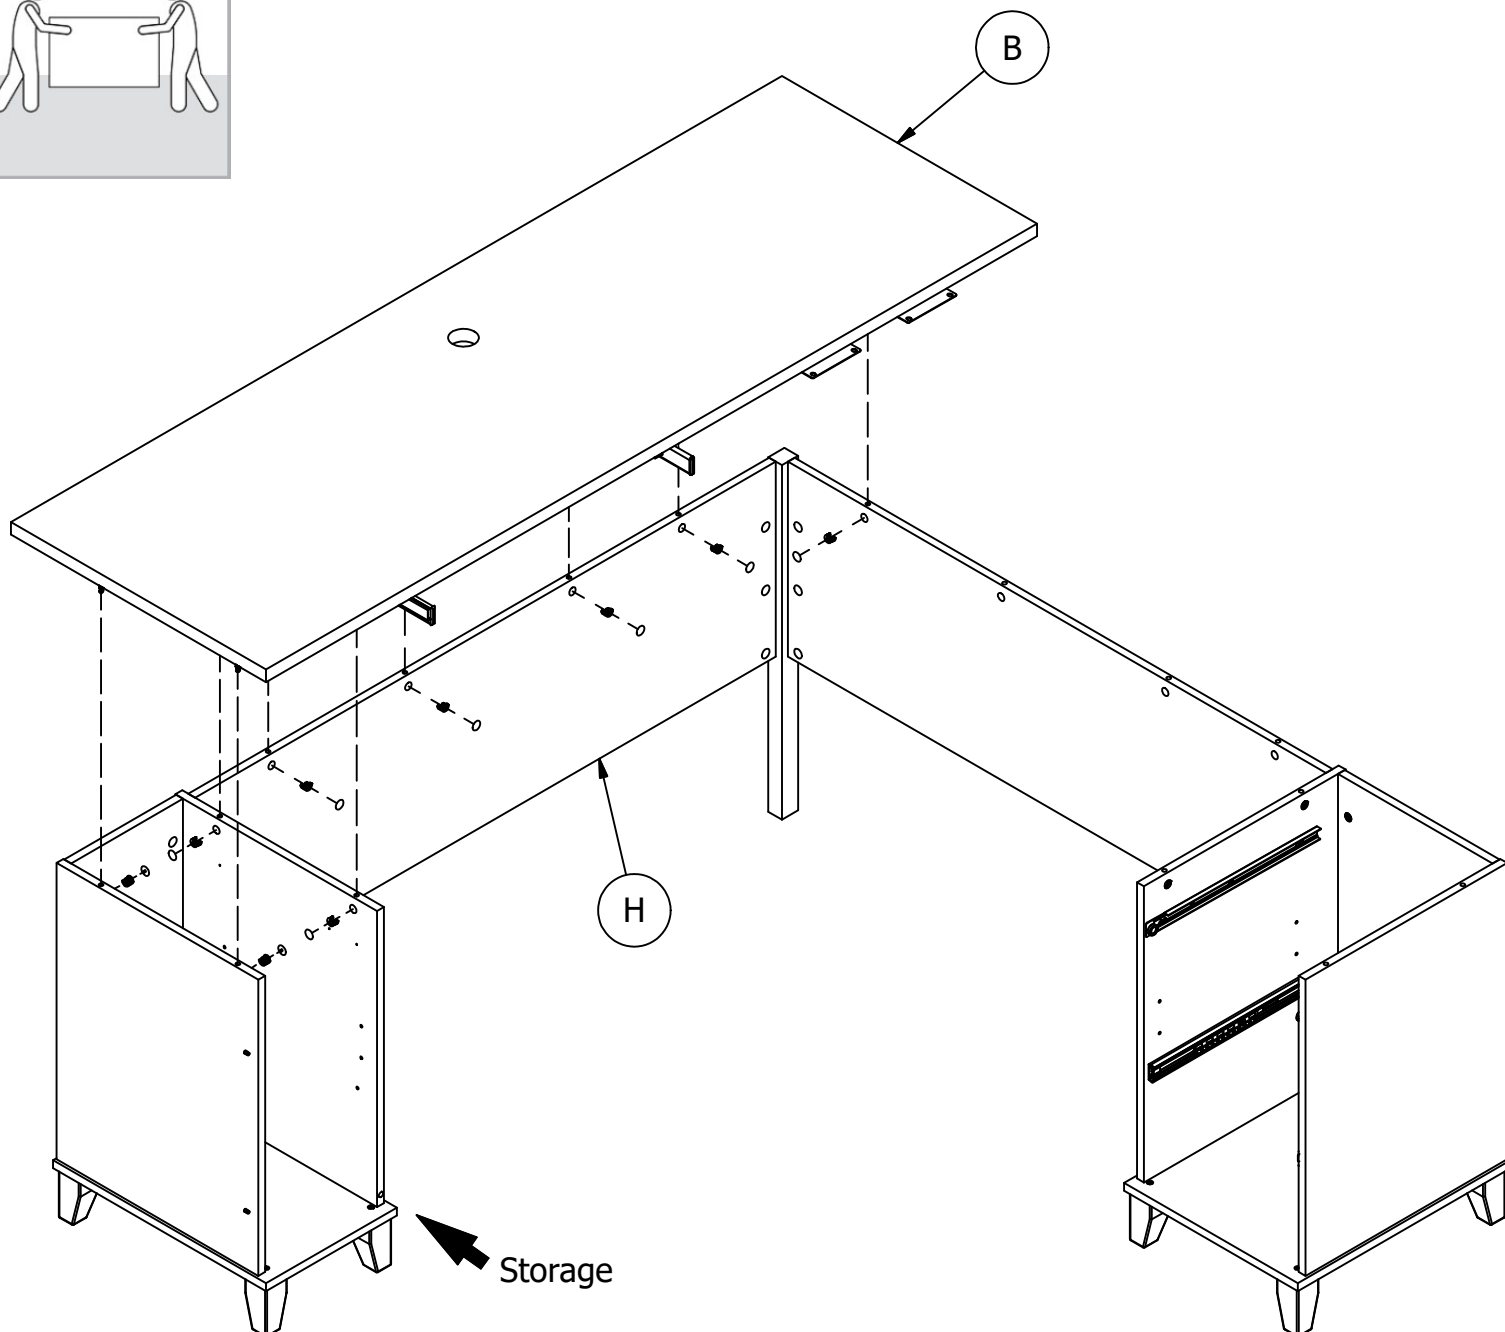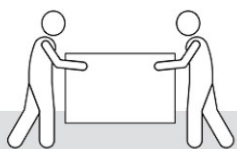

STEP 28



Prepare Panel

H72988



[7]

KD Bolt

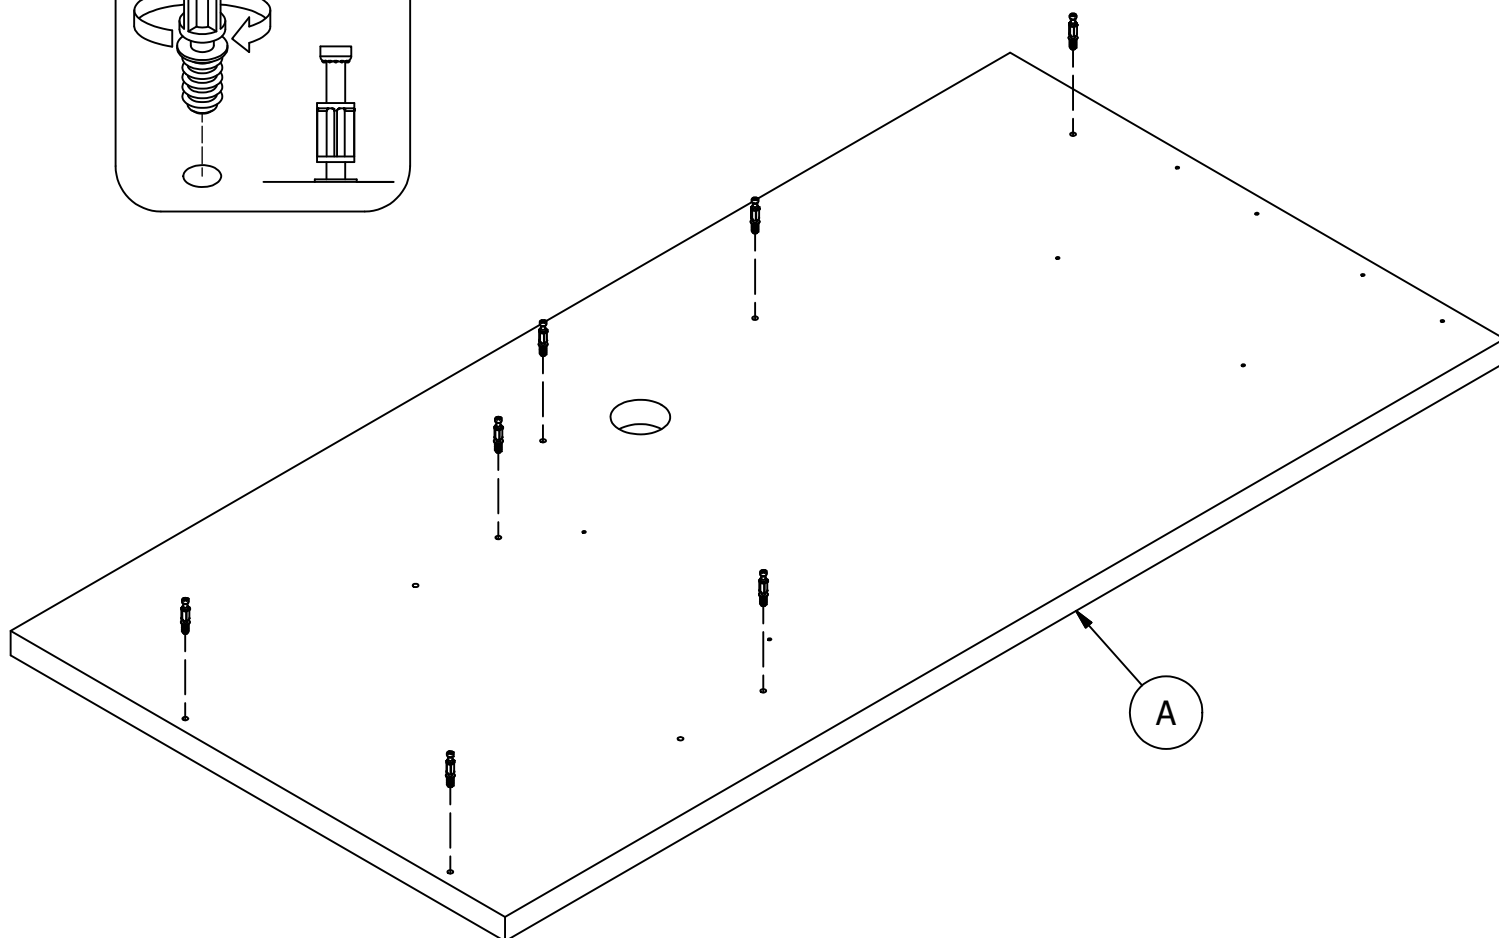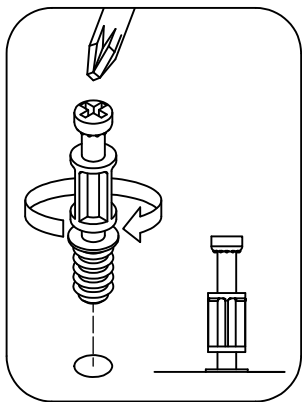


STEP 29

Attach Panel

H181468US




[7]

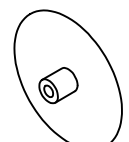

[3]




Cover Cap

H35251



[4]

#10 x 1/2"

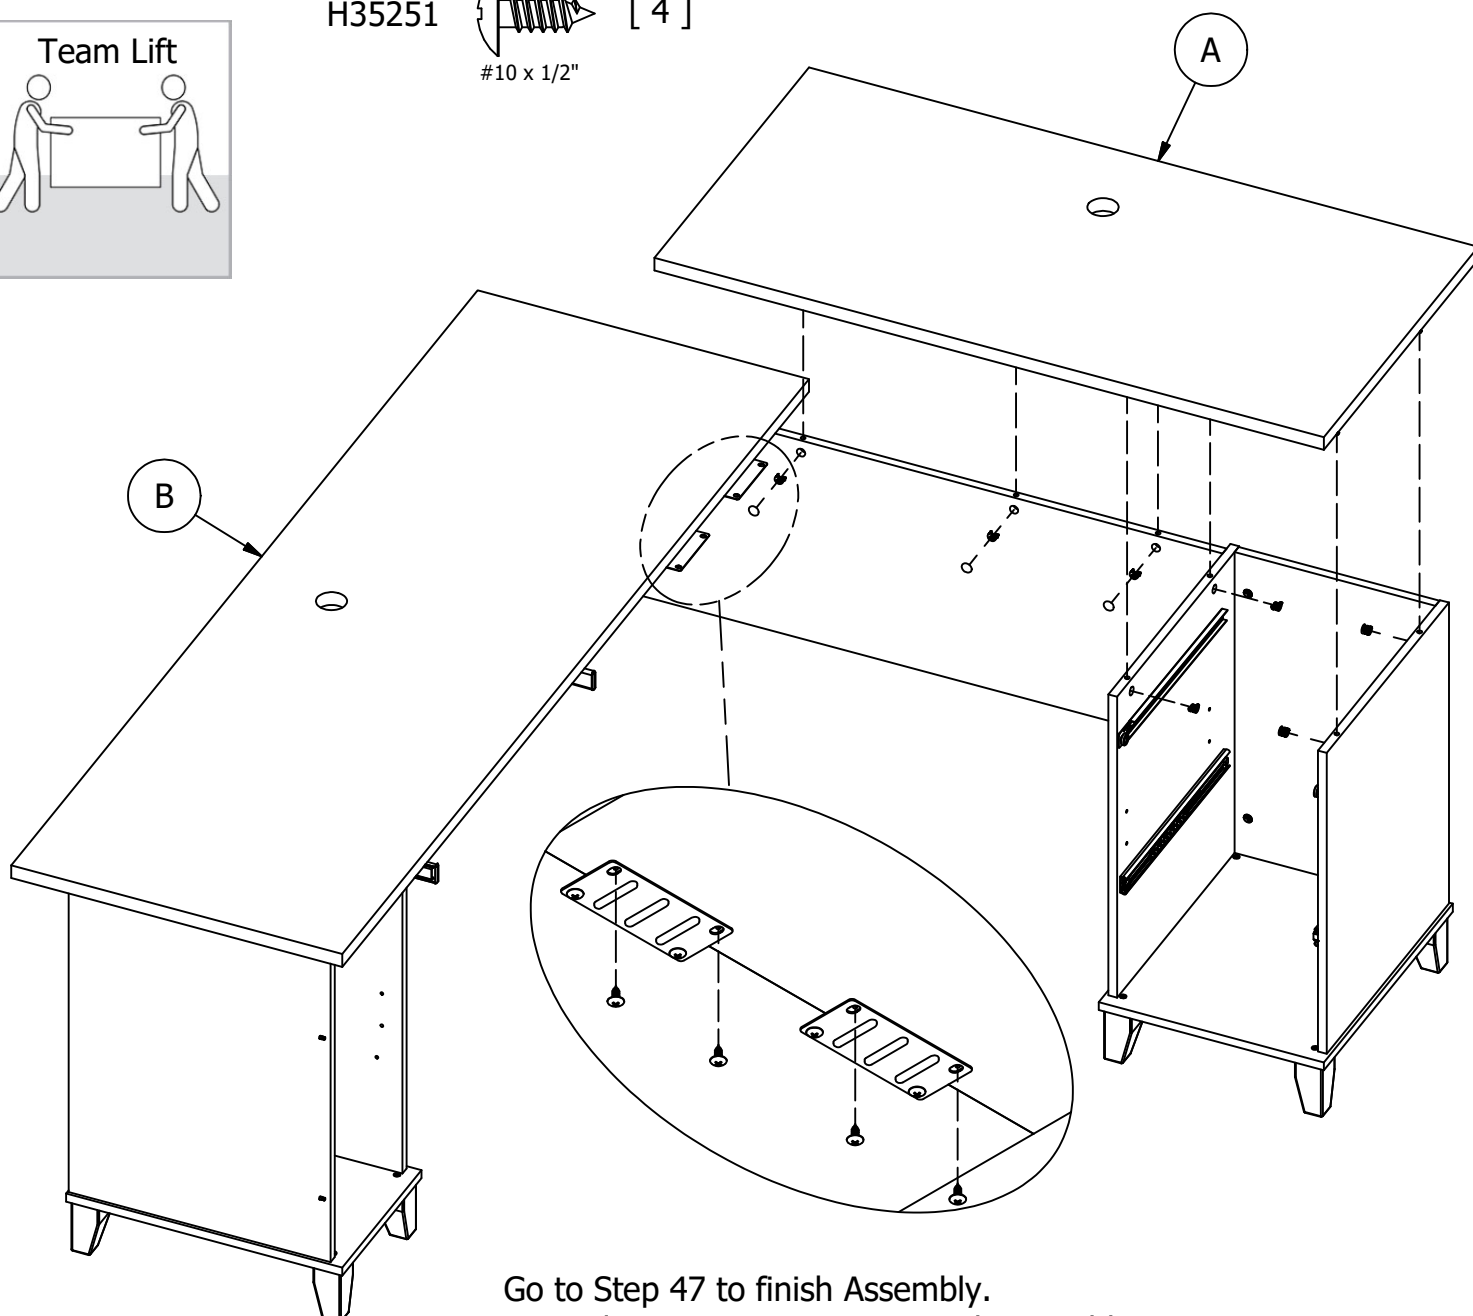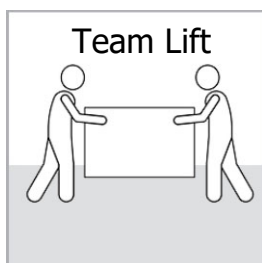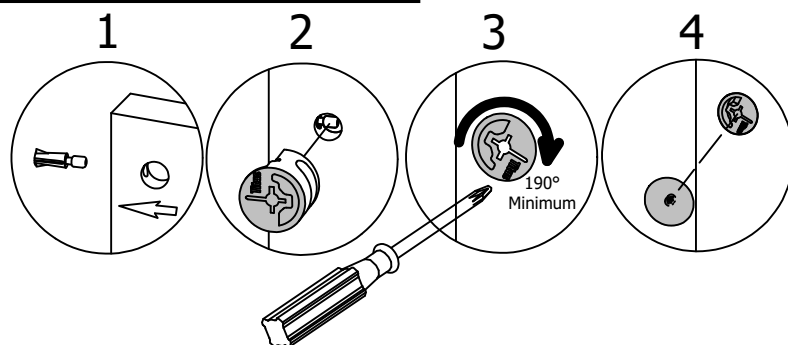


Go to Step 47 to finish Assembly.
Vaya al paso 47 para terminar el ensamblaje.
Passez à l'étape 47 pour terminer l'assemblage.

STEP 30

Prepare Panels


H72988



KD Bolt



[7]

H126364

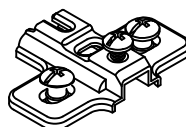

Mounting Plate

[2]

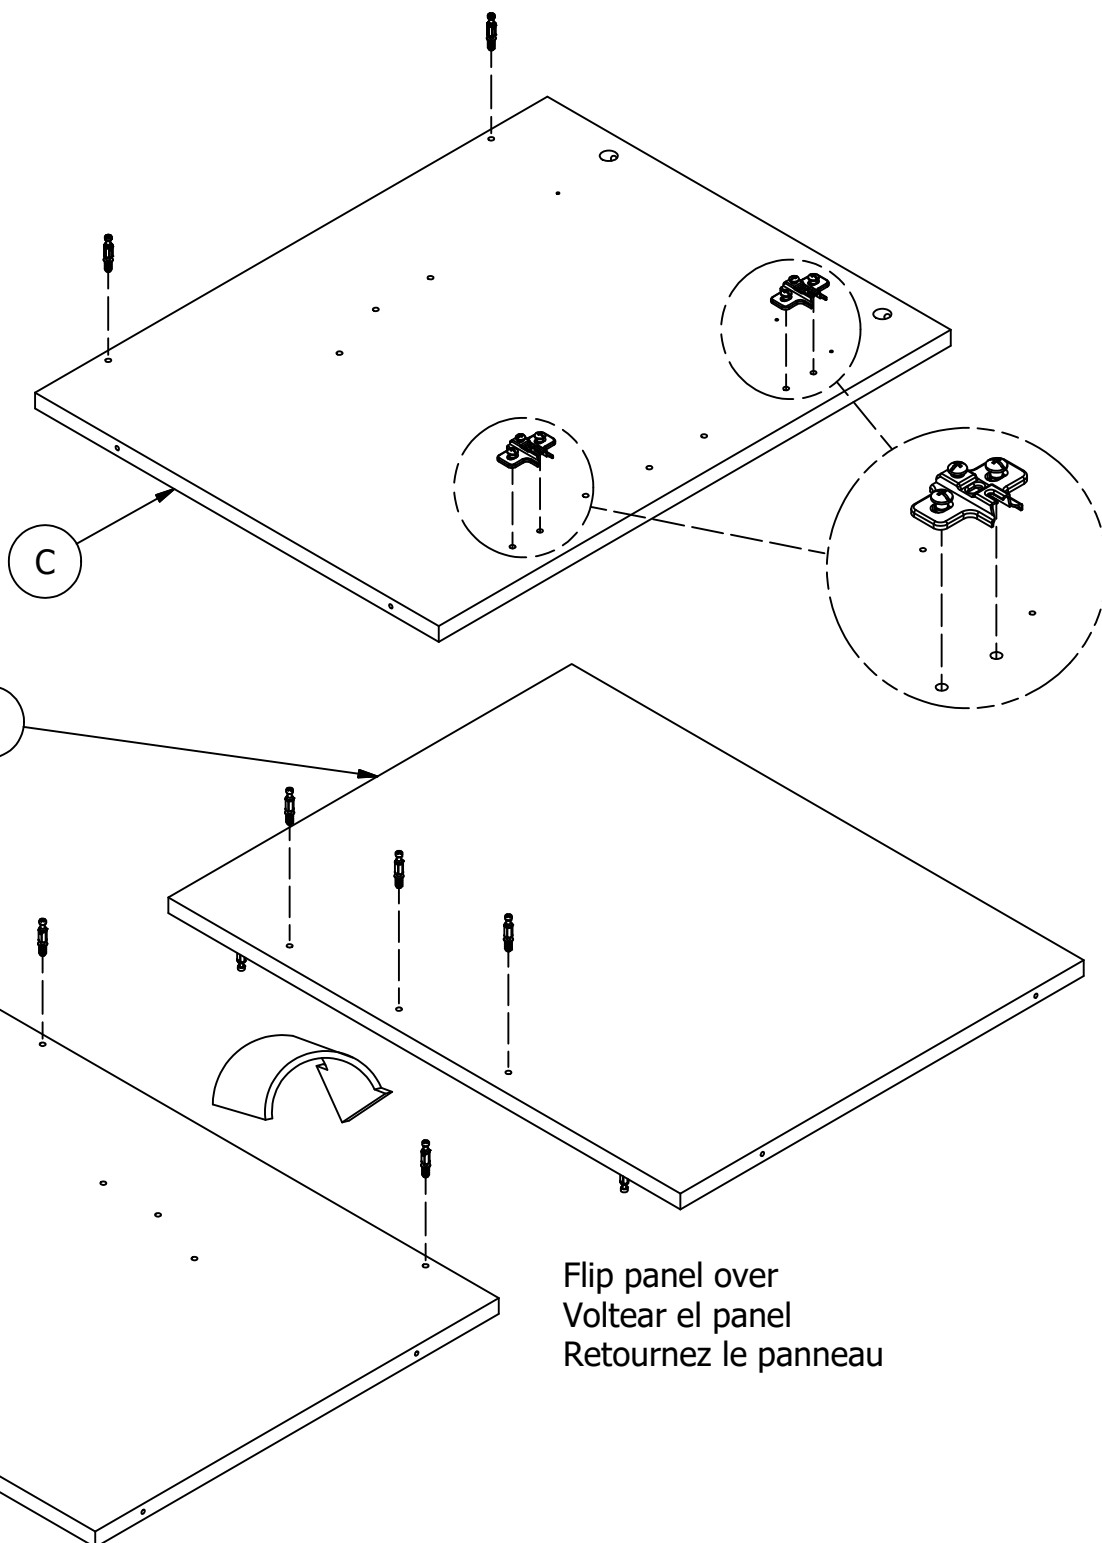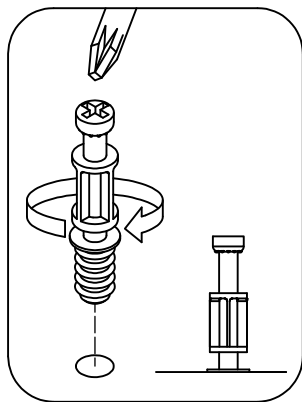

Flip panel over
Voltear el panel
Retournez le panneau

STEP 31

Assemble Panels

Scan QR Code to
Watch Video on:




How to Tighten
KD Cams

H181468US



KD Cam3000



Cover Cap

[4]






[4]

1


2

3

4

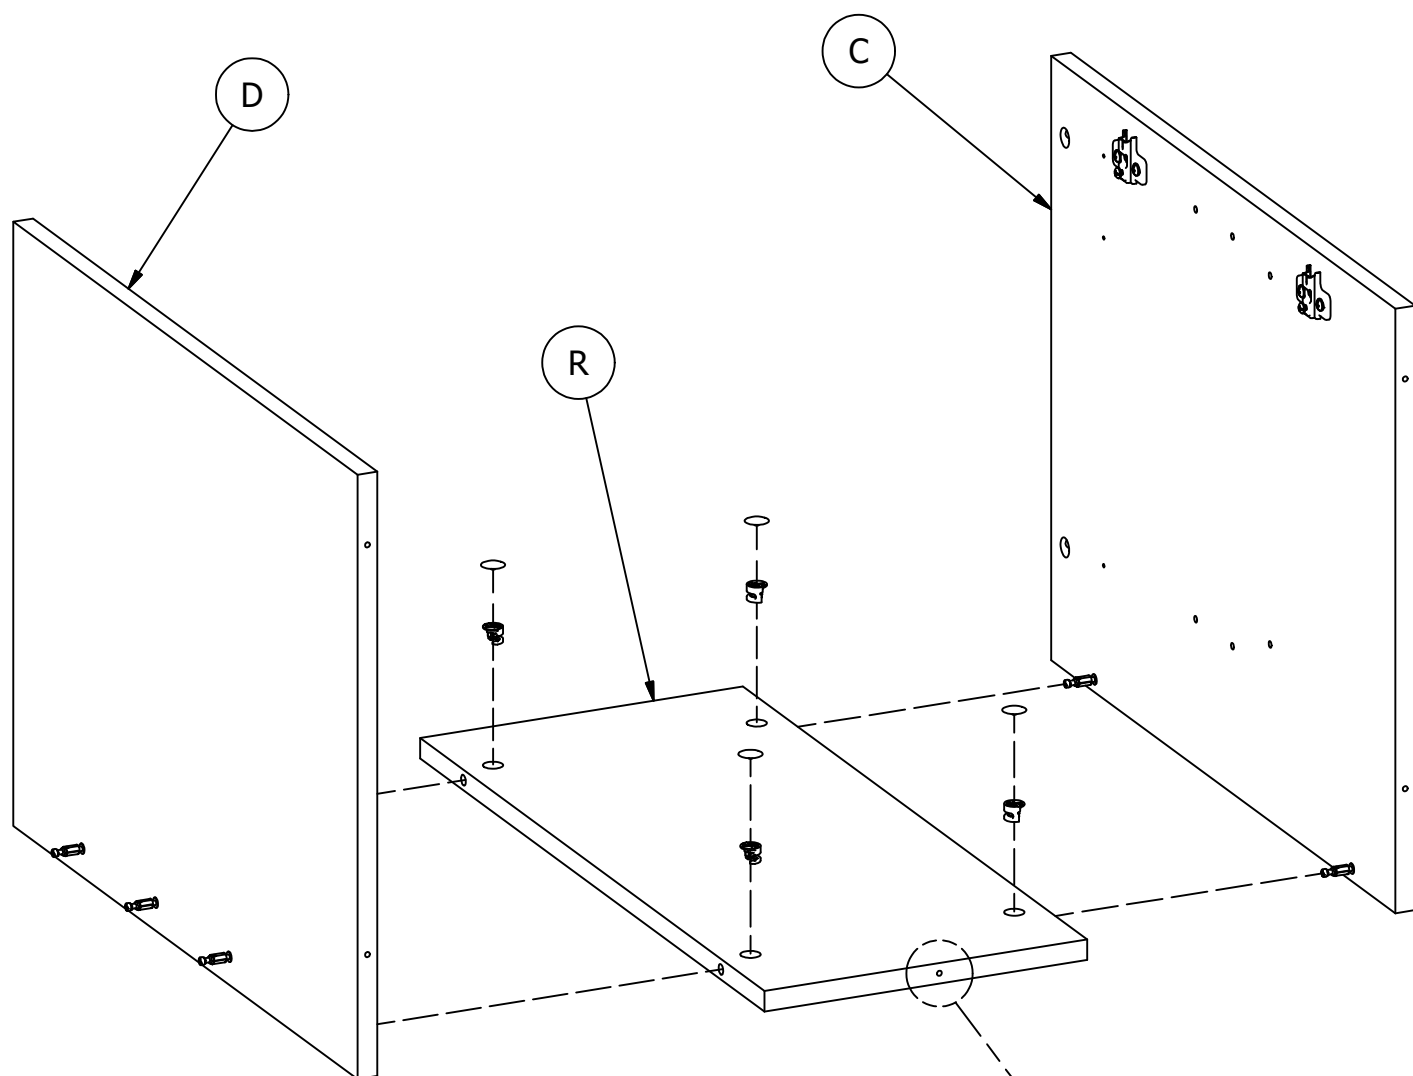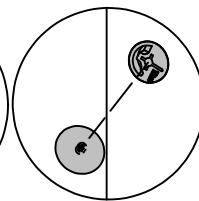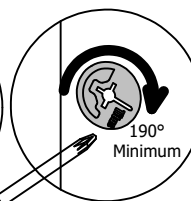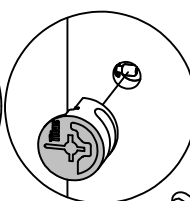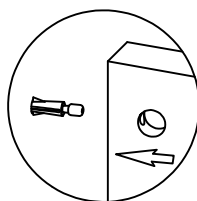


Orientation
Orientación
L'orientation

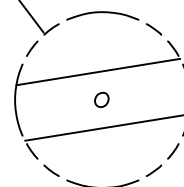

STEP 32

Prepare Panel


H143460



[4]


#12 x 4"

H35251




[8]

#10 x 1/2"

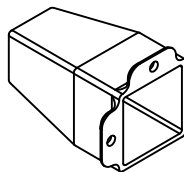


[4]

Foot

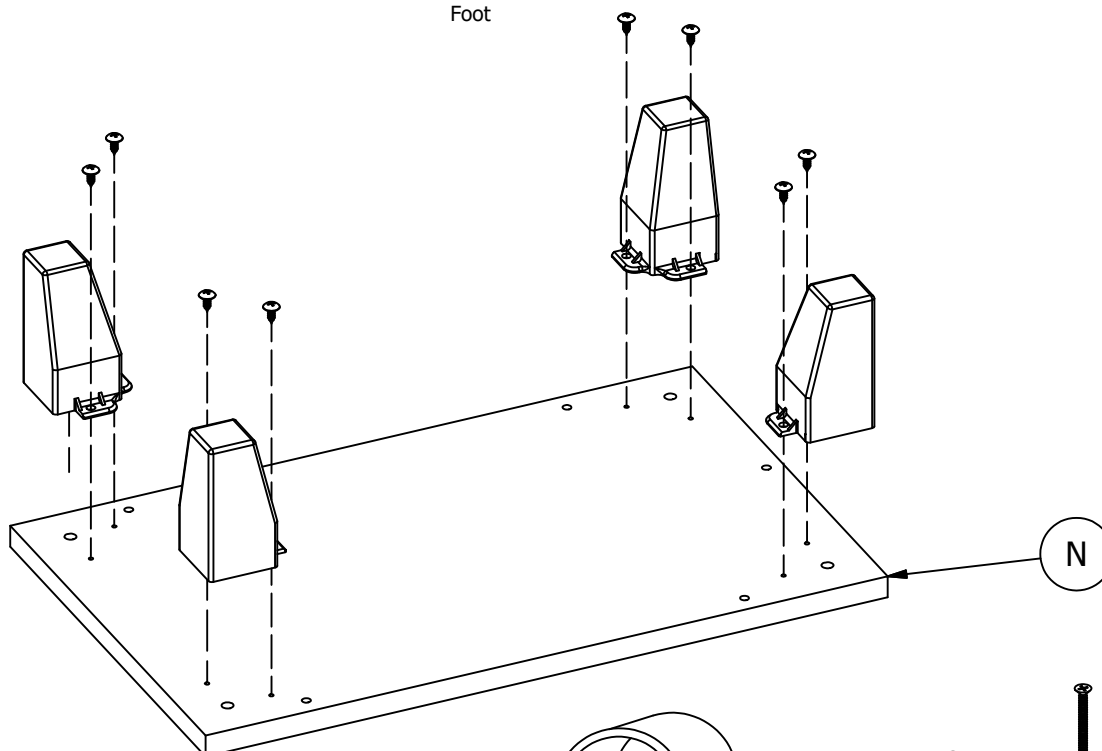


Flip panel over
Voltear el panel
Retournez le panneau

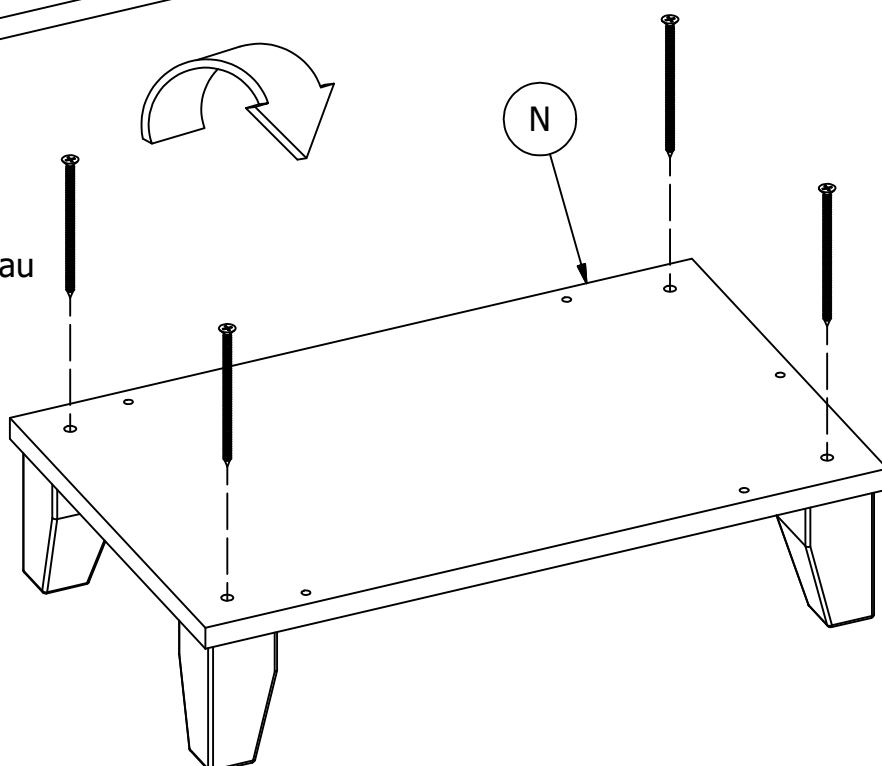

STEP 33


Assemble Panels

H23491




#10 x 2"


[5]

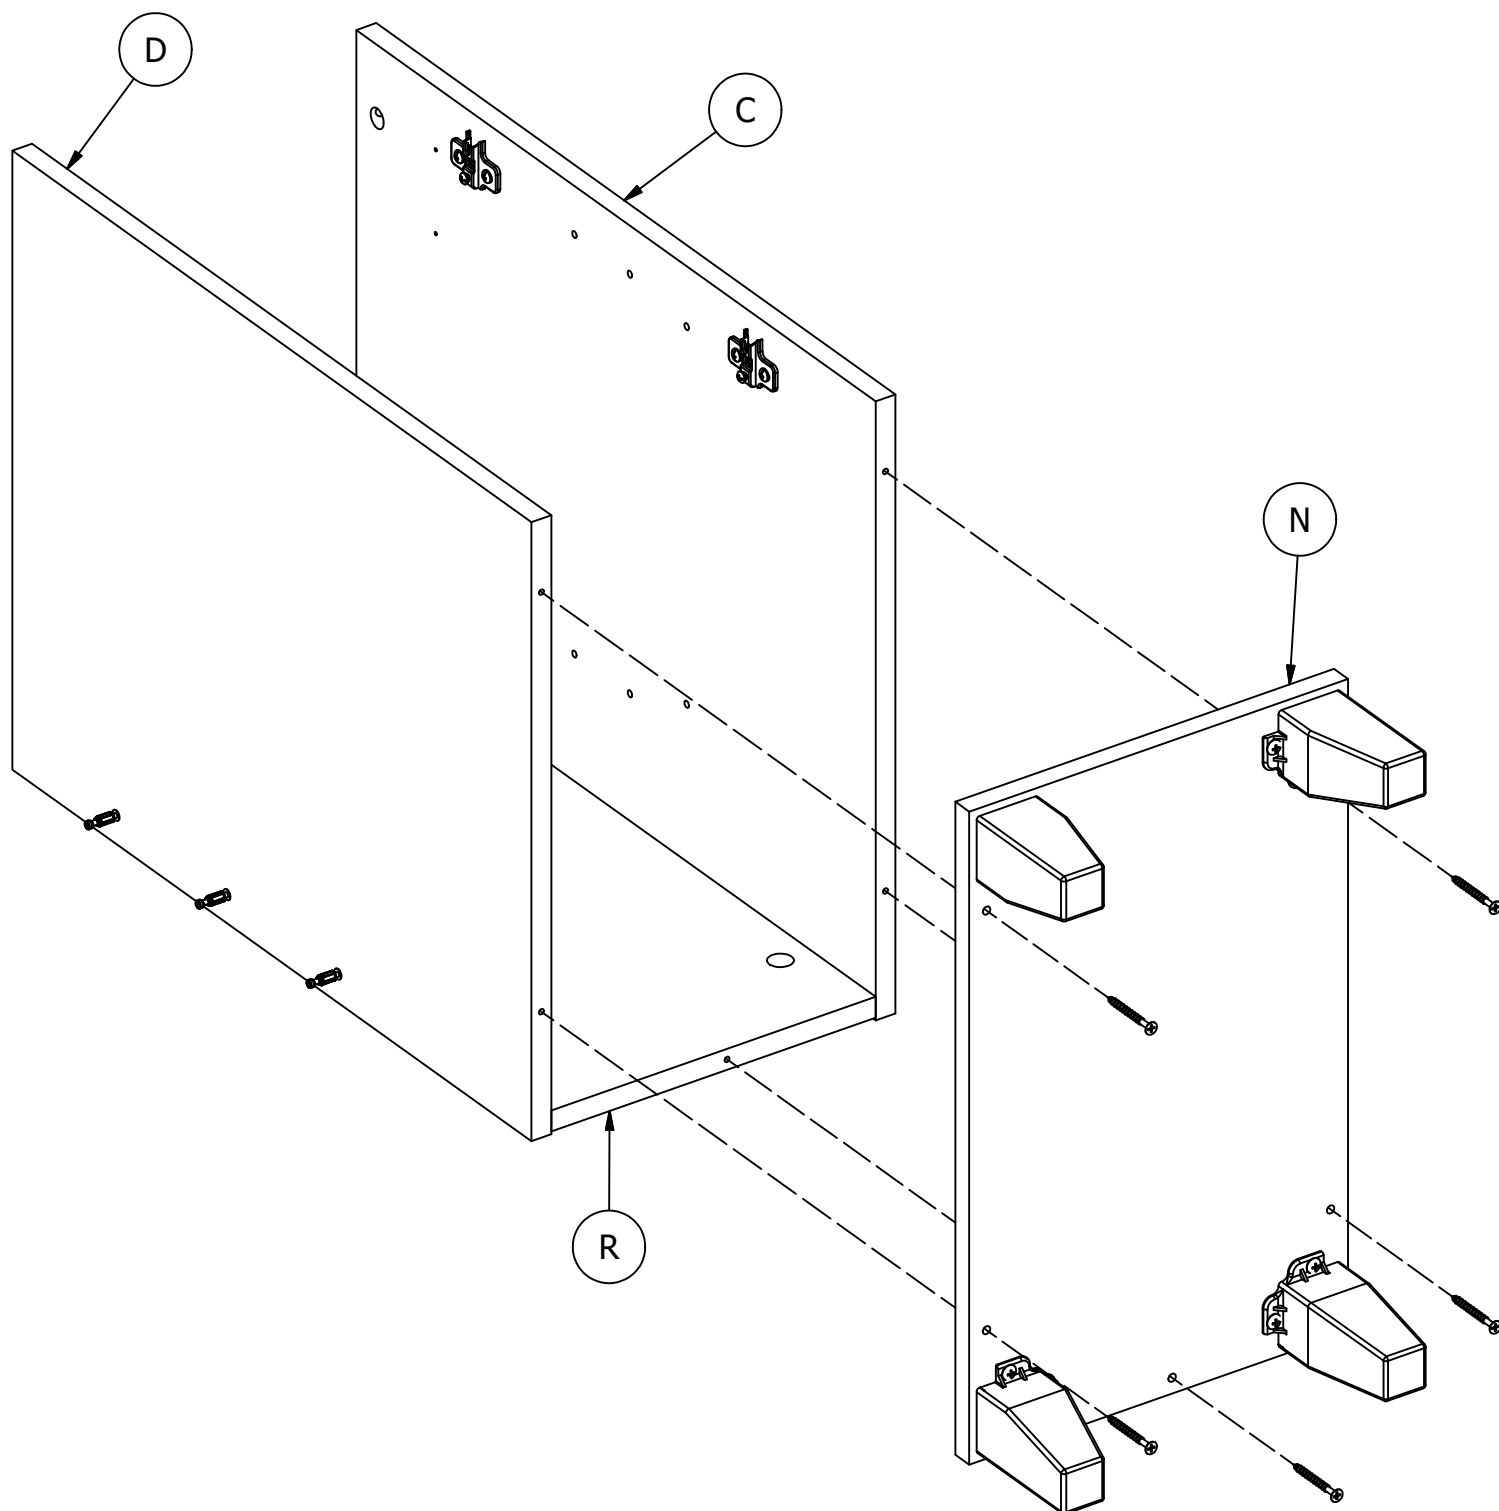


STEP 34


Prepare Panel

H72988  [2]
KD Bolt


H28917  [3]
#6 x 1/2" Silver

H195734  [2]
M6.3 X 13MM

*  [1]
Q89897 16" Slide Mount Left

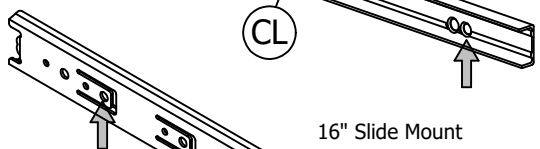
 [1]
Q216346 16" Slide Mount


Orientation
Orientación
L'orientation

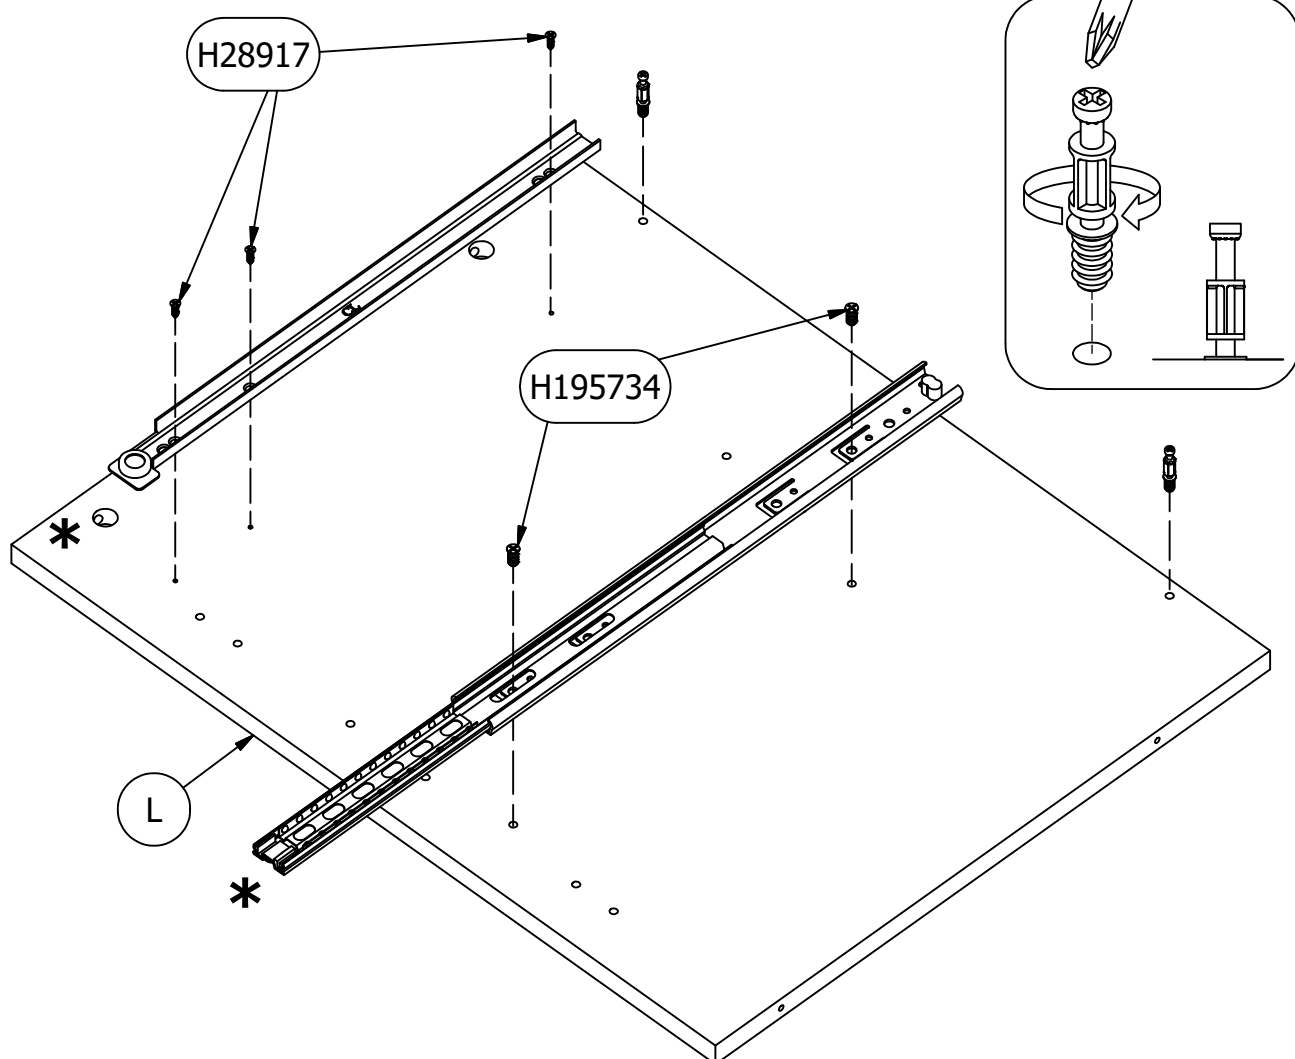


STEP 35

Prepare Panel

H28917  [3]
#6 x 1/2" Silver

H195734  [2]
M6.3 X 13MM

H72988  [5]
KD Bolt

Q216346

16" Slide Mount


[1]

Q89897

16" Slide Mount

[1]

Orientation
Orientación
L'orientation

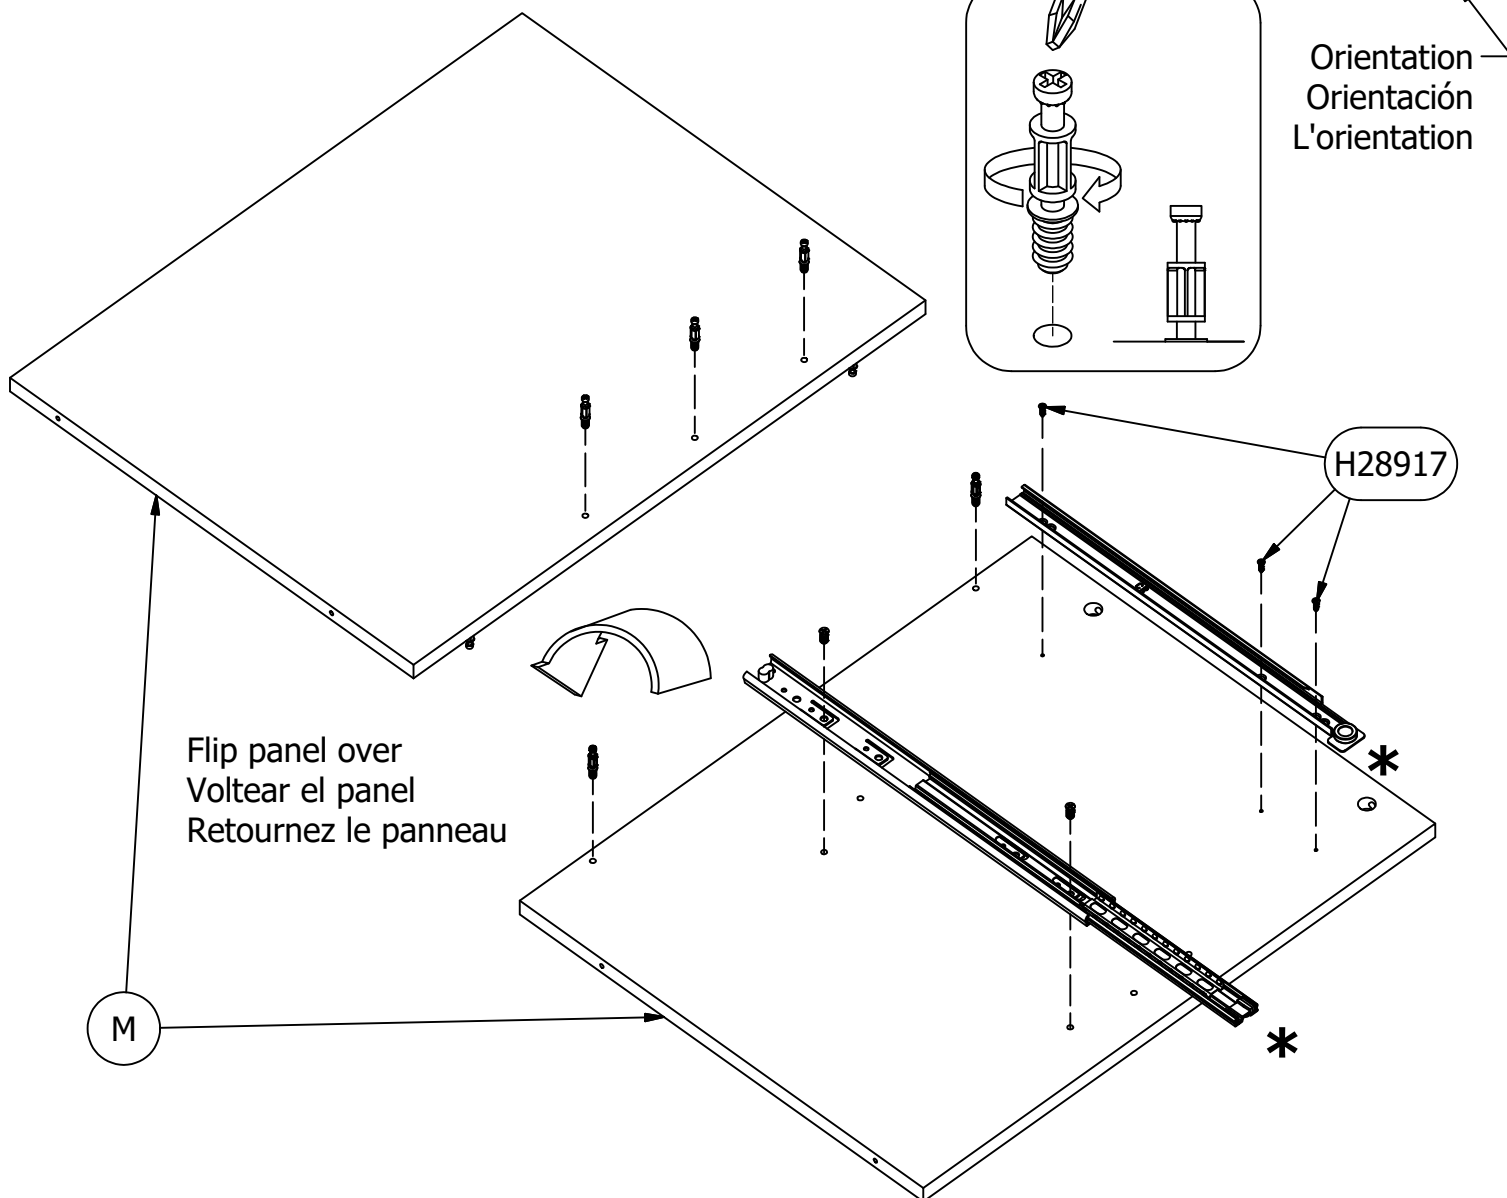



STEP 36

Assemble Panels

H181468US




[4]

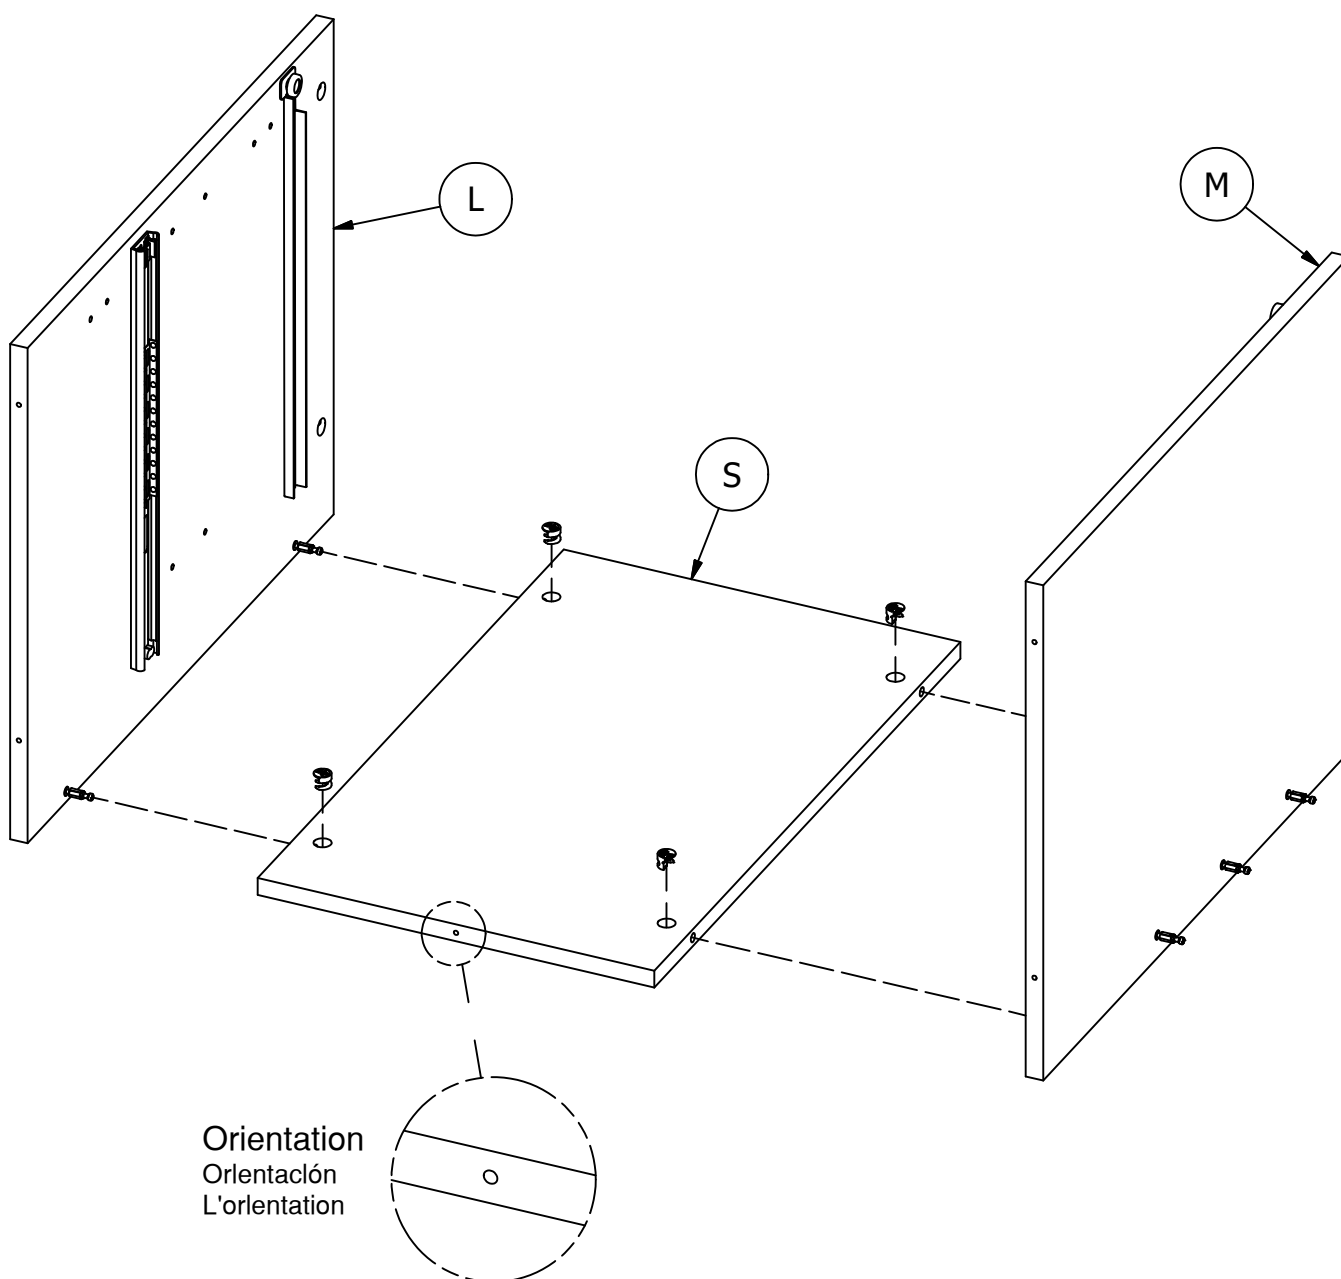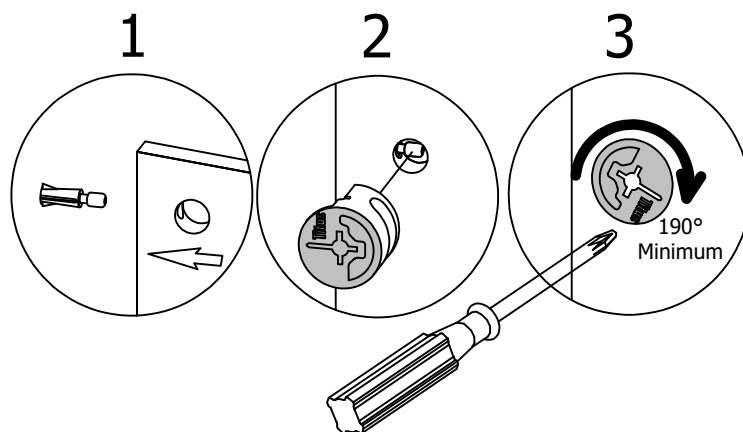



STEP 37

Prepare Panel

H143460  [4]
#12 x 4"

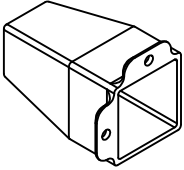 [4]
Foot


H35251  [8]
#10 x 1/2"

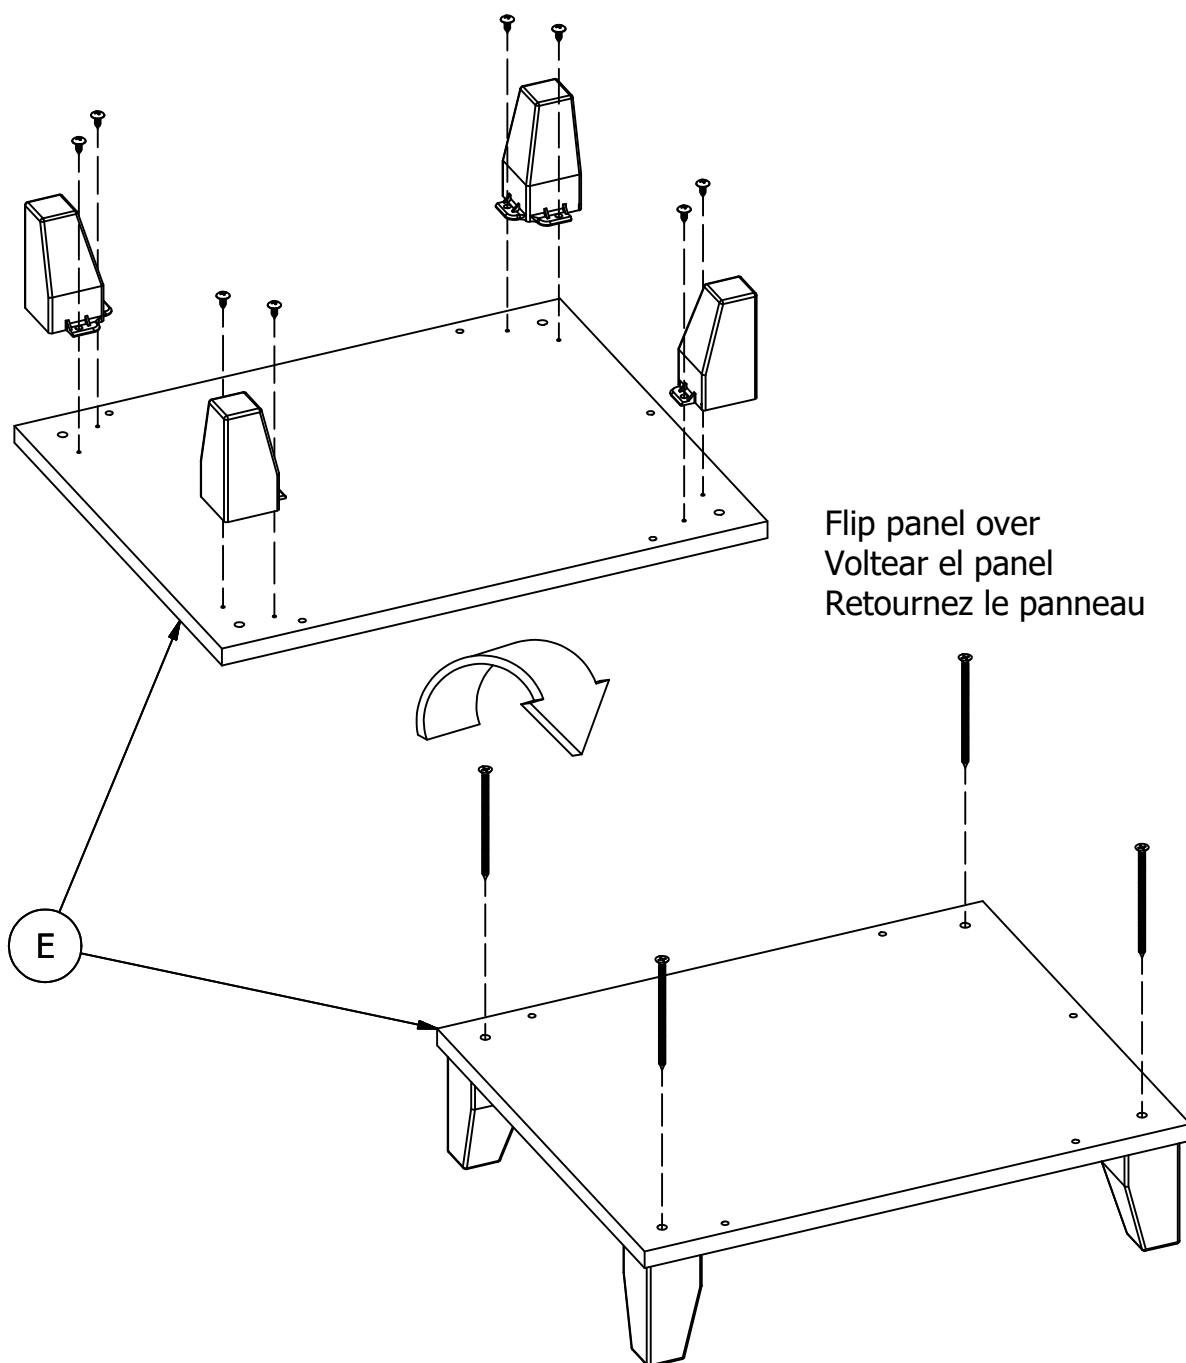

STEP 38


Assemble Panels

H23491



[5]

#10 x 2"

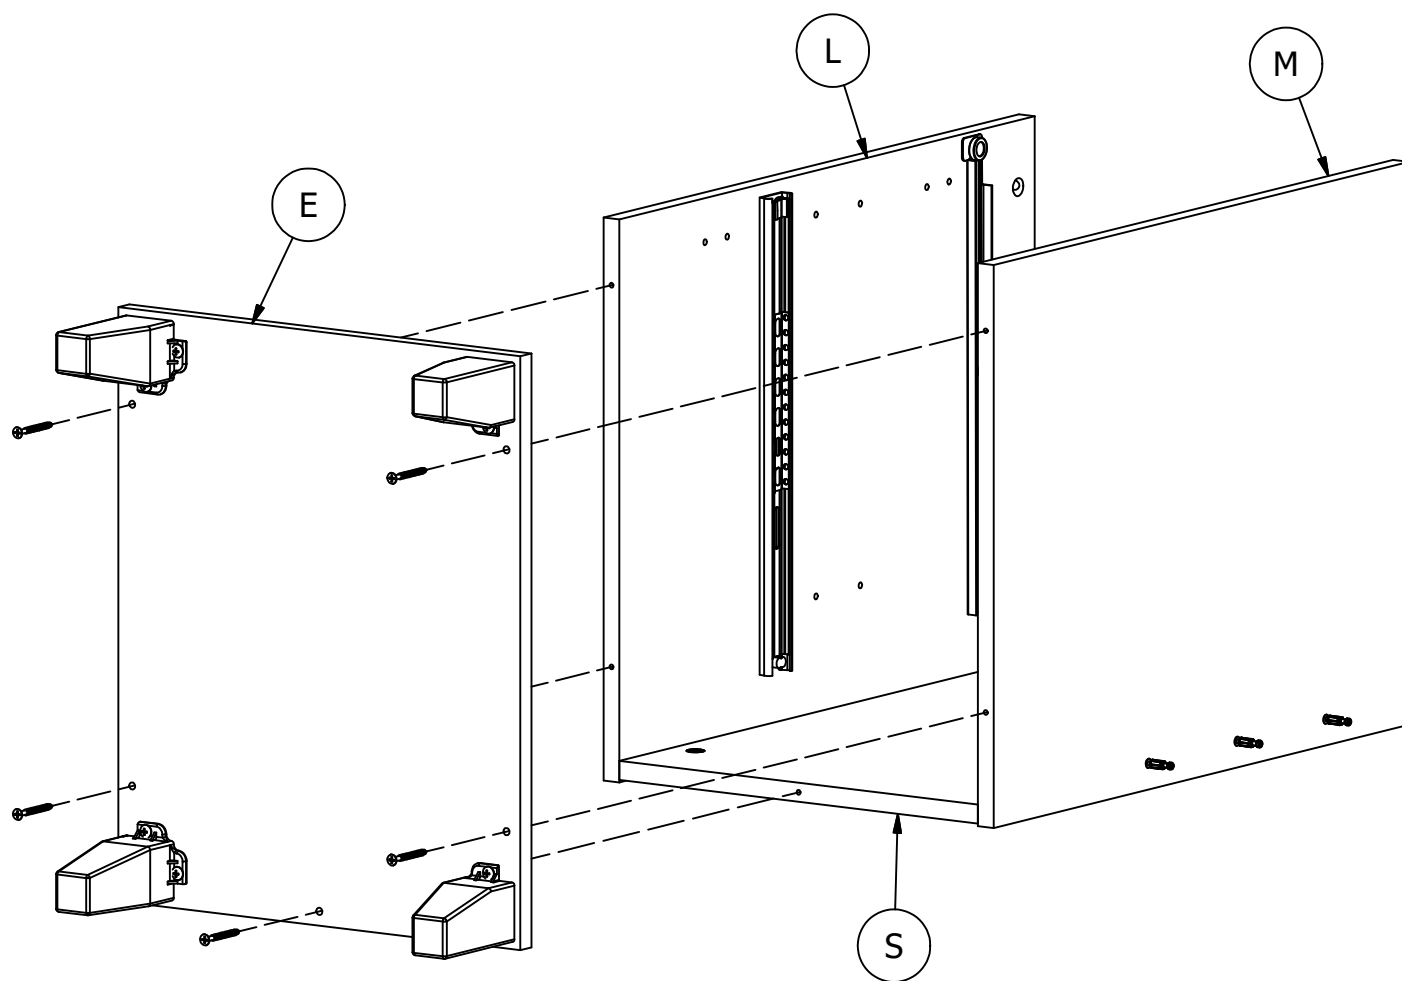

STEP 39


Assemble Panels

H181468US



KD Cam3000


[3]




Cover Cap

[3]


1

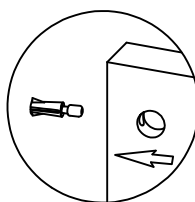



2

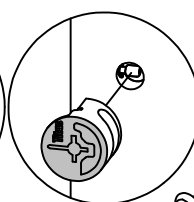

3

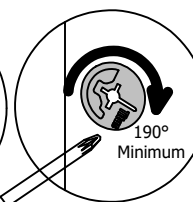

4

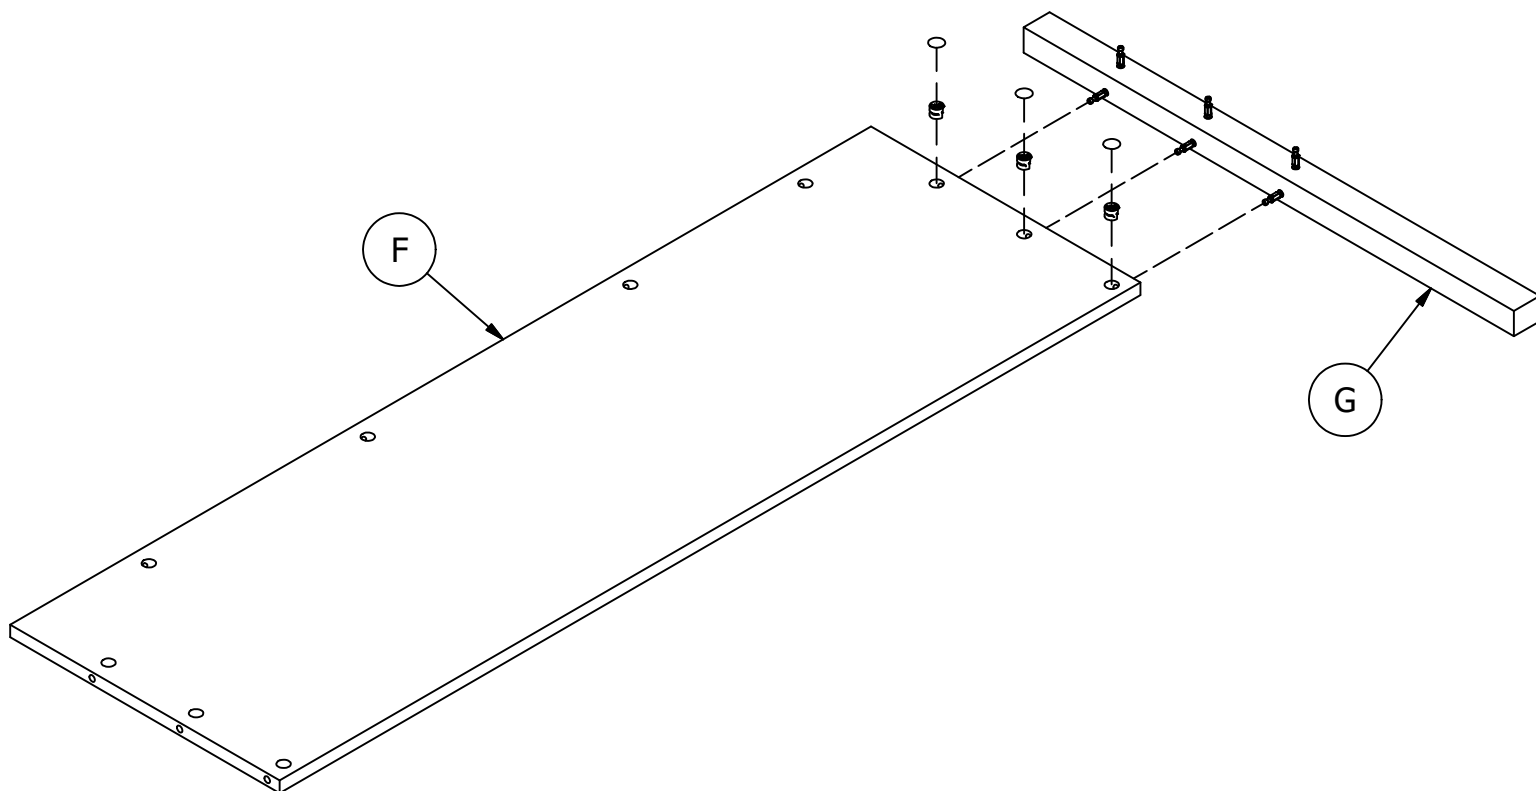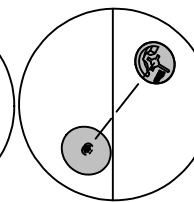

STEP 40


Assemble Panels

H181468US






KD Cam3000

[3]



Cover Cap


[3]

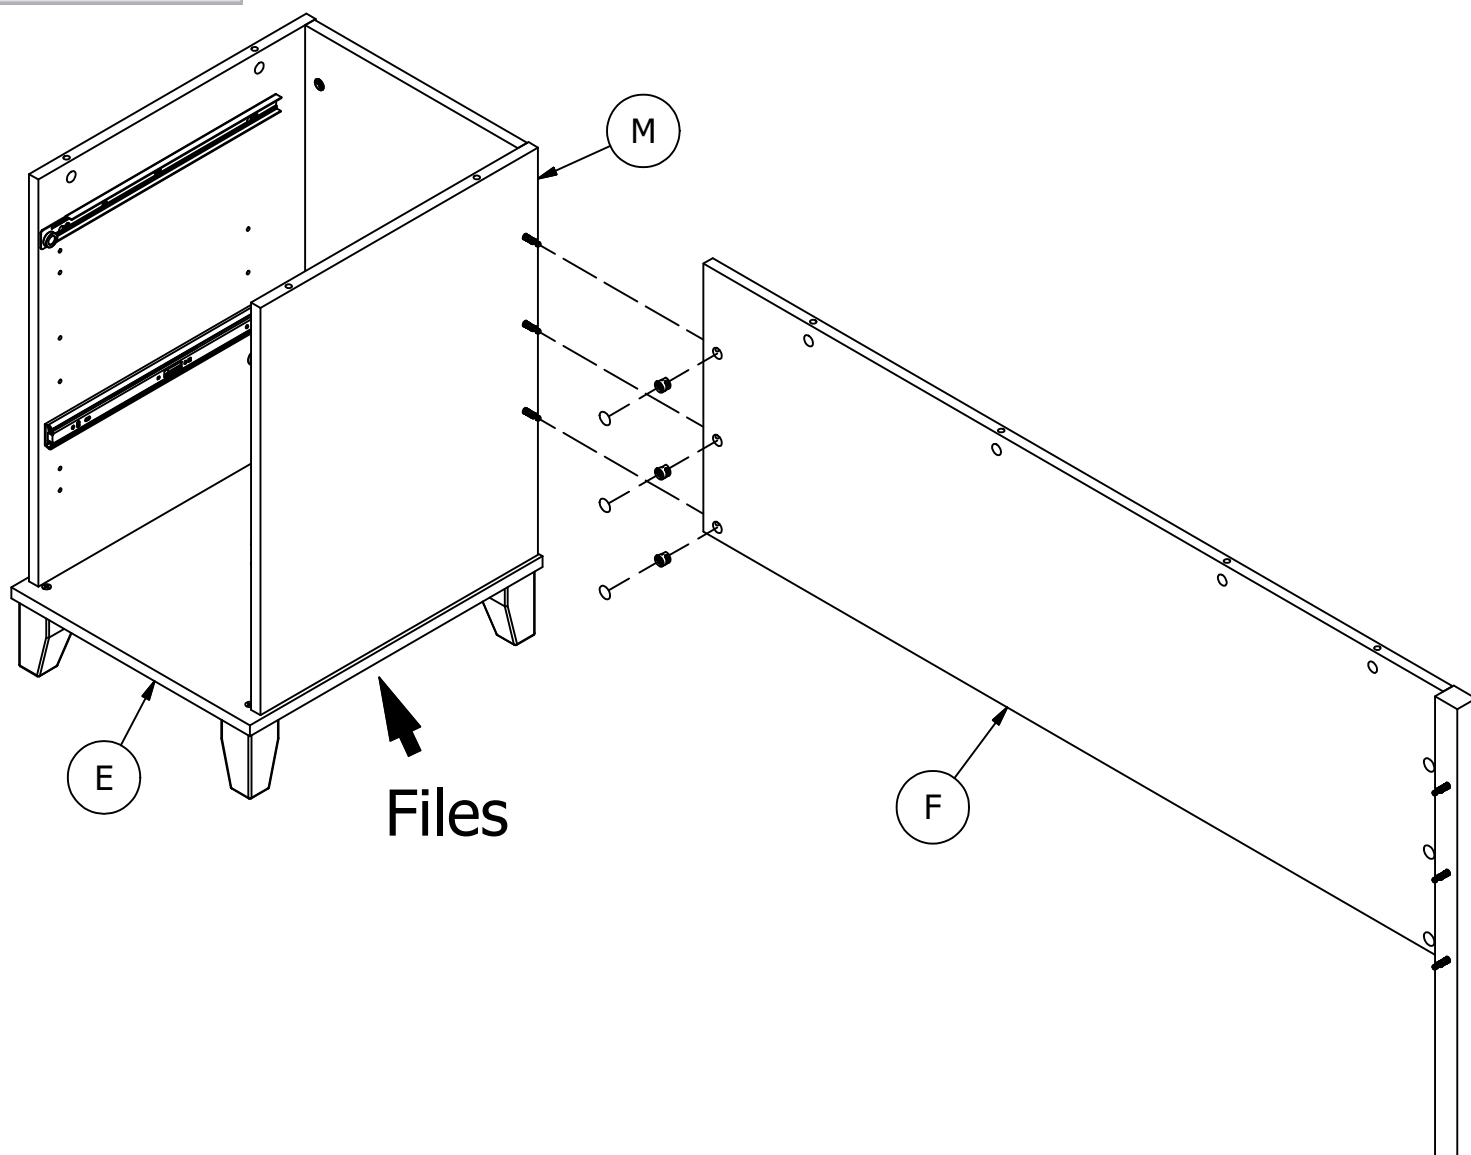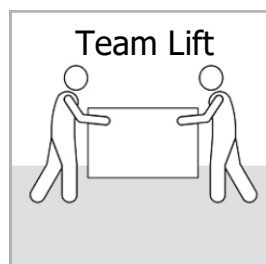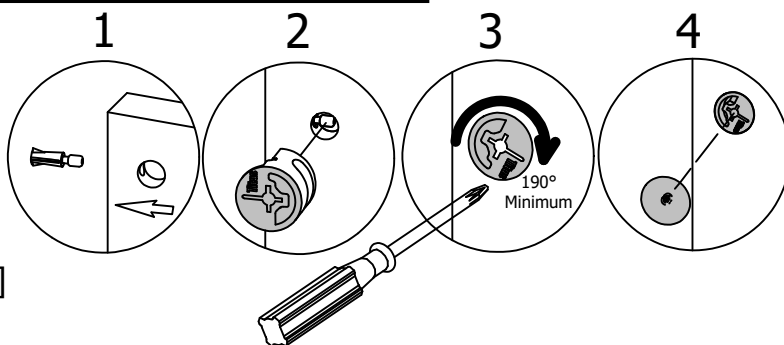

STEP 41


Assemble Panels

H181468US






KD Cam3000

[6]

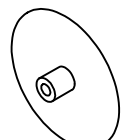

Cover Cap

[6]

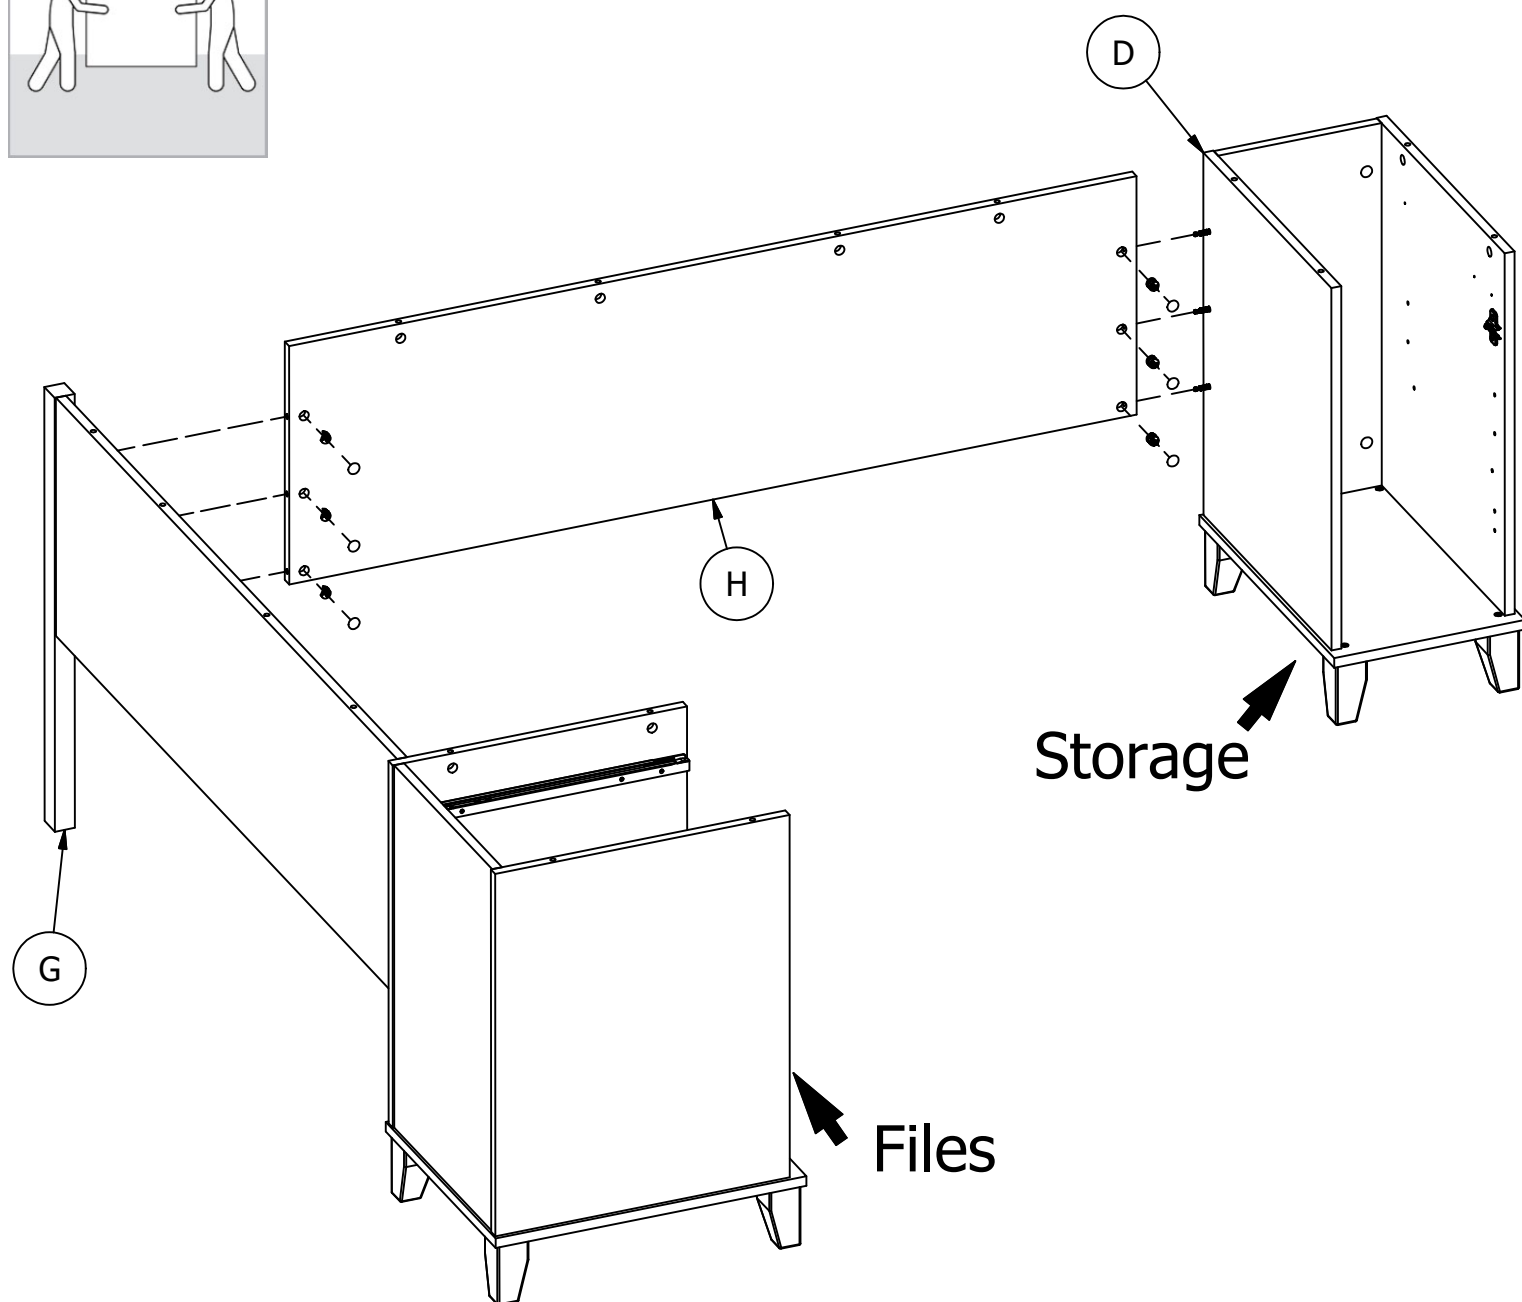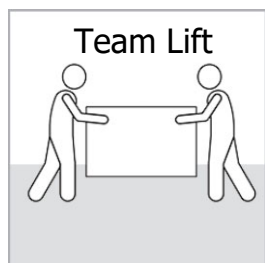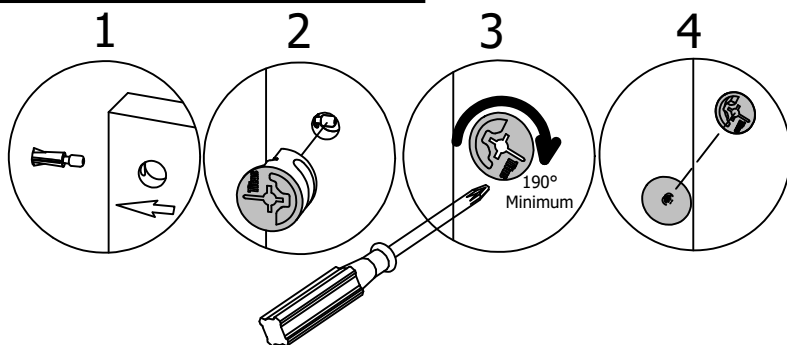



STEP 42

Prepare Panel

H72988 [9]
KD Bolt

H35251 [4]
#10 x 1/2"

H39922 [2]
Strap

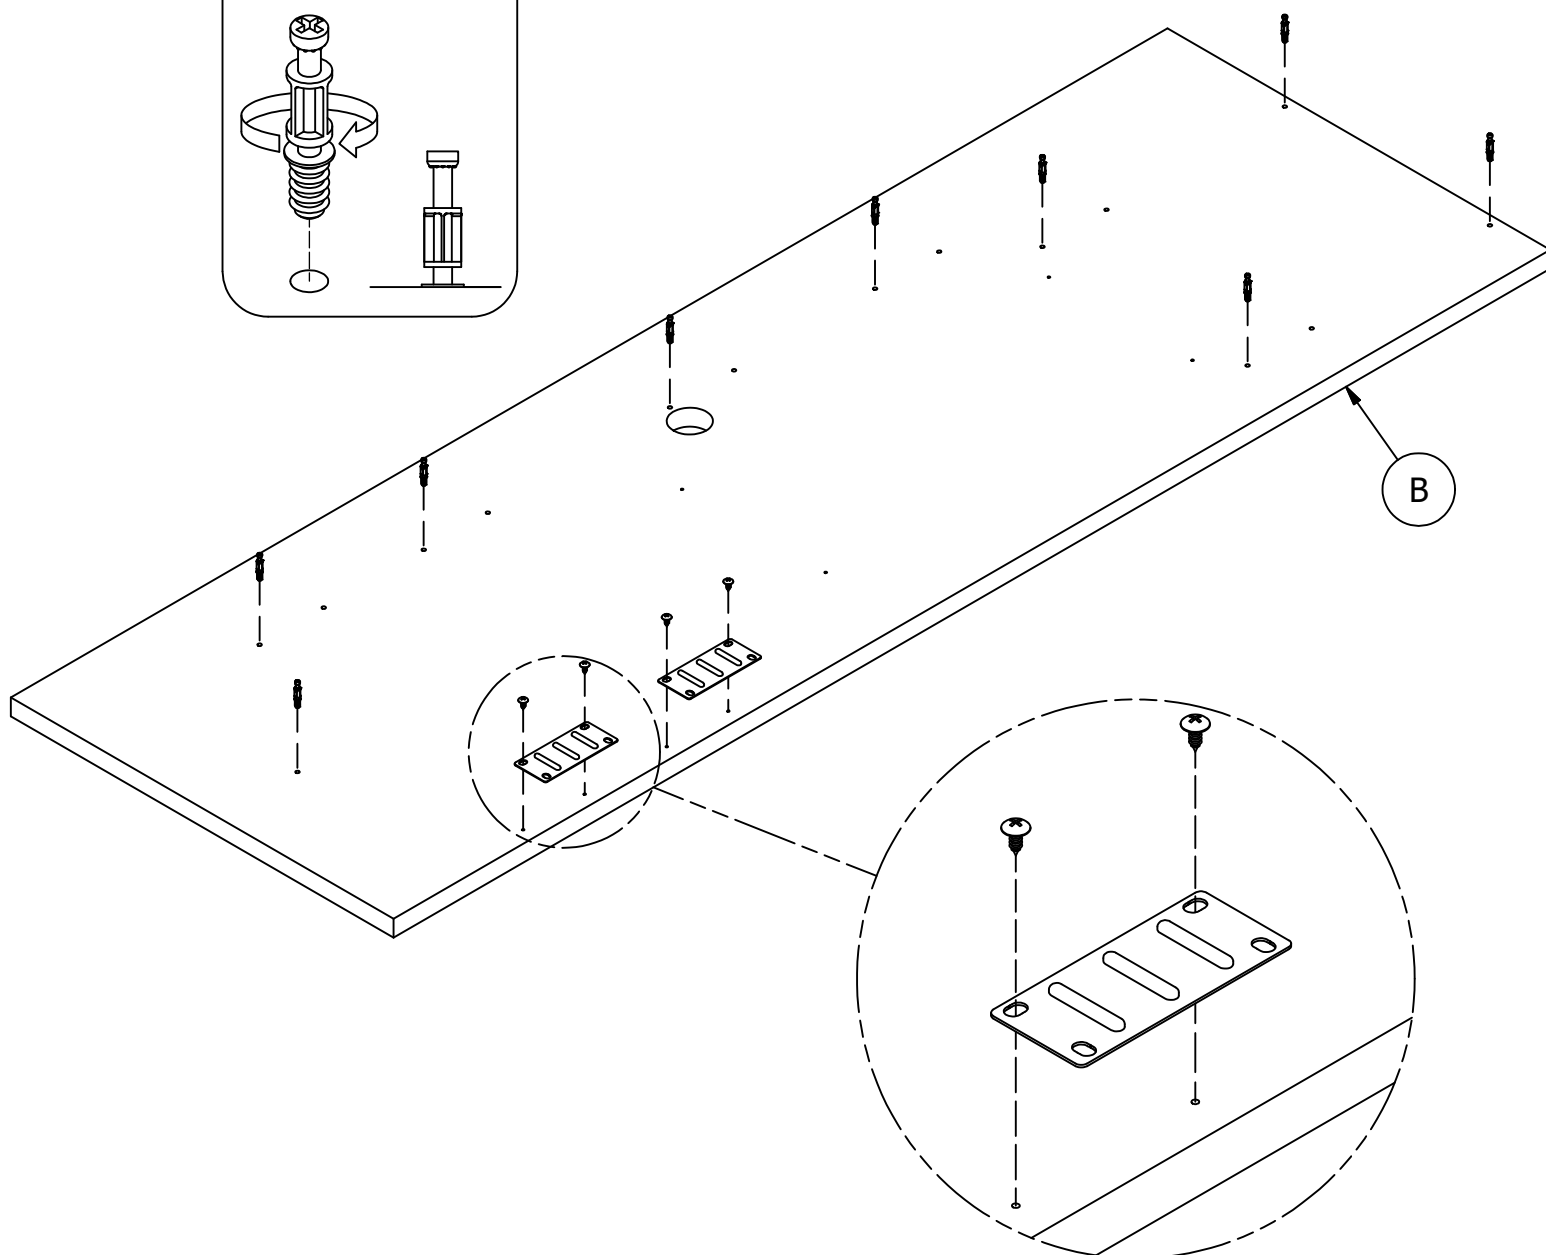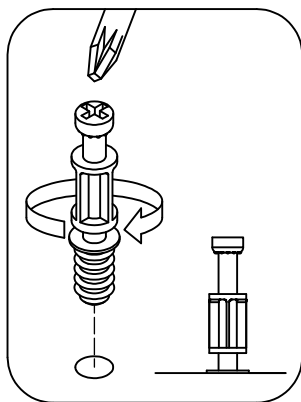


STEP 43

Attach Panel

H181468US




KD Cam3000

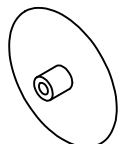



Cover Cap

[9]

[5]

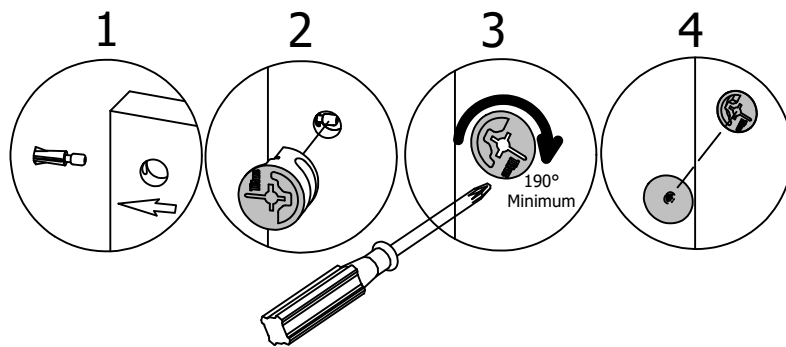


Team Lift

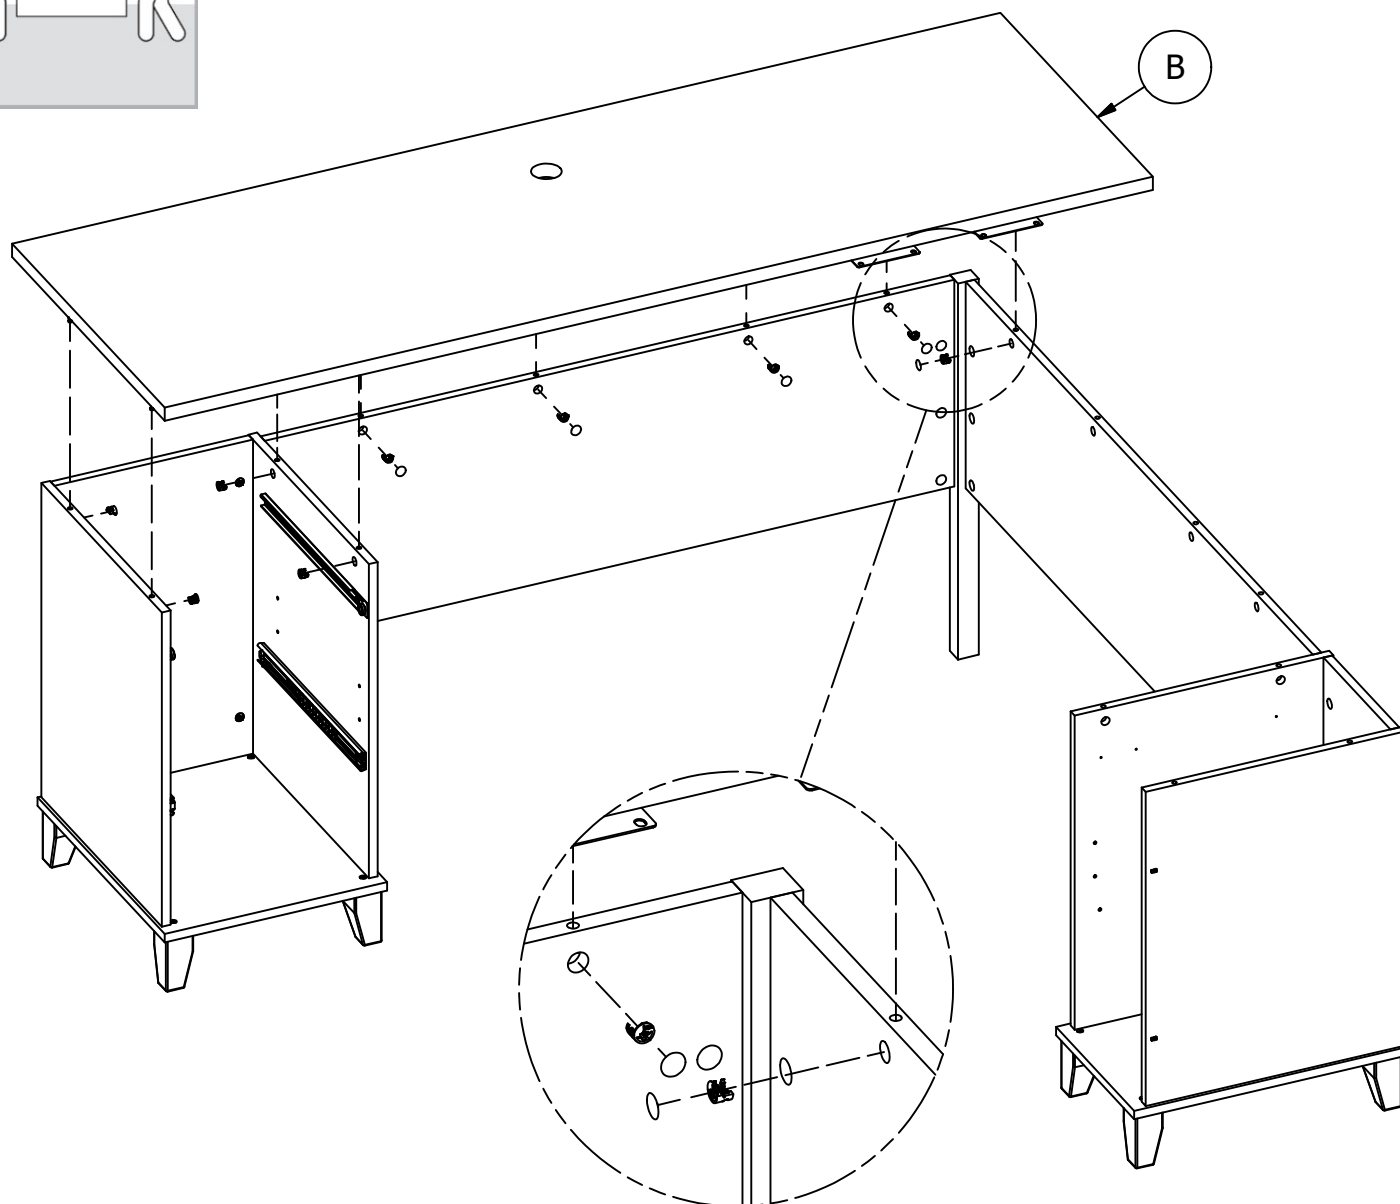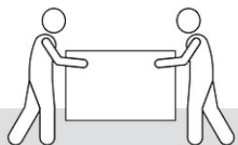

STEP 44



Prepare Panel

H72988







[7]

KD Bolt

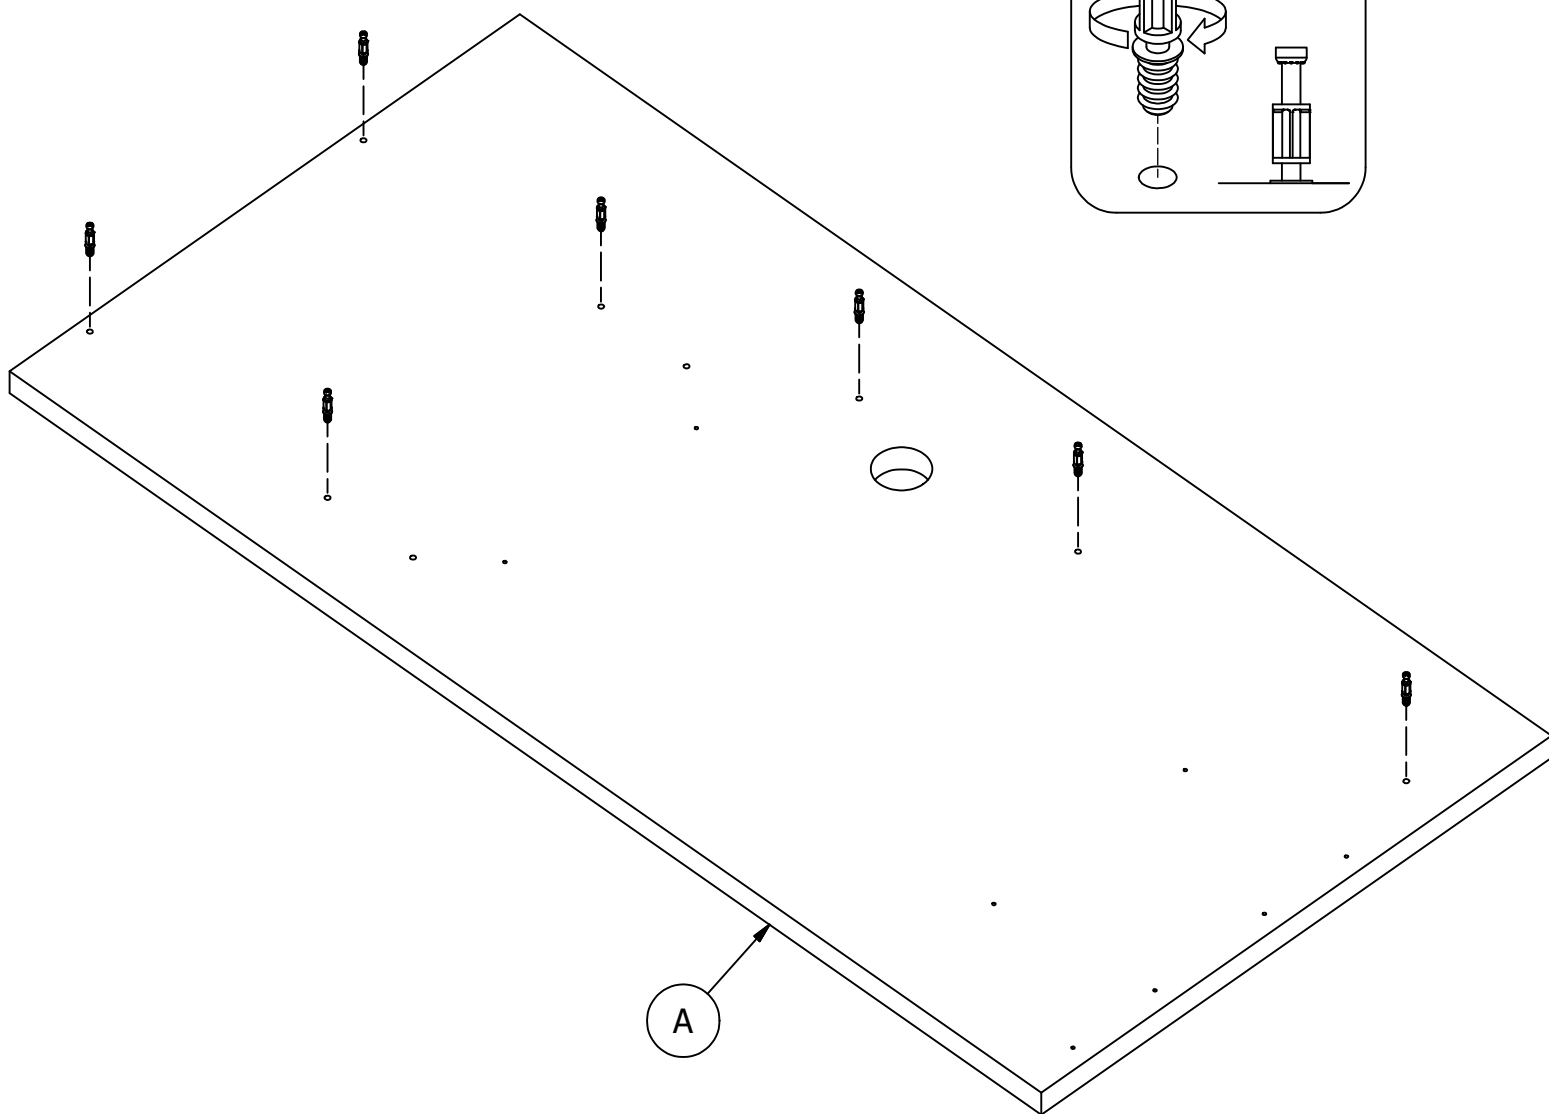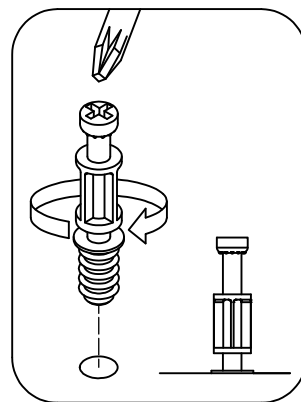

STEP 45

Attach Hardware

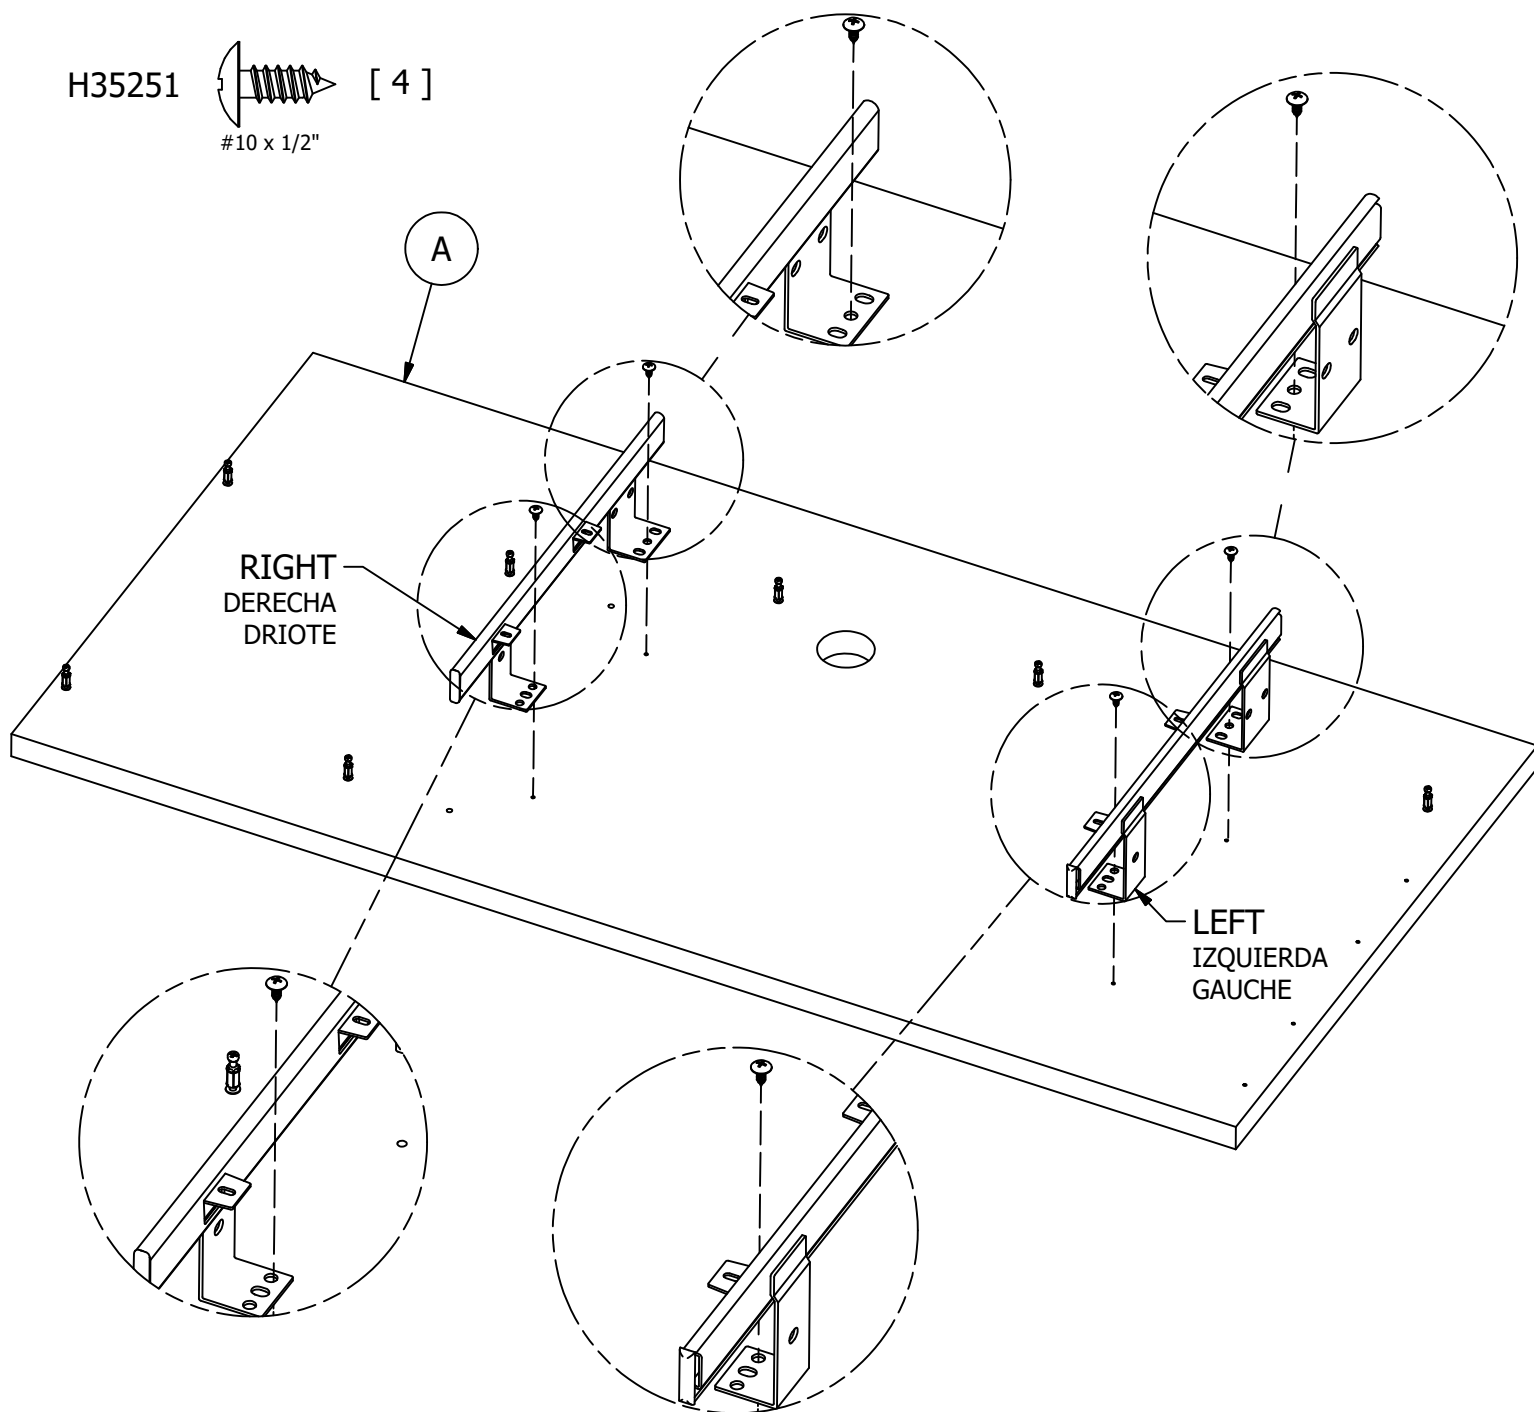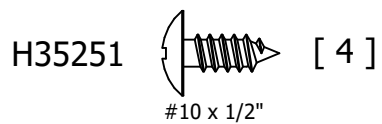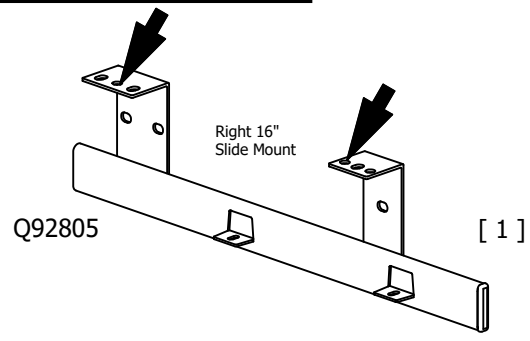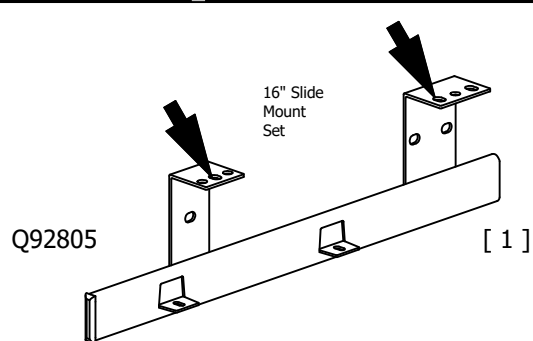

STEP 46


Assemble Panels

H181468US




KD Cam3000

[7]




Cover Cap

[7]


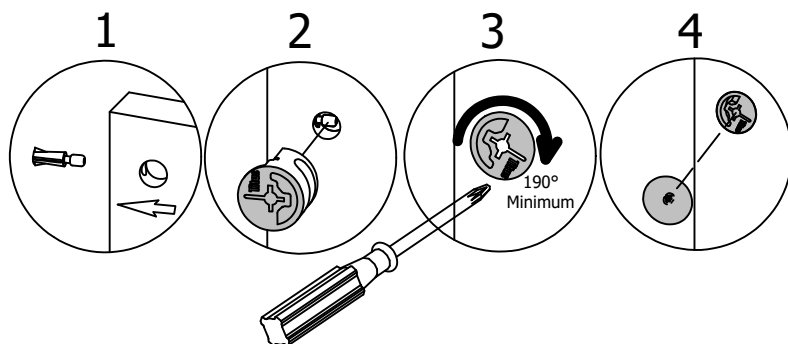


H35251

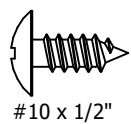


#10 x 1/2"

[4]

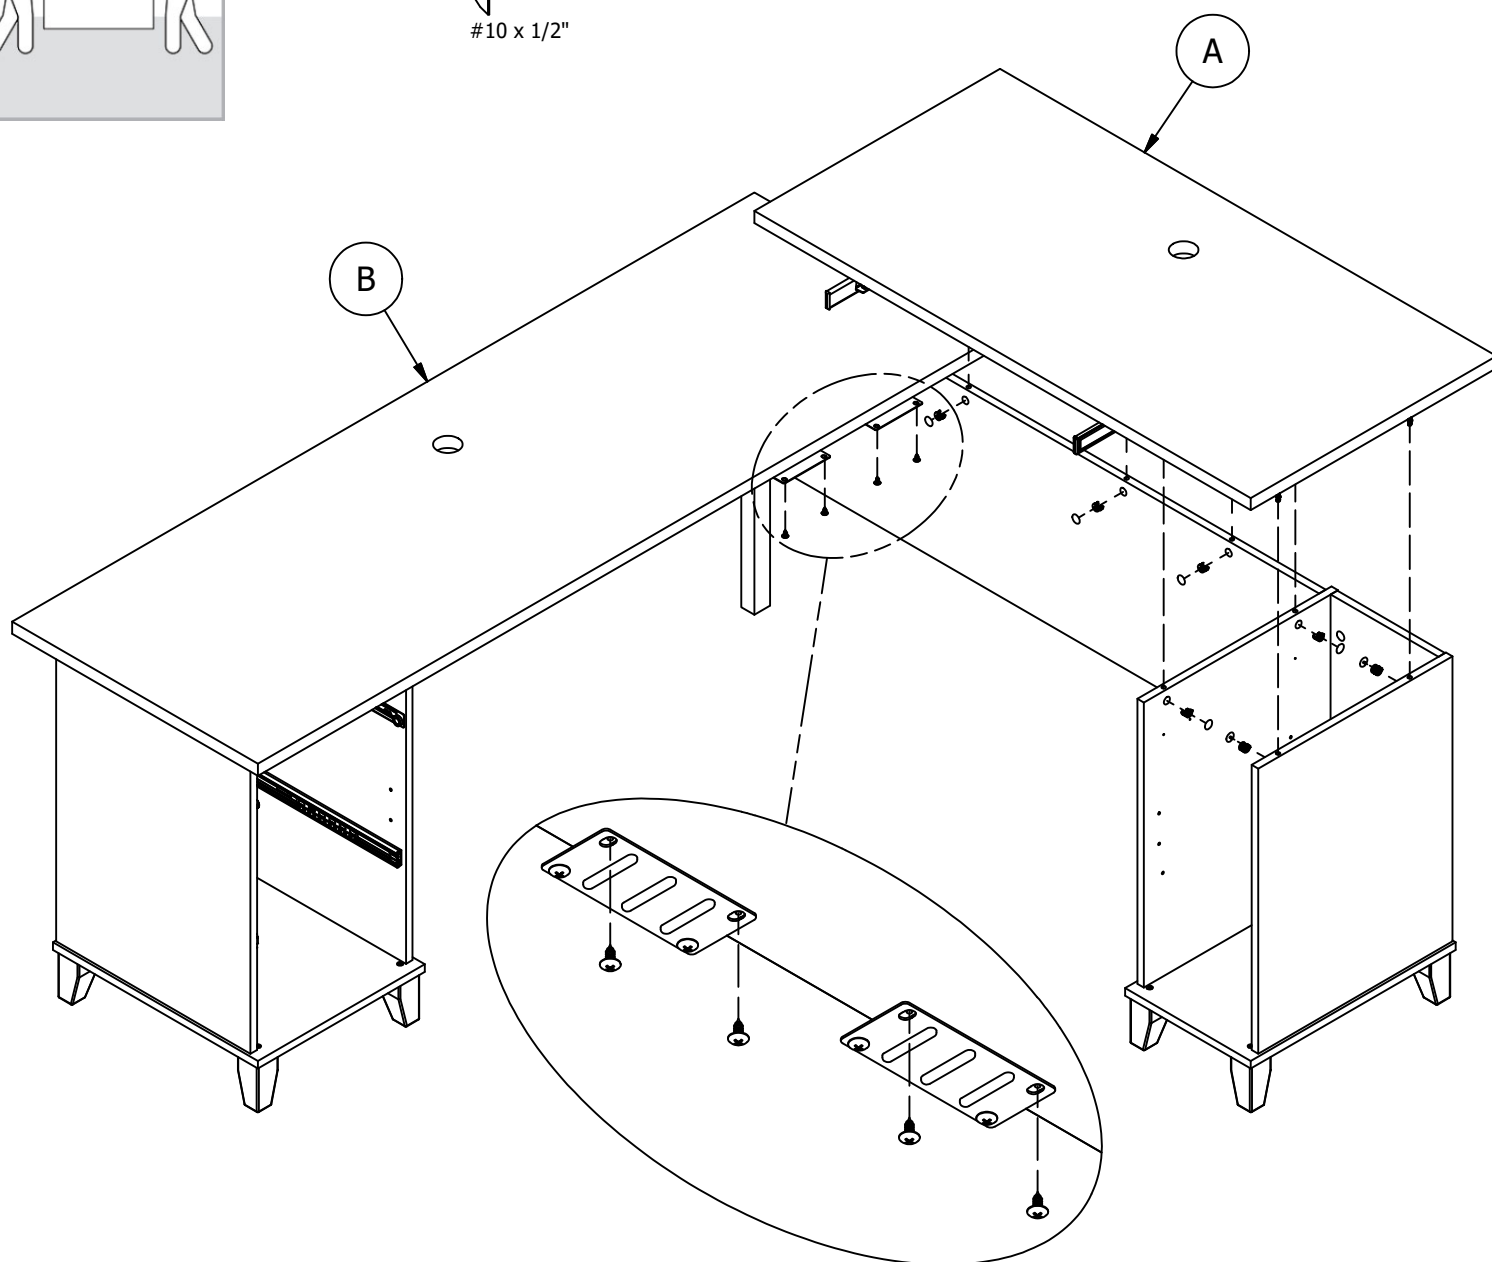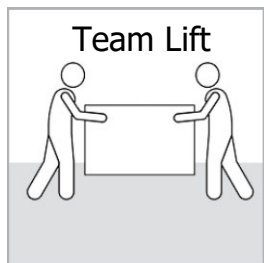


STEP 47


Insert Panel

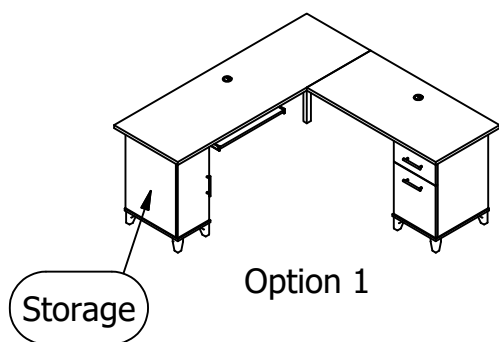

OR
O
OU

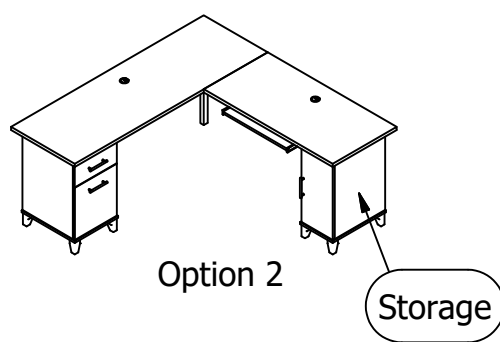


H23604

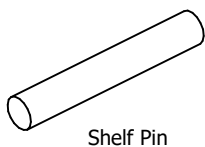

[4]



Shelf Pin

H126396

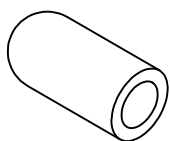






[4]

Shelf Pin Sleeve

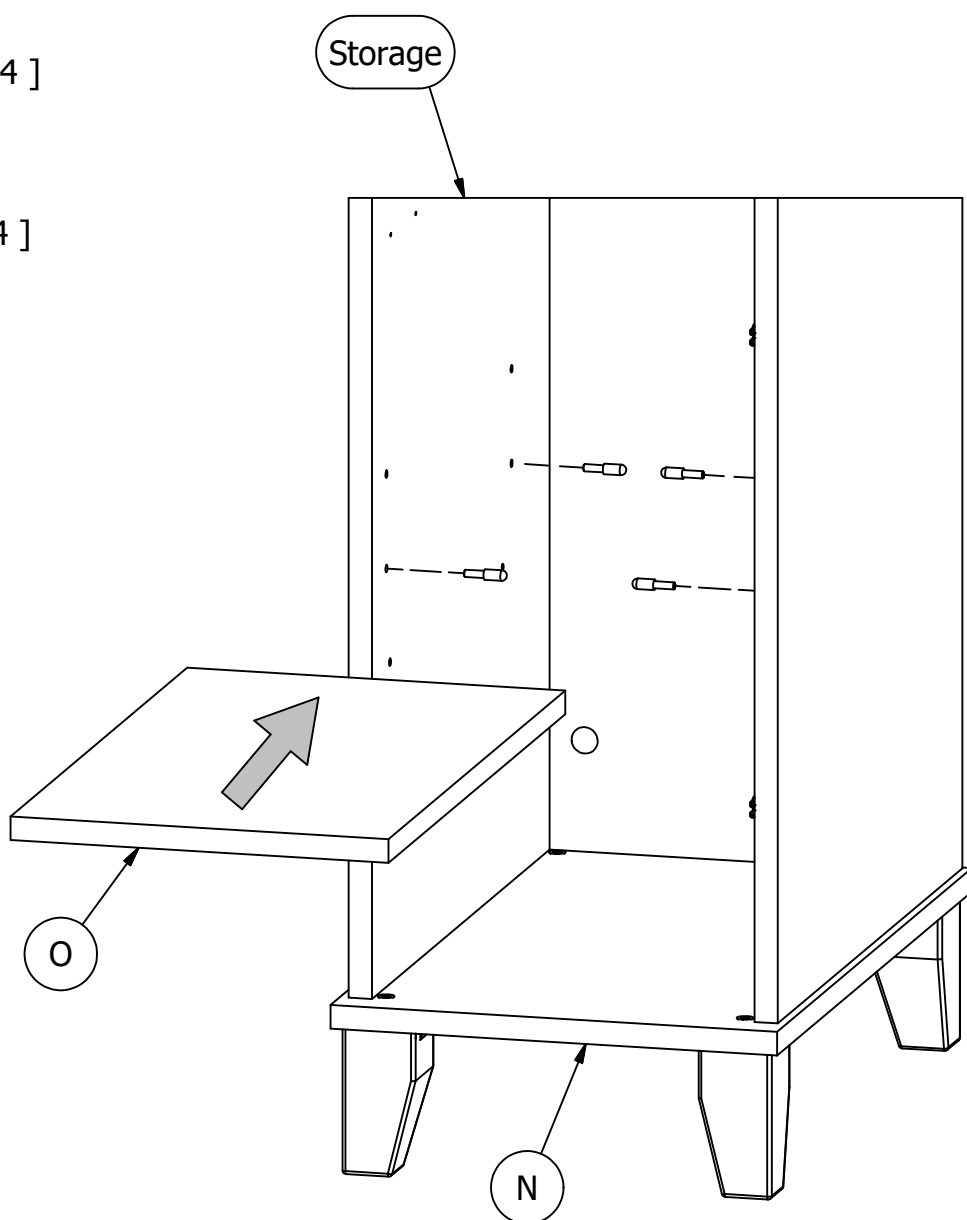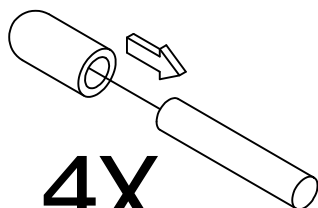


STEP 48

Attach Panel

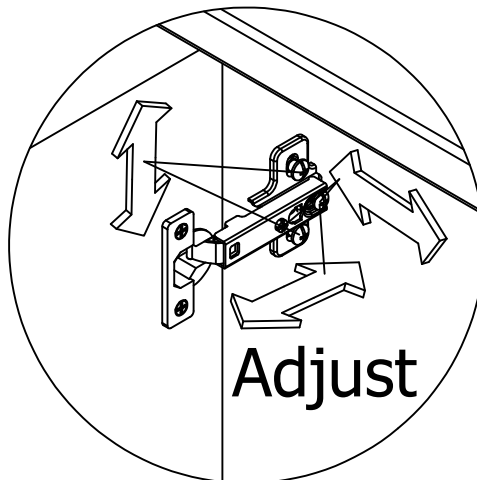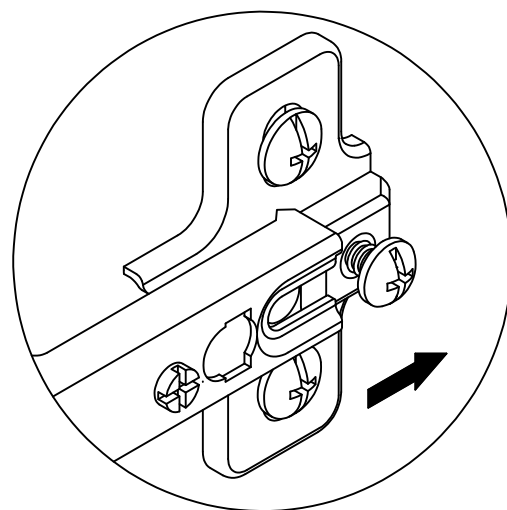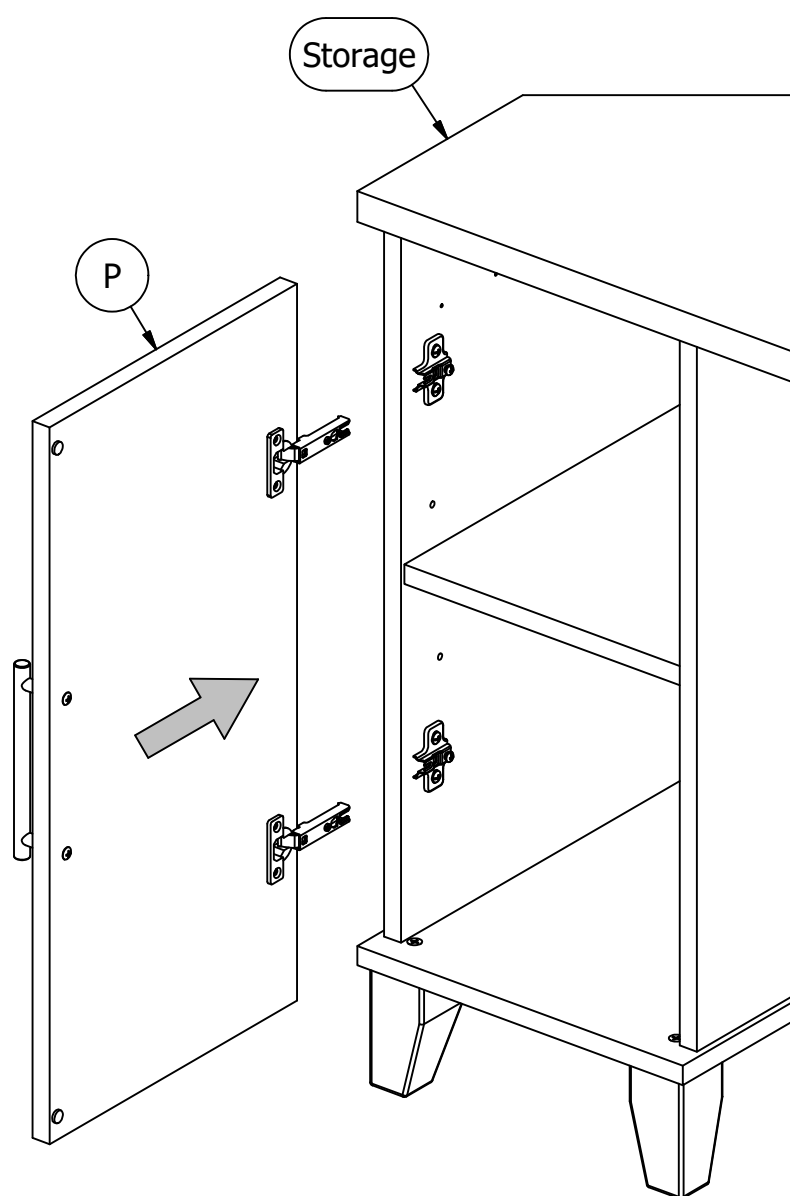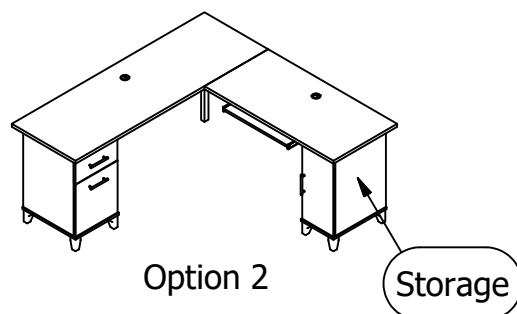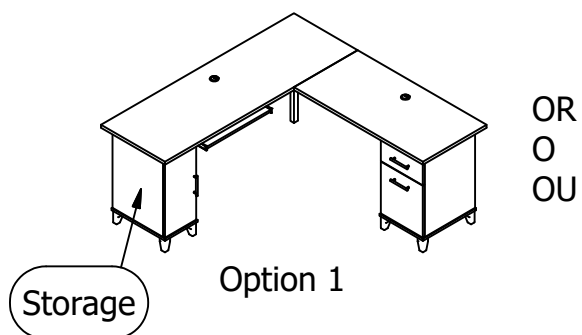


STEP 49


Attach Panel

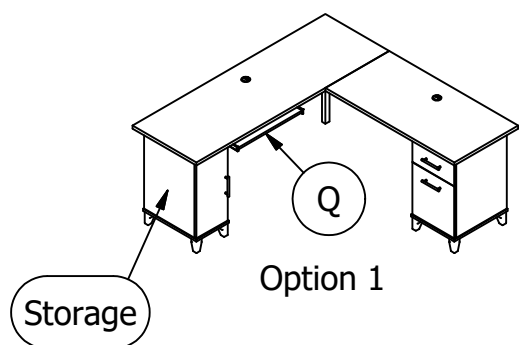


OR
O
OU

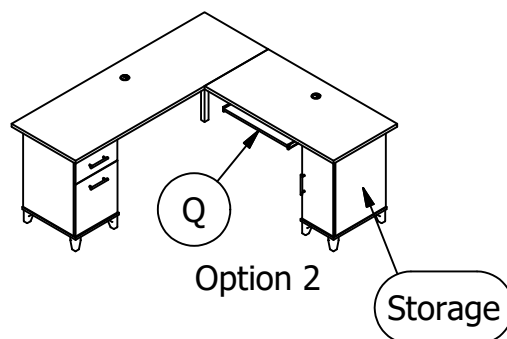

H35251

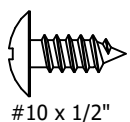


[4]

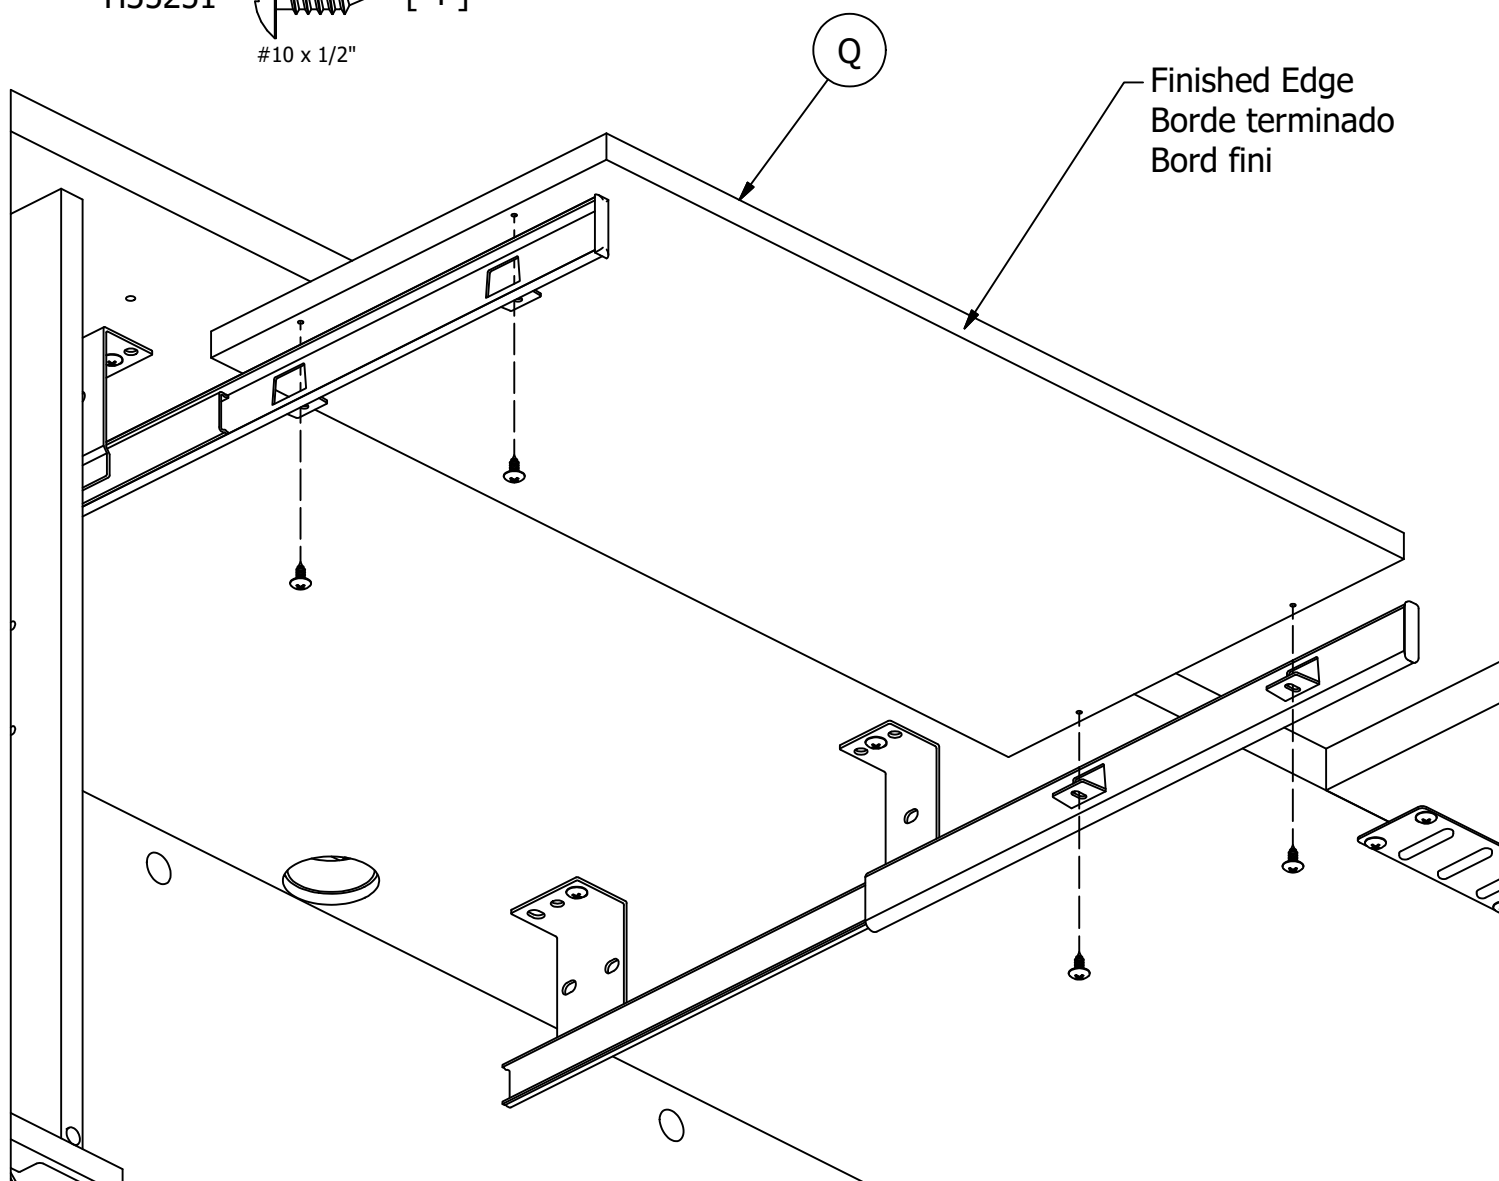


STEP 50

Insert Drawers

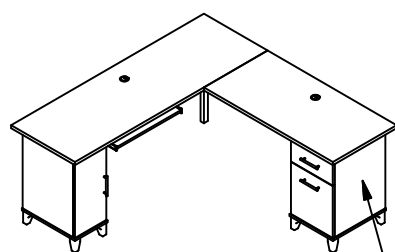


Files

OR
O
OU

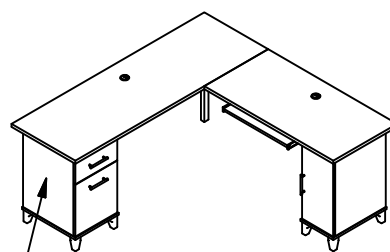







Files

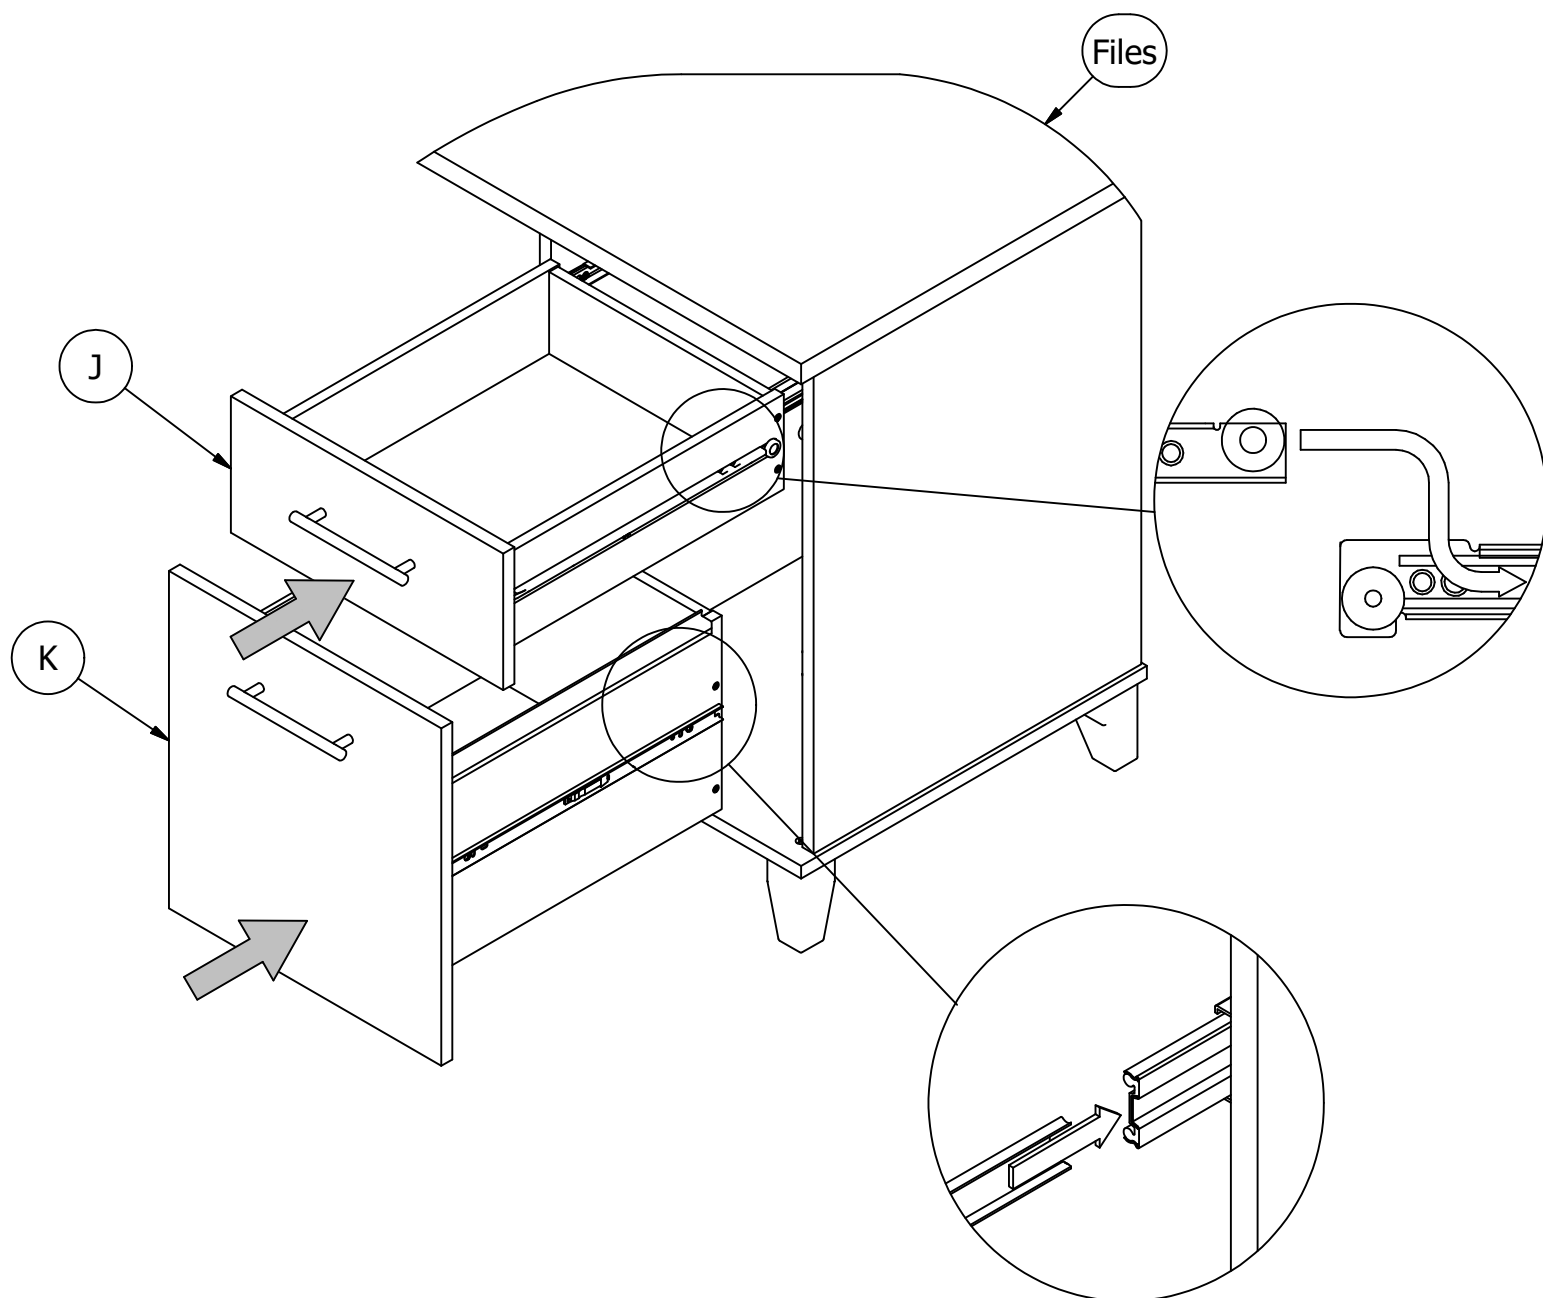

STEP 51

Adjust Drawer Fronts

DRAWER FRONT VIEW

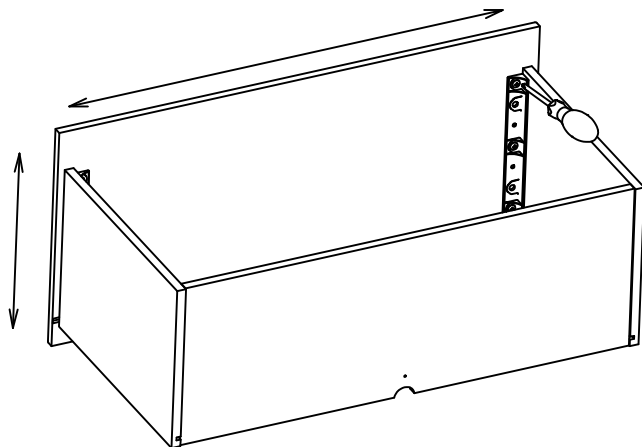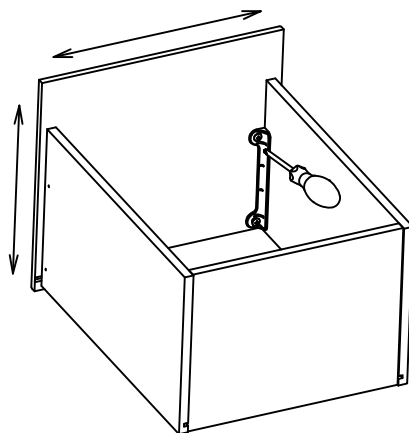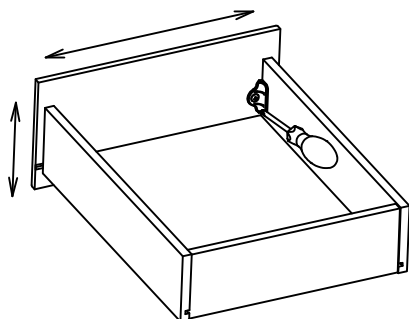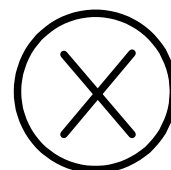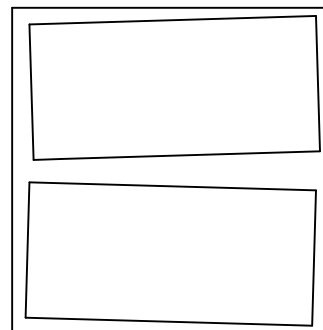

REQUIRED TOOL: PHILLIPS SCREWDRIVER

HERRAMIENTA REQUERIDA: DESTORNILLADOR PHILLIPS
OUTIL REQUIS: TOURNEVIS CRUCIFORME



1. LOOSEN SCREWS.
2. ADJUST DRAWER FRONTS.
3. TIGHTEN SCREWS.


1. Afloje los tornillos
2. Ajustar frentes de cajón
3. Apriete los tornillos

1. Desserrer les vis
2. Ajuster les façades des tiroirs
3. Serrer les vis


STEP 52

Maximum Loading and Cleanding

Gently clean surfaces with a damp sponge eraser.

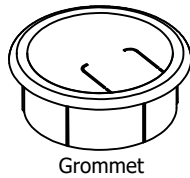

[2]

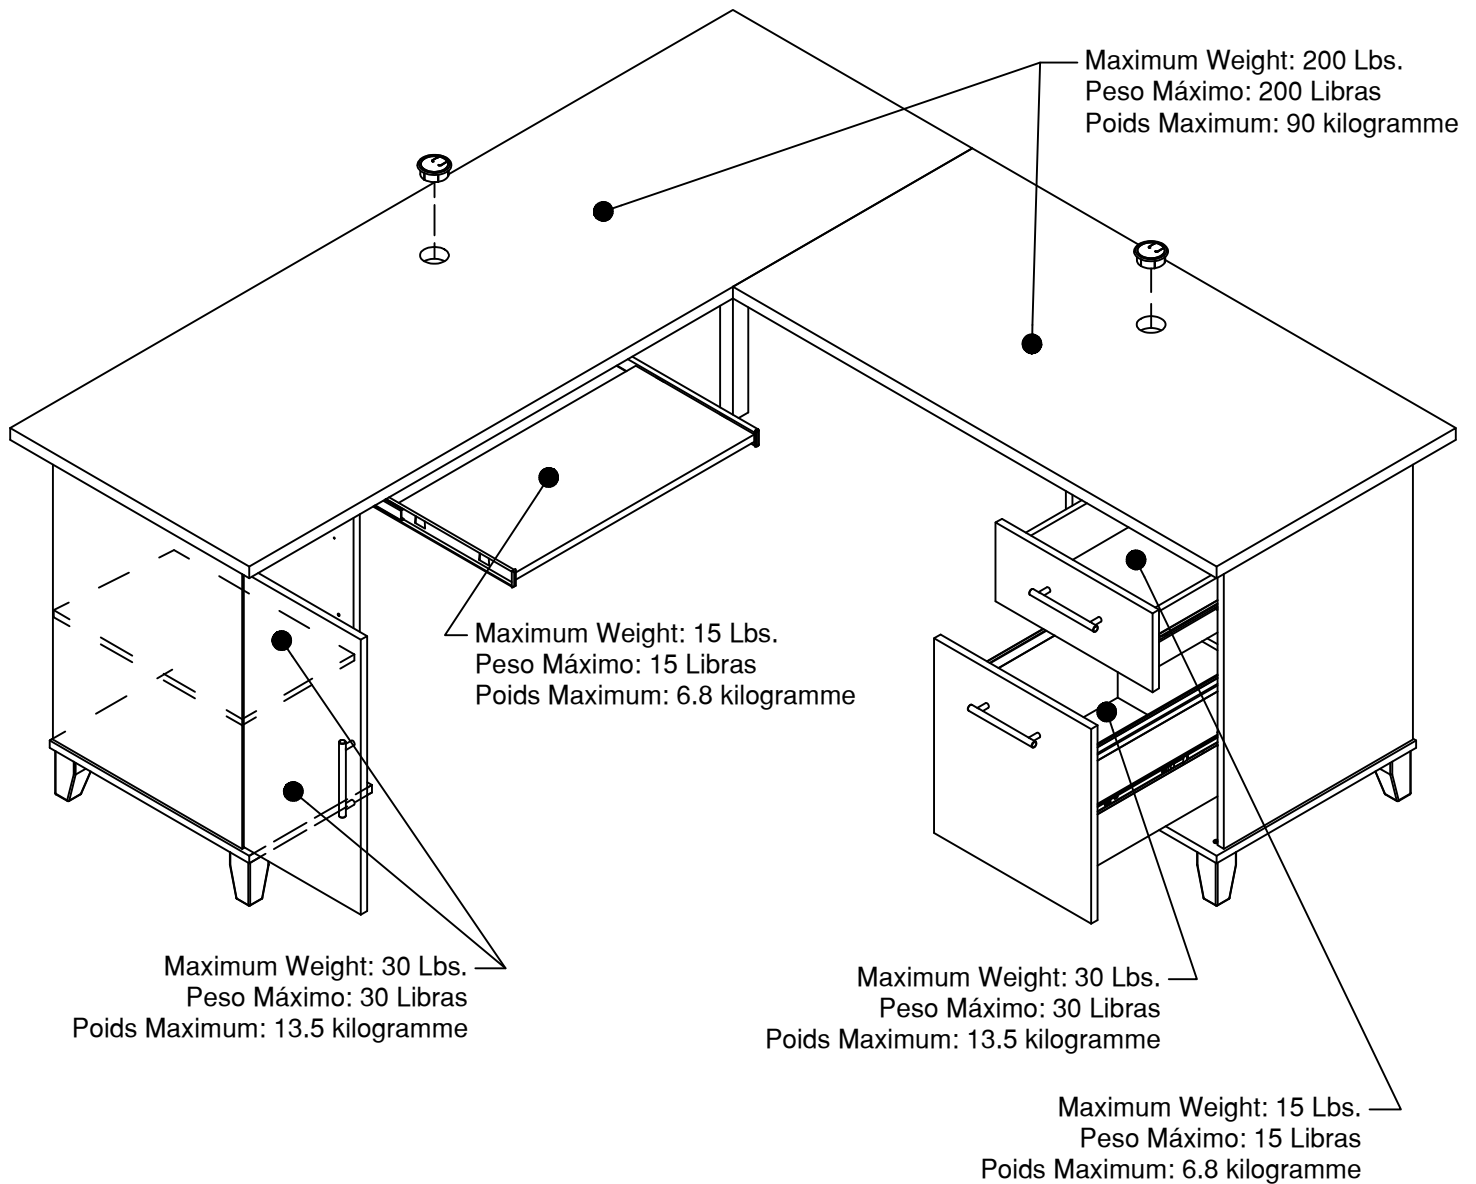


Congratulations! You are all done. If you have any questions or concerns, please call.

PARTS LIST

WC81010

A	W200549	[1]	N	W196055	[1]
B	W200550	[1]	O	W200724	[1]
C	W218682	[1]	P	W193865	[1]
D	W218683	[1]	Q	W200559	[1]
E	W196047	[1]	R	W193867	[1]
F	W196048	[1]	S	W193868	[1]
G	W196049	[1]	T	W106489	[2]
H	W196050	[1]	U	W192433	[1]
J	W218511	[1]	V	W215261	[2]
K	W218512	[1]	W	W218468	[1]
L	W218684	[1]	X	W87410	[2]
M	W218685	[1]			


H193807

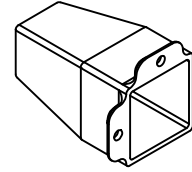

Foot

[8]


H195624

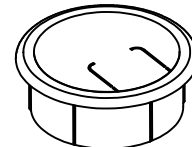

Grommet

[2]


H73619



Cover Cap

[28]

H196000

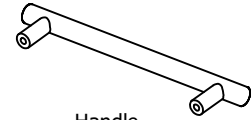


Handle

[3]

WC81110

A	W200455	[1]	N	W200467	[1]
B	W200456	[1]	O	W200468	[1]
C	W218686	[1]	P	W200469	[1]
D	W218687	[1]	Q	W200472	[1]
E	W200459	[1]	R	W200470	[1]
F	W200460	[1]	S	W200471	[1]
G	W200461	[1]	T	W106489	[2]
H	W200462	[1]	U	W192433	[1]
J	W218513	[1]	V	W215261	[2]
K	W218514	[1]	W	W218468	[1]
L	W218688	[1]	X	W87410	[2]
M	W218689	[1]			


H195789

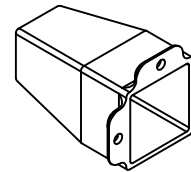

Foot

[8]


H151407

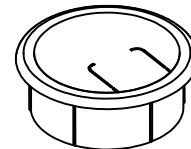

Grommet

[2]


H193368



Cover Cap

[28]

H150001



Handle


[3]

PARTS LIST

WC81210

A	W195836	[1]	N	W195848	[1]
B	W195837	[1]	O	W195849	[1]
C	W218690	[1]	P	W195850	[1]
D	W218691	[1]	Q	W195853	[1]
E	W195840	[1]	R	W195851	[1]
F	W195841	[1]	S	W195852	[1]
G	W195842	[1]	T	W106489	[2]
H	W195843	[1]	U	W192433	[1]
J	W218515	[1]	V	W215261	[2]
K	W218516	[1]	W	W218468	[1]
L	W218692	[1]	X	W87410	[2]
M	W218693	[1]			


H195789

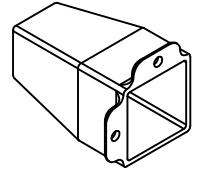

Foot

[8]

H118700

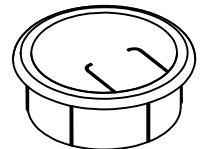

Grommet

[2]


H83021



Cover Cap

[28]

H196000

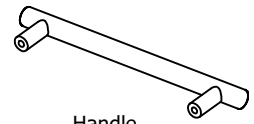


Handle

[3]

WC81310

A	W200361	[1]	N	W200373	[1]
B	W200362	[1]	O	W200374	[1]
C	W218694	[1]	P	W200375	[1]
D	W218695	[1]	Q	W200378	[1]
E	W200365	[1]	R	W200376	[1]
F	W200366	[1]	S	W200377	[1]
G	W200367	[1]	T	W106489	[2]
H	W200368	[1]	U	W192433	[1]
J	W218517	[1]	V	W215261	[2]
K	W218518	[1]	W	W218468	[1]
L	W218696	[1]	X	W87410	[2]
M	W218697	[1]			


H200227

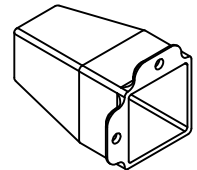

Foot

[8]

H118700

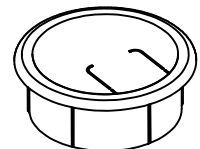

Grommet

[2]


H73620



Cover Cap

[28]

H200226

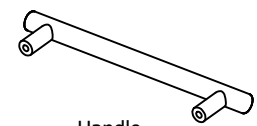

Handle


[3]

PARTS LIST

WC81410C

A	W187360	[1]	N	W187372	[1]
B	W187361	[1]	O	W187373	[1]
C	W218698	[1]	P	W187374	[1]
D	W218699	[1]	Q	W195729	[1]
E	W187364	[1]	R	W187376	[1]
F	W187365	[1]	S	W187377	[1]
G	W187366	[1]	T	W106489	[2]
H	W187367	[1]	U	W192433	[1]
J	W218519	[1]	V	W215261	[2]
K	W218520	[1]	W	W218468	[1]
L	W218700	[1]	X	W87410	[2]
M	W218701	[1]			


H87676



[28]

Cover Cap


H149999

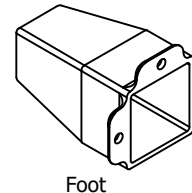

[8]

Foot


H118700

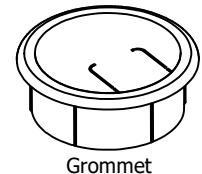

[2]

Grommet

H150001




[3]

Handle

WC81510

A	W193851	[1]	N	W193863	[1]
B	W193852	[1]	O	W193864	[1]
C	W218702	[1]	P	W193865	[1]
D	W218703	[1]	Q	W195730	[1]
E	W193855	[1]	R	W193867	[1]
F	W193856	[1]	S	W193868	[1]
G	W193857	[1]	T	W106489	[2]
H	W193858	[1]	U	W192433	[1]
J	W218511	[1]	V	W215261	[2]
K	W218512	[1]	W	W218468	[1]
L	W218704	[1]	X	W87410	[2]
M	W218705	[1]			


H92521



[28]

Cover Cap


H193807

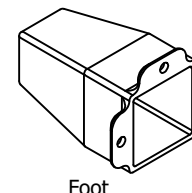

[8]

Foot


H118700

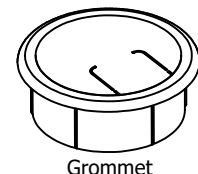

[2]

Grommet

H150001

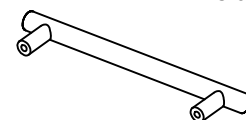





[3]

Handle

PARTS LIST





WC81610

A	W186349	[1]	N	W186350	[1]
B	W186359	[1]	O	W186375	[1]
C	W218706	[1]	P	W186365	[1]
D	W218707	[1]	Q	W195731	[1]
E	W186353	[1]	R	W186363	[1]
F	W186361	[1]	S	W186364	[1]
G	W186354	[1]	T	W106489	[2]
H	W186362	[1]	U	W192433	[1]
J	W218523	[1]	V	W215261	[2]
K	W218524	[1]	W	W218468	[1]
L	W218708	[1]	X	W87410	[2]
M	W218709	[1]			

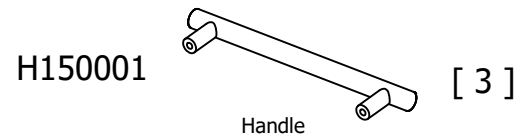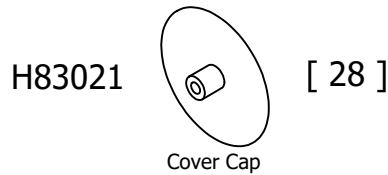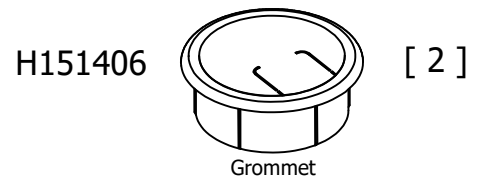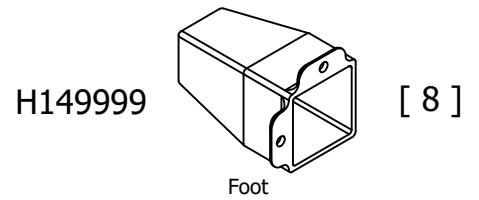

WC81710C





A	W187378	[1]	N	W187390	[1]
B	W187379	[1]	O	W187391	[1]
C	W218710	[1]	P	W187392	[1]
D	W218711	[1]	Q	W195732	[1]
E	W187382	[1]	R	W187394	[1]
F	W187383	[1]	S	W187395	[1]
G	W187384	[1]	T	W106489	[2]
H	W187385	[1]	U	W192433	[1]
J	W218525	[1]	V	W215261	[2]
K	W218526	[1]	W	W218468	[1]
L	W218712	[1]	X	W87410	[2]
M	W218713	[1]			

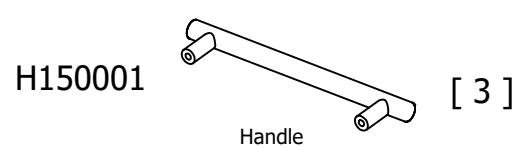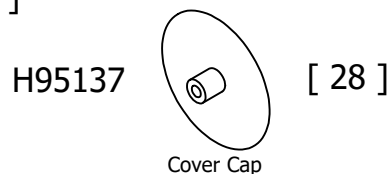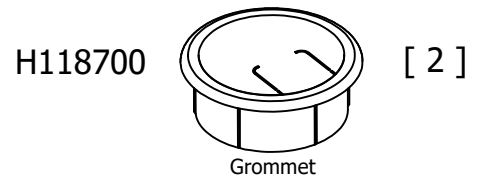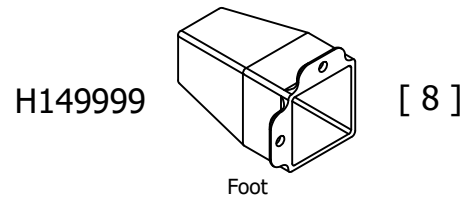

PARTS LIST

WC81810C

A	W187396	[1]	N	W187408	[1]
B	W187397	[1]	O	W187409	[1]
C	W218714	[1]	P	W187410	[1]
D	W218715	[1]	Q	W195733	[1]
E	W187400	[1]	R	W187412	[1]
F	W187401	[1]	S	W187413	[1]
G	W187402	[1]	T	W106489	[2]
H	W187403	[1]	U	W192433	[1]
J	W218527	[1]	V	W215261	[2]
K	W218528	[1]	W	W218468	[1]
L	W218716	[1]	X	W87410	[2]
M	W218717	[1]			

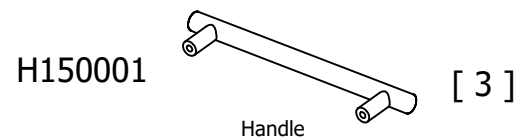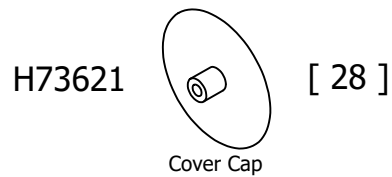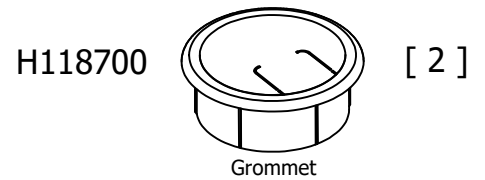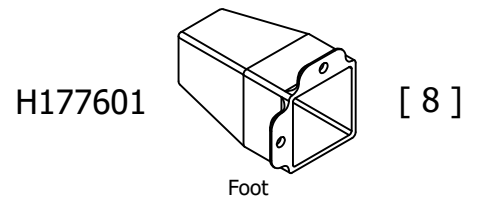

WC81910

A	W196043	[1]	N	W196055	[1]
B	W196044	[1]	O	W196056	[1]
C	W218682	[1]	P	W196057	[1]
D	W218683	[1]	Q	W196060	[1]
E	W196047	[1]	R	W196058	[1]
F	W196048	[1]	S	W196059	[1]
G	W196049	[1]	T	W106489	[2]
H	W196050	[1]	U	W192433	[1]
J	W218529	[1]	V	W215261	[2]
K	W218530	[1]	W	W218468	[1]
L	W218684	[1]	X	W87410	[2]
M	W218685	[1]			

