


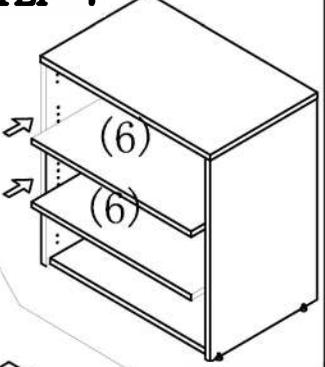
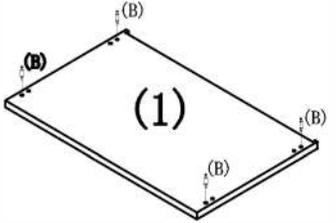
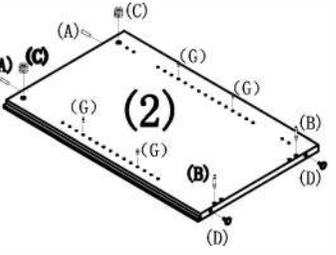
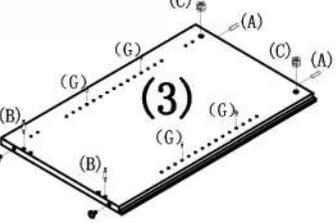
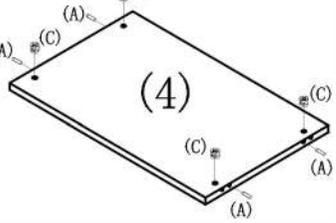
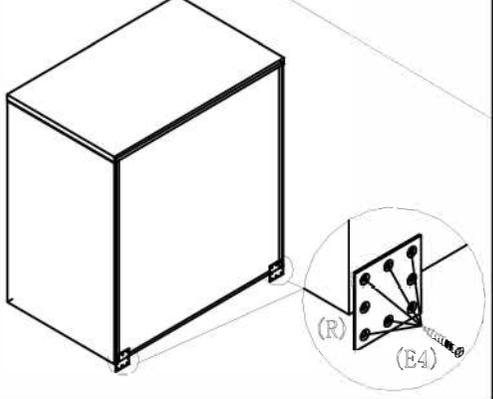
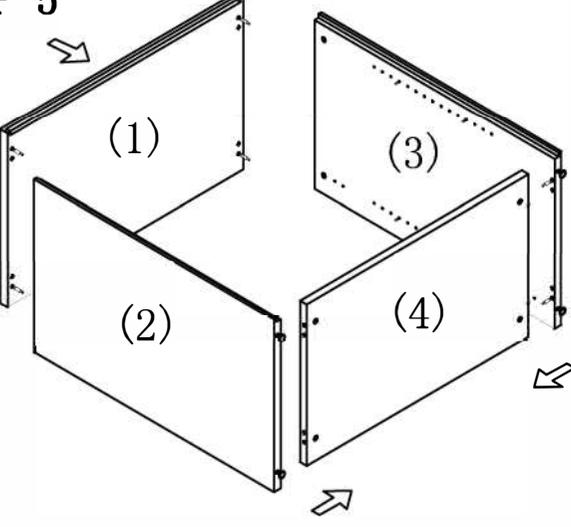


(1) Top  1PC	(2) End Panel  1PC	(3) End Panel  1PC	(4) Bottom Panel  1PC	(5) Back Panel  1PC	(6) Shelf  2PCS	(A) Dowel  8PCS	(B) Cam Pin  8PCS	
(C) Cam Lock  8PCS+1	(D) Leg leveller  4PCS	(G) Shelf Pin  8PCS+1	(P) Adhesive Cam Cover  8PCS	(E3) Wood Screw  14PCS+1	(E4) Wood Screw  12PCS+1	(R) Flat Bracket  2PCS	(M) Cushion  4PCS	STEP 7 
STEP 1 	STEP 2 	STEP 3 	STEP 4 	STEP 8 				
STEP 5 		STEP 6 						

2-DOOR STORAGE CABINET WITHOUT DOORS 2 SHELVES

NAP-212H

36"W x 22"D x 37"H

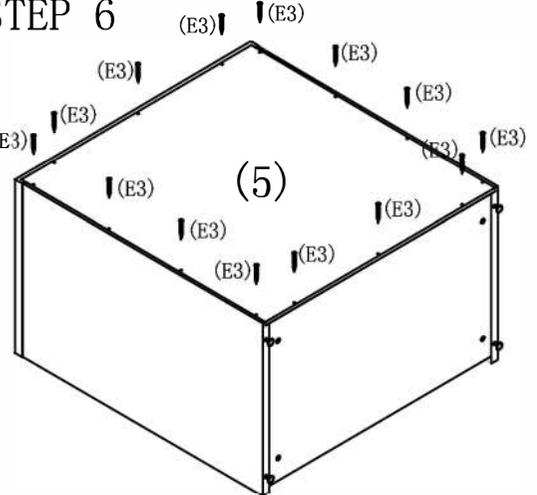

Always lay components on A clean, soft-cushioned surface during assembly.