


Pedestal Desk

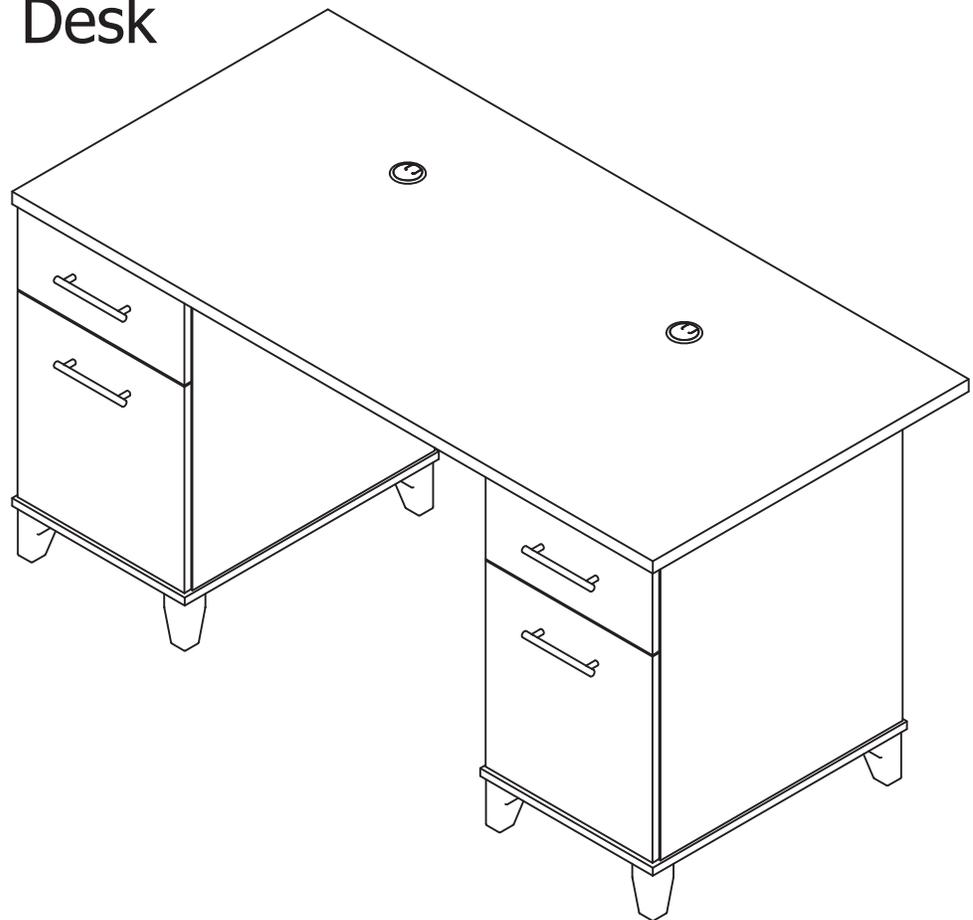

Lot Code #

Instruction Sheet Number A186386G

Keep manual for future reference.

Get Ready to Assemble

For best results, keep these tips in mind:

- ① We know you want to finish this assembly as quickly as possible, but trust us: you'll have a better experience if you take it one step at a time.
- ② Give yourself some room to work near where you want the fully assembled product.
- ③ If your floor isn't carpeted, assemble this product on the empty carton to avoid scratching.
- ④ Do you have a friend who owes you a favor? Some steps may go a little easier with a second set of hands.

DOs

- ✔ Use a #2 Phillips head screwdriver (or other handheld tools as indicated)
- ✔ Wear safety glasses at all times during assembly
- ✔ Carefully follow the instructions in this guide and complete all steps in order
- ✔ Give us a call if you're having trouble with a particularly tricky step

DON'Ts

- ✘ We know power tools are quick and easy, but you shouldn't use them when assembling this product (unless otherwise specified)
- ✘ Never move your furniture with items inside or resting on the surface
- ✘ Do not attempt to use this product before all steps have been completed

IMPORTANT SAFETY INFORMATION



PLEASE READ WARNINGS



Improper use can cause safety hazards, or damage to your furniture and household items.

Warning	Do	Don't	Why it's important
Serious injury may occur.	<ul style="list-style-type: none">Assemble following all instructions using all indicated parts and hardware provided.	<ul style="list-style-type: none">Do not move unit when loaded.Do not load with a television or other heavy equipment.Do not exceed the maximum load limits stated in the instructions.	Improper assembly, use or loading can lead to product instability, tipover, or collapse.

Advertencia	Hacer	No	Por qué es importante
Pueden producirse lesiones graves.	<ul style="list-style-type: none">Realice el montaje siguiendo todas las instrucciones y utilizando todas las piezas indicadas y los herrajes suministrados.	<ul style="list-style-type: none">No mueva la unidad cuando esté cargada.No cargue el mueble con un televisor u otro equipo pesado.No supere los límites máximos de carga indicados en las instrucciones.	El montaje, uso o carga inadecuados pueden provocar inestabilidad, vuelco o colapso del producto.









Avertissement	À faire	À ne pas faire	Pourquoi c'est important
Peut entraîner des blessures graves.	<ul style="list-style-type: none">Assembler en suivant toutes les instructions et en utilisant toutes les pièces et la quincaillerie incluses.	<ul style="list-style-type: none">Ne pas déplacer le meuble lorsqu'il est chargé.Ne pas charger le meuble avec un téléviseur ou tout autre équipement lourd.Ne pas dépasser les limites de poids maximales indiquées dans les instructions.	Un assemblage, une utilisation ou un chargement incorrects peuvent entraîner l'instabilité, le basculement ou l'effondrement du produit.

Get to know your Boards

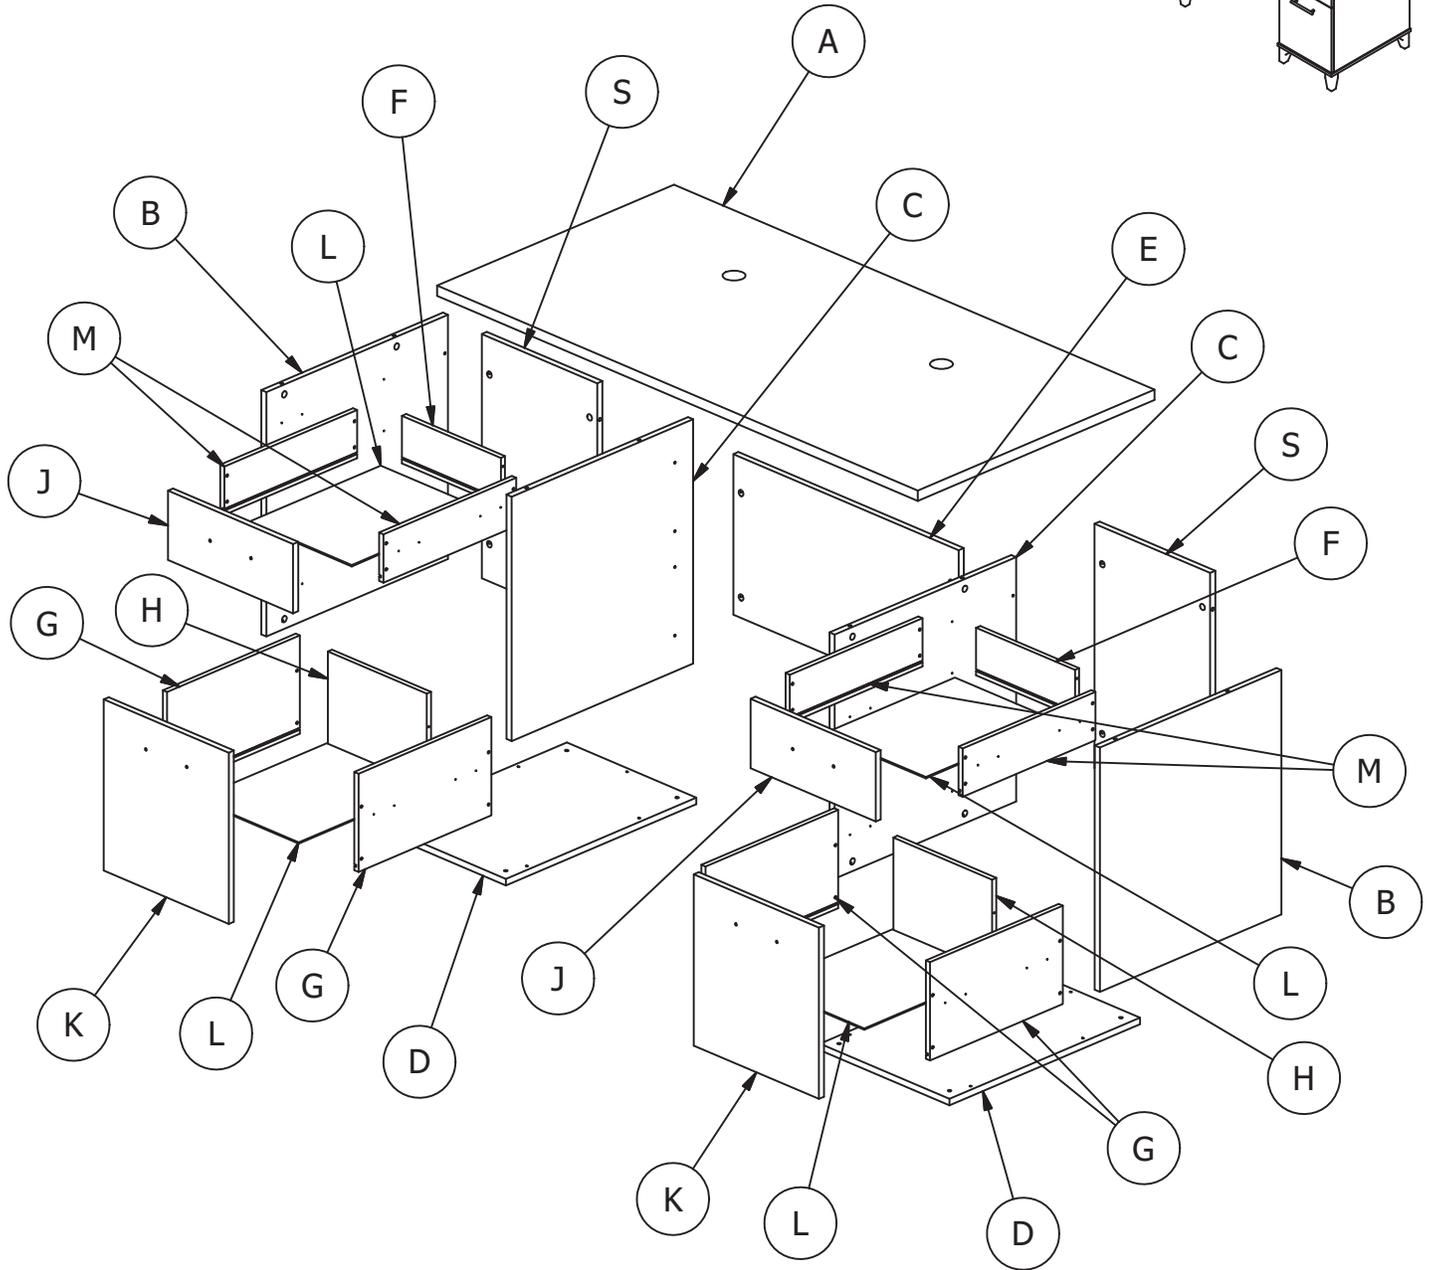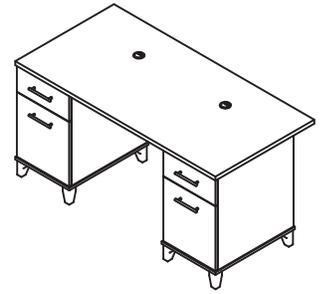

Get to know your Fasteners


Fasteners are shown actual size.

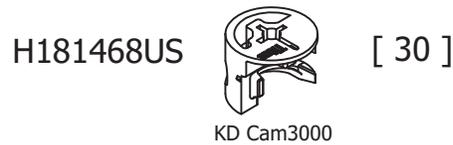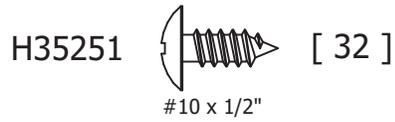

Get to know your Hardware


Hardware not to scale.

Q89897

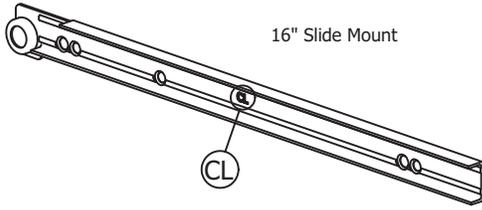


[2]

H100445

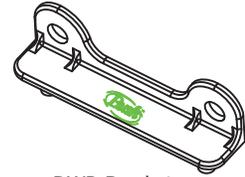

[4]

Q89897

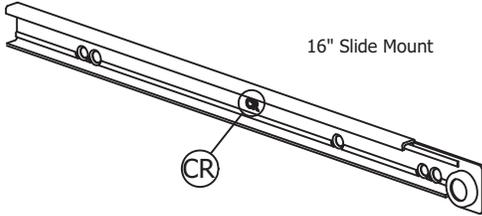


[2]

H100446




[4]

Q89897

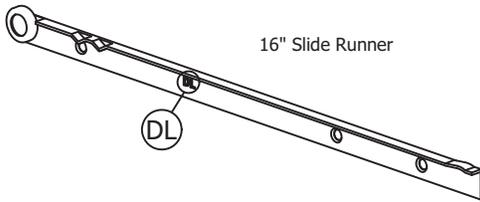


[2]

H162488

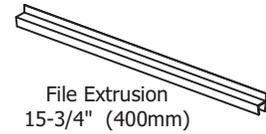


[4]

Q89897

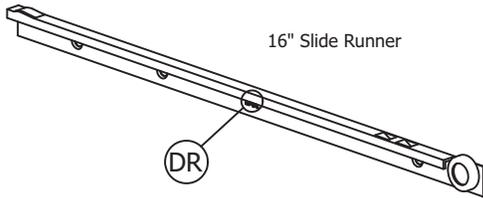


[2]

H215406

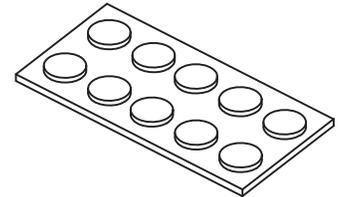

[1]

Q162813

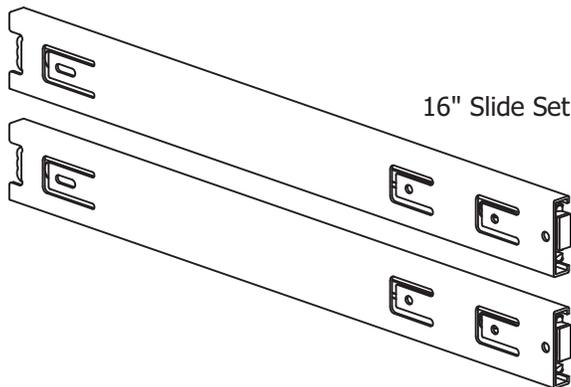

[2]

Get to know your Hardware

Hardware not to scale.




[4]

Cover Cap




[2]

5mm Hole Plug

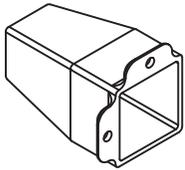

[8]

Foot

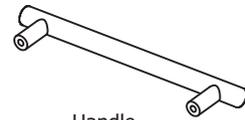

[4]

Handle




[2]

Grommet

STEP 1

Prepare Panels


H100446

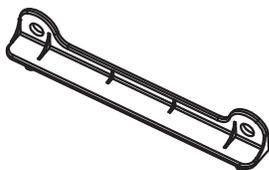

[4]

Drawer Bracket


H100445

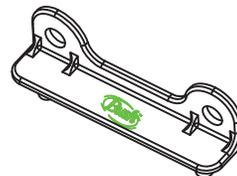

[4]




DWR Bracket

H35251



[16]

#10 x 1/2"

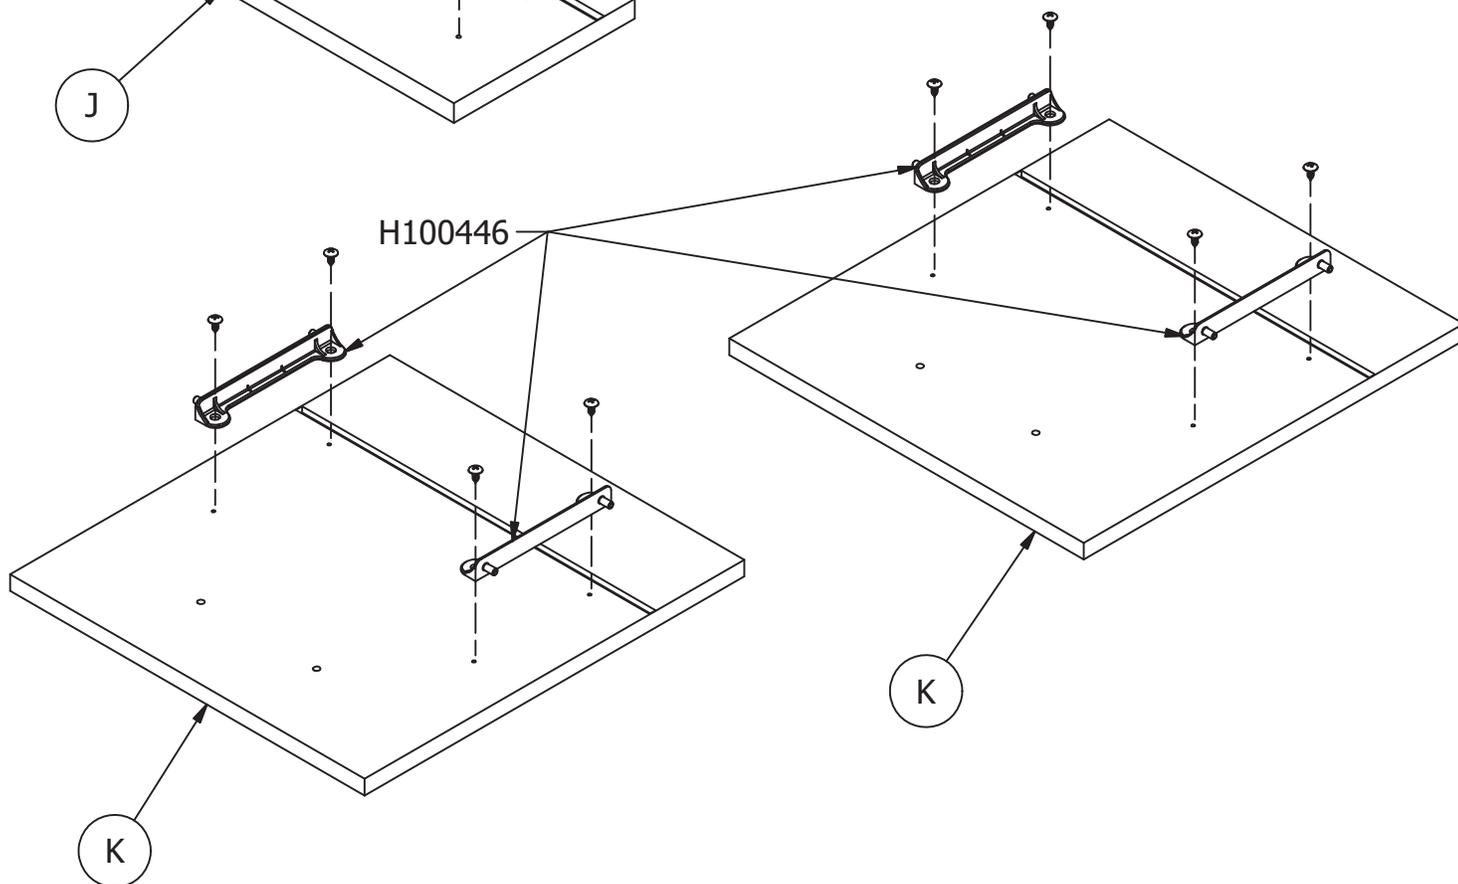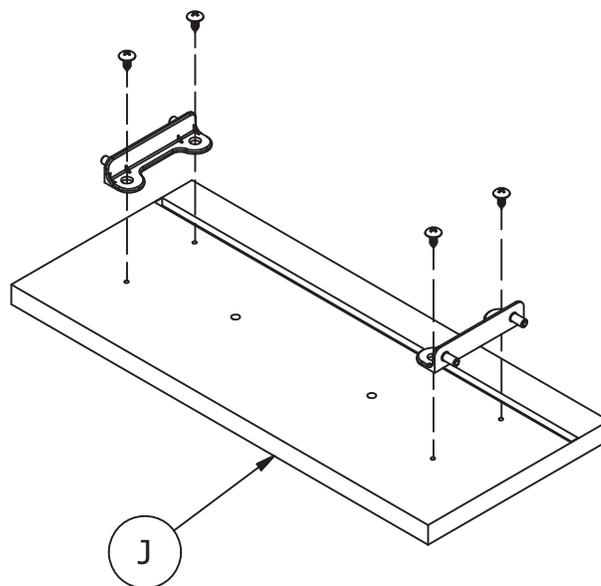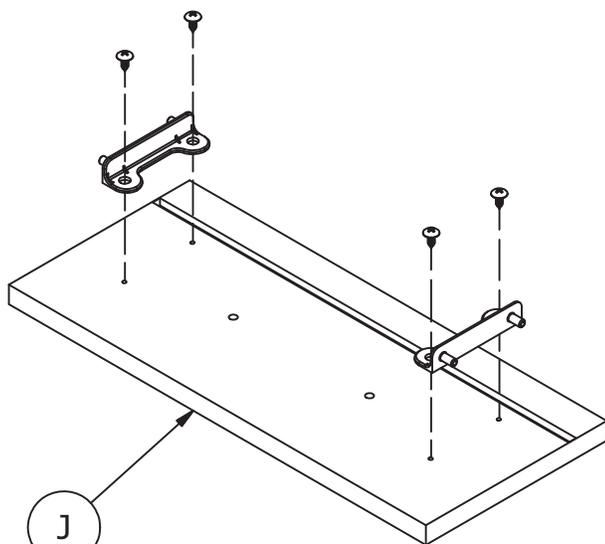


STEP 2


Assemble Panels

H26053  [16]
#10 x 1-1/4"


H28917  [8]
#6 x 1/2"

H101725  [8]
#6 x 1/2"

2X

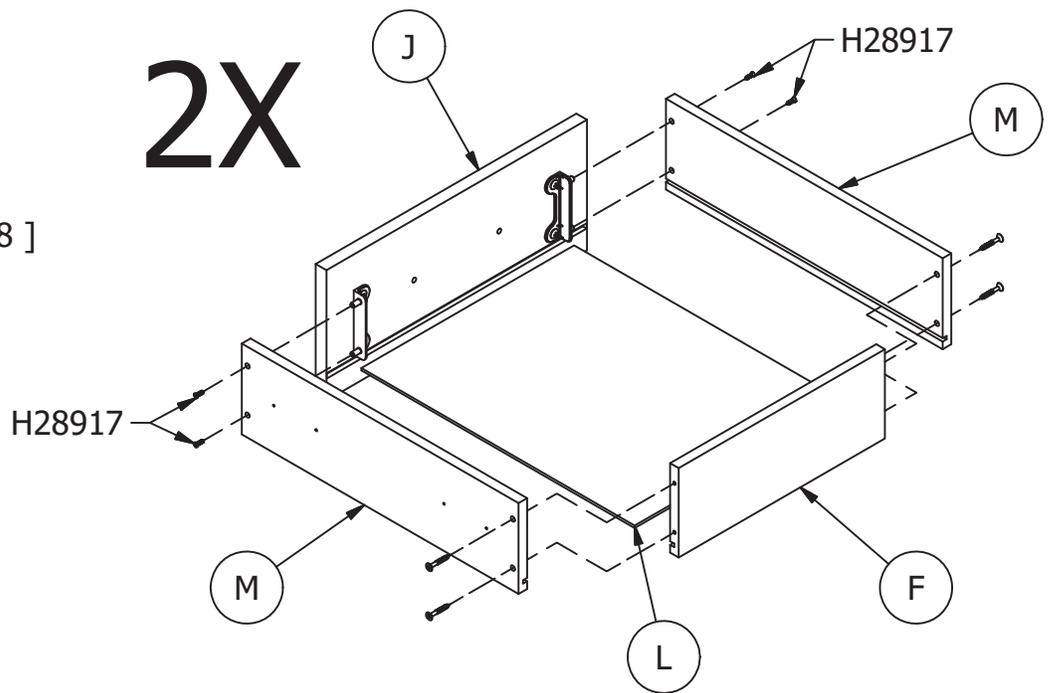

2X

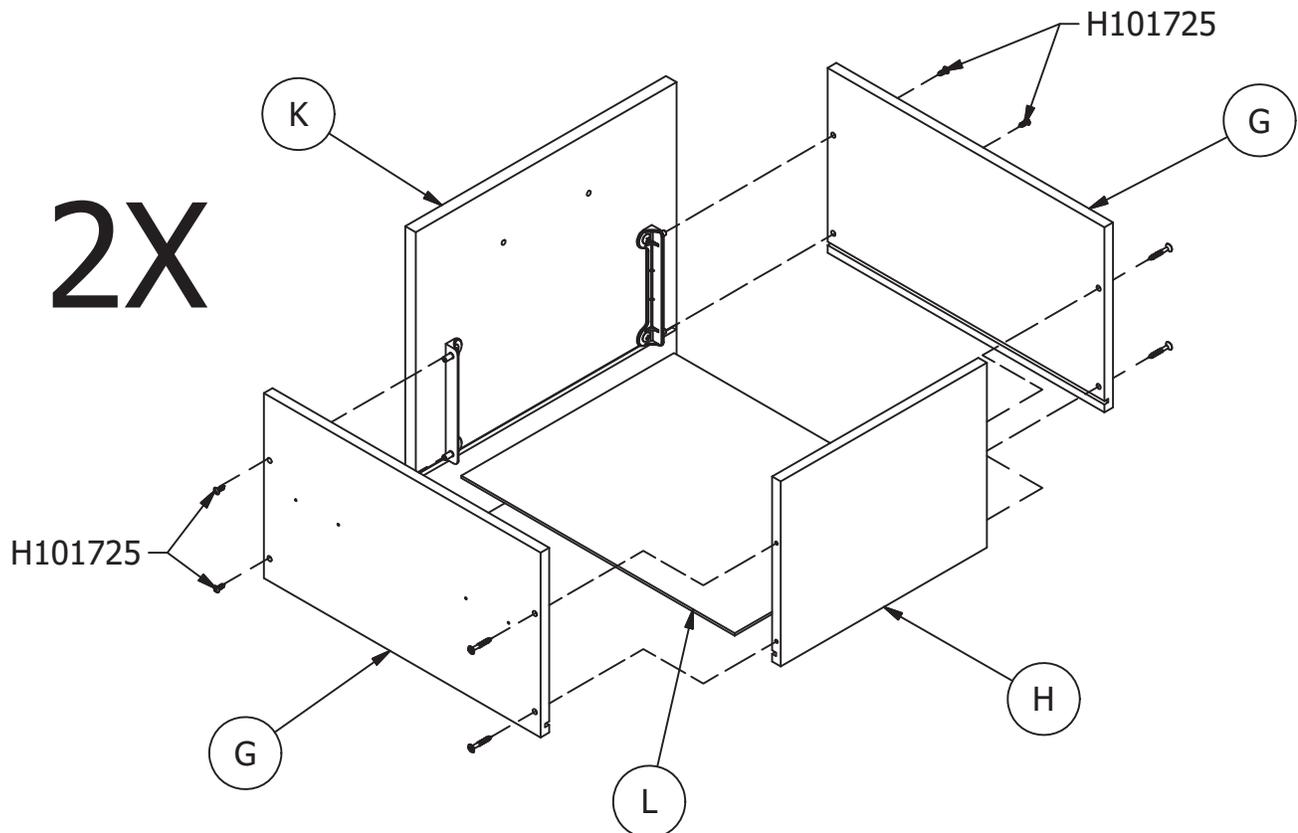


STEP 3


Assemble Panels


H28917  [12]
#6 x 1/2"


H23480  [4]
#8-32 x 7/8"

H215406  [4]
Bumper

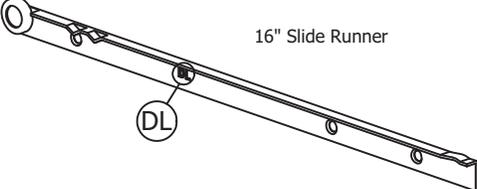Q89897  [2]
16" Slide Runner
DL

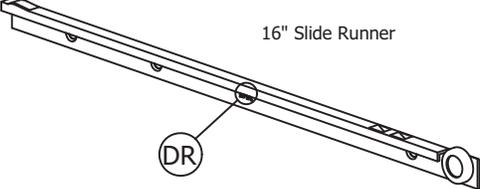Q89897  [2]
16" Slide Runner
DR

 [2]
Handle

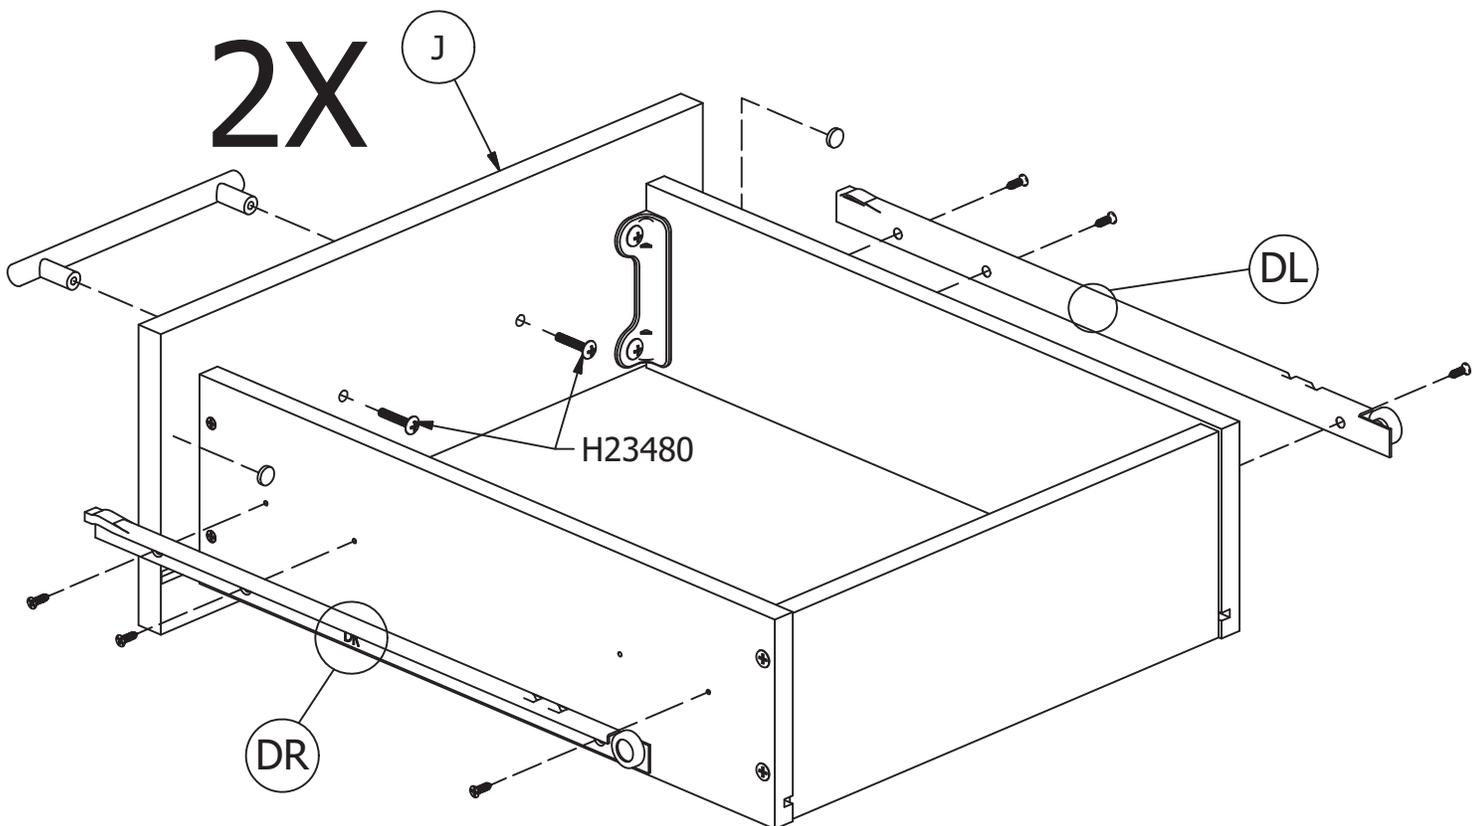


STEP 4

Separate Slides


**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

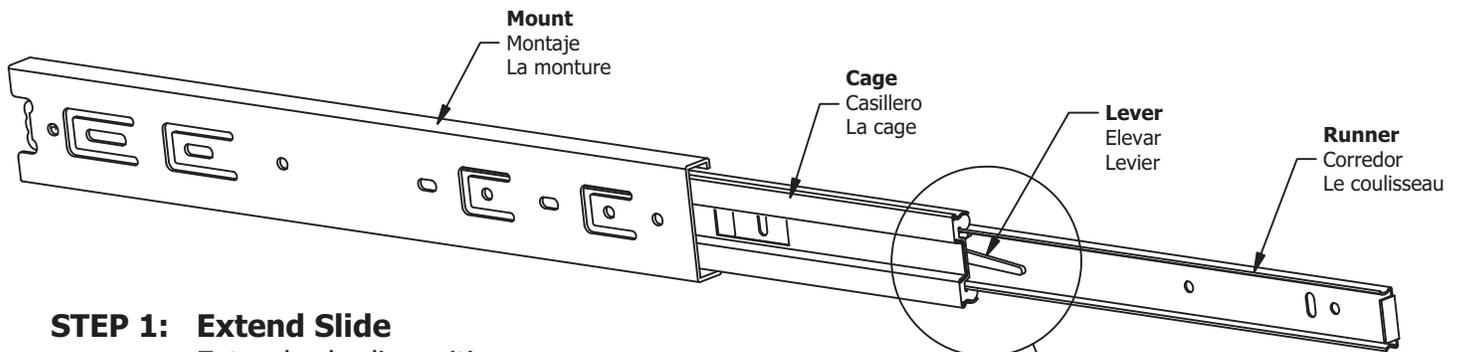


STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

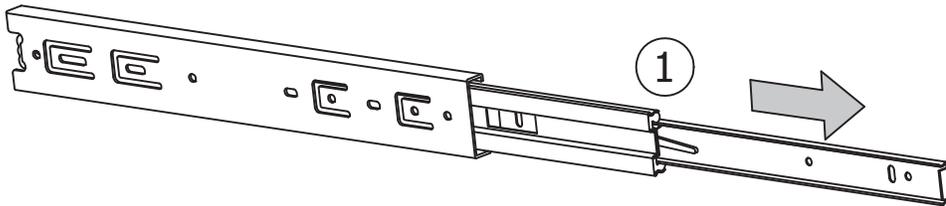

STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

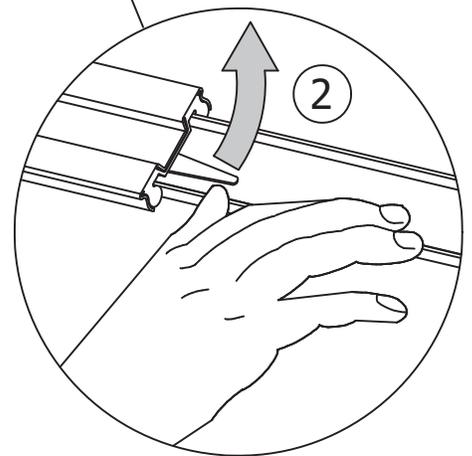

STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

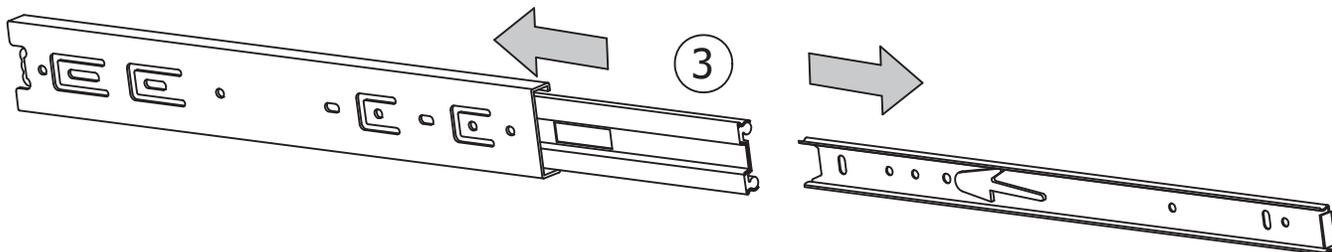

STEP 5


Assemble Panels


H101725  [12]
#6 x 1/2"


Q162813


H23480  [4]
#8-32 x 7/8"

H215406  [4]
Bumper

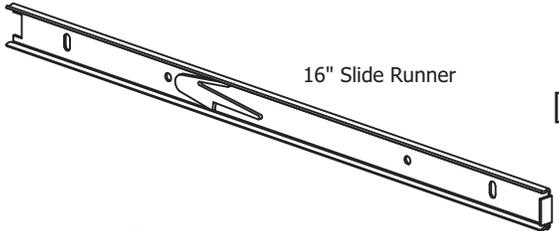 16" Slide Runner [4] *

 [2]
Handle

H162488  [4]
File Extrusion
15-3/4" (400mm)

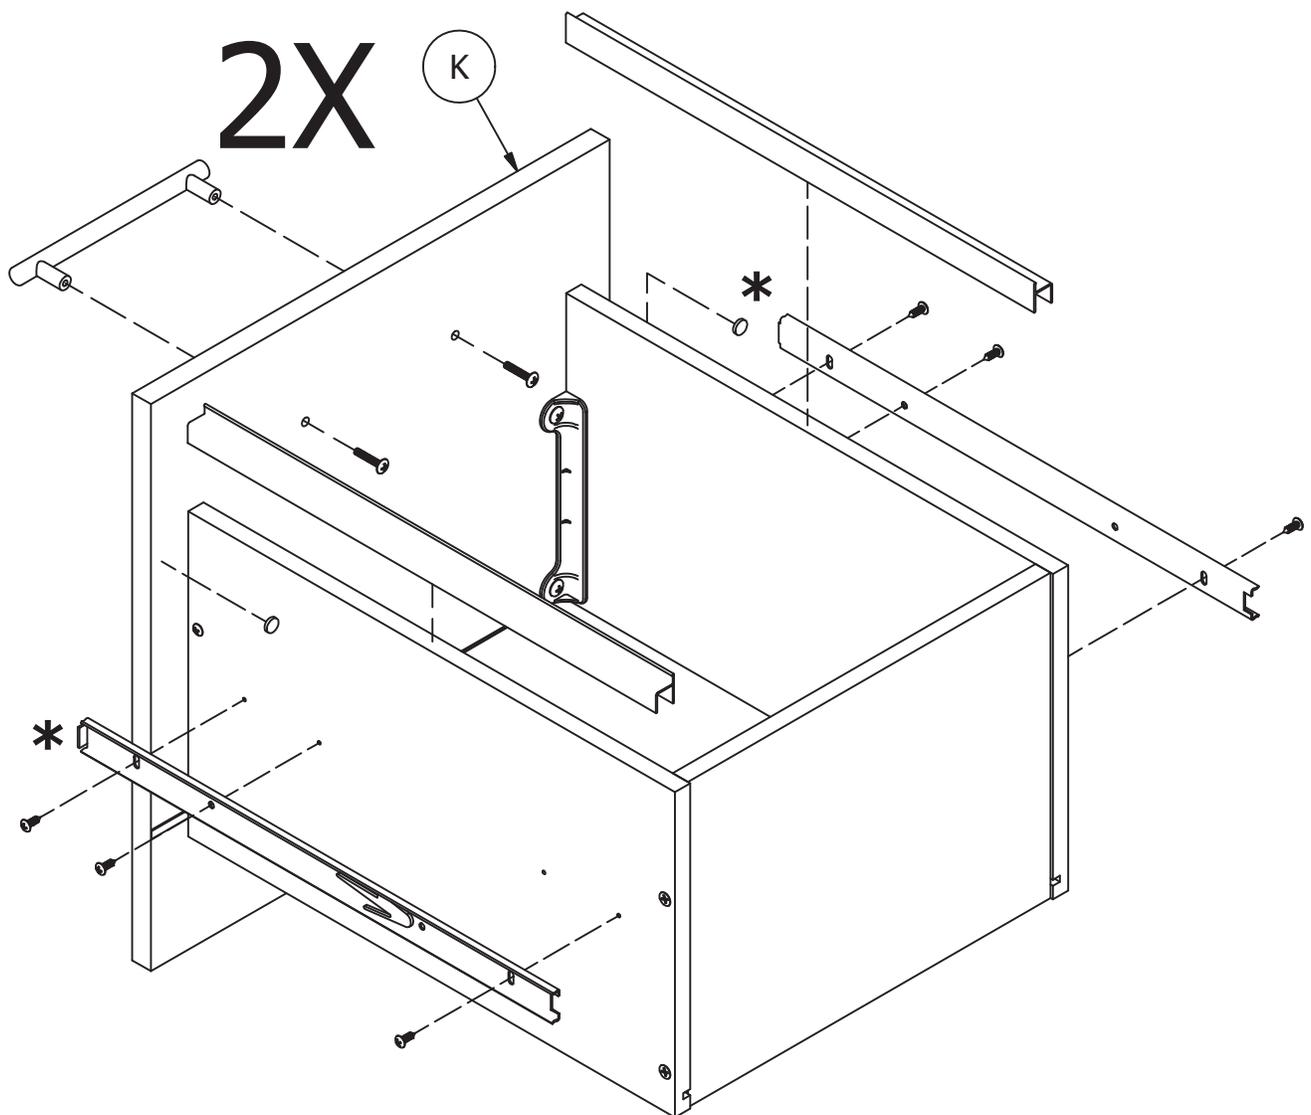

STEP 6


Prepare Panel

H28917  [3]
#6 x 1/2"



H101725  [3]
#6 x 1/2"

H72988  [2]
KD Bolt

Q89897

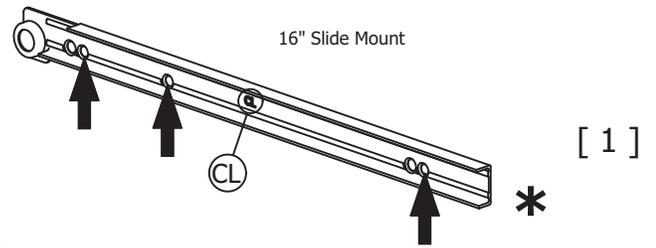

Q162813

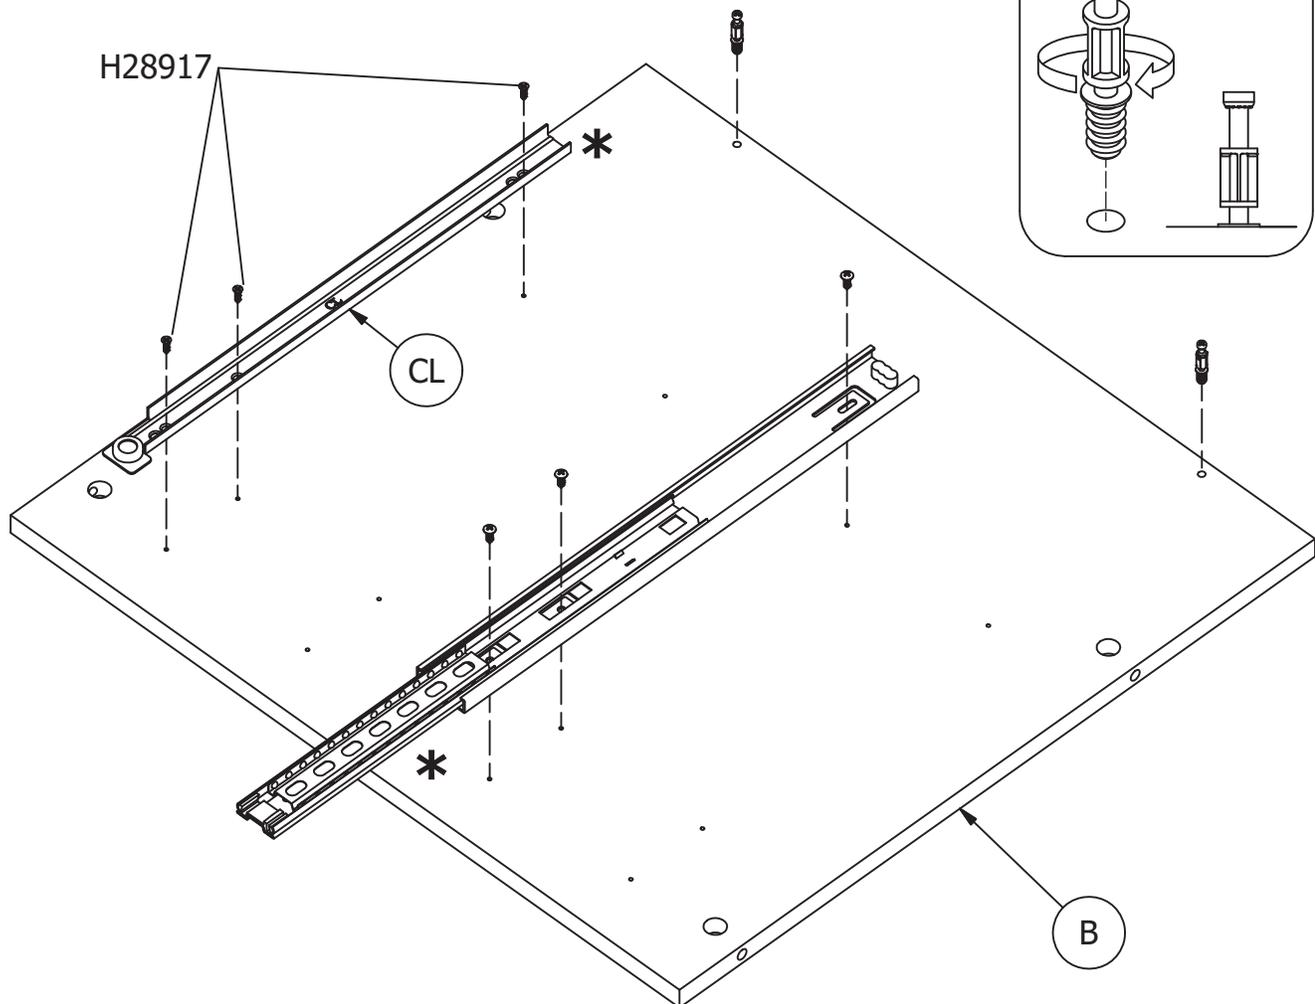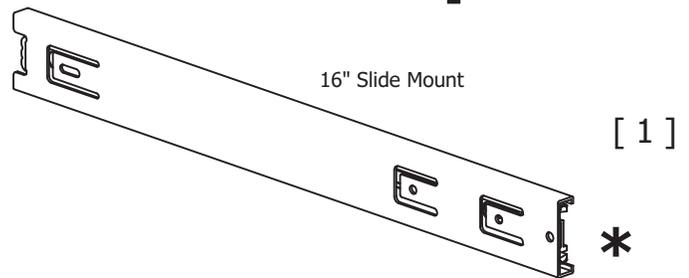


STEP 7





Prepare Panel

H28917  [3]
#6 x 1/2"

H101725  [3]
#6 x 1/2"


H72988  [2]
KD Bolt

Q162813

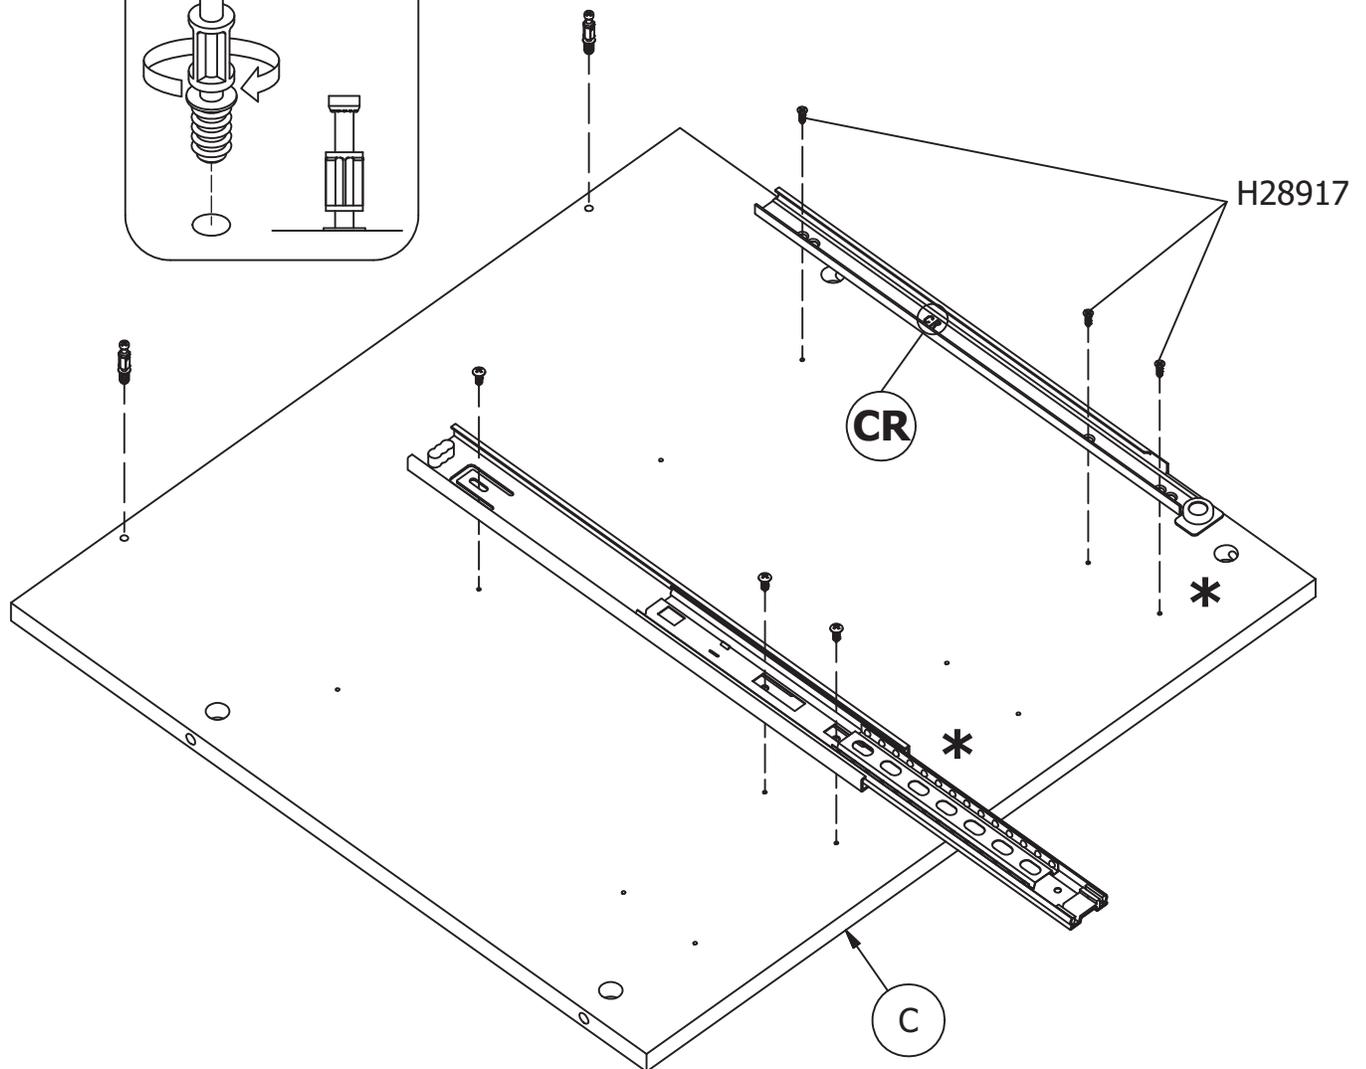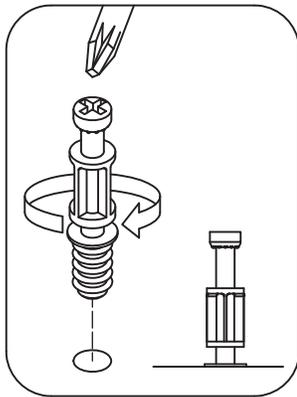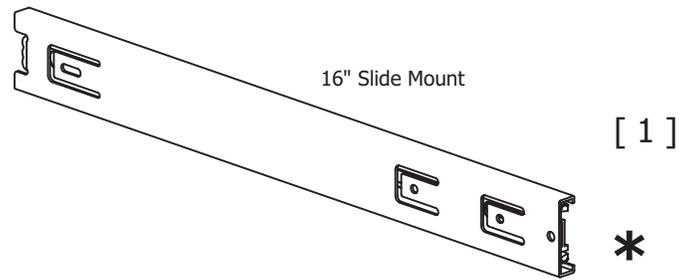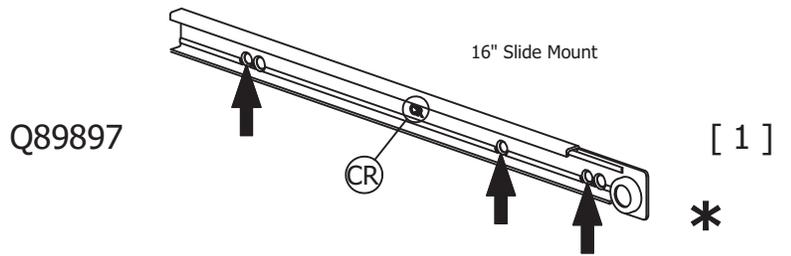

STEP 8


Prepare Panel

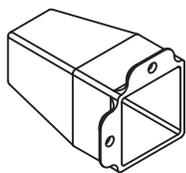

Foot


[4]

H35251



[8]


H72988



[5]


KD Bolt

H143460





#12 x 4"

[4]

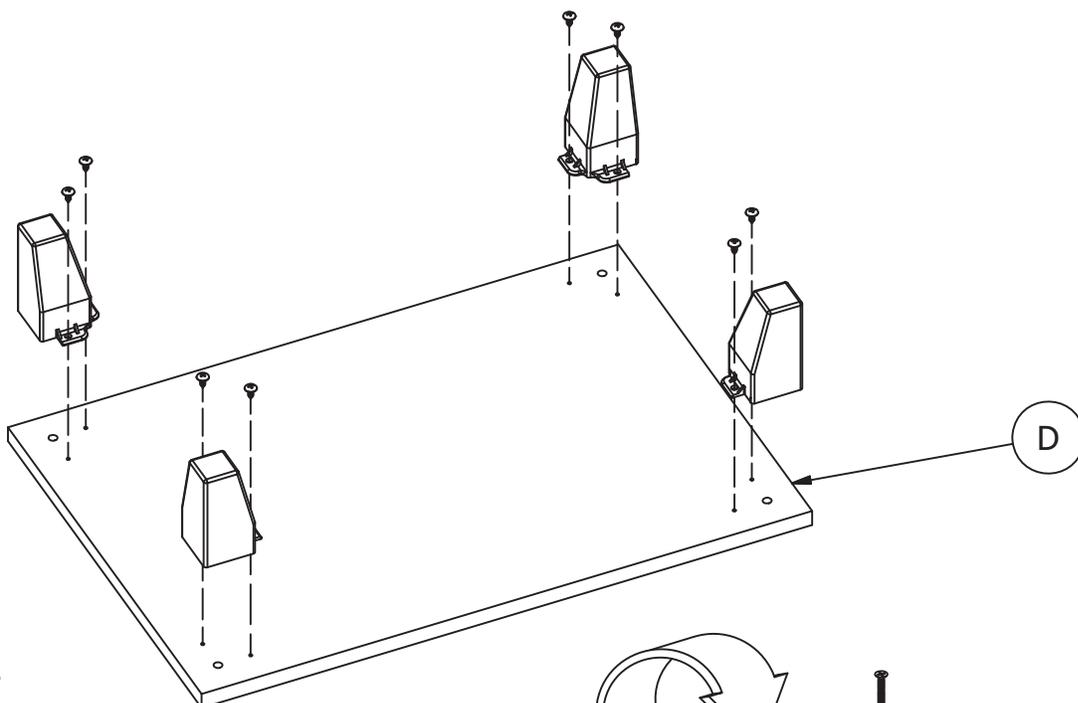

Flip panel over
Voltear el panel
Retournez le panneau

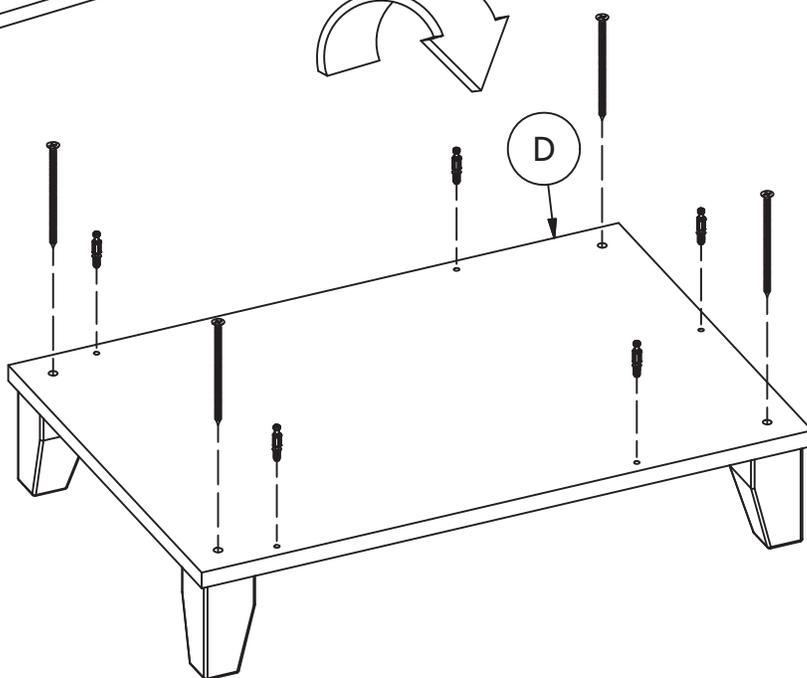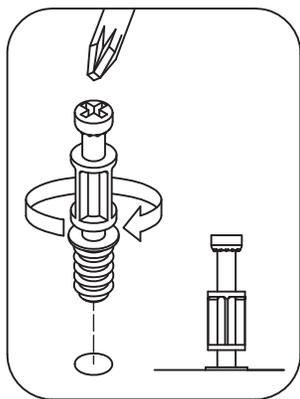

STEP 9



Assemble Panels

H181468US



KD Cam3000

[4]

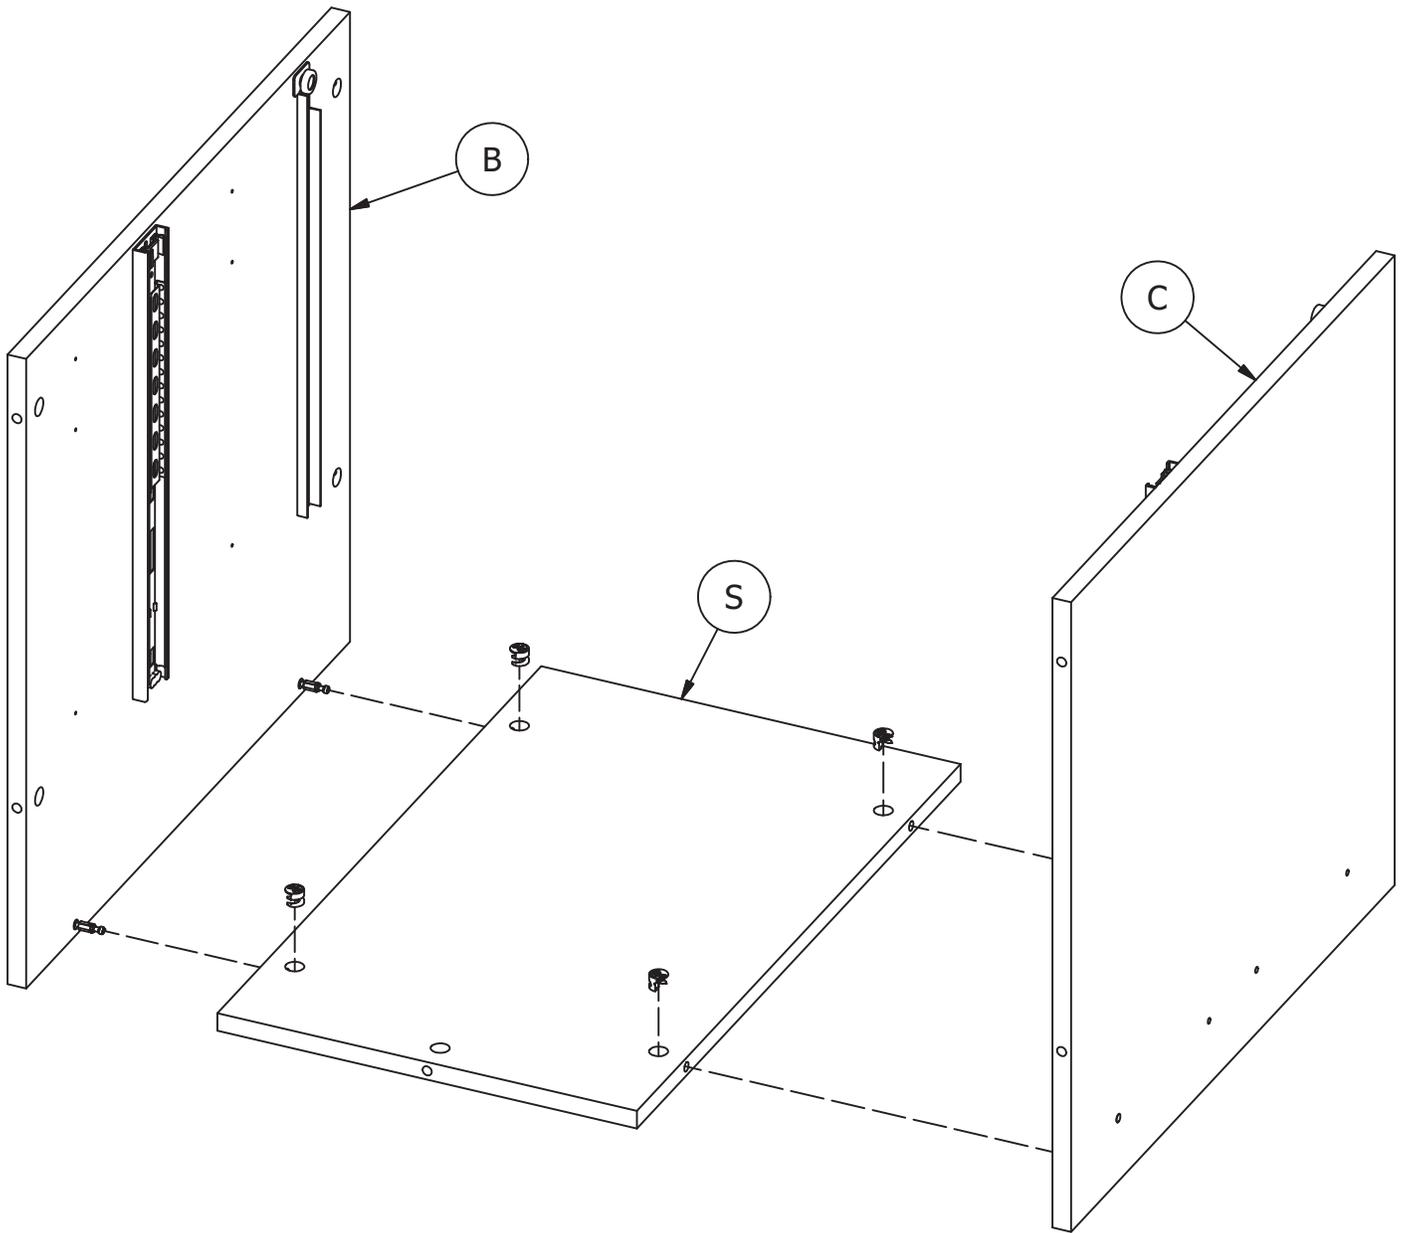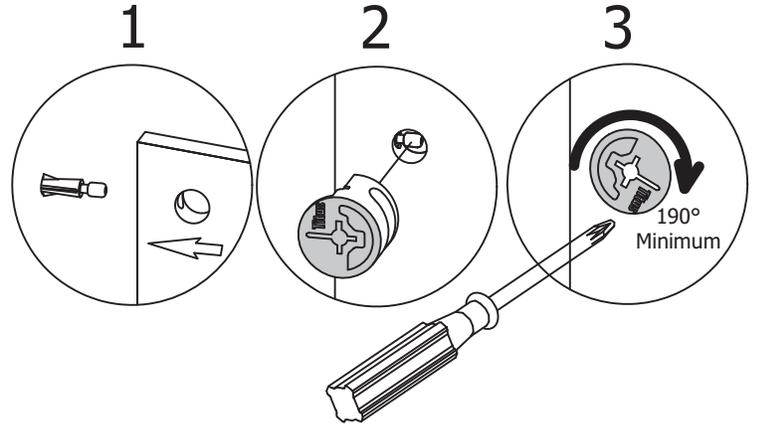



STEP 10

Assemble Panels

H181468US



[5]

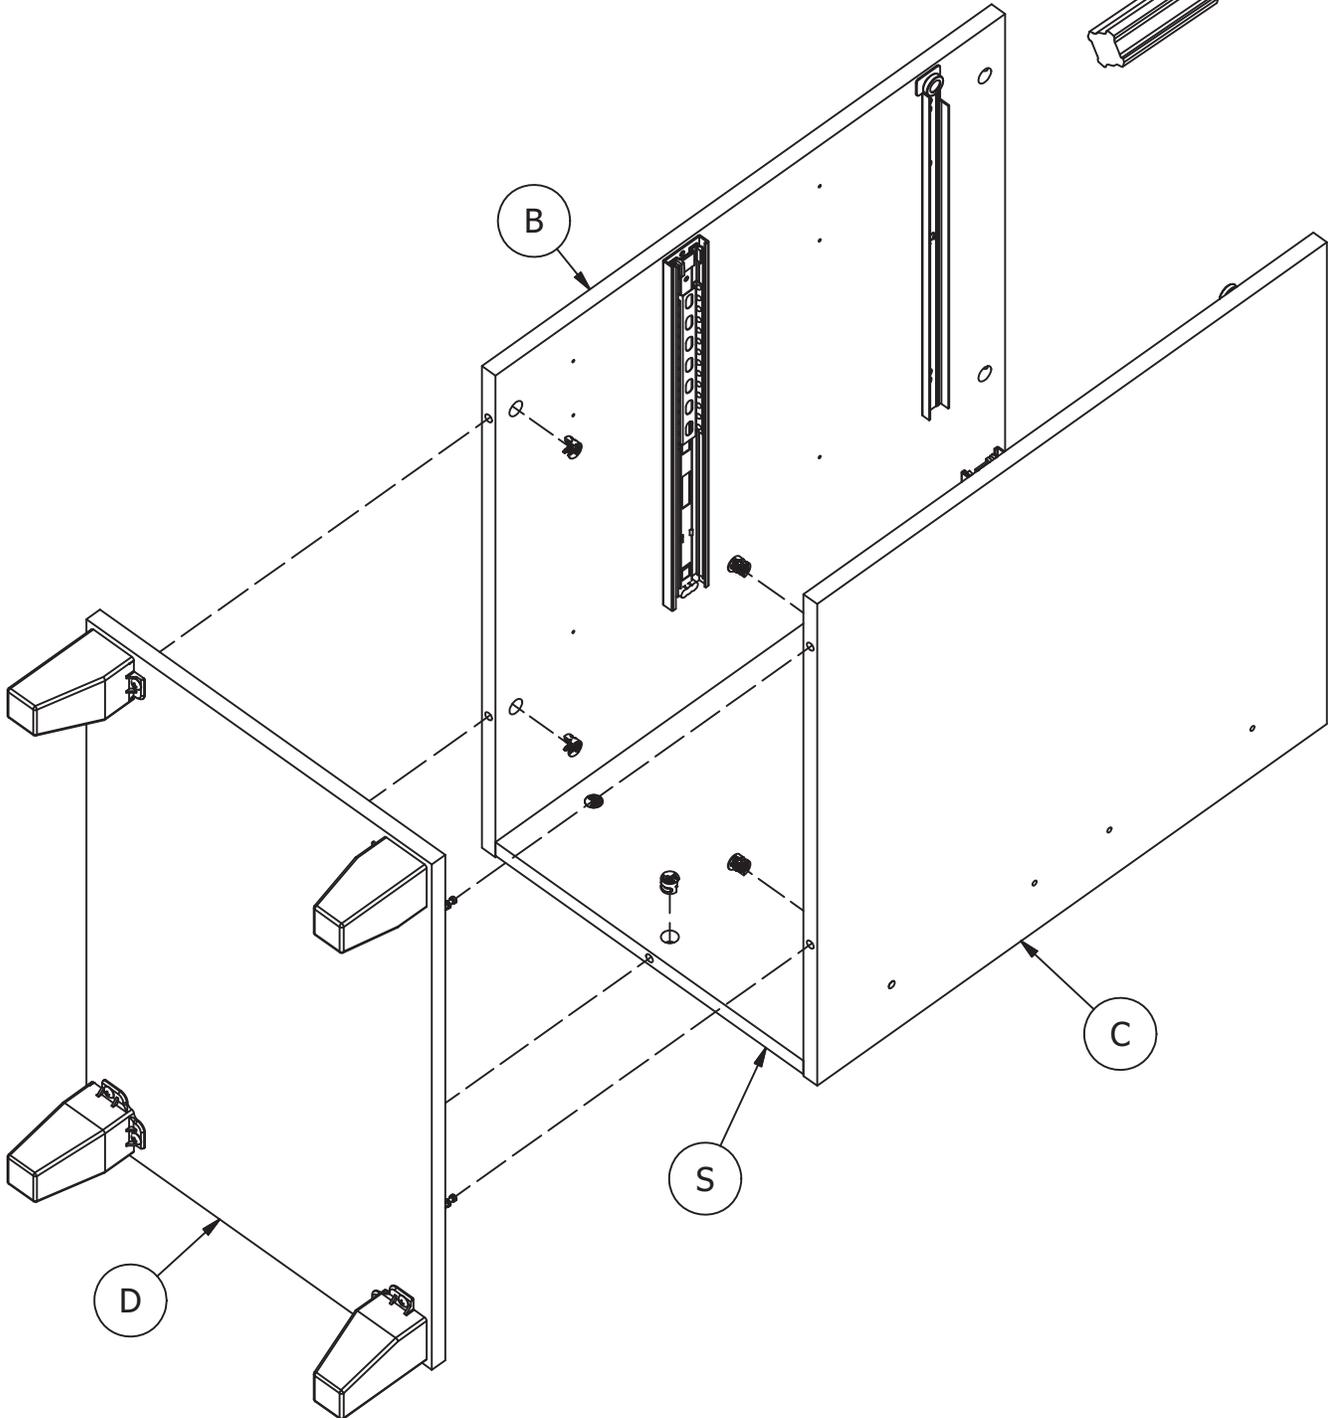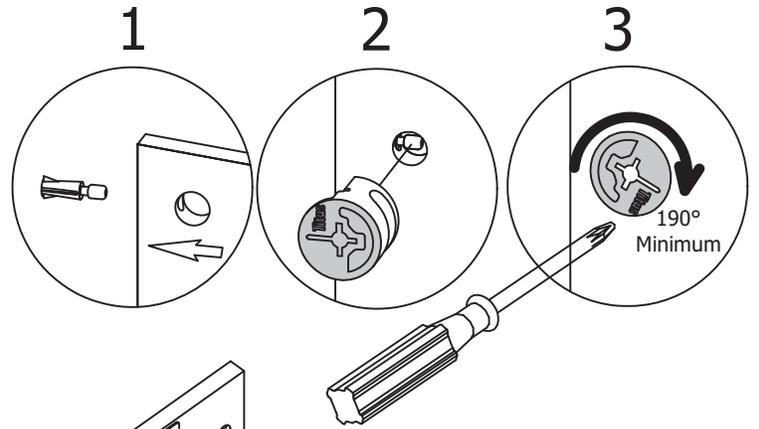


STEP 11





Prepare Panel

H28917  [3]
#6 x 1/2"

H101725  [3]
#6 x 1/2"

H72988  [2]
KD Bolt

Q162813

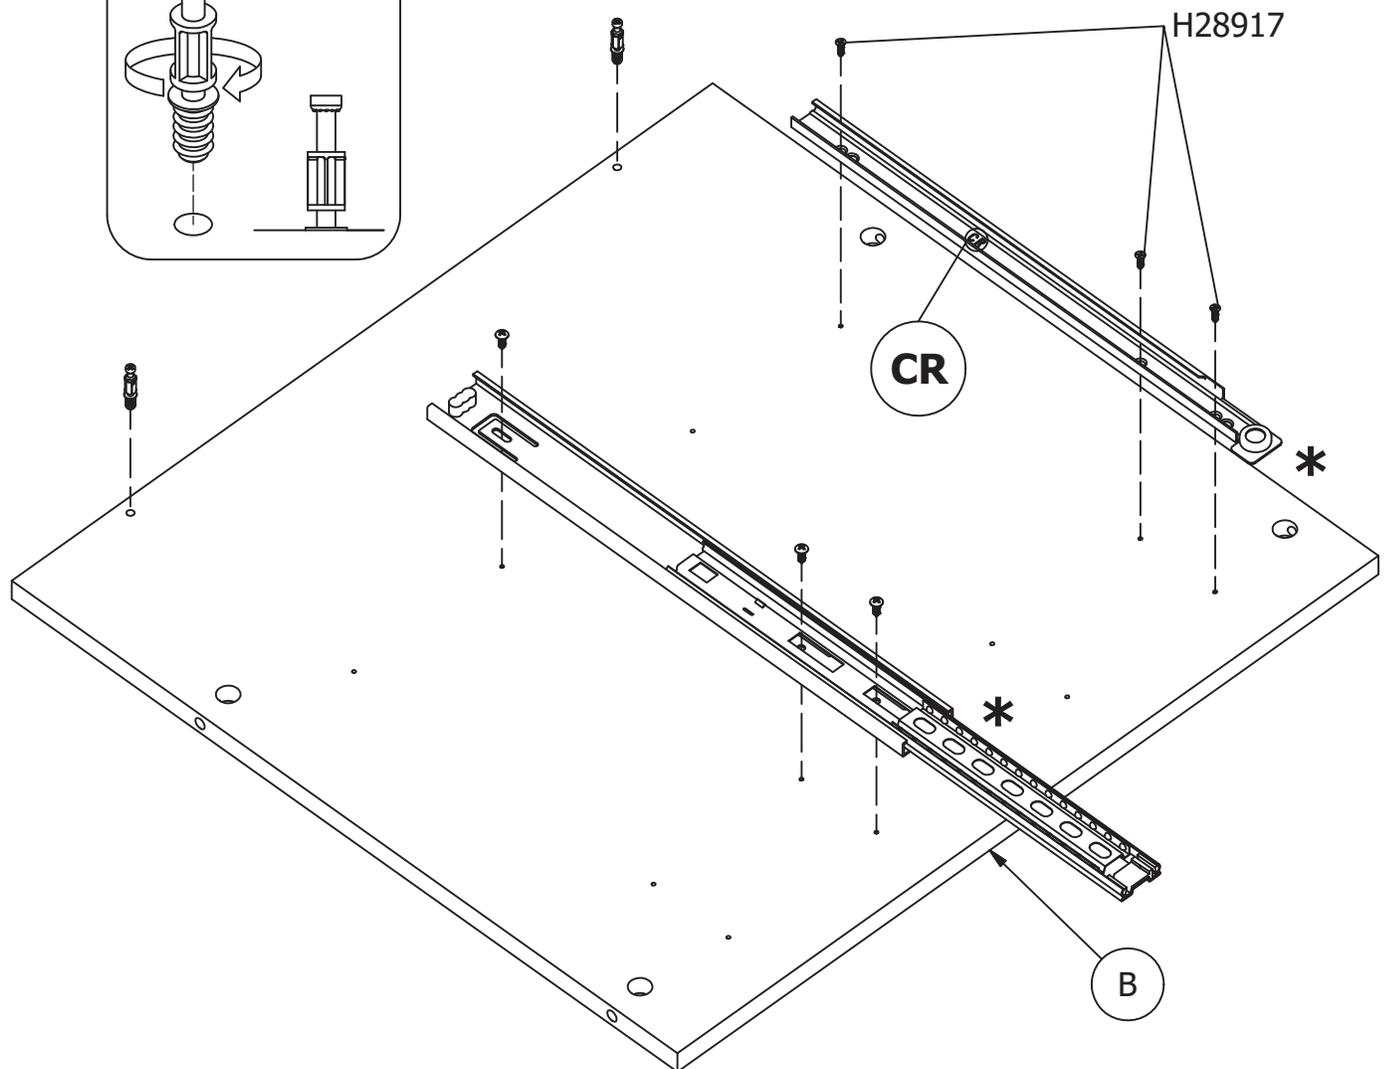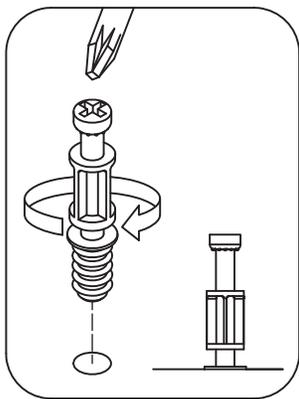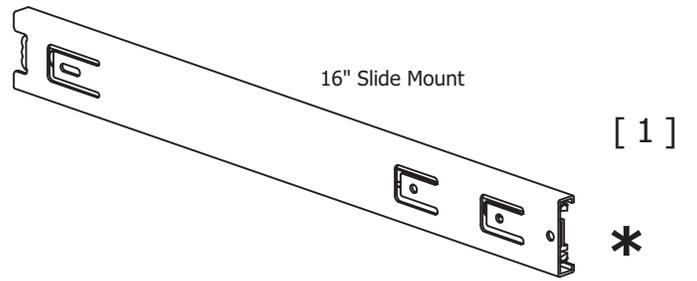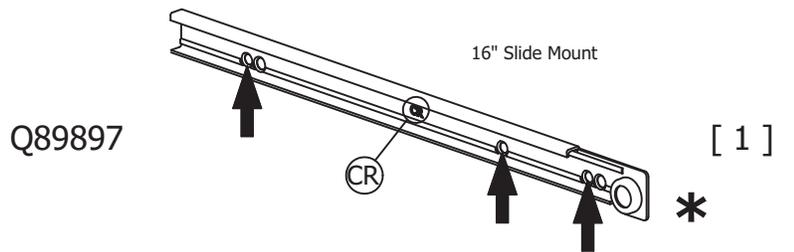





STEP 12

Prepare Panel

H28917  [3]
#6 x 1/2"


H101725  [3]
#6 x 1/2"

H72988  [2] Q162813
KD Bolt

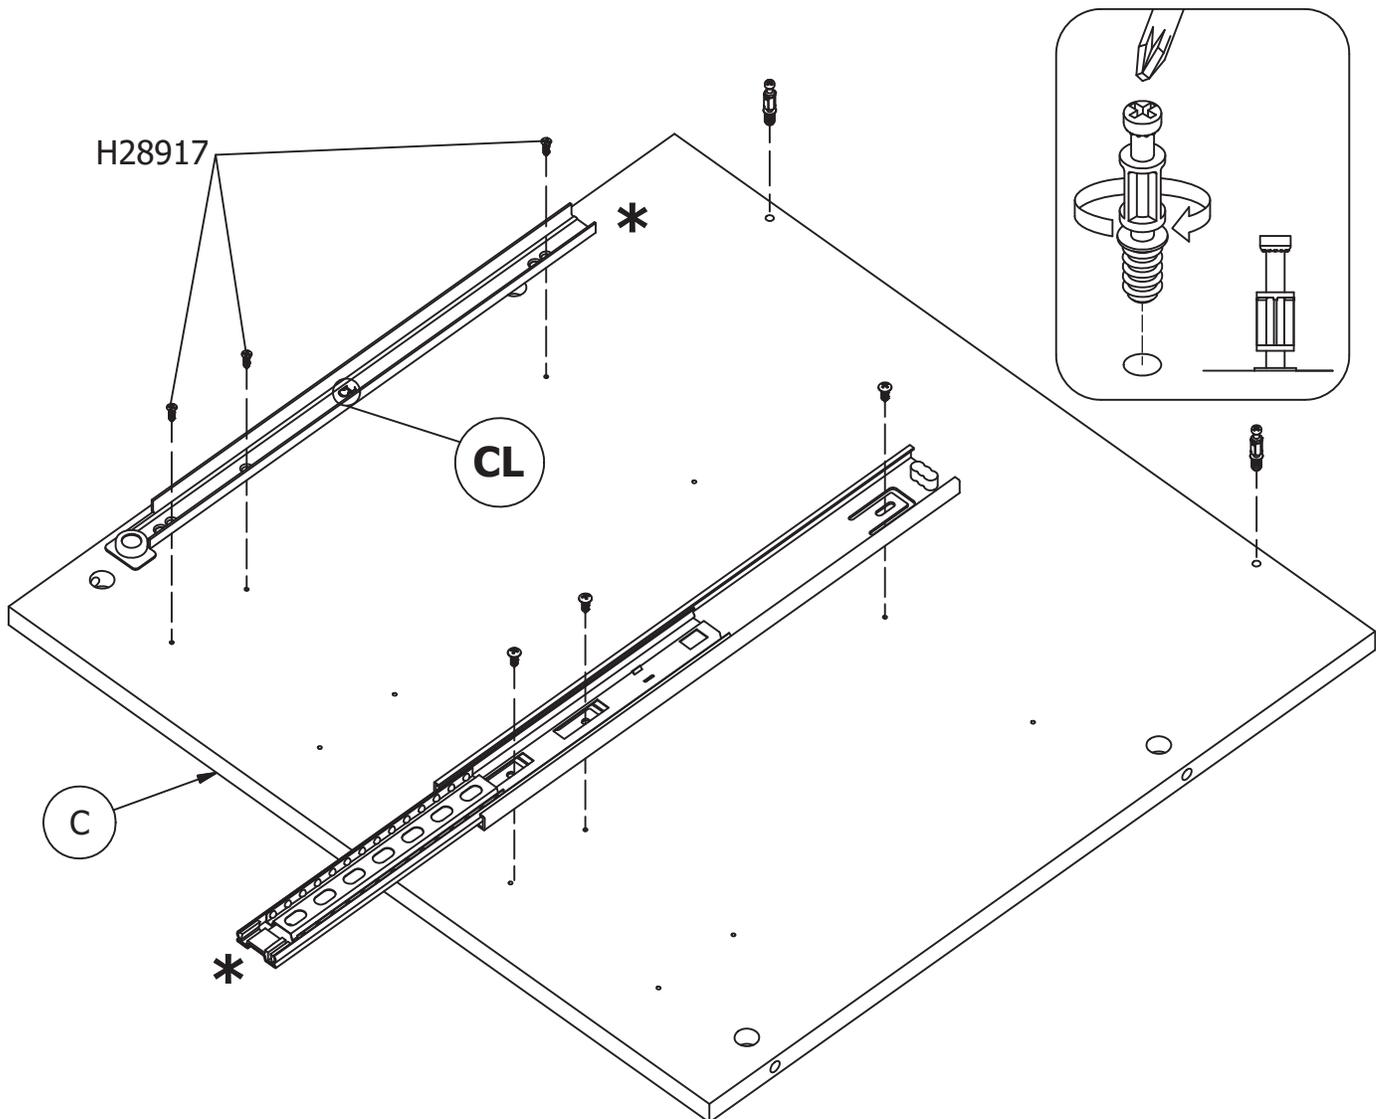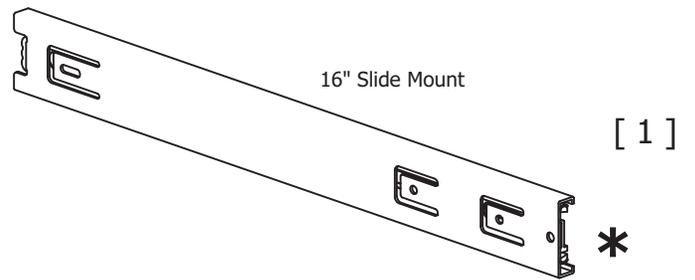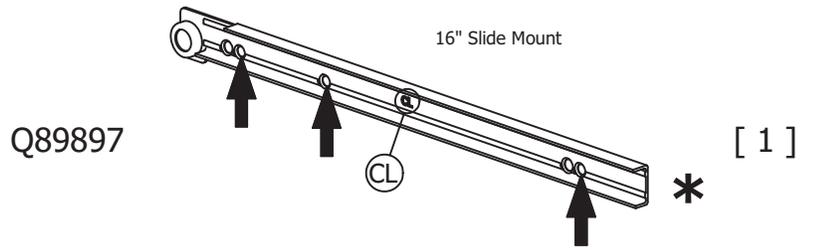

STEP 13


Prepare Panel

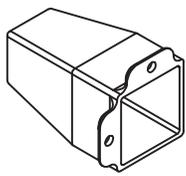

[4]

Foot

H35251



[8]

#10 x 1/2"


H72988



[5]


KD Bolt

H143460





[4]

#12 x 4"

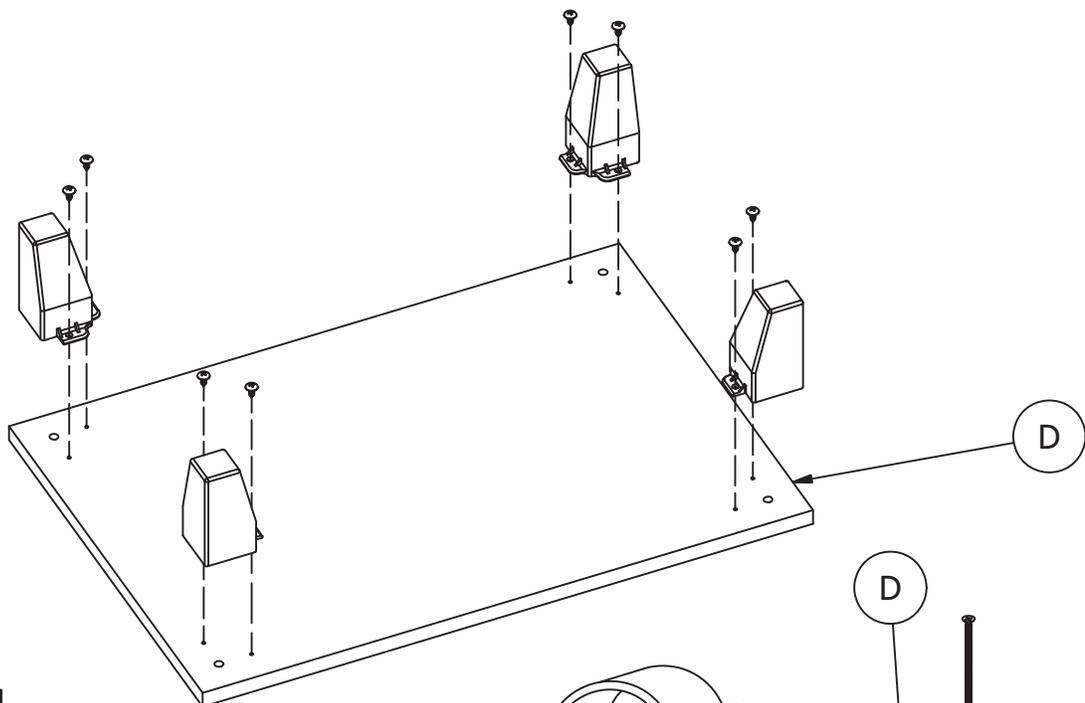

Flip panel over
Voltear el panel
Retournez le panneau

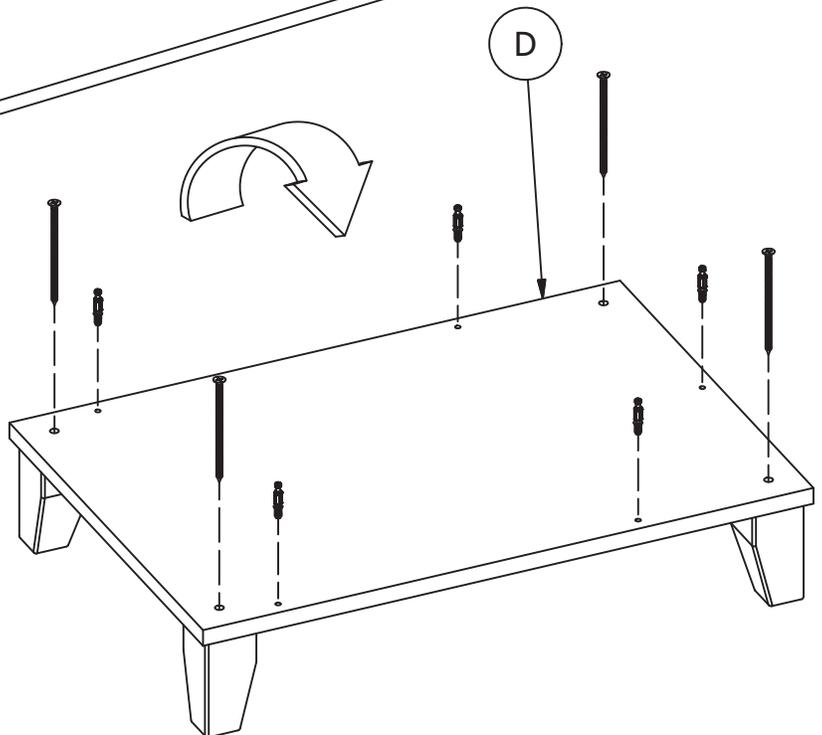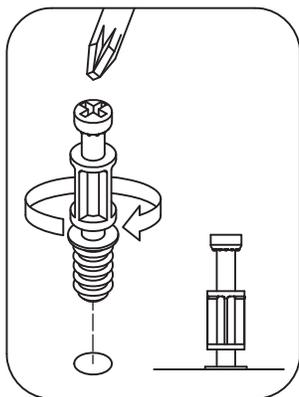

STEP 14



Assemble Panels

H181468US



KD Cam3000

[4]

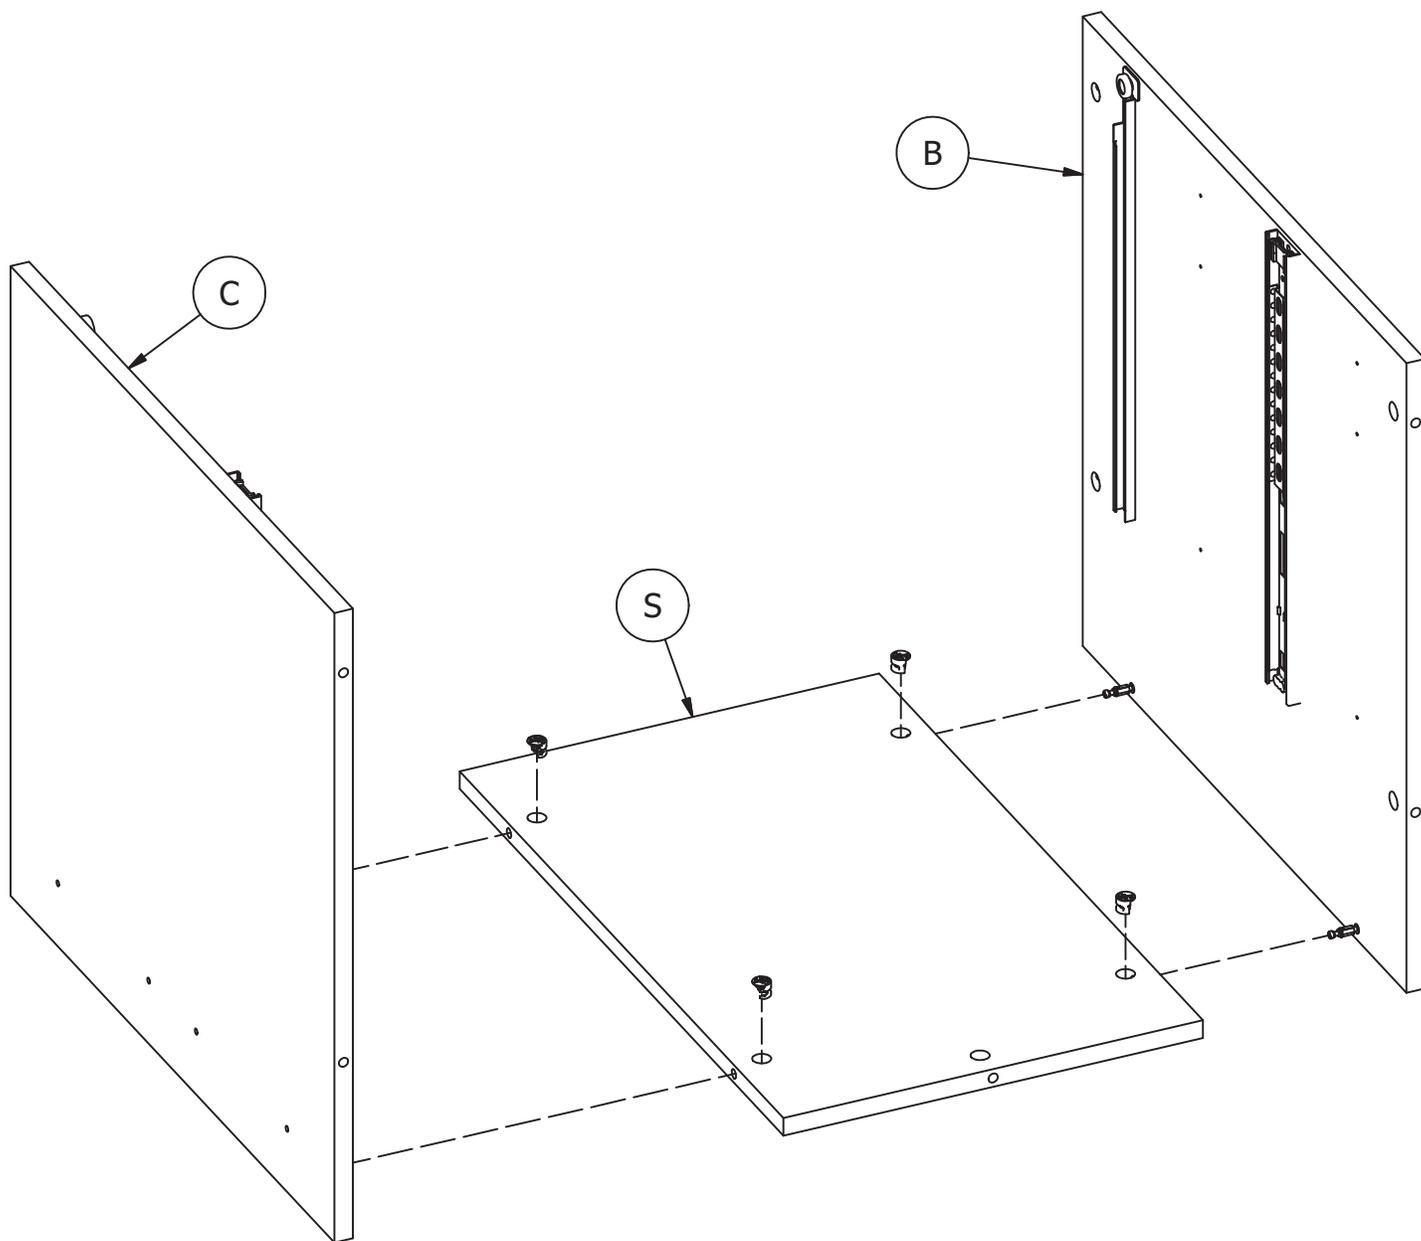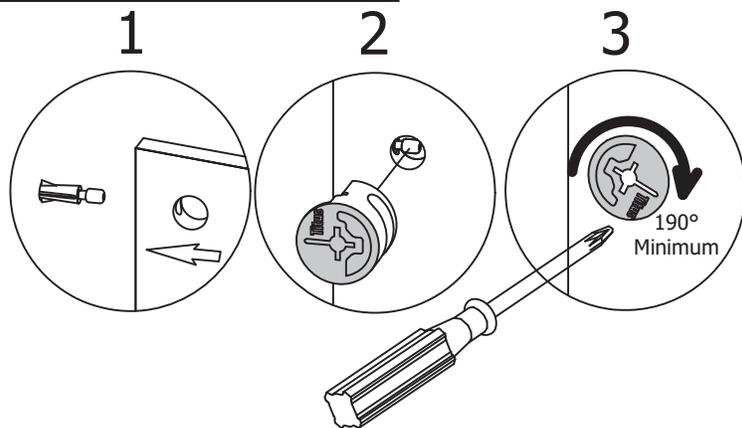

STEP 15



Assemble Panels

H181468US



[5]


KD Cam3000

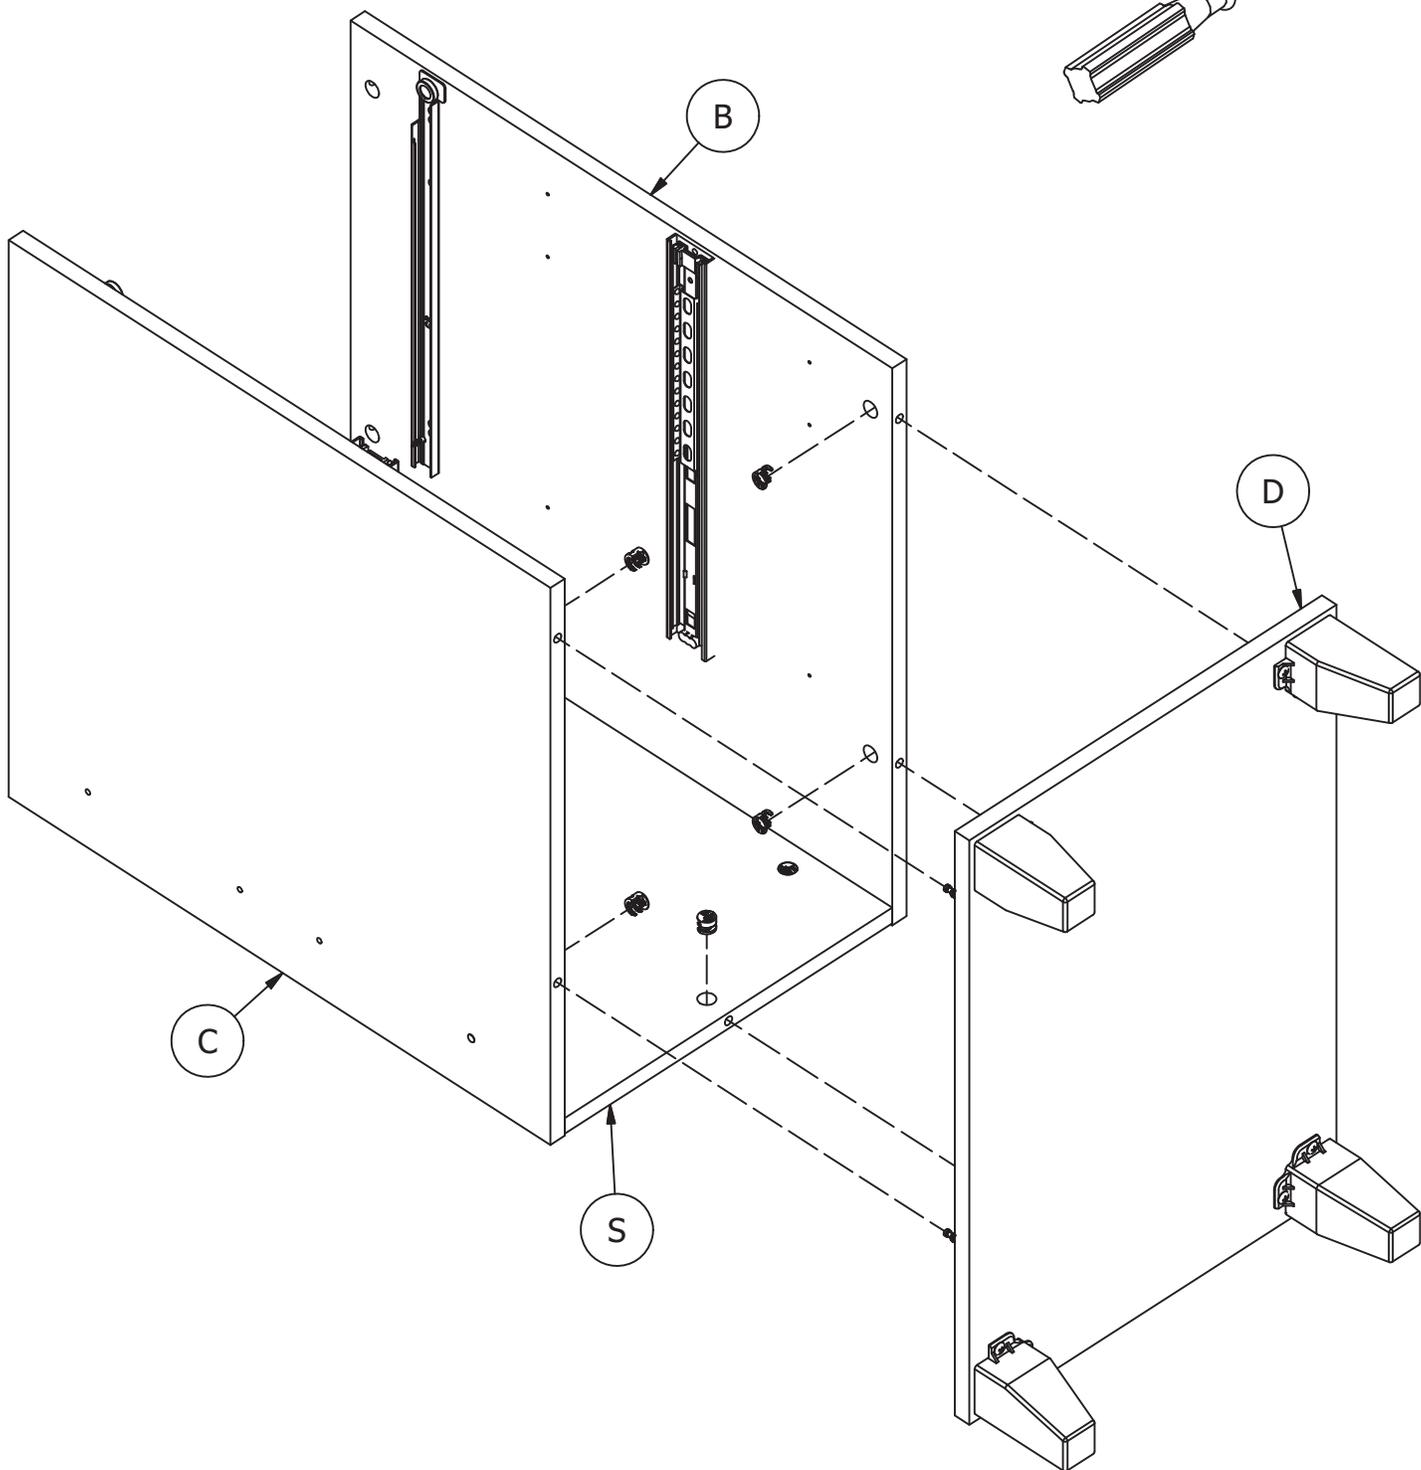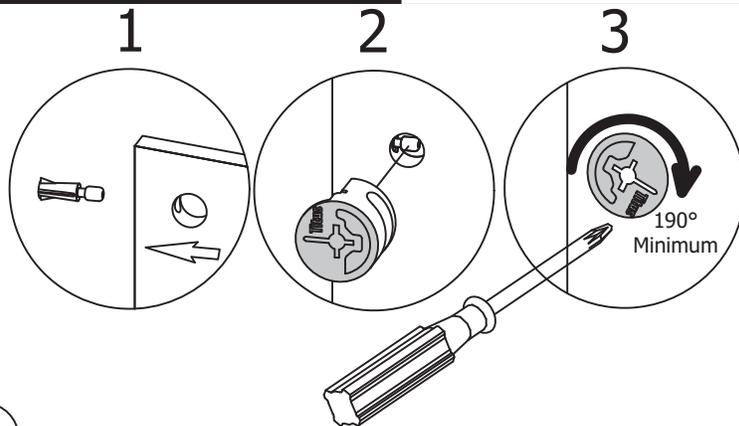

STEP 16

Attach Hardware

H72988






[4]

KD Bolt



[2]

5mm Hole Plug

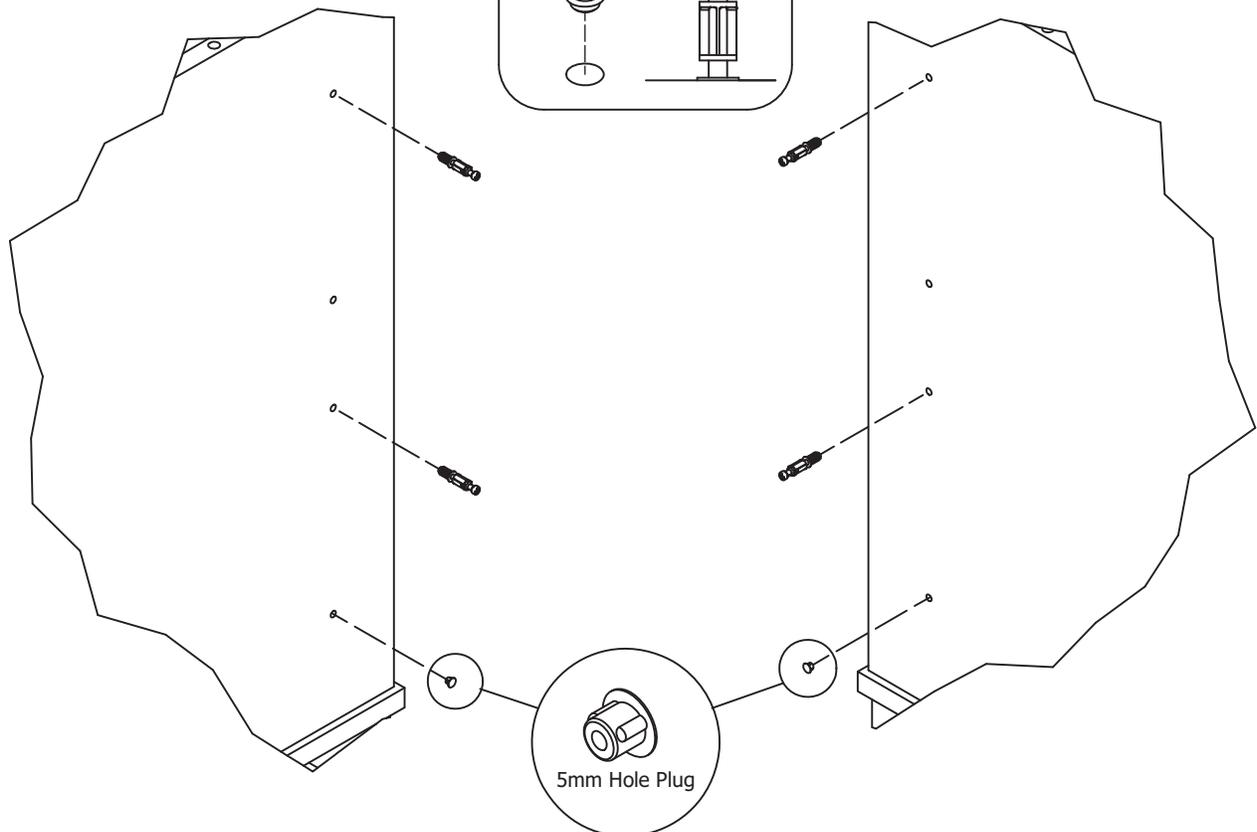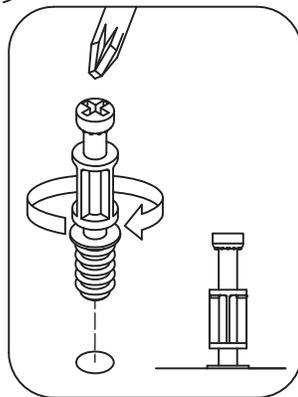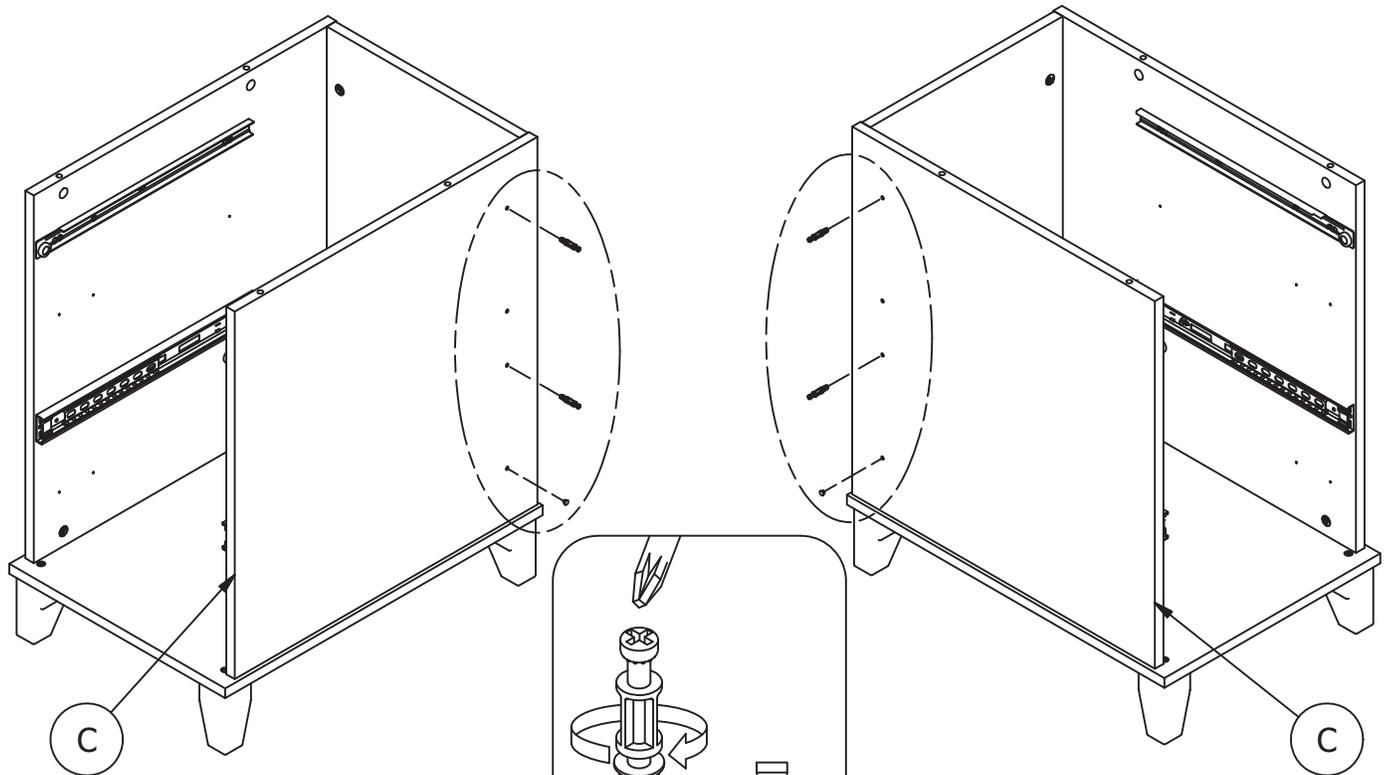

5mm Hole Plug

STEP 17


Assemble Panels

H181468US




KD Cam3000

[4]


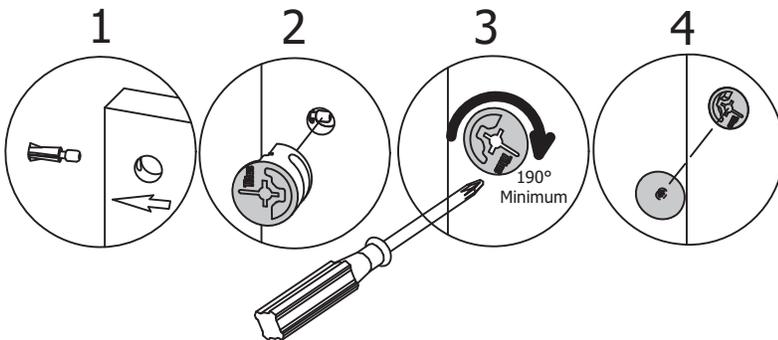


Cover Cap

[4]

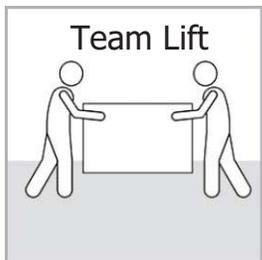

Team Lift

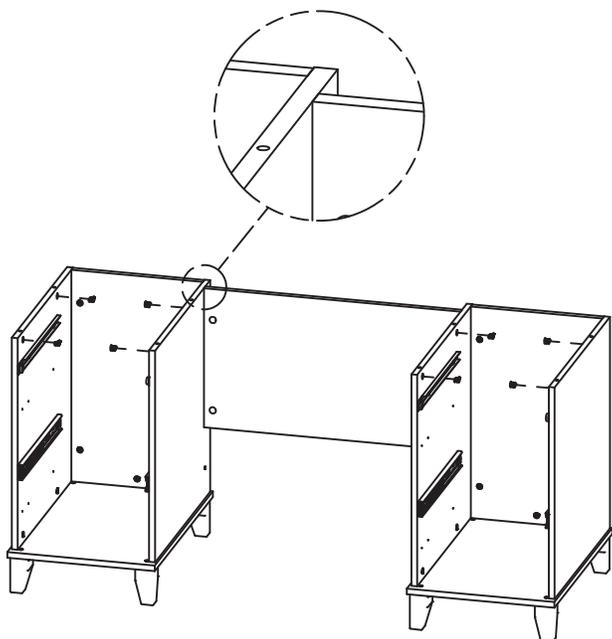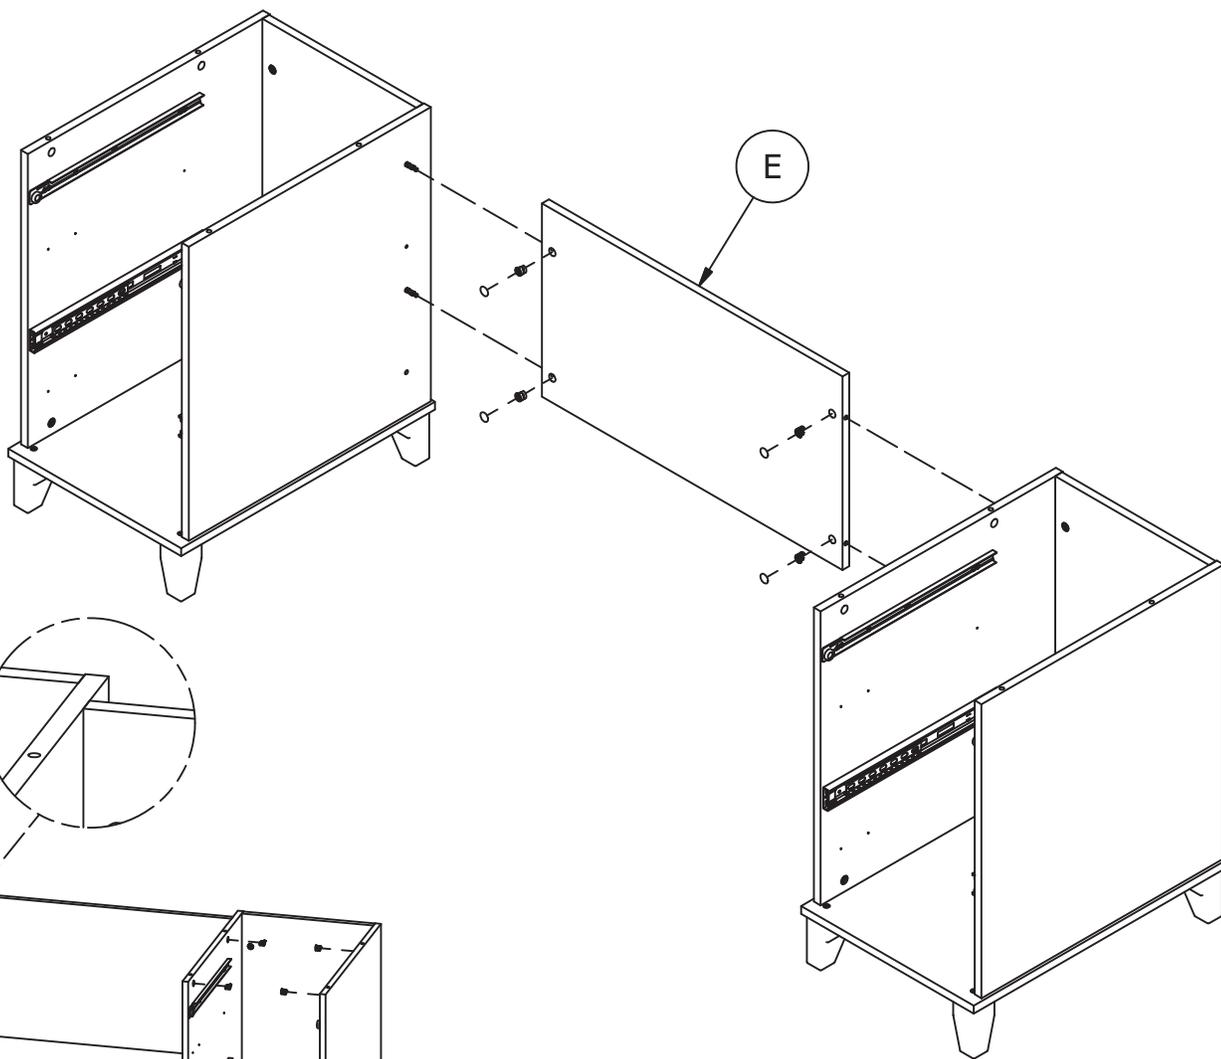


Finished view

STEP 18

Prepare Panel

H72988 [8]
KD Bolt

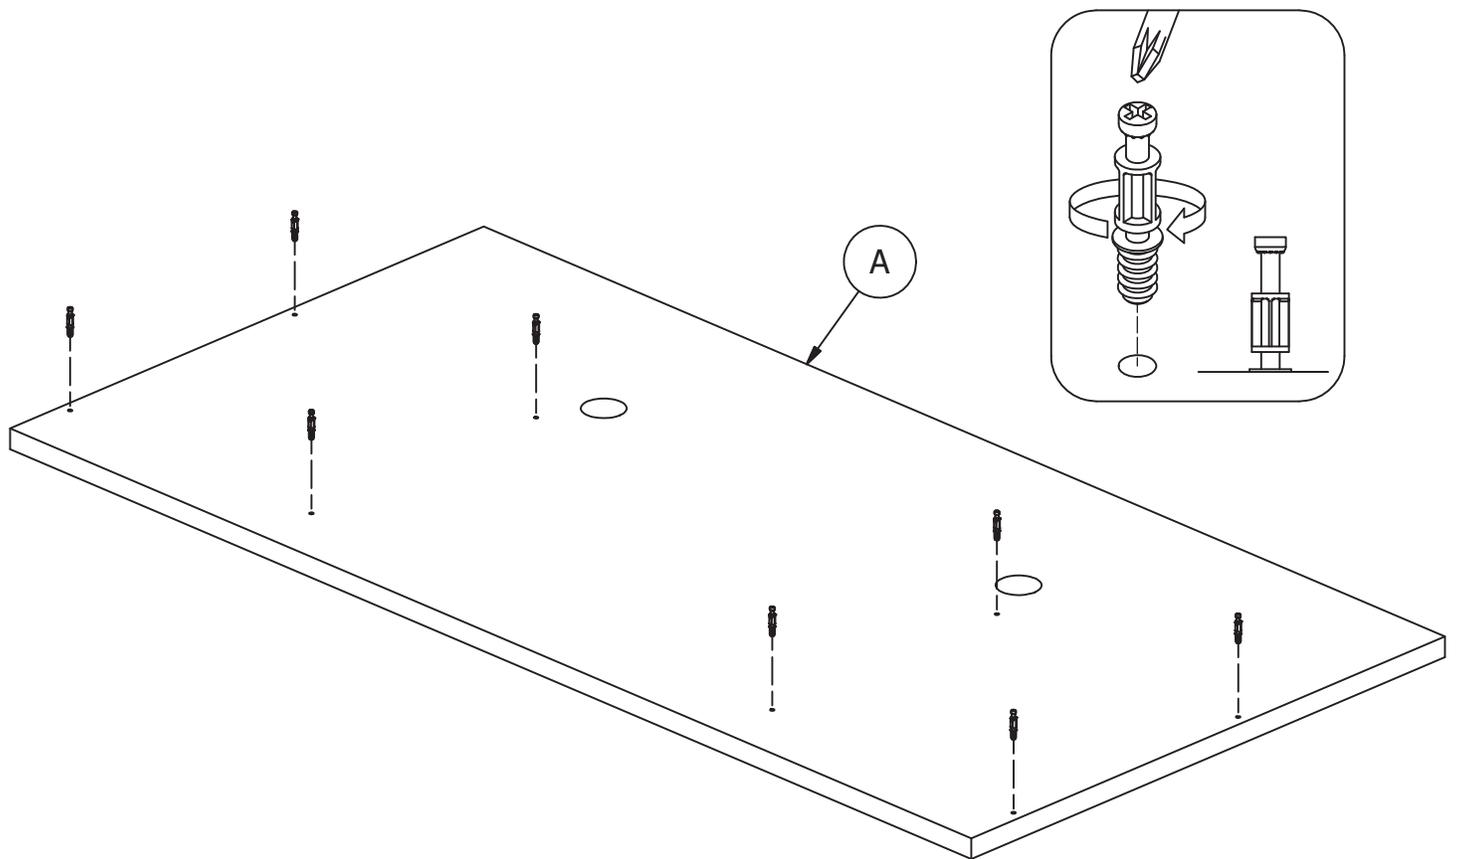

STEP 19

Assemble Panels


I181468US




KD Cam3000

[8]


1

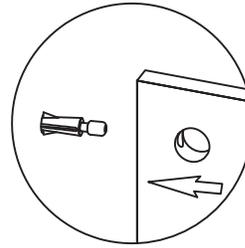


2

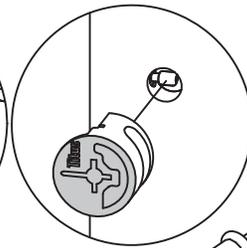

3

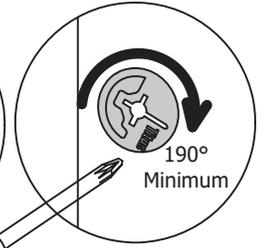


Team Lift

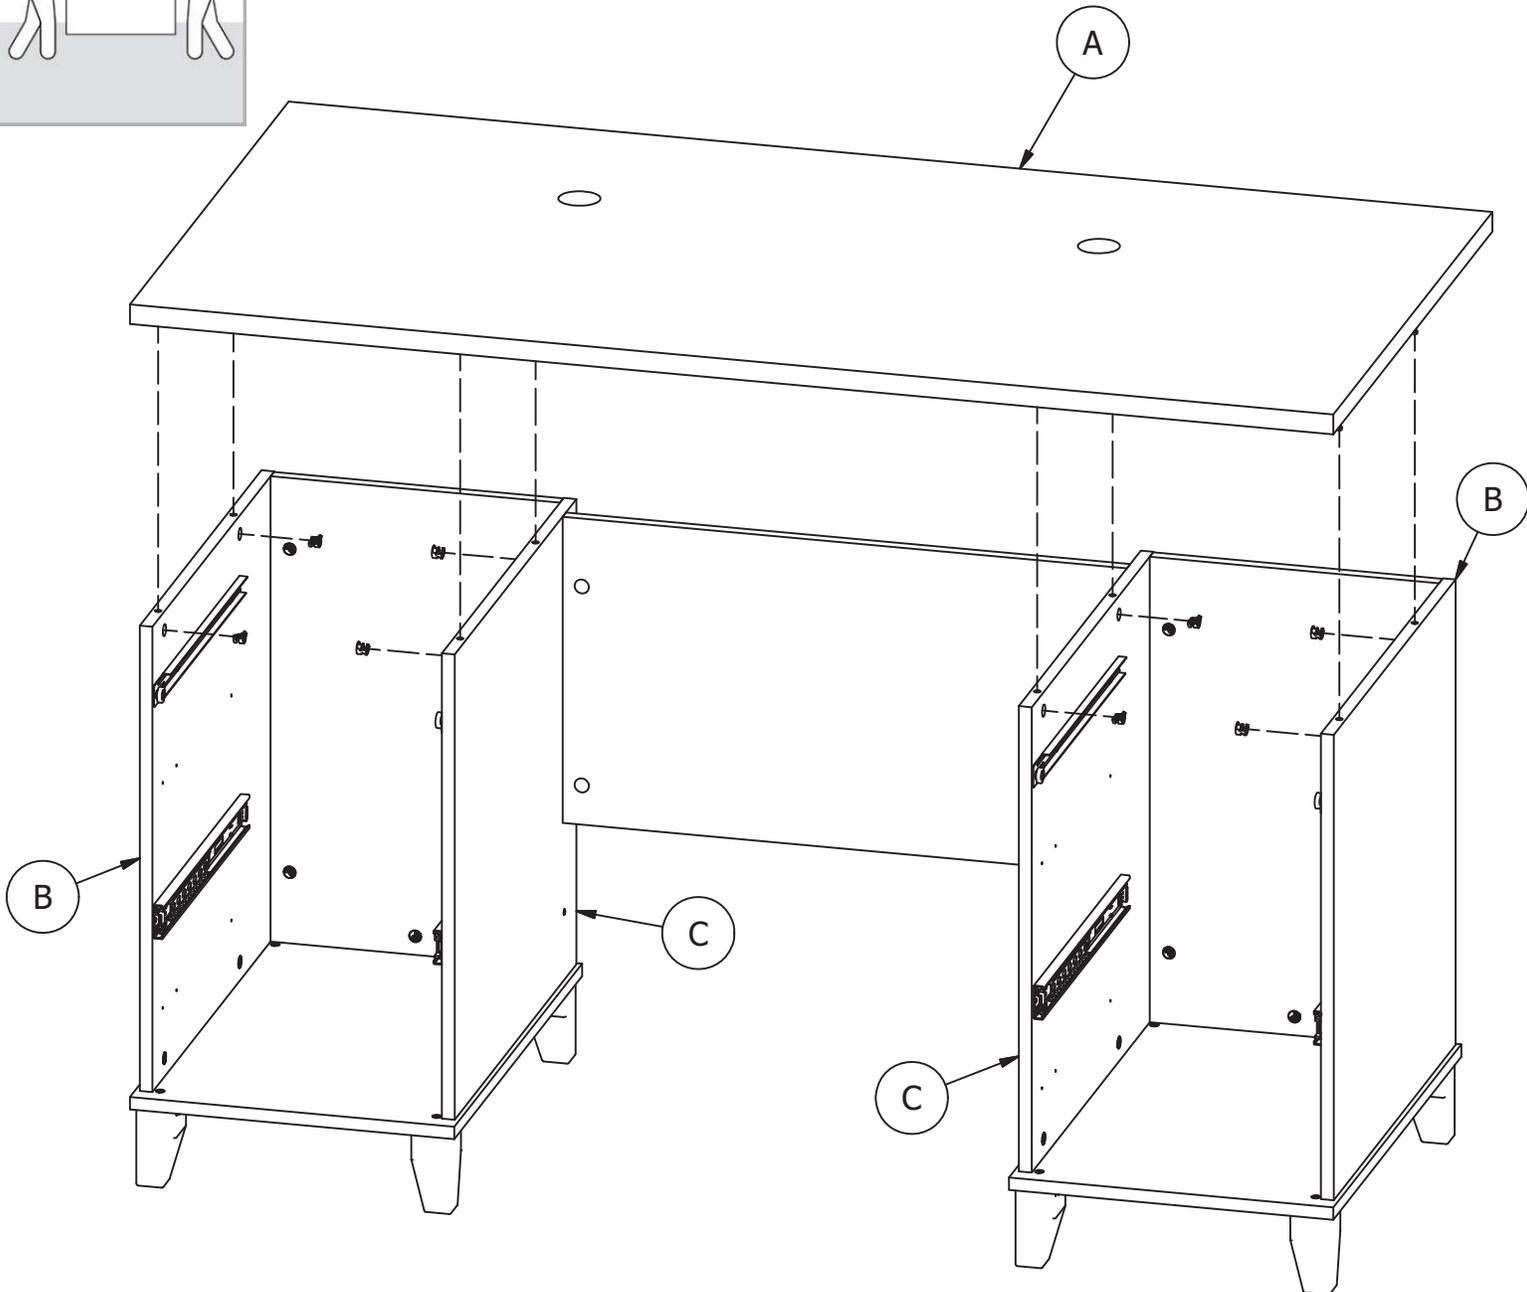


STEP 20

Insert Components and Hardware

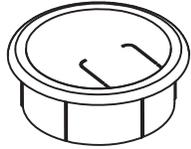

[2]






Grommet

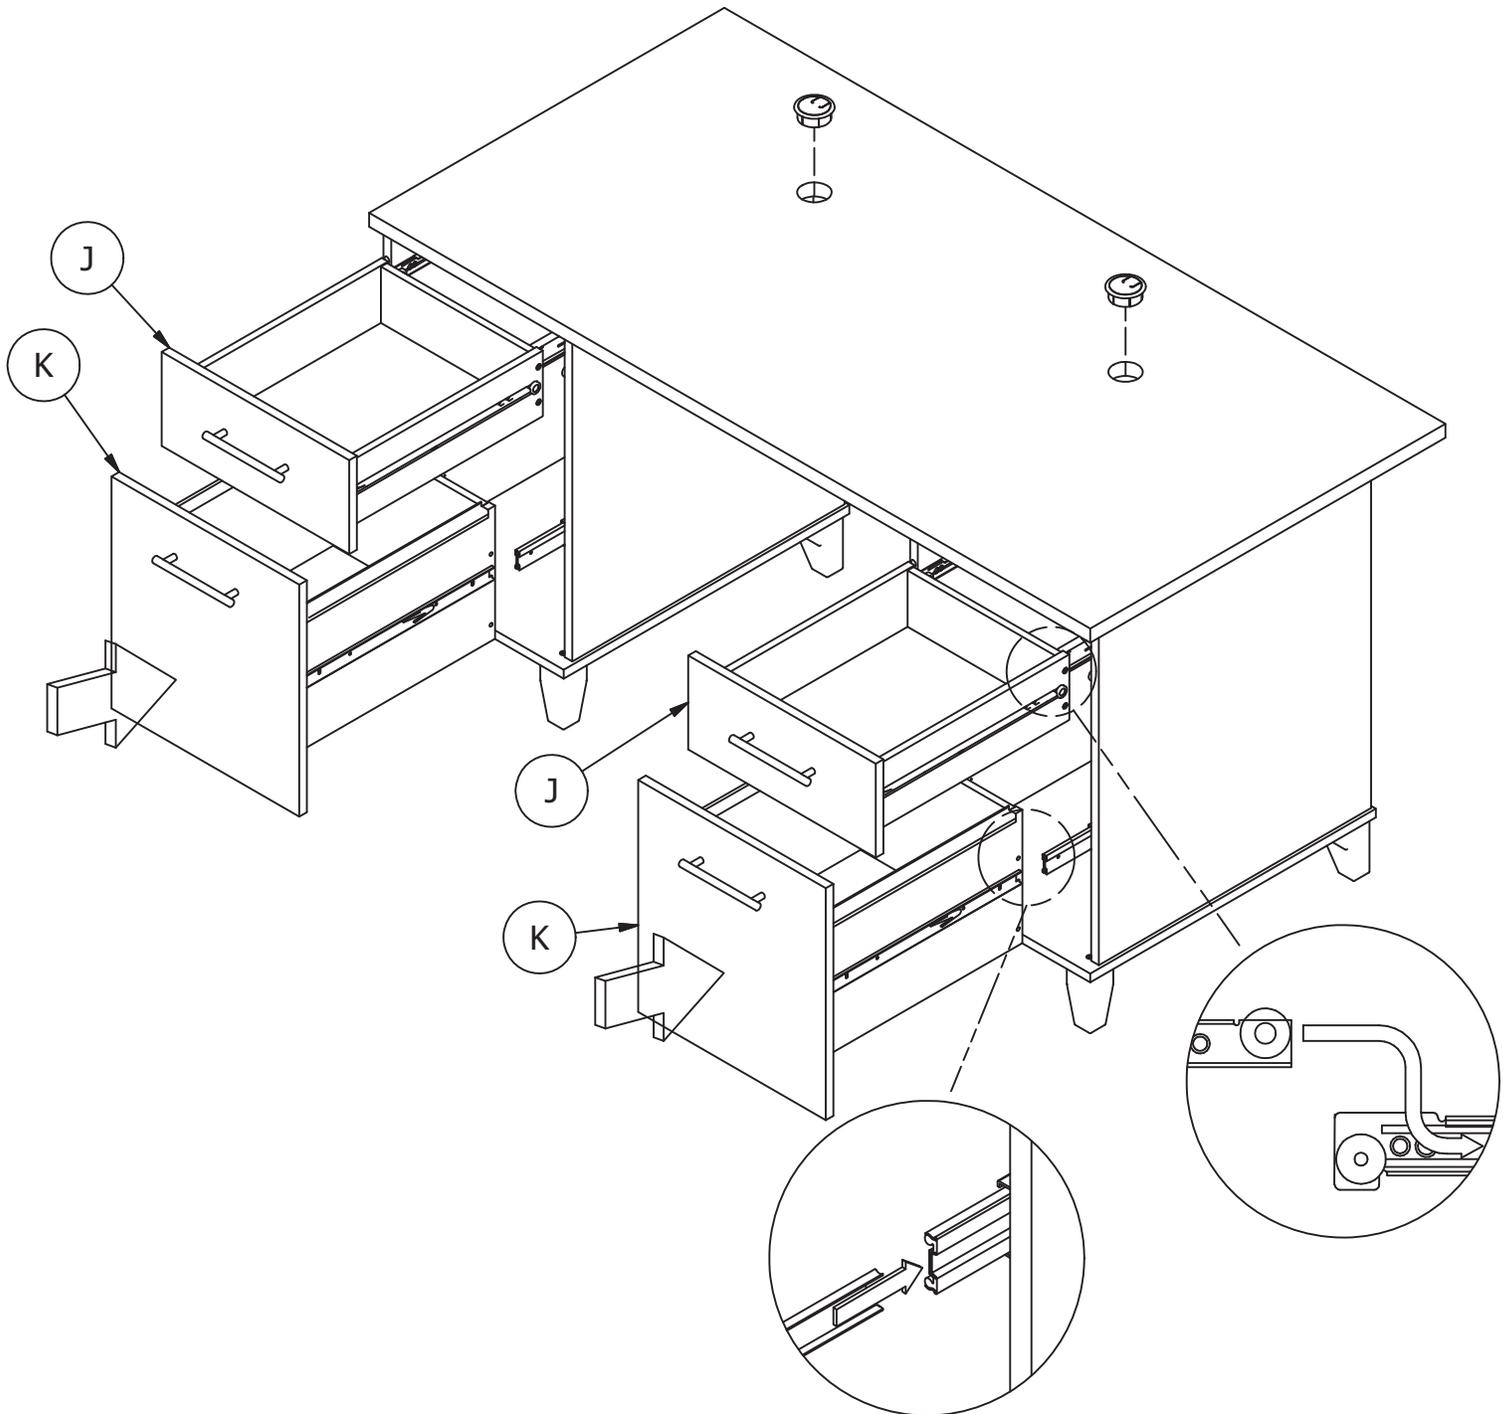

STEP 21

Adjust Drawer Fronts

DRAWER FRONT VIEW

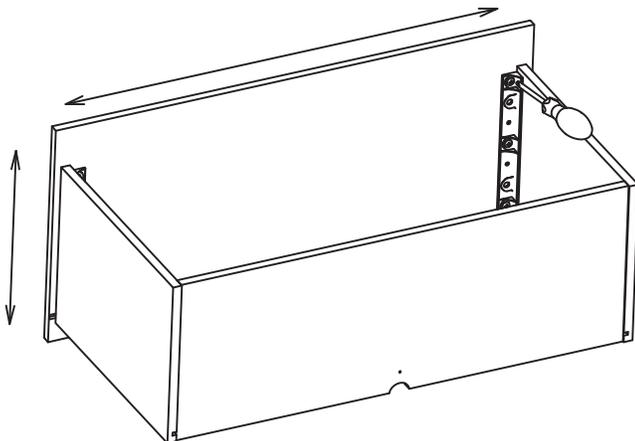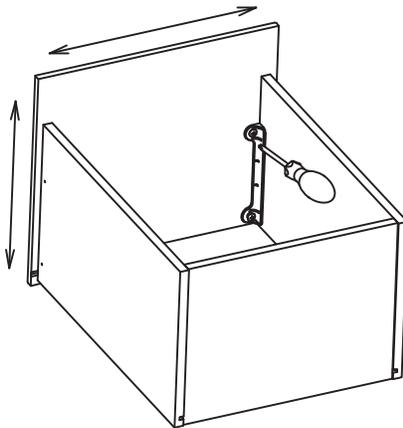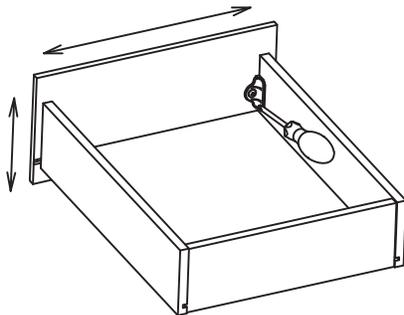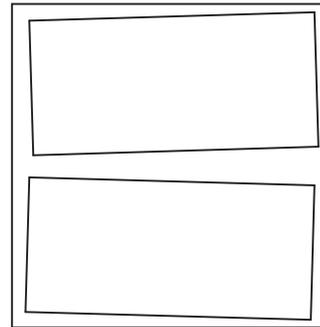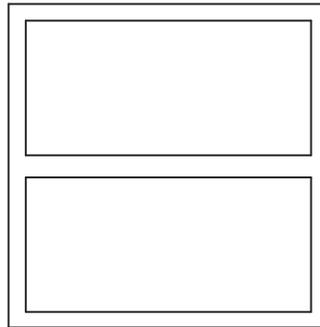

REQUIRED TOOL: PHILLIPS SCREWDRIVER

HERRAMIENTA REQUERIDA: DESTORNILLADOR PHILLIPS
OUTIL REQUIS: TOURNEVIS CRUCIFORME



1. LOOSEN SCREWS.
2. ADJUST DRAWER FRONTS.
3. TIGHTEN SCREWS.


1. Afloje los tornillos
2. Ajustar frentes de cajón
3. Apriete los tornillos

1. Desserrer les vis
2. Ajuster les façades des tiroirs
3. Serrer les vis

STEP 22

Maximum Loading And Cleaning

Gently clean surfaces with a damp sponge eraser.

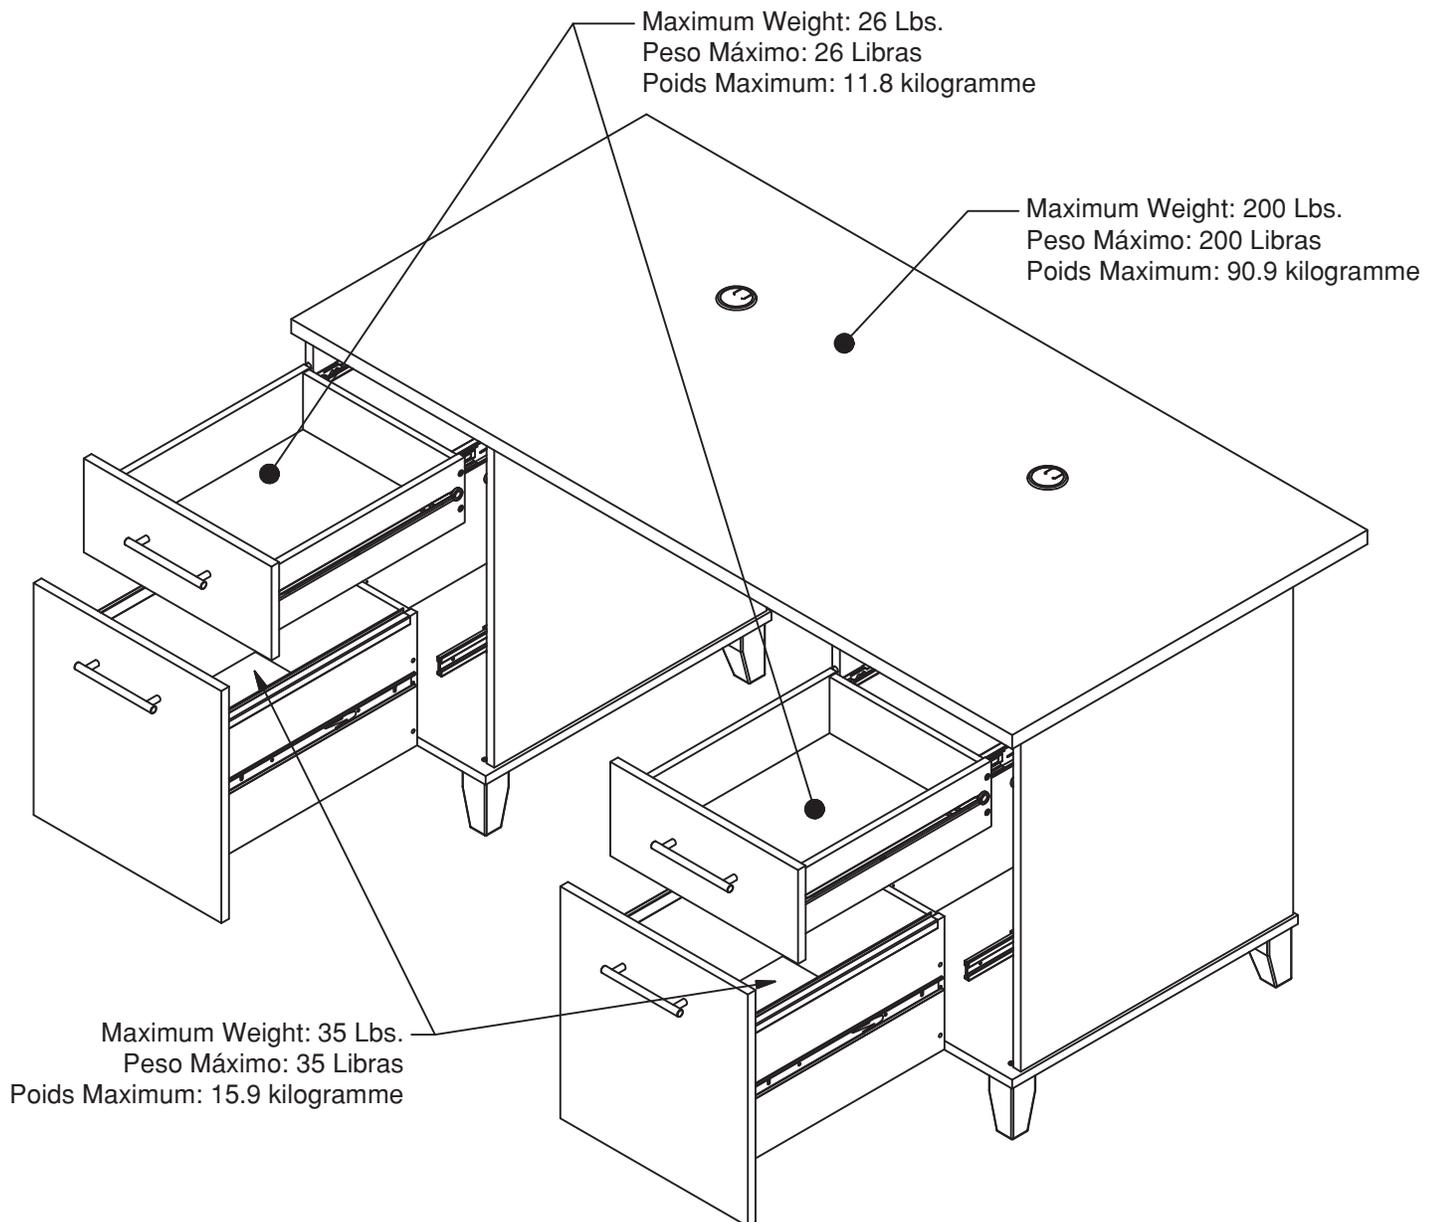


Congratulations! You are all done. If you have any questions or concerns, please call.

PARTS LIST


WC81028

A	W200551	[1]	H	W176195	[2]
B	W196078	[2]	J	W193859	[2]
C	W196079	[2]	K	W193860	[2]
D	W196080	[2]	L	W87410	[4]
E	W196081	[1]	M	W106489	[4]
F	W107685	[2]	S	W193878	[2]
G	W107681	[4]			

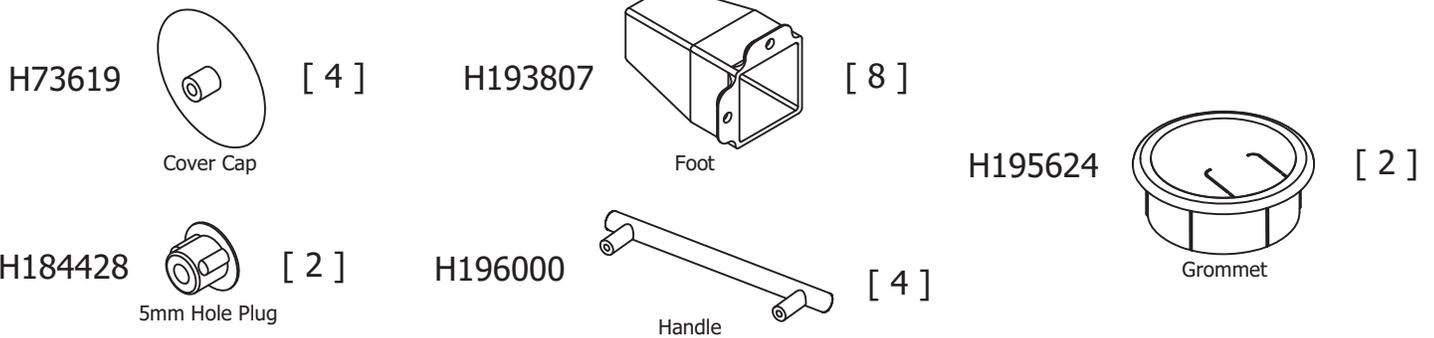

WC81128


A	W200489	[1]	H	W176195	[2]
B	W200490	[2]	J	W200463	[2]
C	W200491	[2]	K	W200464	[2]
D	W200492	[2]	L	W87410	[4]
E	W200493	[1]	M	W106489	[4]
F	W107685	[2]	S	W200494	[2]
G	W107681	[4]			

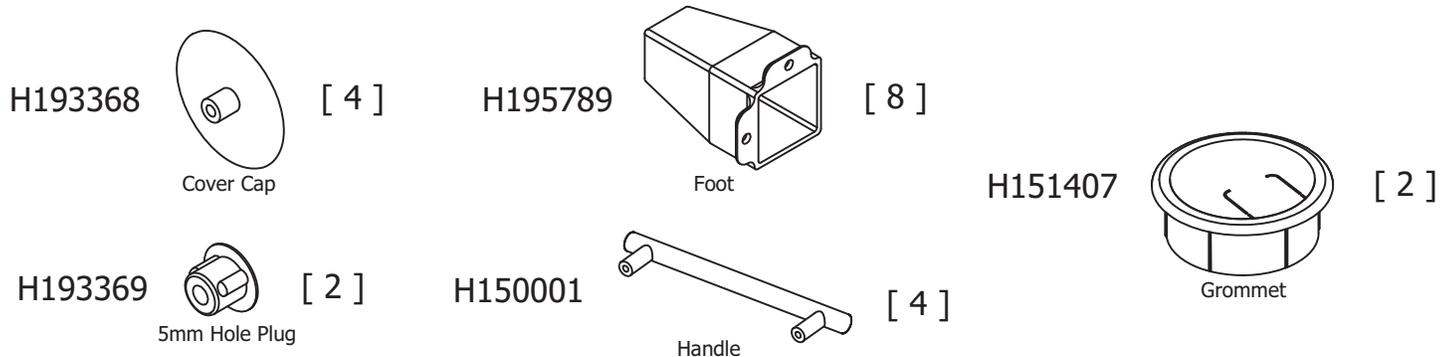

PARTS LIST


WC81228

A	W195870	[1]	H	W176195	[2]
B	W195871	[2]	J	W195844	[2]
C	W195872	[2]	K	W195845	[2]
D	W195873	[2]	L	W87410	[4]
E	W195874	[1]	M	W106489	[4]
F	W107685	[2]	S	W195875	[2]
G	W107681	[4]			

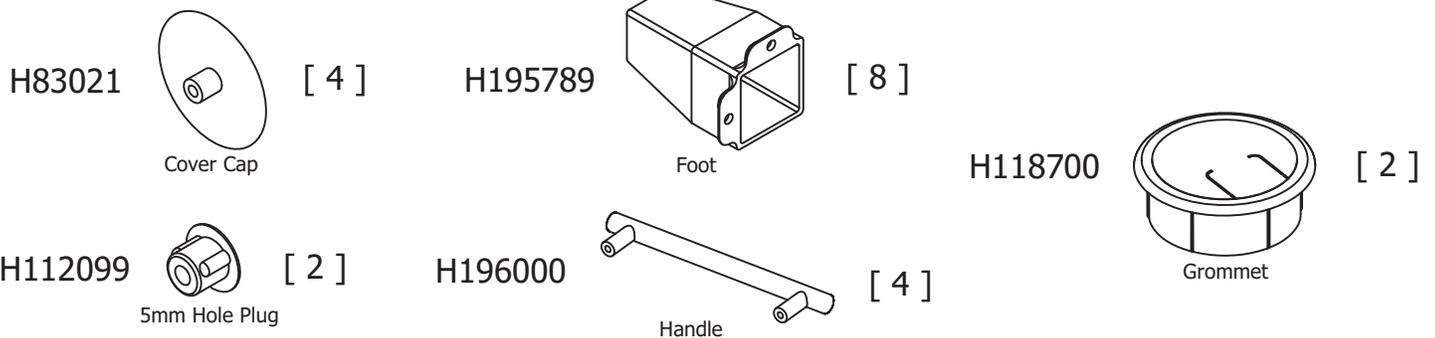

WC81328




A	W200395	[1]	H	W176195	[2]
B	W200396	[2]	J	W200369	[2]
C	W200397	[2]	K	W200370	[2]
D	W200398	[2]	L	W87410	[4]
E	W200399	[1]	M	W106489	[4]
F	W107685	[2]	S	W200400	[2]
G	W107681	[4]			

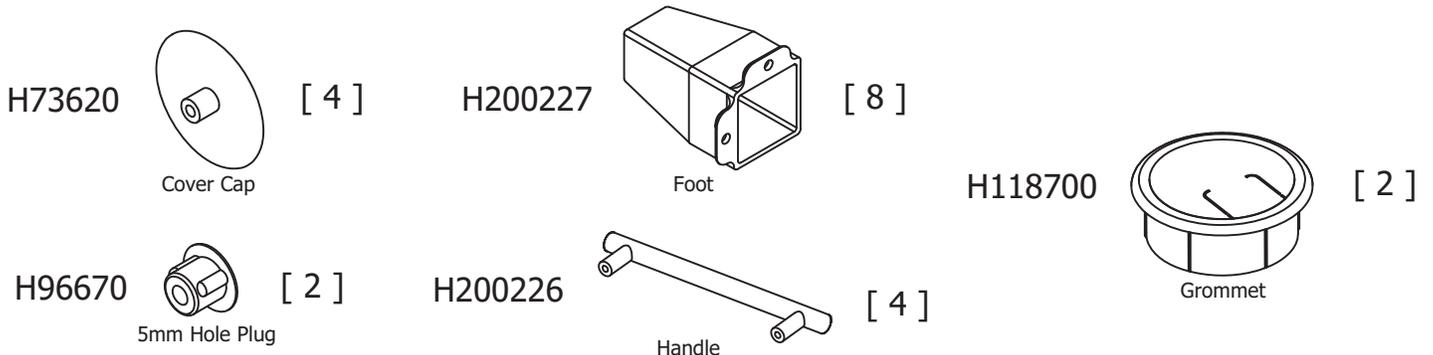

PARTS LIST





WC81428C

A	W187452	[1]	H	W176195	[2]
B	W187453	[2]	J	W187368	[2]
C	W187454	[2]	K	W187369	[2]
D	W187455	[2]	L	W87410	[4]
E	W187456	[1]	M	W106489	[4]
F	W107685	[2]	S	W187457	[2]
G	W107681	[4]			

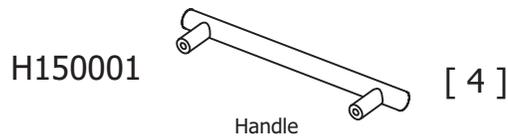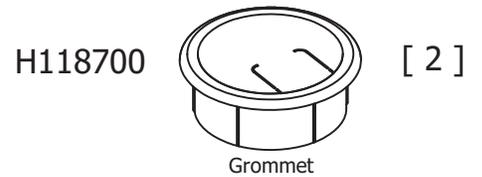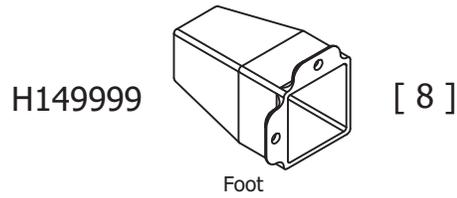

WC81528

A	W193873	[1]	H	W176195	[2]
B	W193874	[2]	J	W193859	[2]
C	W193875	[2]	K	W193860	[2]
D	W193876	[2]	L	W87410	[4]
E	W193877	[1]	M	W106489	[4]
F	W107685	[2]	S	W193878	[2]
G	W107681	[4]			

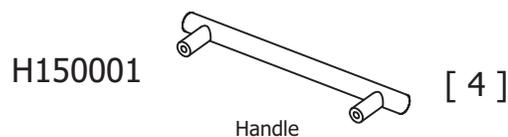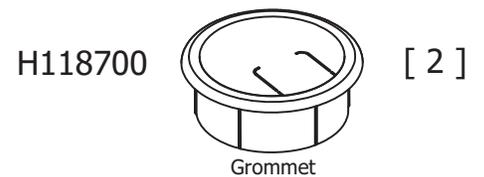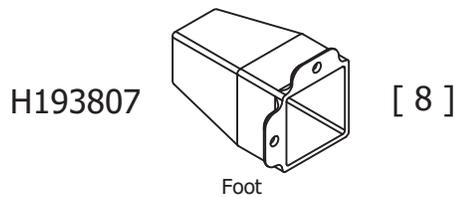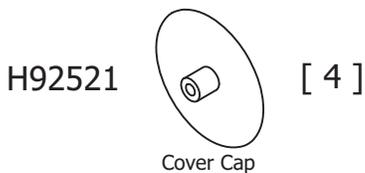

PARTS LIST

WC81628

A	W186381	[1]	H	W176195	[2]
B	W186382	[2]	J	W186355	[2]
C	W186383	[2]	K	W186356	[2]
D	W186384	[2]	L	W87410	[4]
E	W186385	[1]	M	W106489	[4]
F	W107685	[2]	S	W187470	[2]
G	W107681	[4]			


H83021



[4]

Cover Cap


H149999

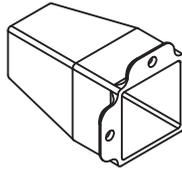

[8]

Foot

H151406

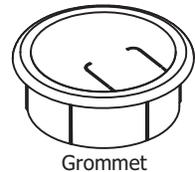

[2]

Grommet

H112099



[2]

5mm Hole Plug

H150001




[4]

Handle

WC81728C

A	W187458	[1]	H	W176195	[2]
B	W187459	[2]	J	W187386	[2]
C	W187460	[2]	K	W187387	[2]
D	W187461	[2]	L	W87410	[4]
E	W187462	[1]	M	W106489	[4]
F	W107685	[2]	S	W187463	[2]
G	W107681	[4]			


H95137



[4]

Cover Cap


H149999

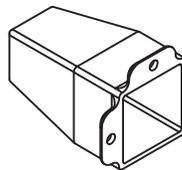

[8]

Foot

H118700

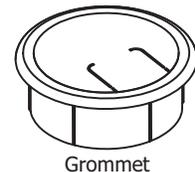

[2]

Grommet


H96110



[2]

5mm Hole Plug

H150001






[4]

Handle

PARTS LIST

WC81828C

A	W187464	[1]	H	W176195	[2]
B	W187465	[2]	J	W187404	[2]
C	W187466	[2]	K	W187405	[2]
D	W187467	[2]	L	W87410	[4]
E	W187468	[1]	M	W106489	[4]
F	W107685	[2]	S	W187469	[2]
G	W107681	[4]			

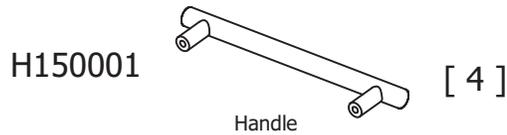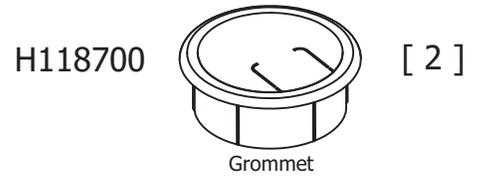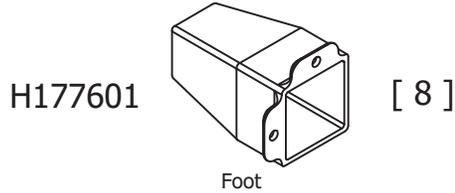

WC81928

A	W196077	[1]	H	W176195	[2]
B	W196078	[2]	J	W196051	[2]
C	W196079	[2]	K	W196052	[2]
D	W196080	[2]	L	W87410	[4]
E	W196081	[1]	M	W106489	[4]
F	W107685	[2]	S	W196082	[2]
G	W107681	[4]			

